


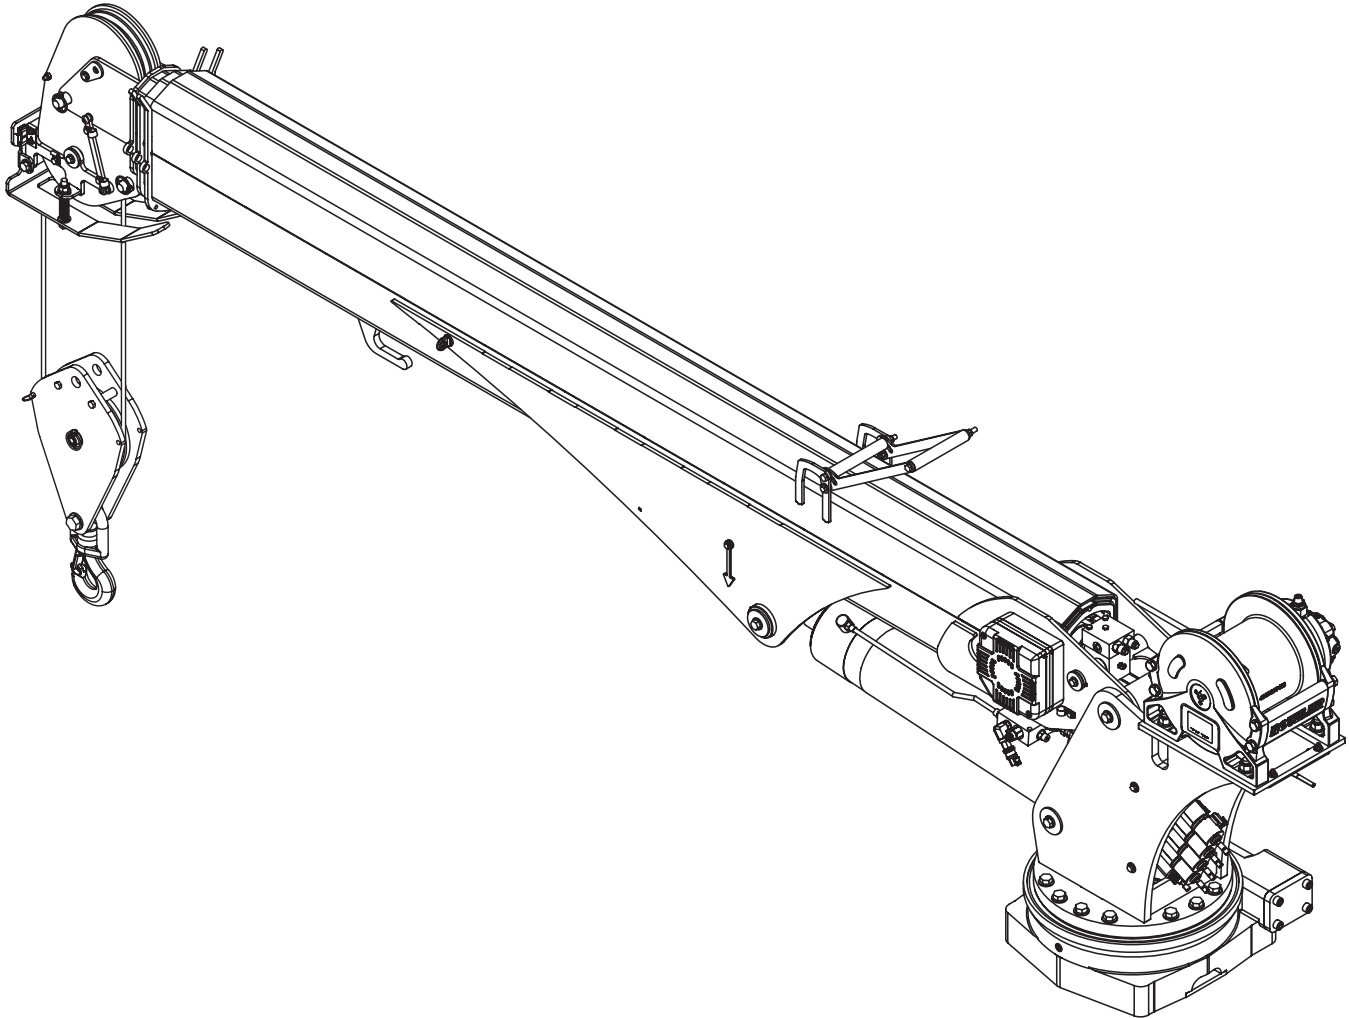

# Model 9621

## Telescopic Crane Owner's Manual

Installation • Assembly Drawings • Parts



Notice: A copy of this manual must remain with the equipment at all times.  
For a printable download copy, please visit: [www.stellarindustries.com](http://www.stellarindustries.com)

**Stellar Industries, Inc.**

**190 State Street**

**PO Box 169**

**Garner, IA 50438**

**800-321-3741**

**Fax: 641-923-2811**

**[www.stellarindustries.com](http://www.stellarindustries.com)**


Subject to Change without Notification.  
© 2024 Stellar Industries, Inc.

Rev 1  
PN 128008

# P65 Warning / Serial Tag Location / Cold Weather

## WARNING

Operating, maintaining, and servicing a Stellar product may expose you to chemicals including, but not limited to, engine exhaust, carbon monoxide, phthalates, and lead. These chemicals are known to the State of California to cause cancer and birth defects (or other reproductive harm). To keep your exposure to a minimum, be sure to avoid breathing exhaust and service your Stellar product in a well-ventilated area while wearing gloves or washing your hands frequently. For more information, go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

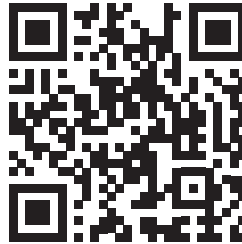

[www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)

## NOTICE


### *Cold Weather Performance*

*Although clear data on cold weather performance from every steel manufacturer is not available for all types and thicknesses of steel, Stellar Industries is confident that the weldments on our products will operate to 100% of their intended purpose to temperatures down to -40° F / C.*

*It is recommended if Stellar manufactured equipment needs to be used in temperatures below -40° F / C, the operator should pull the unit into a climate-controlled area and allow the weldments to warm up to and then maintain a temperature above this level.*

## Serial Tag Location

|                                                                                                             |            |      |
|-------------------------------------------------------------------------------------------------------------|------------|------|
|                          |            | DATE |
| PATENT INFORMATION<br><a href="http://www.stellarindustries.com/ip">http://www.stellarindustries.com/ip</a> |            |      |
| MODEL NO.                                                                                                   | SERIAL NO. |      |
| MADE IN THE U.S.A. BY STELLAR INDUSTRIES, INC.<br>PN C5942                                                  |            |      |

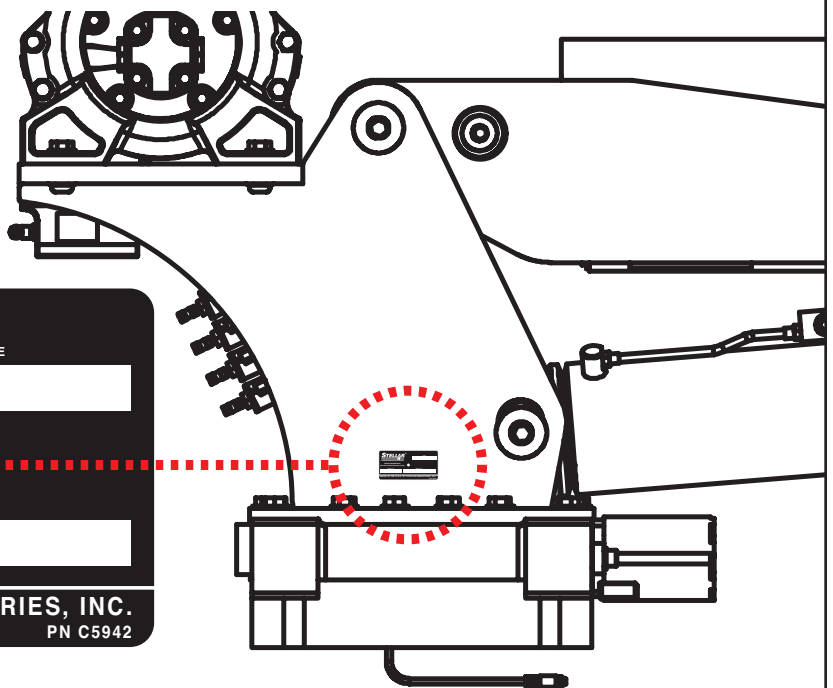

# Table of Contents

---

|                                                          |           |
|----------------------------------------------------------|-----------|
| Introduction .....                                       | iv        |
| <b>Chapter 1 - Specifications .....</b>                  | <b>1</b>  |
| Model 9621 Specifications .....                          | 2         |
| Capacity Chart - Decal PN 127995 .....                   | 3         |
| Dimensional Drawing 1 .....                              | 4         |
| Dimensional Drawing 2 .....                              | 5         |
| <b>Chapter 2 - Installation .....</b>                    | <b>7</b>  |
| General Installation .....                               | 8         |
| Installer Notice .....                                   | 8         |
| Torque Data Chart .....                                  | 9         |
| Installation Overview .....                              | 10        |
| Installation Overview - PN 13539 .....                   | 11        |
| Control Kit - PN 118530 .....                            | 12        |
| Control Kit - PN 118530 Parts List .....                 | 13        |
| Electrical Circuit Grounding .....                       | 14        |
| Valve Bank - PN 125254 .....                             | 16        |
| Valve Bank - PN 125254 Parts List .....                  | 17        |
| Hydraulic Kit - PN 122390 .....                          | 18        |
| Hydraulic Kit - PN 122390 Parts List .....               | 19        |
| Hydraulic Installation .....                             | 20        |
| Winch Case Drain Installation .....                      | 21        |
| Hydraulic System .....                                   | 22        |
| Face Seal/O-Ring Size Chart .....                        | 22        |
| Stability Procedure .....                                | 23        |
| Crane Load Level Indicator .....                         | 24        |
| Decal Placement - PN 127765 .....                        | 25        |
| <b>Chapter 3 - Assembly Drawings .....</b>               | <b>27</b> |
| Base Assembly - PN 71166 .....                           | 28        |
| Gear Bearing - PN 71041 .....                            | 29        |
| Mast Assembly - PN 128249 .....                          | 30        |
| Mast Assembly - PN 128249 Parts List .....               | 31        |
| Winch - PN 105033 .....                                  | 32        |
| Winch - PN 105033 .....                                  | 33        |
| Main Boom Assembly - PN 122423 .....                     | 34        |
| Main Boom Assembly - PN 122423 Parts List .....          | 35        |
| Extension Boom Assembly - PN 125509 .....                | 36        |
| Extension Boom Assembly - PN 125509 Parts List .....     | 37        |
| Extension Boom Assembly - PN 125509 Parts List .....     | 38        |
| Main Cylinder Assembly - PN 122923 .....                 | 40        |
| Main Cylinder Assembly - PN 122923 Parts List .....      | 41        |
| Extension Cylinder Assembly - PN 125733 .....            | 42        |
| Extension Cylinder Assembly - PN 125733 Parts List ..... | 43        |
| Snatch Block Assembly - PN 55898 .....                   | 44        |
| Snatch Block Assembly - PN 55898 Parts List .....        | 45        |
| Wireless Remote Replacement Parts .....                  | 46        |

# Introduction

Stellar® Crane are designed to provide safe and dependable service for a variety of operations. With proper use and maintenance, these cranes will operate at peak performance for many years.

To promote this longevity, carefully study the information contained in this manual before putting the equipment into service. Though it is not intended to be a training manual for beginners, this manual should provide solid guidelines for the safe and proper usage of the crane.

Once you feel comfortable with the material contained in this manual, strive to exercise your knowledge as you safely operate and maintain the crane. This process is vital to the proper use of the unit.

A copy of this manual is provided with every crane and can be found in the hard plastic manual case that is installed on the chassis. A copy of this manual shall remain with the crane at all times.

Throughout the manual, three signal words will be used to bring attention to important items:

## **NOTICE**

A NOTICE signal word indicates a practice not related to physical injury.

## **⚠ WARNING**

A WARNING signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## **⚠ DANGER**

A DANGER signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Information contained within this manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations. Please refer to the General Heavy Duty Crane Manual for details on these items.

This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

If more information is required or technical assistance is needed, or if you feel that any part of this manual is unclear or incorrect, please contact the Stellar Customer Service Department by phone at 800-321-3741 or email at [service@stellarindustries.com](mailto:service@stellarindustries.com).

**For Technical Questions, Information, Parts, or Warranty, Call Toll-Free at  
800-321-3741**

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

**Technical Questions, and Information**

[service@stellarindustries.com](mailto:service@stellarindustries.com)

**Order Parts**

[parts@stellarindustries.com](mailto:parts@stellarindustries.com)

**Warranty Information**

[warranty@stellarindustries.com](mailto:warranty@stellarindustries.com)

# Chapter 1 - Specifications

## Chapter Contents

|                                        |   |
|----------------------------------------|---|
| Model 9621 Specifications .....        | 2 |
| Capacity Chart - Decal PN 127995 ..... | 3 |
| Dimensional Drawing 1 .....            | 4 |
| Dimensional Drawing 2 .....            | 5 |

# Model 9621 Specifications

| SPECIFICATIONS             |                                                                      |
|----------------------------|----------------------------------------------------------------------|
| CRANE RATING*              | 70,800 FT-LBS (9.79 <i>tm</i> )                                      |
| STANDARD BOOM LENGTH       | 11' 0" (3.35 <i>m</i> ) FROM CL OF CRANE                             |
| BOOM EXTENSION:            | 1ST STAGE: HYDRAULIC 60" (152.4 <i>cm</i> )                          |
|                            | 2ND STAGE: HYDRAULIC 60" (152.4 <i>cm</i> )                          |
| MAXIMUM HORIZONTAL REACH:  | 21' 0" (6.40 <i>m</i> ) FROM CL OF CRANE                             |
| MAXIMUM VERTICAL LIFT      | 23' 1" (7.03 <i>m</i> ) FROM CRANE BASE                              |
| STOWED HEIGHT (CRANE ONLY) | 40.50" (103 <i>cm</i> )                                              |
| REQUIRED MOUNTING SPACE    | 20" X 21" (50.8 <i>cm</i> x 53.3 <i>cm</i> )                         |
| APPROXIMATE CRANE WEIGHT   | 9621 STANDARD 2,025 LBS (918 <i>kg</i> )                             |
| CONTROLS                   | RADIO CONTROL STANDARD FOR ALL FUNCTIONS.                            |
| WIRE ROPE                  | 7/16" (1.11 <i>cm</i> ) 6X19 IWRC-DGXXIP X 100' (30.48 <i>m</i> )    |
| BOOM ELEVATION             | -10° TO +80°                                                         |
| WINCH SPECIFICATIONS       |                                                                      |
| LINE PULL SPEED:           | SPEED: 60 FT/MIN (18.29 <i>m/min</i> )                               |
| MAX. SINGLE PART LINE:     | 4,500 LBS (2,040 <i>kg</i> )                                         |
| MAX. DOUBLE PART LINE      | 9,000 LBS (4,080 <i>kg</i> )                                         |
|                            |                                                                      |
| ROTATION (WORM GEAR):      | 400° POWER                                                           |
| LIFTING CAPACITY**         | 9,000 LBS @ 7'10" (4,080 <i>kg</i> @ 2.39 <i>m</i> )                 |
|                            | 3,455 LBS @ 20'6" (1567 <i>kg</i> @ 6.24 <i>m</i> )                  |
| POWER SUPPLY               | PTO & PUMP: 8 GPM @ 2,500 PSI<br>(30.3 <i>Lpm</i> @ 172 <i>Bar</i> ) |

\*Crane rating in Boost Mode. Normal crane rating is 60,000 ft-lb (8.30 *tm*).


\*\*Maximum capacities in Boost Mode.

# Capacity Chart - Decal PN 127995

## IMPORTANT


Weight of load handling devices are part of the load lifted and must be deducted from the capacity.

Maximum single-part line capacity is 4500 lbs (2041 kg). For greater loads, use two-part line.

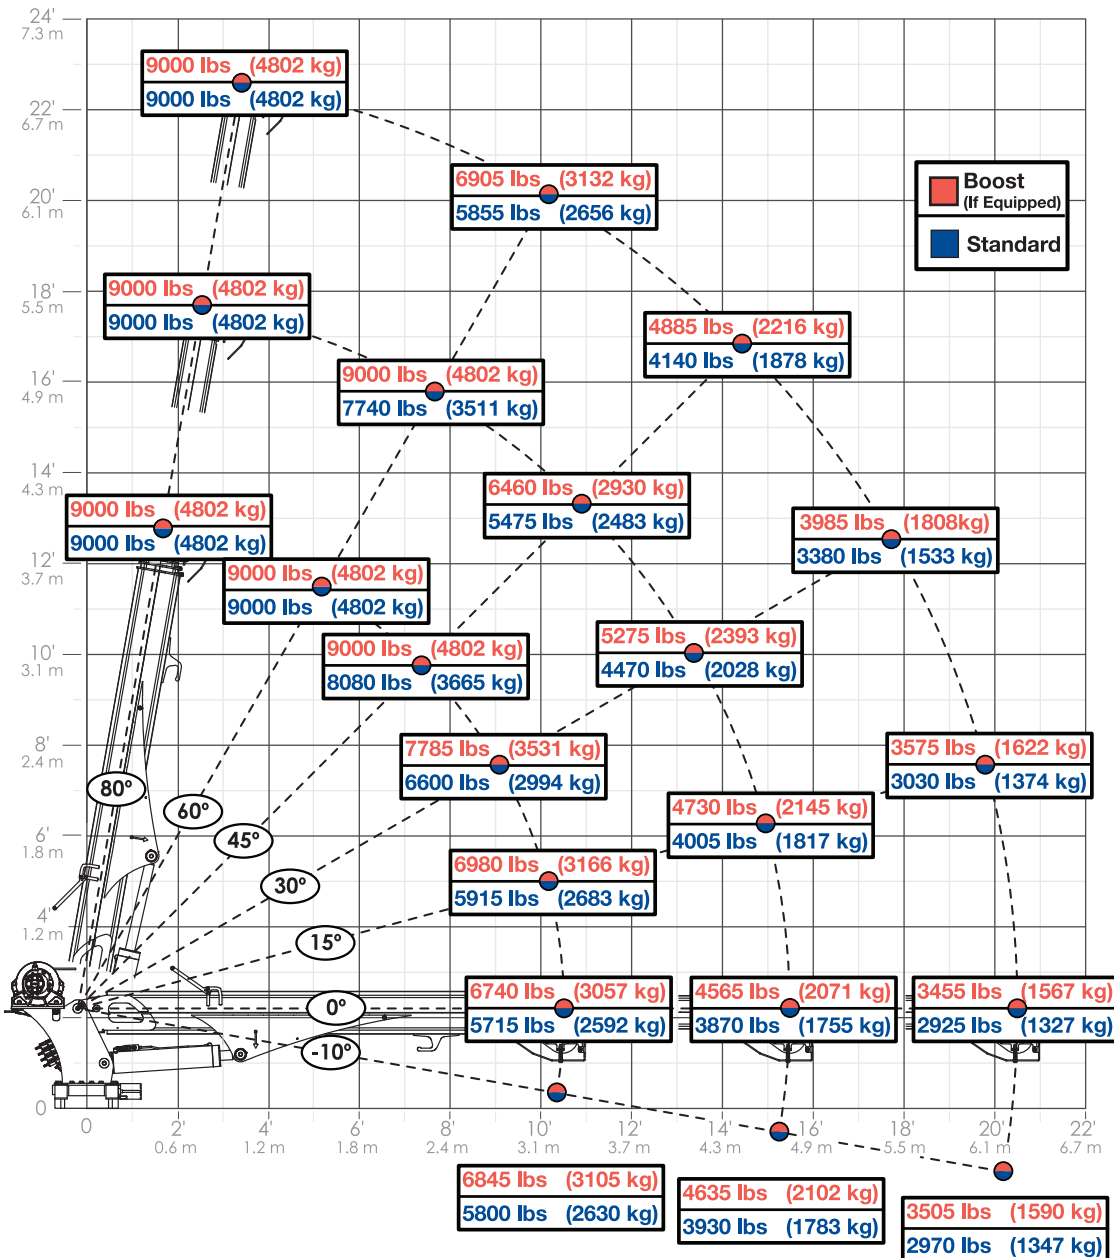


PN 127995

# Dimensional Drawing 1

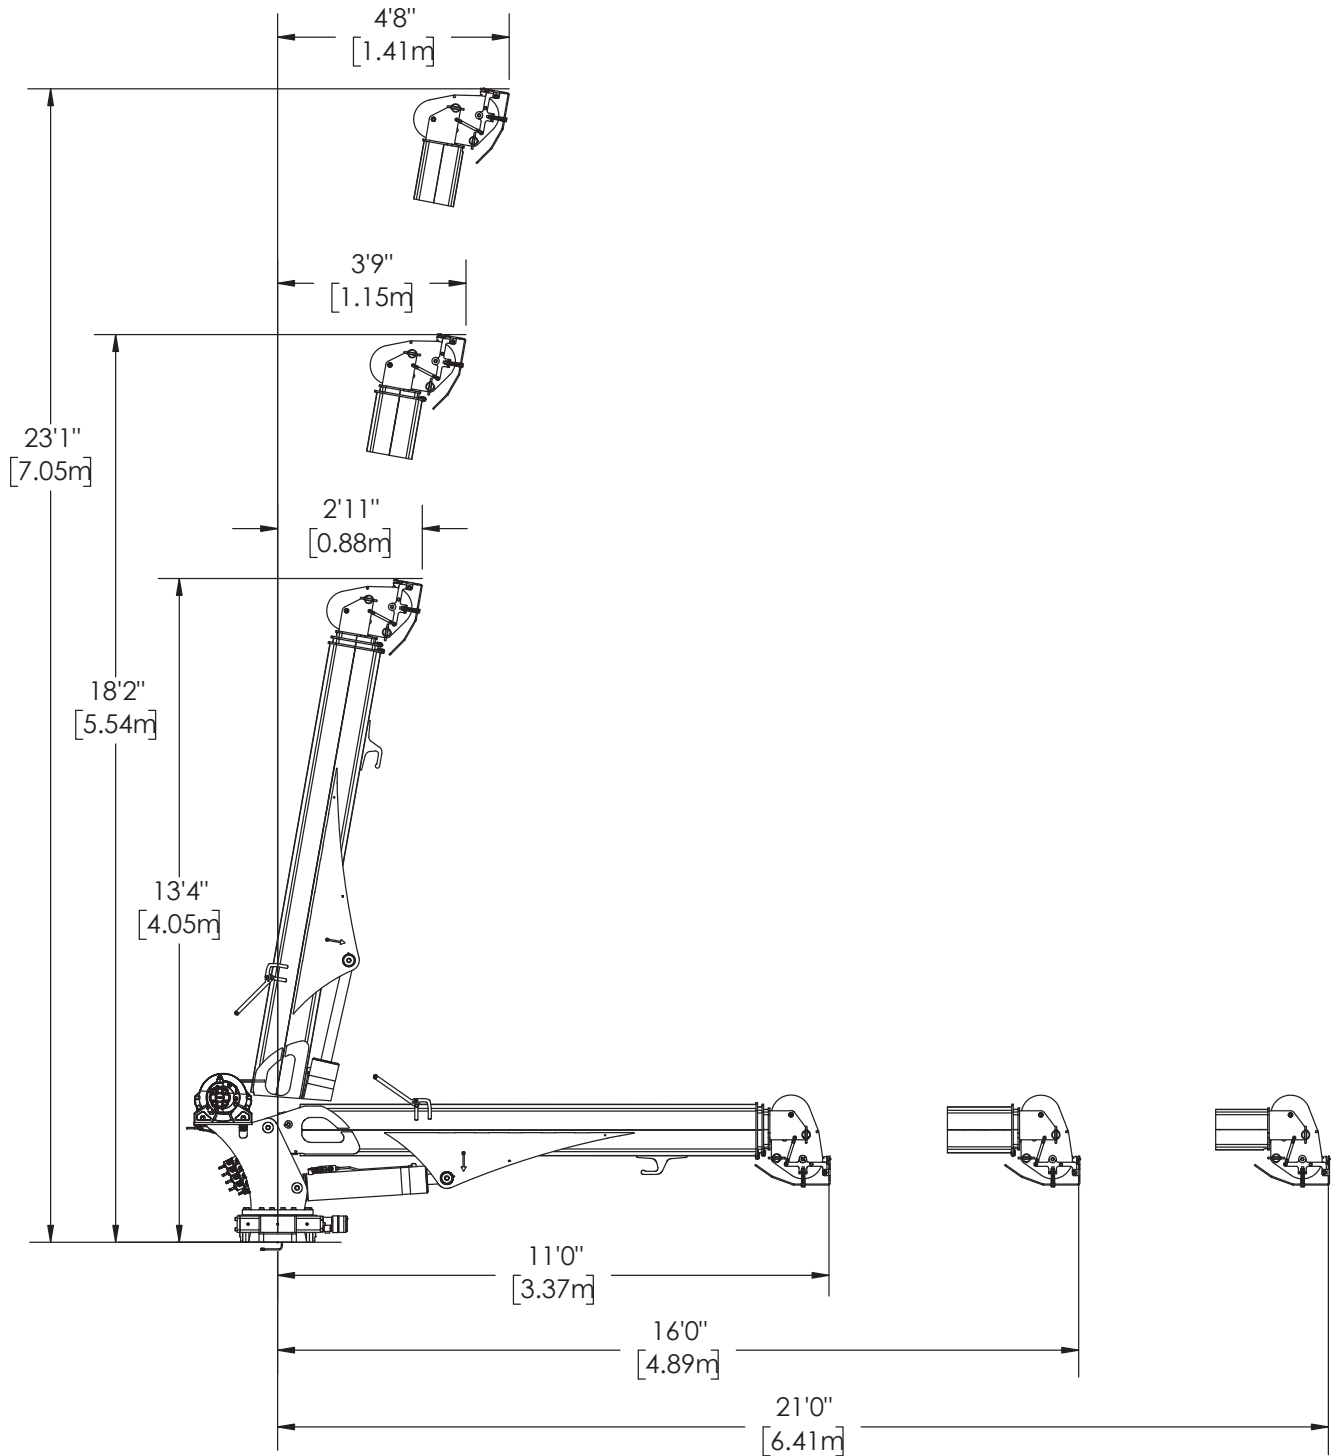

## Dimensional Drawing 2

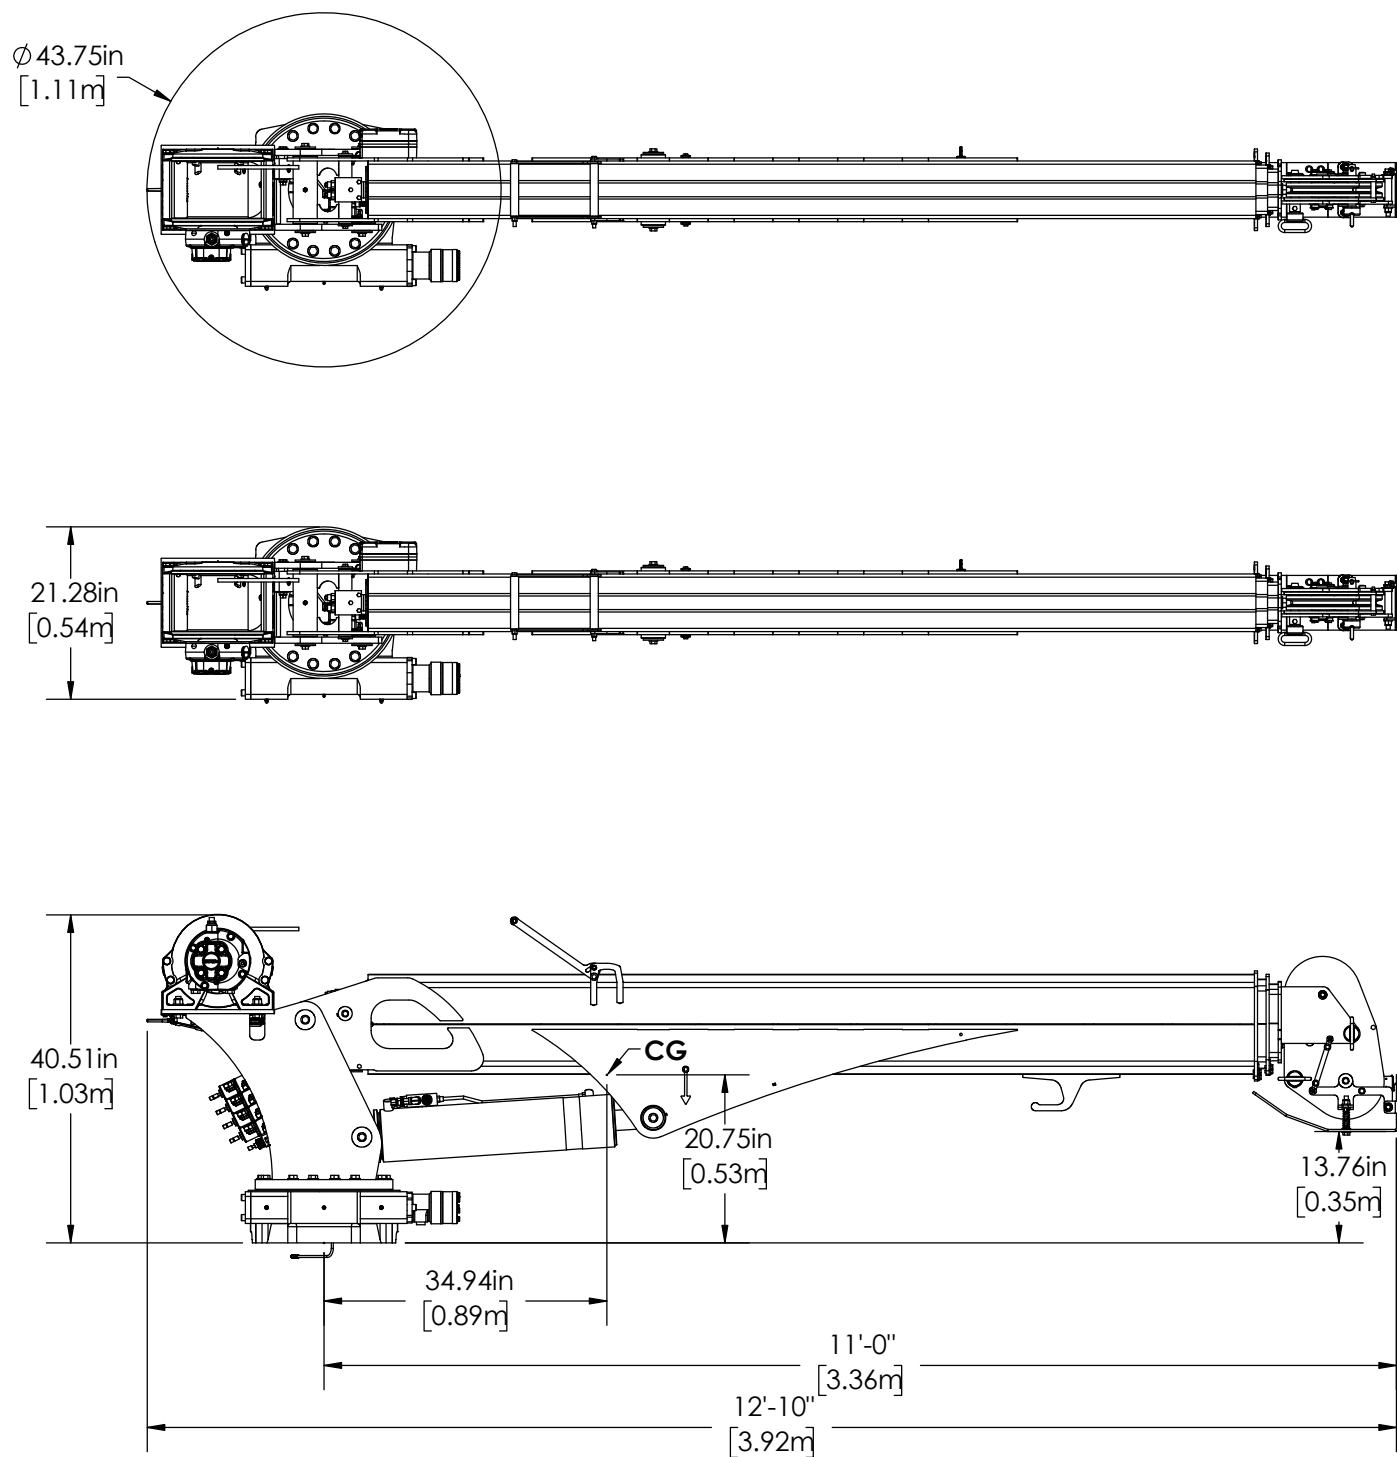

**This page left intentionally blank.**

# Chapter 2 - Installation

## Chapter Contents

|                                           |    |
|-------------------------------------------|----|
| General Installation .....                | 8  |
| Installer Notice .....                    | 8  |
| Torque Data Chart.....                    | 9  |
| Installation Overview.....                | 10 |
| Installation Overview - PN 13539.....     | 11 |
| Control Kit - PN 118530 .....             | 12 |
| Control Kit - PN 118530 Parts List .....  | 13 |
| Electrical Circuit Grounding.....         | 14 |
| Valve Bank - PN 125254 .....              | 16 |
| Valve Bank - PN 125254 Parts List.....    | 17 |
| Hydraulic Kit - PN 122390.....            | 18 |
| Hydraulic Kit - PN 122390 Parts List..... | 19 |
| Hydraulic Installation.....               | 20 |
| Winch Case Drain Installation .....       | 21 |
| Hydraulic System .....                    | 22 |
| Face Seal/O-Ring Size Chart.....          | 22 |
| Stability Procedure .....                 | 23 |
| Crane Load Level Indicator .....          | 24 |
| Decal Placement - PN 127765.....          | 25 |

# General Installation

This chapter is designed to serve as a general guide for the installation of a Stellar 9621 Crane on a Stellar Service Body. Each installation is considered unique so certain portions of this chapter may or may not apply to your direct application. If a question should arise during the installation process, please contact Stellar Customer Service at (800) 321 3741.

This crane is designed for use with a Stellar Service Body installed on a vehicle that meets the minimum chassis requirements of the crane. It is the installer's responsibility to assure that the crane is mounted on a platform that will support the maximum crane rating of this crane.

## NOTICE

When installing welder units to the service bodies, it is highly recommended that a surge protector is installed on the chassis batteries to protect the crane radio receiver, wiring and other electronic devices from an unexpected electrical spike or surge. Failure to do so could result in extensive damage to the service body and crane electrical circuit.

## WARNING

Do not install this crane on a body not capable of handling the loads imposed on it. Failure to do so may result in serious injury or death.

## Installer Notice

According to Federal Law (49 cfr part 571), each final-stage manufacturer shall complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stages.




Therefore, the installer of Stellar® products is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations. They are required to certify that the vehicle is in compliance with federal and state regulations, as well as any OEM instructions such as chassis body builder guides.

Please reference the Code of Federal Regulations, title 49 - Transportation, Volume 5 (400-999), for further information, or visit <http://www.gpoaccess.gov/nara/index.html> for the full text of Code of Federal Regulations.

## Torque Data Chart

When using the torque data in the chart, the following rules should be observed:


- Bolt manufacturer's particular specifications should be consulted when provided.
- Flat washers of equal strength must be used.
- All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.
- Torque values specified are for bolts with residual oils or no special lubricants applied. If special lubricants of high stress ability, such as Never-Seez compound graphite and oil, molybdenum disulphite, colloidal copper or white lead are applied, multiply the torque values in the charts by the factor .90. The use of Loctite does not affect the torque values listed in the table.
- Torque values for socket-head capscrews are the same as for Grade 8 capscrews.
- Do not use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.
- Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.
- Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.
- Tighten plastic insert or crimped steel-type lock nuts to approximately 110 percent of the dry torque values shown in the chart below, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value. Note: "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without lubrication. Tighten lubricated bolts to approximately 80% of dry bolts.
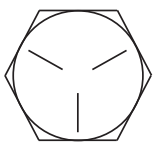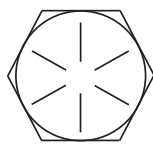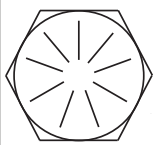
|                   |                      | GRADE 5                                                                             |                   | GRADE 8                                                                              |                   | GRADE 9                                                                               |
|-------------------|----------------------|-------------------------------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------|
|                   |                      |  |                   |  |                   |  |
| Size<br>(DIA-TPI) | Bolt DIA<br>(Inches) | Plain<br>(Ft-Lb)                                                                    | Plated<br>(Ft-Lb) | Plain<br>(Ft-Lb)                                                                     | Plated<br>(Ft-Lb) | Plated<br>(Ft-Lb)                                                                     |
| 5/16-18           | 0.3125               | 17                                                                                  | 13                | 25                                                                                   | 18                | 22                                                                                    |
| 3/8-16            | 0.3750               | 31                                                                                  | 23                | 44                                                                                   | 33                | 39                                                                                    |
| 7/16-14           | 0.4375               | 49                                                                                  | 37                | 70                                                                                   | 52                | 63                                                                                    |
| 1/2-13            | 0.5000               | 75                                                                                  | 57                | 105                                                                                  | 80                | 96                                                                                    |
| 9/16-12           | 0.5625               | 110                                                                                 | 82                | 155                                                                                  | 115               | 139                                                                                   |
| 5/8-11            | 0.6250               | 150                                                                                 | 115               | 220                                                                                  | 160               | 192                                                                                   |
| 3/4-10            | 0.7500               | 265                                                                                 | 200               | 375                                                                                  | 280               | 340                                                                                   |
| 7/8-9             | 0.8750               | 395                                                                                 | 295               | 605                                                                                  | 455               | 549                                                                                   |
| 1-8               | 1.000                | 590                                                                                 | 445               | 910                                                                                  | 680               | 823                                                                                   |
| 1 1/8-7           | 1.1250               | 795                                                                                 | 595               | 1290                                                                                 | 965               | 1167                                                                                  |
| 1 1/4-7           | 1.2500               | 1120                                                                                | 840               | 1815                                                                                 | 1360              | 1646                                                                                  |
| 1 3/8-6           | 1.3750               | 1470                                                                                | 1100              | 2380                                                                                 | 1780              | 2158                                                                                  |
| 1 1/2-6           | 1.500                | 1950                                                                                | 1460              | 3160                                                                                 | 2370              | 2865                                                                                  |

## Installation Overview

1. Determine that the mounting location for the 9621 crane is at least 20" x 21" (50.8 x 50.8 cm).
2. Use the detail below to drill 1.06" diameter holes into the mounting plate. Run tap on the threads of the base to be sure they are clean.
3. Use a crane or lifting device capable of lifting the weight of the Stellar crane. The Stellar 9621 weighs approximately 2,025 lbs (918 kg). Note: cranes are shipped with rotation positioned at 200 degrees of 400 degree system. This will allow for easy installation of the crane and permanent connection of all hydraulic and electrical components prior to repositioning into the crane saddle.
4. Connect straps or chain from the lifting device to the lifting rings on the Stellar 9621.
5. Use six (6) 3" x 1" #8 bolts and six (6) #8 flat washers.
6. Install a washer on each bolt.
7. Apply Loctite Thread locker #277 to the bolts.
8. Using the lifting device, lower the Stellar 9621 just above the crane compartment and start the bolts. Have someone assist in leveling the crane. Note: the rotation motor should be to the door side of crane compartment and the boom should be extended back over the rear bumper.
9. Secure the crane using the mounting hardware provided. Note: longer or shorter cap screws may be required – recommended thread engagement into crane base is 1.75" – use grade 8, zinc plated cap screws only.
10. Torque the cap screws to 680 ft-lbs.
11. Remove supporting crane.
12. Hook-up hydraulics and electrical using the schematics provided in this chapter.

## Installation Overview - PN 13539

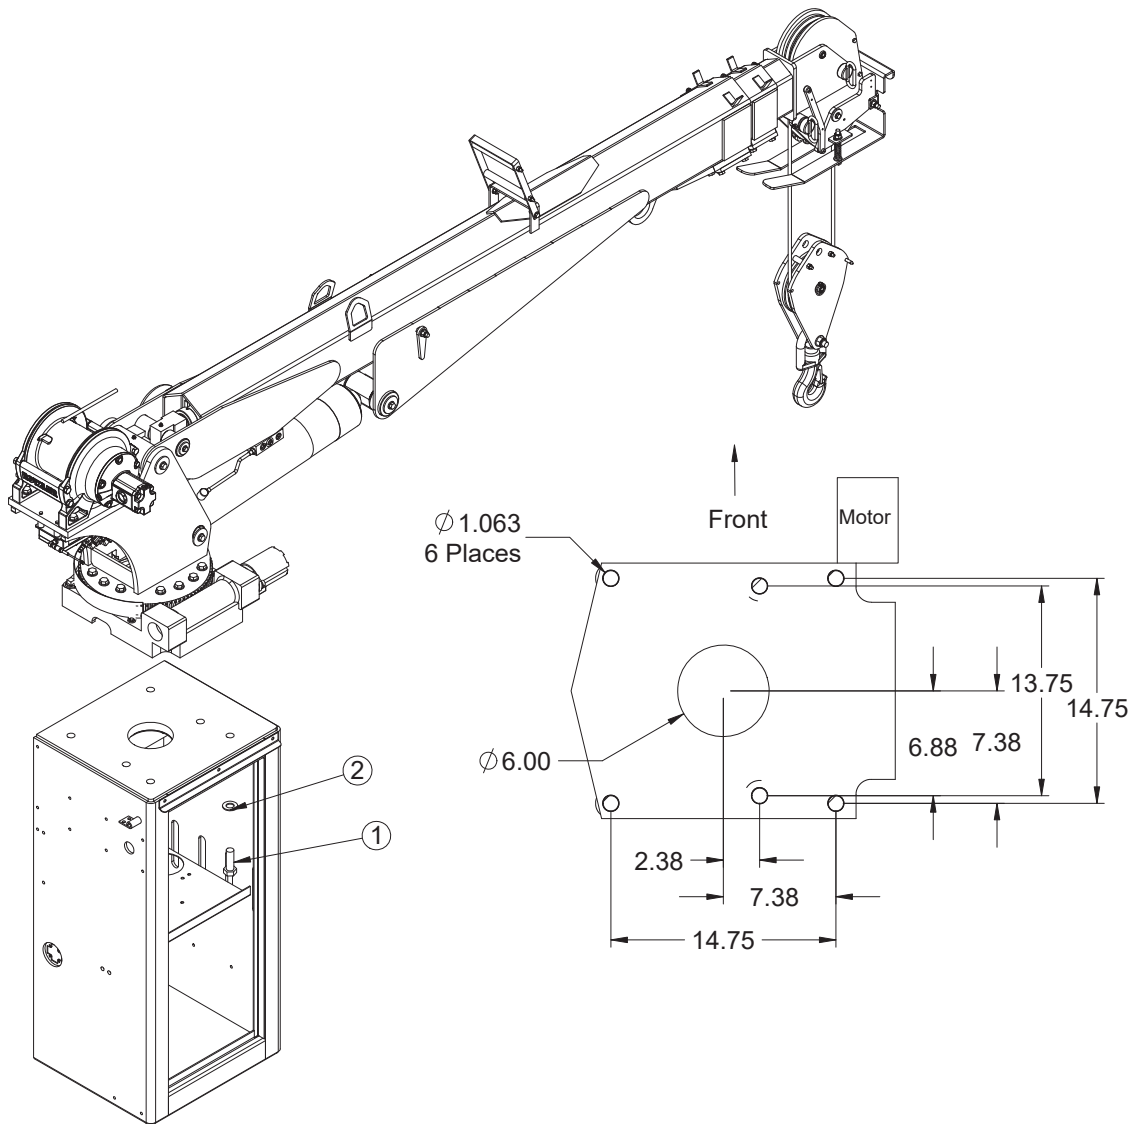

### PN 13539


| ITEM   | PART | DESCRIPTION                     | QTY |
|--------|------|---------------------------------|-----|
| 1      | 5199 | CAP SCR 1.00X8X3.00 HHGR8 ZY    | 6   |
| 2      | 6538 | WASHER 1.00 SAE FLAT YELLOW GR8 | 6   |
| REV. B |      |                                 |     |

### ITEMS NOT SHOWN

| PART  | DESCRIPTION                        | QTY |
|-------|------------------------------------|-----|
| 16881 | DECAL STABILITY CAPACITY W/OVERLAY | 1   |
| C5942 | PLATE SERIAL # STELLAR TRUCKS      | 1   |
| 8176  | SCREW DRIVE #4X0.31 RND HD U ZINC  | 1   |
| 76483 | LEVEL INDICATOR CRANE              | 1   |

**NOTE:**  
HARDWARE KIT: 115662

# Control Kit - PN 118530

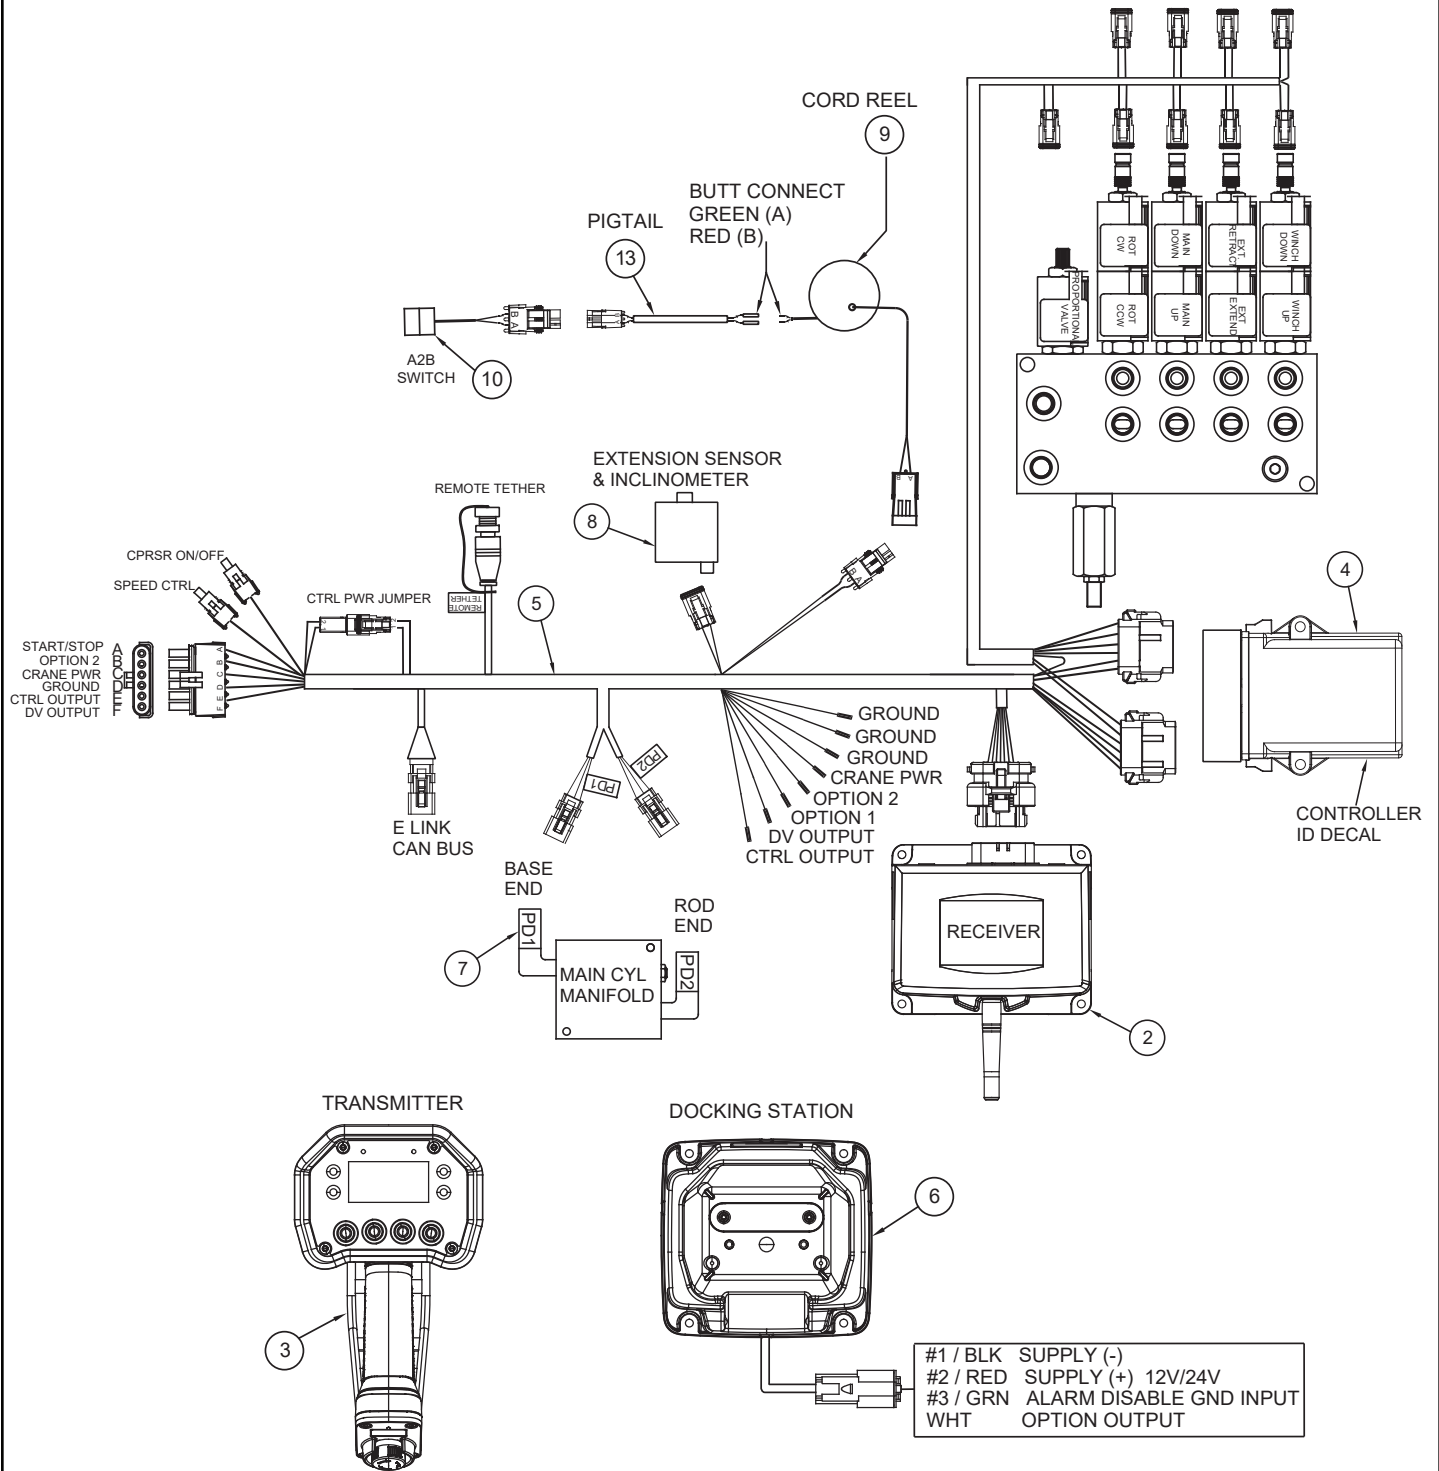

## NOTICE

Any modification to the crane control system (electrical and/or hydraulic) must be approved by Stellar.

# Control Kit - PN 118530 Parts List

| PN 118530 |        |                                            |      |
|-----------|--------|--------------------------------------------|------|
| ITEM      | PART   | DESCRIPTION                                | QTY  |
| 01        | 113550 | RADIO CTRL ASM 4 FCTN CDTPRO G6RC PG       | 1    |
| 02        | 113569 | RECEIVER CDTPRO G6RC 2.4GHZ 14P            | REF  |
| 03        | 113568 | TRANSMITTER 4 FCTN MECH CDTPRO G6RC PG     | REF  |
| 04        | 113571 | CTRL MODULE MECH CRANE CDTPRO G6           | 1    |
| 05        | 113580 | WIRE HRNS MECH CRANE CDTPRO G6 451         | 1    |
| 06        | 113551 | DOCKING STATION RADIO TRANS CDTPRO         | 1    |
| 07        | 108268 | TRANSDUCER PRESSURE 0-5000PSI #4 SAE DT    | 2REF |
| 08        | 110460 | ENCODER BOOM VECTOR 6M CANOPEN             | REF  |
| 09        | 123760 | CORD REEL 29FT 4 WIRE SEALED               | REF  |
| 10        | 35105  | SWITCH LIMIT (NO) ROLLER LVR LT BRKT E1161 | REF  |
| 11        | 89152  | TETHER CABLE 10M M-F M12 SCANRECO          | 1    |
| 12        | 119851 | TAG QUICK START CDTPRO TX                  | 1    |
| 13        | 124587 | PIGTAIL ASM 14IN 2P WP SHRD                | 1    |
| REV. A    |        |                                            |      |

# Electrical Circuit Grounding

When installing the crane, always locate a good source for grounding the circuit. A majority of electrical failures are due to poor grounding. Poor grounding can cause intermittent operation of the equipment, electrical component failures and cause the equipment to not operate at all.

Chassis manufacturers usually will have a ground strap which ties into the truck frame from the battery, but it is always a good idea to check each individual model to verify where the ground is located. Never use the mechanic body as a ground source. Make sure the electrical grounds are routed to either the chassis frame rail or the chassis's main grounding source.

Stellar provides a stud (PN 40992) for grounding the crane to the chassis frame rail:



Inside Frame Rail



Outside Frame Rail


## WARNING

Drill the hole to the frame rail in accordance with the chassis body builder's guide.



- Hole size: 21/64"
- The hole location should allow for the shortest length of ground wire while keeping enough slack for flexibility.
- Be sure to grind the frame rail around the hole to ensure a proper ground connection.
- Frame rail thickness may require additional flat washers (as shown).
- Use an electrical coating on hardware to prevent corrosion.

**This page left intentionally blank.**

# Valve Bank - PN 125254

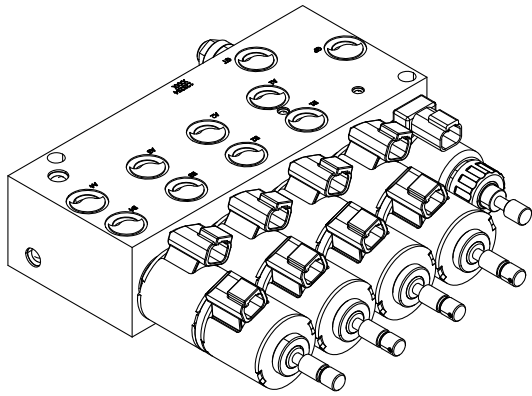


## HYDRAULIC SCHEMATIC

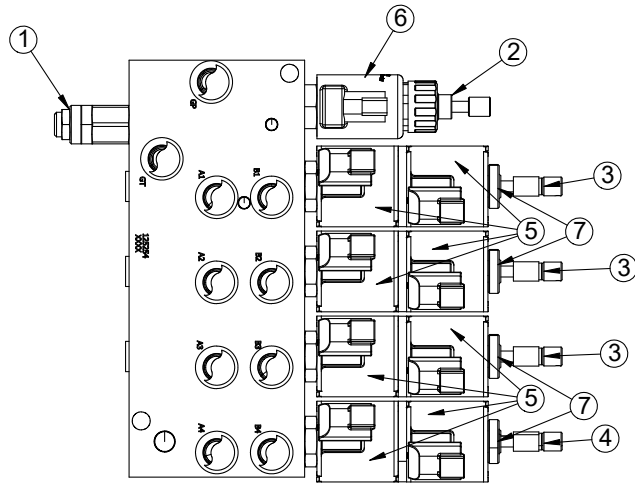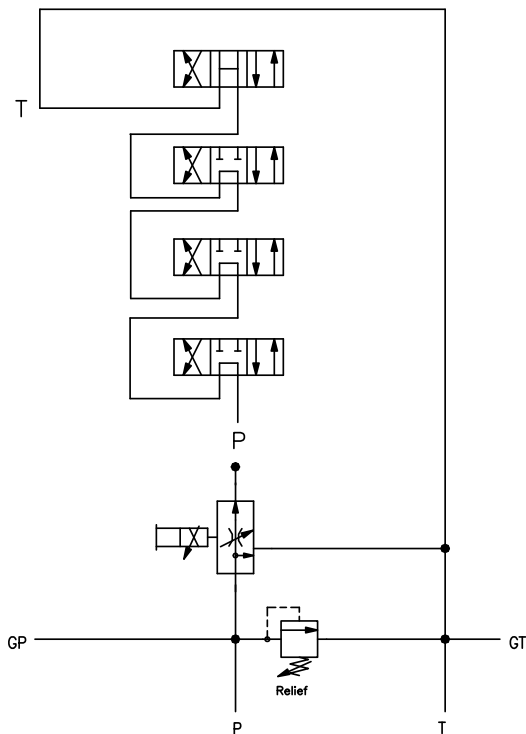

## Valve Bank - PN 125254 Parts List

| PN 125254            |        |                                         |     |             |
|----------------------|--------|-----------------------------------------|-----|-------------|
| ITEM                 | PART   | DESCRIPTION                             | QTY | TORQUE      |
| 1                    | 125946 | VALVE RELIEF 125254                     | 1   | 37 FT-LB    |
|                      | 126271 | SEAL KIT 125946                         |     |             |
| 2                    | 125255 | VALVE FLW CTRL PRP 0-8 GPM DEL          | 1   | 20-22 FT-LB |
|                      | 126270 | SEAL KIT 125255                         |     |             |
| 3                    | 125256 | VALVE SOLND 3 POS 4-WAY 8GPM TANDEM DEL | 3   | 25 FT-LB    |
| 4                    | 125257 | VALVE SOLND 3 POS 4-WAY 8GPM OPEN DEL   | 1   | 25 FT-LB    |
|                      | 126269 | SEAL KIT 125256 / 125257                |     |             |
| 5                    | 125947 | COIL 12VDC DEUTSCH DEL                  | 8   | 3 FT-LB     |
| 6                    | 125948 | COILD 12VDC DEUTSCH PROP DEL            | 1   | 3 FT-LB     |
| 7                    | 134698 | NUT COIL RETAINING DELTROL SIZE 10      | 4   | 3 FT-LB     |
| REV. INITIAL RELEASE |        |                                         |     |             |

# Hydraulic Kit - PN 122390

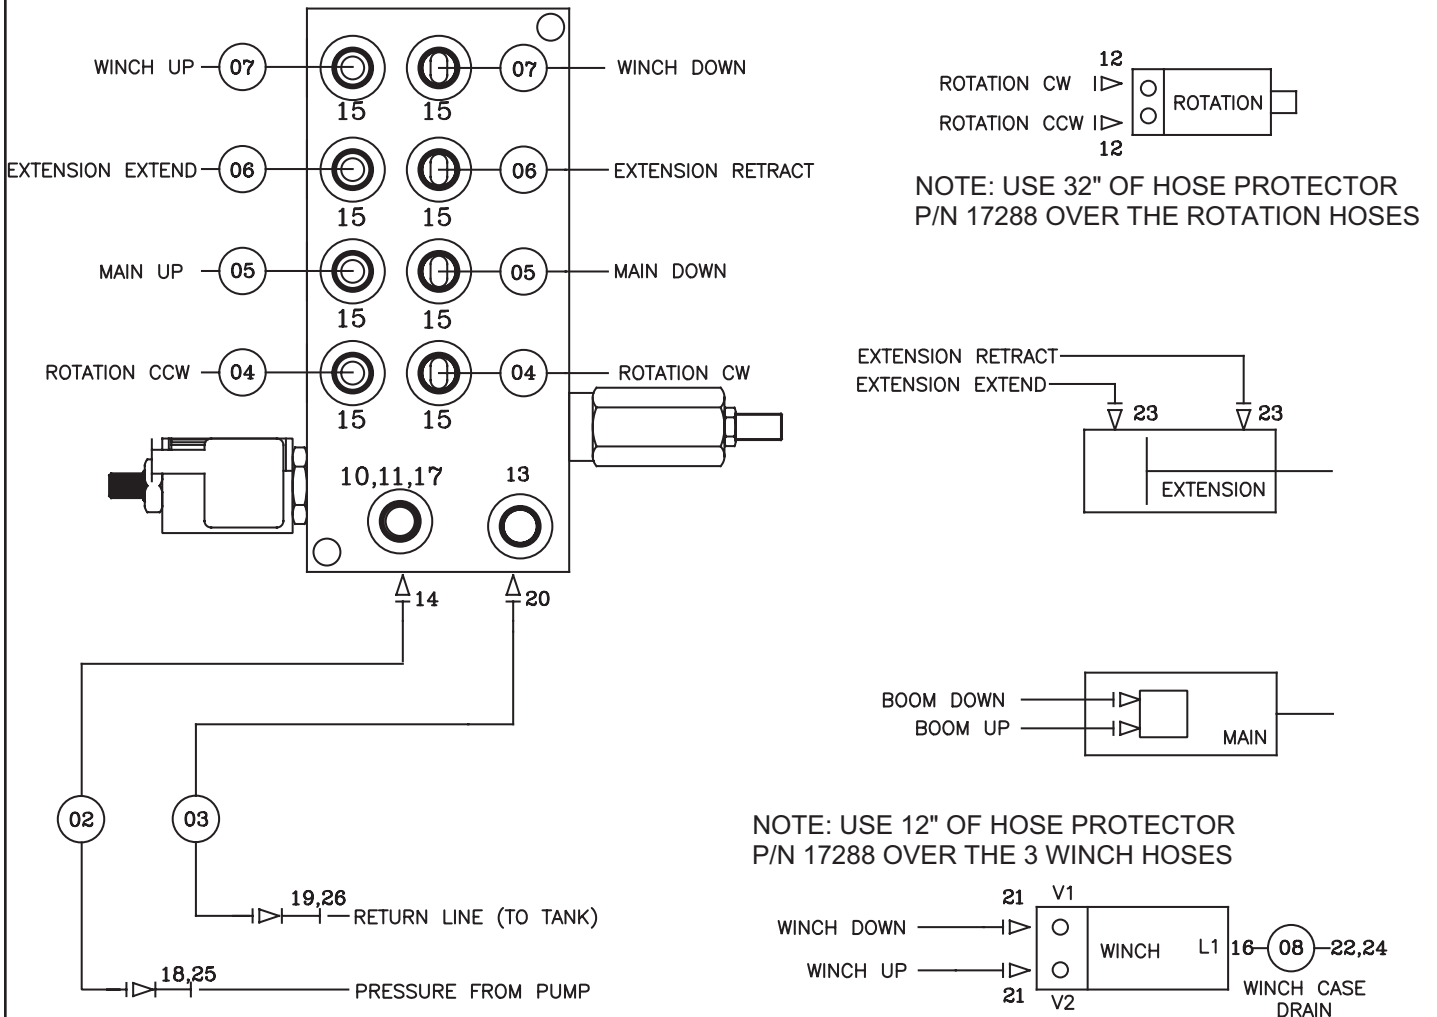

## WARNING



### HYDRAULIC FLUID HAZARDS

- High pressure fluid leak will pierce skin.
- Release pressure before working on system.

### STAND CLEAR OF POTENTIAL HIGH PRESSURE HYDRAULIC FLUID LEAKS

- Wear sturdy gloves and goggles. Detect leaks with wood or cardboard. NEVER use fingers.
- Fluid injected in skin will injure or kill and must be surgically removed by trained doctor immediately or gangrene will result.

### BURN HAZARD

- Oil temperatures may exceed 120°F (35°C).
- Do not touch hydraulic system.
- Hot surface can burn.

**CHECK HYDRAULIC HOSES, TUBES, AND PIPES DAILY.**

# Hydraulic Kit - PN 122390 Parts List

| ITEM   | PART   | DESCRIPTION                        | QTY  |
|--------|--------|------------------------------------|------|
| 01     | 107781 | HOSE KIT 76 HSS (INCL:2-8)         | 1    |
| 02     | 45439  | HOSE-HYD .38 X 9                   | 1REF |
| 03     | 45438  | HOSE-HYD .50 X 8                   | 1REF |
| 04     | 71903  | HOSE-HYD .38 X 39                  | 2REF |
| 05     | 13028  | HOSE-HYD .38 X 17                  | 2REF |
| 06     | 59137  | HOSE-HYD .38 X 19                  | 2REF |
| 07     | 104129 | HOSE-HYD .38 X 17                  | 2REF |
| 18     | 104128 | HOSE-HYD .25 X 34                  | 1REF |
| 09     | 17288  | HOSE PROTECTOR 1.00 AS-B-27        | 44"  |
| 10     | 15111  | FTG 6-4 MORB-FORB STRAIGHT REDUCER | 1    |
| 11     | 3861   | FTG 6-6 MAORB-FORB 90              | 1    |
| 12     | D1302  | FTG 6-10 MFS-MAORB 90              | 2    |
| 13     | C4961  | FTG 6 MORB PLUG HOLLOW HEX         | 1    |
| 14     | D1193  | FTG 6-6 MFS-MAORB 45               | 1    |
| 15     | 0279   | FTG 6-6 MFS-MORB STRAIGHT          | 8    |
| 16     | 20421  | FTG 4-4 MFS-MBSPP W/BS 90          | 1    |
| 17     | 39780  | GAUGE OIL LF 2.5 0-5000 CBM SAE    | 1    |
| 18     | 12171  | FTG 6-6 MFS-MFS SWIVEL STRAIGHT    | 1    |
| 19     | 12172  | FTG 8-8 MFS-MFS SWIVEL STRAIGHT    | 1    |
| 20     | C1175  | FTG 8-8 MFS-MAORB 45               | 1    |
| 21     | 31659  | FTG 8-12 MFS-MBSPP W/BS STRAIGHT   | 2    |
| 22     | 32302  | FTG 4-4 MFS-MFS SWIVEL STRAIGHT    | 1    |
| 23     | C0338  | FTG 6-6 MFS-MAORB 90               | 2    |
| 24     | C2032  | FTG 4 FFS CAP                      | 1    |
| 25     | 0882   | FTG 6 FFS CAP                      | 1    |
| 26     | 2772   | FTG 8 FFS CAP                      | 1    |
| REV. A |        |                                    |      |



**NOTES:**  
**HARDWARE KIT PN: 128489**

# Hydraulic Installation

## **WARNING**

Follow the instructions presented on this page. Failure to follow these instructions may result in death or serious injury.

1. After mounting, locate the pressure and return lines. Note: Pressure line is 3/8" hose; Winch Case Drain Line is 1/4" hose; Return line is 1/2" hose. Hoses are terminated using swivel fittings.
2. Install hydraulic lines per diagram below. See next page for Case Drain Installation. Note: Stabilizer valve supplies oil to crane using the Power Beyond feature.
3. Install hydraulic reservoir with return filter. Attach pump pressure line to valve, return link to tank.
4. Fill system with hydraulic oil (See Stellar® Lubrication Recommendations for fluid details).

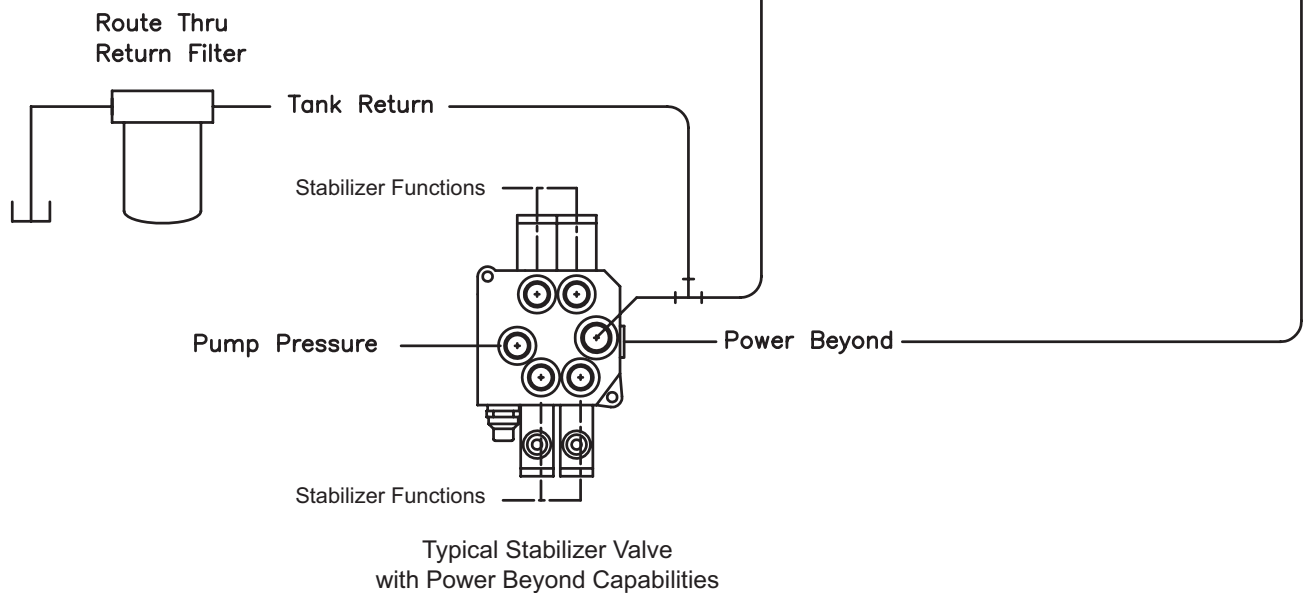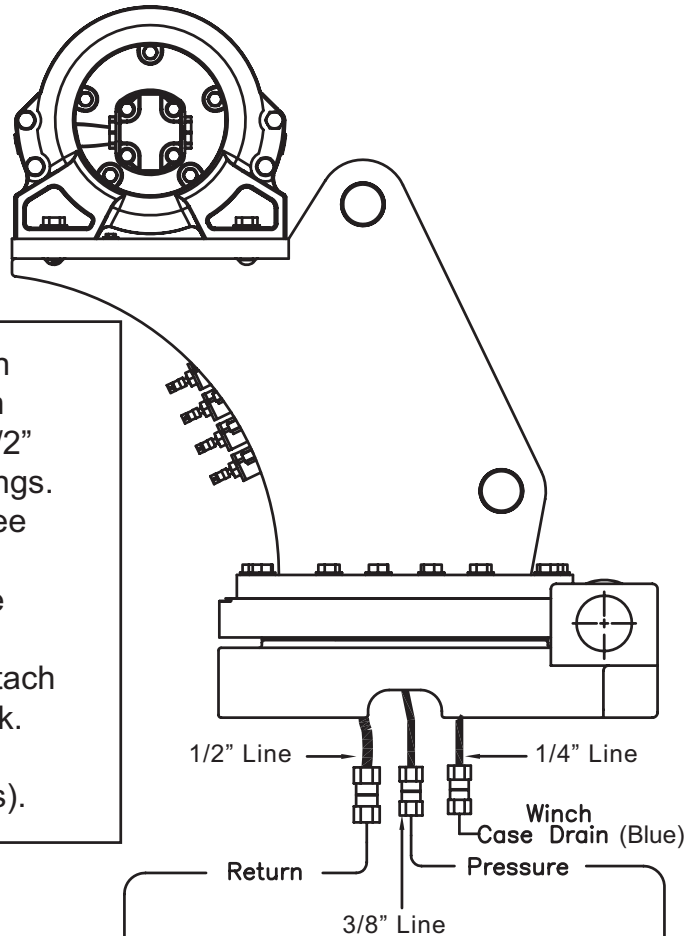

# Winch Case Drain Installation

## **WARNING**

Follow the instructions presented on this page. Failure to follow these instructions may result in death or serious injury.

### Installing the winch case drain

1. The winch case drain must run directly to the reservoir to ensure no back pressure in the line.
2. Use 1/4" hydraulic hose and fittings rated for a minimum of 300 psi.
3. Locate the winch case drain line at the bottom of the crane base as shown in Fig. 1 (Blue Hose).  
Note: Verify the winch case drain is attached to the hose that is connected to the winch motor.
4. Attach one end of the winch case drain to 1/4" swivel fitting located in step 3.
5. Route the winch case drain hose directly to the reservoir.
6. Connect the second end of the winch case drain to unshared fitting on the top of the reservoir as shown in Fig 2.

Fig.1



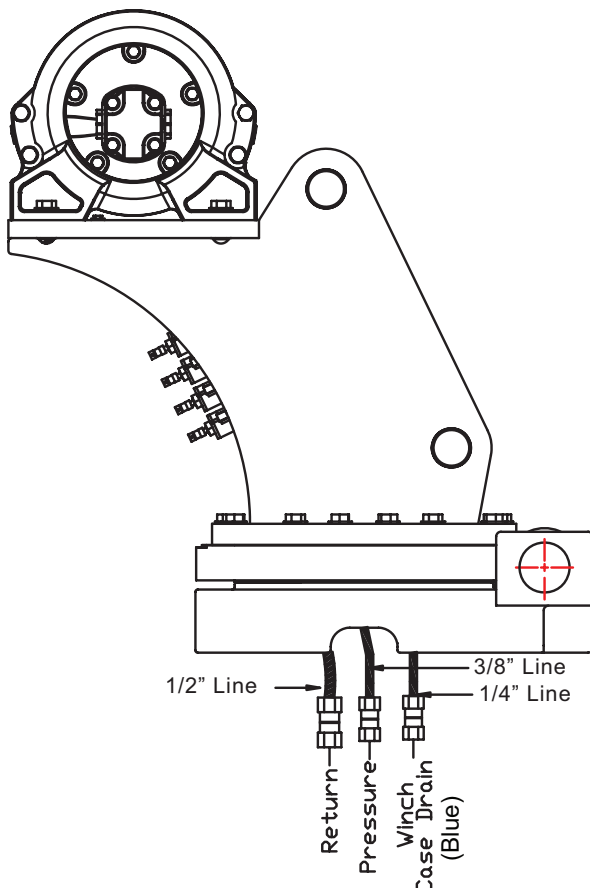



Fig. 2

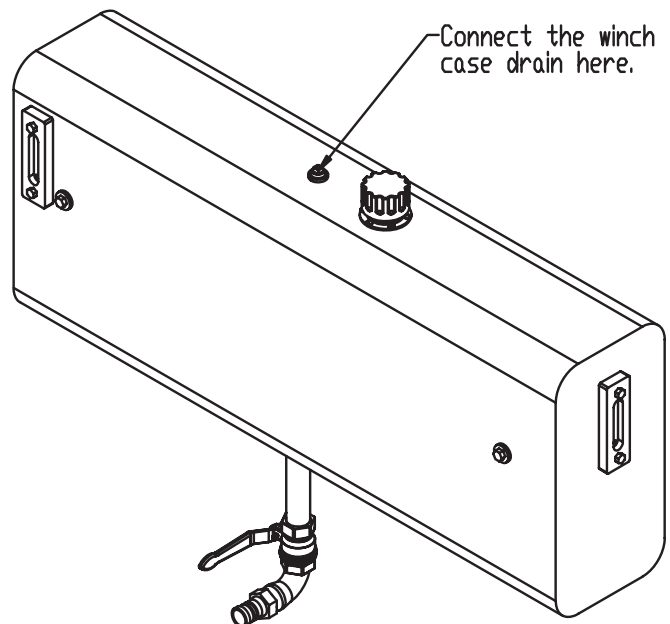

# Hydraulic System

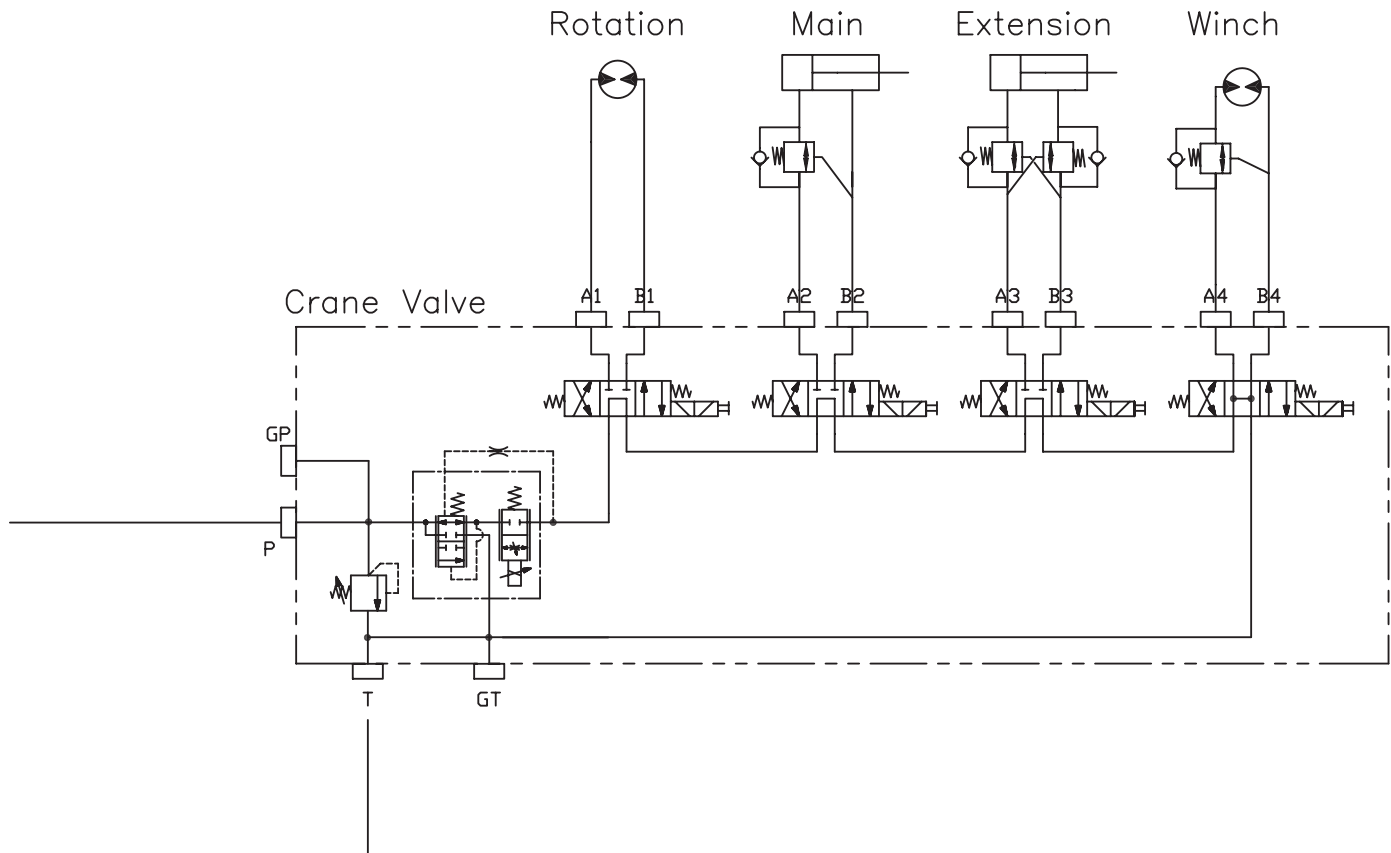

## Face Seal/O-Ring Size Chart

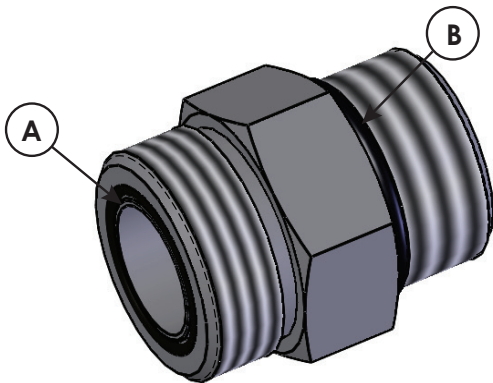

| Hose Size | Fitting Size | Face Seal (A)<br>Stellar® PN | O-ring Boss (B)<br>Stellar® PN |
|-----------|--------------|------------------------------|--------------------------------|
| 1/4"      | #4           | C2027                        | D1245                          |
| 3/8"      | #6           | C2028                        | D1246                          |
| 1/2"      | #8           | C2029                        | D1247                          |
| 5/8"      | #10          | 32223                        | D1248                          |
| 3/4"      | #12          | D1244                        | D1249                          |
| 1"        | #16          |                              | D1250                          |

# Stability Procedure

## Definition of Stability for the Stellar Telescopic Crane Products:

A truck is stable until the load cannot be lifted off the ground with the winch, without tipping over the truck. Every Stellar crane installed must be tested for stability to determine the actual load capacity of the final truck package. The actual test data must be recorded and supplied with the truck at the time of in-service and should be kept with the truck at all times. The following procedure will test the truck package for stability and will provide a stability capacity chart. The load limit information shown on the stability capacity chart is formulated on 85% tipping.

## Set Up:

1. Locate the truck on a test course in position for loading and engage travel brakes.
2. Set stabilizers so that they make contact with firm, level footing.
3. Operate the crane under partial load to assure operator proficiency and proper machine function.
4. Put the radio into Stability Test Mode:
  - A. Push the four crane function switches up and hold until the screen reads "STB" in the upper right corner (approximately 5 seconds.)



B. At this point, the crane will have enough capacity to handle the weight for the stability test.

C. The radio will timeout of stability mode after 30 minutes or when the E-Stop button is pushed.

## NOTICE

The radio can only be put into stability mode five times. After that, the radio would have to be returned to Stellar to be reprogrammed to allow additional stability testing. All other radio functions will work properly even if stability mode is not available.

# Stability Procedure Continued...

## 9621 Stability Data


Max Horizontal Reach: 250" (From the center of rotation to boom tip)

Boost Stability Test Weight: 4,000 lbs.

Non-Boost Stability Test Weight: 3,390 lbs.

## Test Procedure

1. Rotate the crane into Zone 1 position.
2. With the crane fully retracted and the boom horizontal, winch the test weight off the ground.  
Note: Keep weight within six inches of the ground at all times.
3. Extend the boom outward until full extension has been reached or until the truck becomes unstable. (Again, use the winch to keep the weight within six inches of the ground.)
4. If the boom goes full extension without becoming unstable, the crane is termed stable for this zone and 100% can be written in the Zone 1 data box.
5. If the truck becomes unstable prior to going full extension, retract the boom until the truck becomes stable and measure the horizontal reach in this position (center of rotation to boom tip). This is the stable horizontal reach for this zone. Stable horizontal reach divided by Maximum horizontal reach multiplied by 100 equals the percentage of rated capacity for this zone. Use the following formula to determine the percentage of rated capacity:
6. Record this number in the data box for Zone 1. This is the revised capacity due to stability for this zone.
7. Repeat this procedure for each zone until the worksheet is completed.
8. This

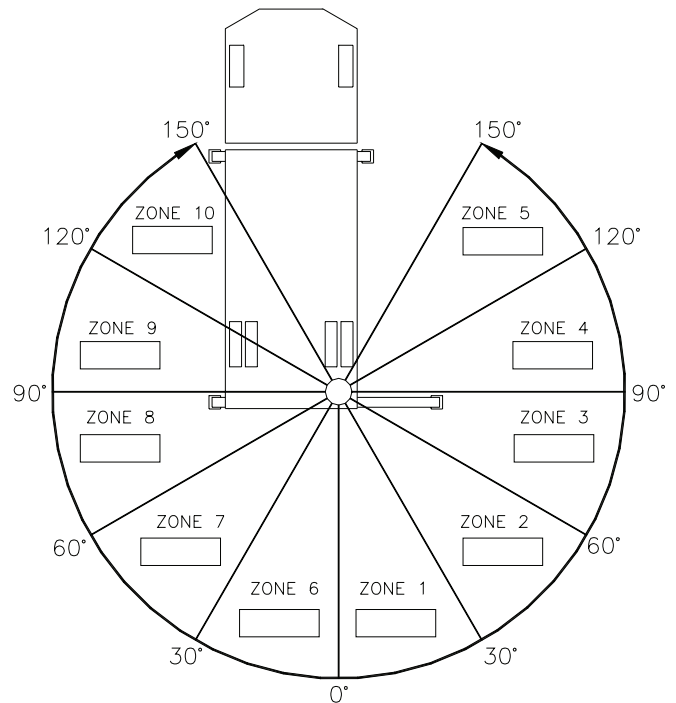

$$\frac{\text{Stable Horizontal Reach}}{\text{Max Horizontal Reach}} \times 100 = \text{Percentage of Rated Capacity}$$

is the  
revised

capacity based on stability of this package.


## Crane Load Level Indicator

Stellar® Cranes are shipped with a load level indicator that is used to determine if the truck is level (side to side) before using the crane to pick/move a load. This level should be installed in the isolated crane compartment of the body. If level indicator is missing or damaged, please contact Stellar Customer Support for a replacement.



PN 76483

# Decal Placement - PN 127765

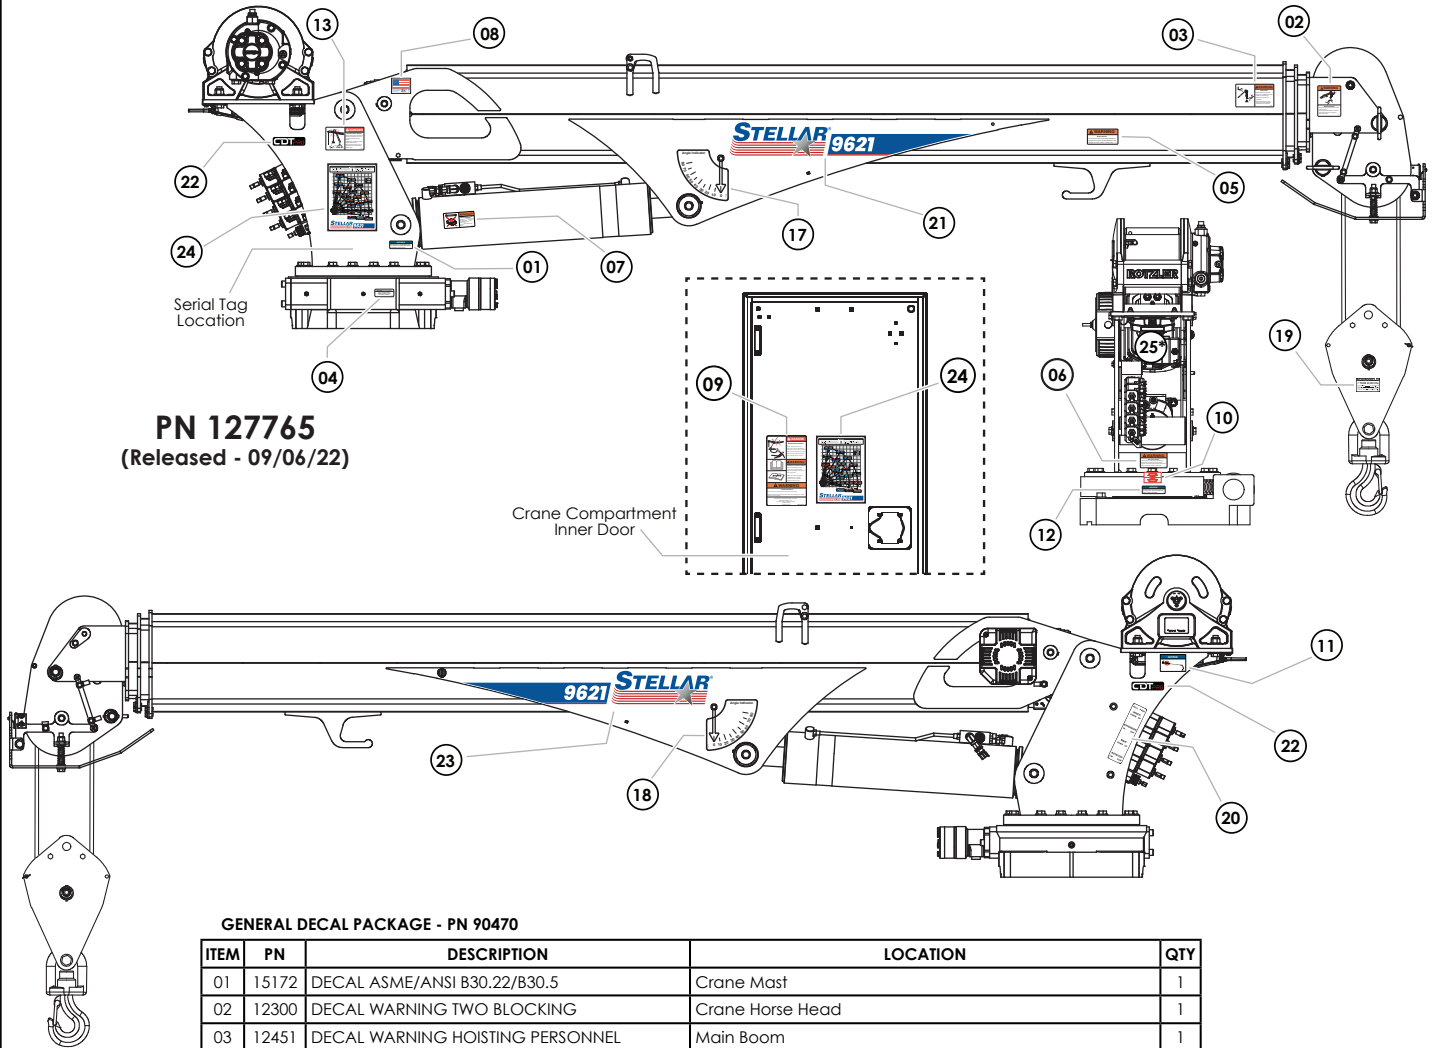

## GENERAL DECAL PACKAGE - PN 90470

| ITEM | PN    | DESCRIPTION                        | LOCATION                         | QTY |
|------|-------|------------------------------------|----------------------------------|-----|
| 01   | 15172 | DECAL ASME/ANSI B30.22/B30.5       | Crane Mast                       | 1   |
| 02   | 12300 | DECAL WARNING TWO BLOCKING         | Crane Horse Head                 | 1   |
| 03   | 12451 | DECAL WARNING HOISTING PERSONNEL   | Main Boom                        | 1   |
| 04   | 15171 | DECAL GREASE WORM                  | Crane Base                       | 1   |
| 05   | 24712 | DECAL WARNING STOW HOOK            | Crane Boom above stow hook       | 1   |
| 06   | 25159 | DECAL WARNING MANUAL OVERRIDES     | Under Valve Bank                 | 1   |
| 07   | 28256 | DECAL WARNING OVERLOAD DEVICE      | Main Cylinder                    | 1   |
| 08   | 35234 | DECAL STELLAR MADE IN THE USA      | Main Boom                        | 1   |
| 09   | 93936 | DECAL SAFETY & SERV MECH BODY DOOR | Crane Compartment                | 1   |
| 10   | 4188  | DECAL ROTATION ALIGNMENT           | Crane Base                       | 1   |
| 11   | 73929 | DECAL PRESSURE WASH                | Crane Mast                       | 1   |
| 12   | 9188  | DECAL ROTATE/GREASE                | Crane Base                       | 1   |
| 13   | C1179 | DECAL DANGER ELECTROCUTION SMALL   | Crane Mast                       | 1   |
| 14** | C4545 | DECAL DANGER ELECTROCUTION LARGE   | Four corners of the body/chassis | 4   |
| 15** | C5910 | DECAL STELLAR 4x9.5                | Suggested: Rear body/tailgate    | 1   |
| 16** | C5911 | DECAL STELLAR 2x4.5                | Suggested: Side corners of body  | 3   |
| 17   | D1196 | DECAL ANGLE INDICATOR CS           | Main Boom                        | 1   |
| 18   | D1197 | DECAL ANGLE INDICATOR SS           | Main Boom                        | 1   |

## 9621 HSS DECAL PACKAGE - 127769

| ITEM | PN     | DESCRIPTION                       | LOCATION                                             | QTY |
|------|--------|-----------------------------------|------------------------------------------------------|-----|
| 19   | 56405  | DECAL SNATCH BLOCK 7 TON          | Snatch Block                                         | 1   |
| 20   | 41068  | DECAL VB CONTROL MECH CRANE       | On side of Crane Mast                                | 1   |
| 21   | 128000 | DECAL ID 9621 HSS PRE-MASKED CS   | Main Boom (Curb Side)                                | 1   |
| 22   | 122920 | DECAL CDT PRO MAST                | Crane Mast (Both Sides)                              | 2   |
| 23   | 127999 | DECAL ID 9621 HSS PRE-MASKED SS   | Main Boom (Street Side)                              | 1   |
| 24   | 127995 | DECAL CAPACITY 9621 HSS           | Main Boom and Crane Compartment                      | 2   |
| 25*  | 122410 | DECAL CNTRL ID 9621 V3 CDT PRO    | CDT PRO ONLY - Valve controller inside mast          | 1   |
| 25*  | 122411 | DECAL CNTRL ID 9621 V3 CDT PRO NB | CDT PRO NONBOOST ONLY - Valve controller inside mast | 1   |

\* For CDTpro™ equipped cranes, use PN 122410. For CDTprononboost™ equipped cranes, use PN 122411.

\*\* Not shown.


**This page intentionally left blank.**

# Chapter 3 - Assembly Drawings

## Chapter Contents

|                                                         |    |
|---------------------------------------------------------|----|
| Base Assembly - PN 71166.....                           | 28 |
| Gear Bearing - PN 71041.....                            | 29 |
| Mast Assembly - PN 128249.....                          | 30 |
| Mast Assembly - PN 128249 Parts List.....               | 31 |
| Winch - PN 105033.....                                  | 32 |
| Winch - PN 105033.....                                  | 33 |
| Main Boom Assembly - PN 122423 .....                    | 34 |
| Main Boom Assembly - PN 122423 Parts List .....         | 35 |
| Extension Boom Assembly - PN 125509 .....               | 36 |
| Extension Boom Assembly - PN 125509 Parts List .....    | 37 |
| Extension Boom Assembly - PN 125509 Parts List .....    | 38 |
| Main Cylinder Assembly - PN 122923.....                 | 40 |
| Main Cylinder Assembly - PN 122923 Parts List.....      | 41 |
| Extension Cylinder Assembly - PN 125733.....            | 42 |
| Extension Cylinder Assembly - PN 125733 Parts List..... | 43 |
| Snatch Block Assembly - PN 55898.....                   | 44 |
| Snatch Block Assembly - PN 55898 Parts List.....        | 45 |
| Wireless Remote Replacement Parts .....                 | 46 |


# Base Assembly - PN 71166

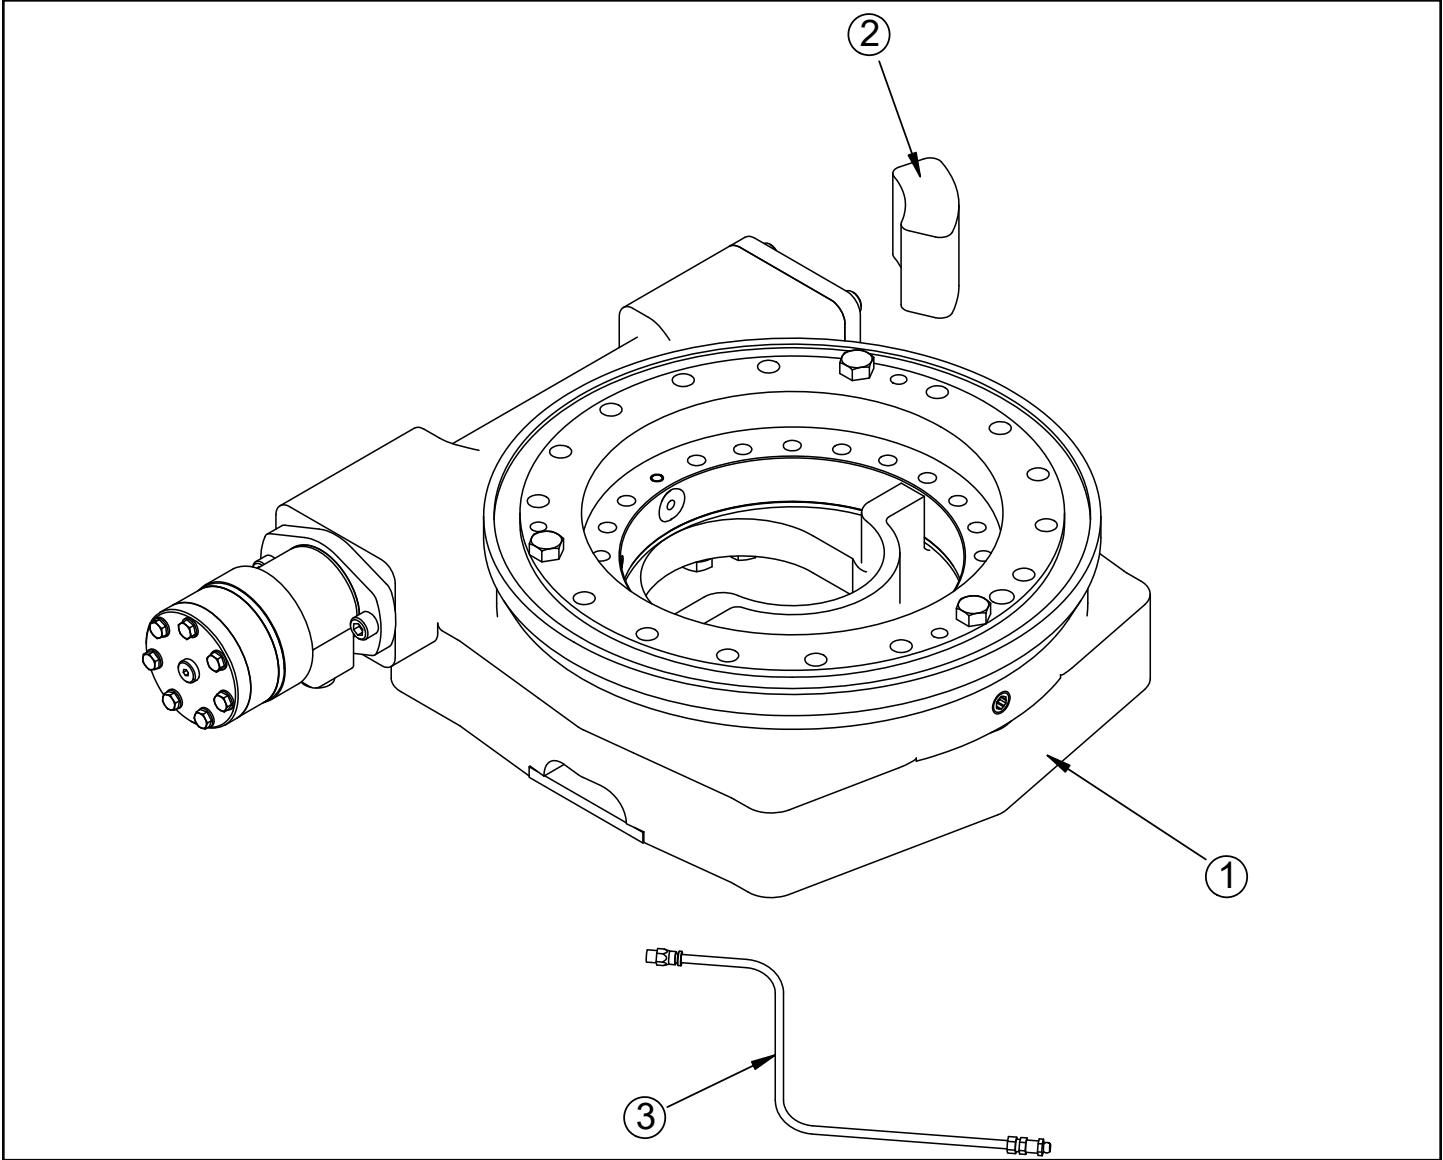

| PN 71166 |        |                                                                 |     |
|----------|--------|-----------------------------------------------------------------|-----|
| ITEM     | PART   | DESCRIPTION                                                     | QTY |
| 1        | 71041  | BEARING SWING DRIVE CAST BASE 14 IN ENCLOSED KINEMATICS W/MOTOR | 1   |
| 2        | 71458  | STOP 12630                                                      | 1   |
| 3        | 104018 | HARDWARE KIT BASE ASM 30IN GREASE LINE                          | 1   |
| REV. C   |        |                                                                 |     |

# Gear Bearing - PN 71041


**BEFORE 11/15/18**

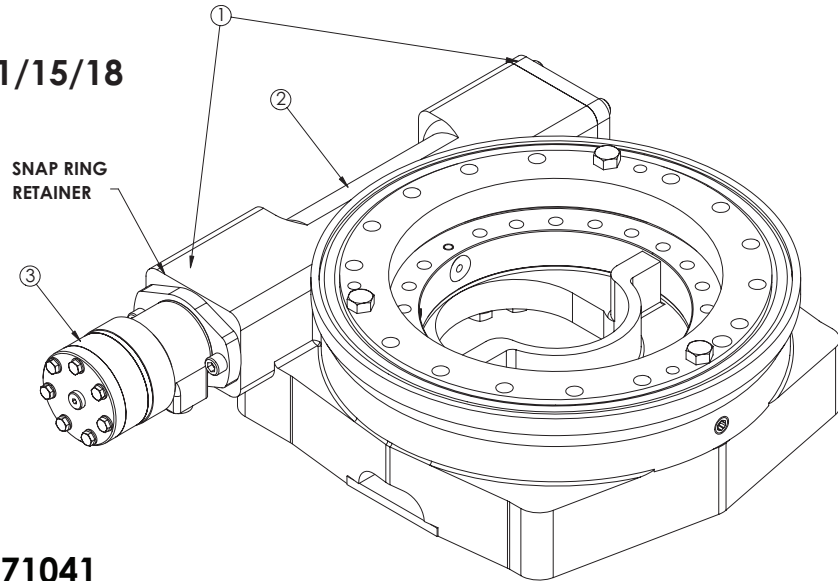

**PN 71041  
(BEFORE 11/15/18)**

| ITEM | PART No. | DESCRIPTION                                  | QTY. |
|------|----------|----------------------------------------------|------|
| 1    | 77891    | BEARING KIT 14IN ENCLOSED CAST BASE KNMTS    | 1    |
| 2    | 77892    | WORM 14IN ENCLOSED CAST BASE KNMTS SNAP RING | 1    |
| 3    | 77895    | MOTOR 160CC 1IN KEYED                        | 1    |


**AFTER 11/15/18**

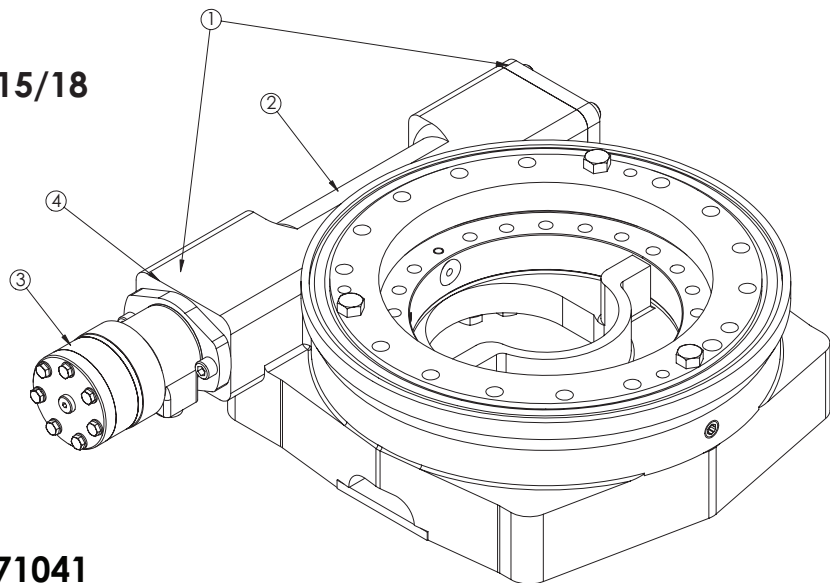

**PN 71041  
(AFTER 11/15/18)**

| ITEM | PART No. | DESCRIPTION                                      | QTY. |
|------|----------|--------------------------------------------------|------|
| 1    | 77891    | BEARING KIT 14IN ENCLOSED CAST BASE KNMTS        | 1    |
| 2    | 101056   | WORM 14IN ENCLOSED CAST BASE KNMTS MOTOR ADAPTER | 1    |
| 3    | 77895    | MOTOR 160CC 1IN KEYED                            | 1    |
| 4    | 101057   | MOTOR ADAPTER 14IN ENCLOSED CAST BASE KNMTS      | 1    |

# Mast Assembly - PN 128249

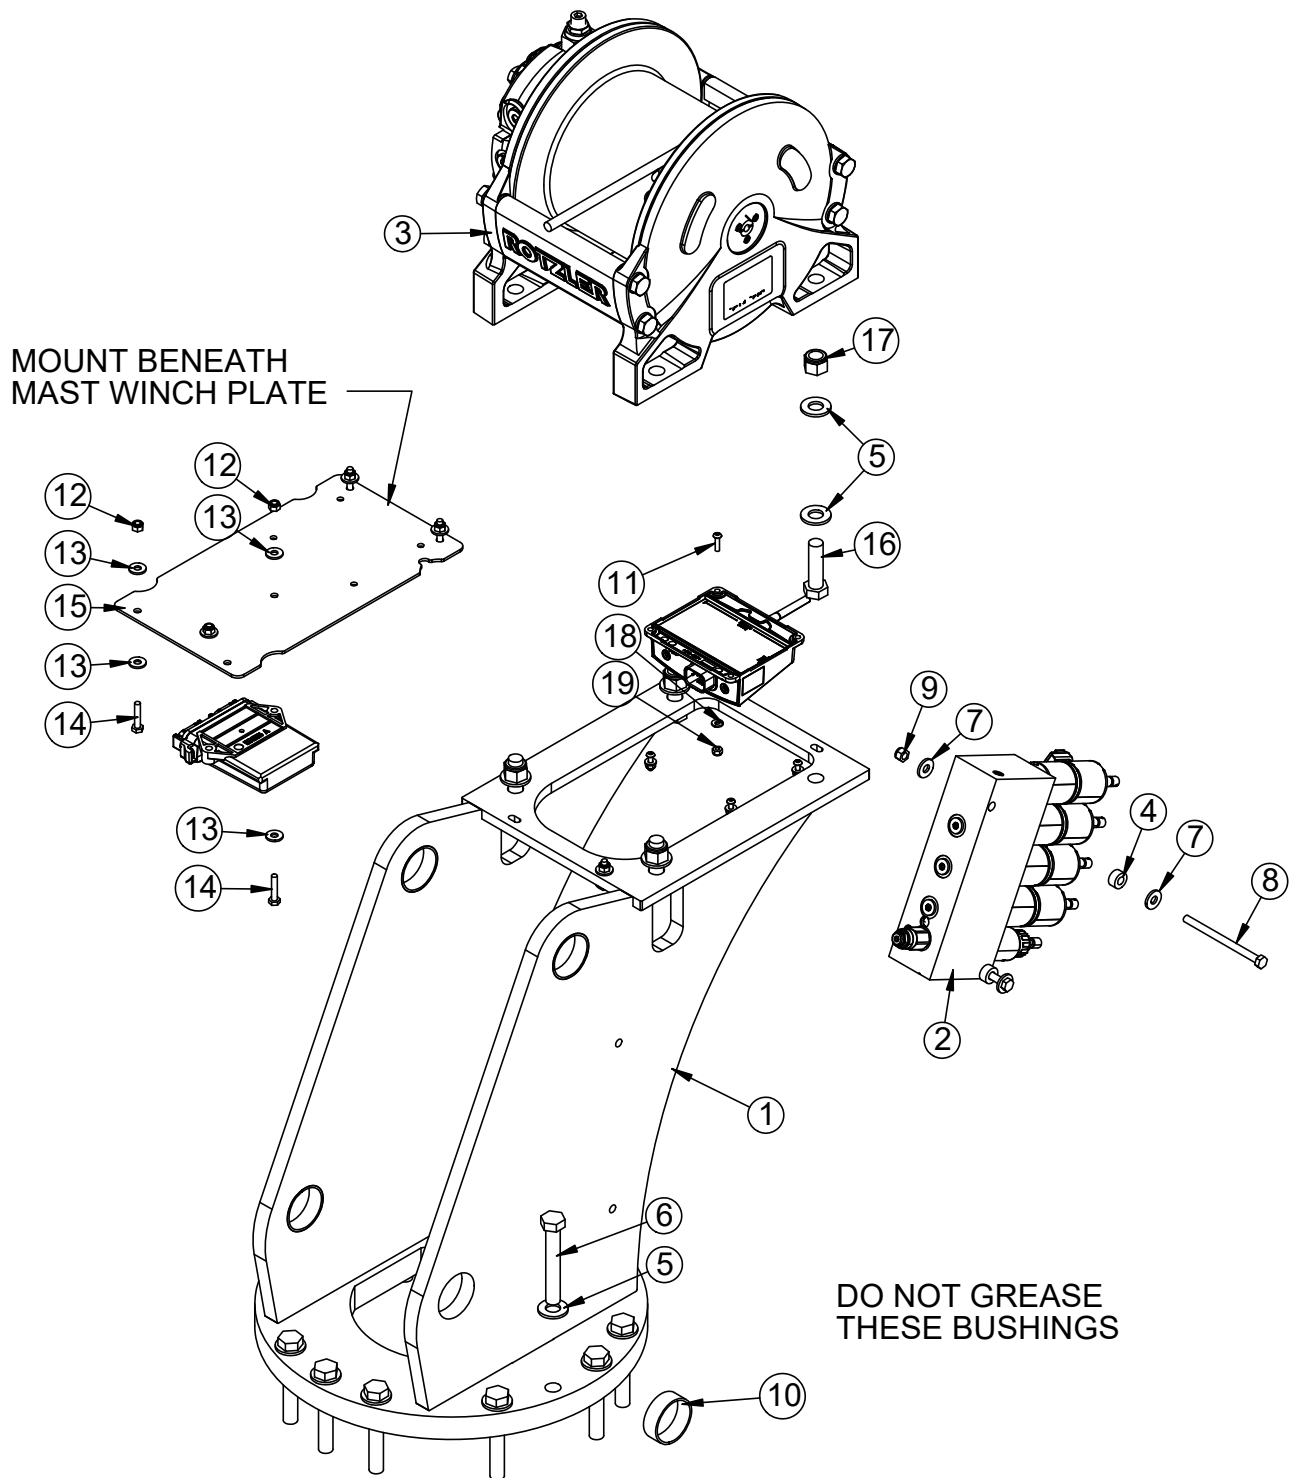

# Mast Assembly - PN 128249 Parts List

| PN 128249            |        |                                        |     |
|----------------------|--------|----------------------------------------|-----|
| ITEM                 | PART   | DESCRIPTION                            | QTY |
| 1                    | 119857 | MAST 126 HSS                           | 1   |
| 2                    | 125254 | VB 4 SECT W/PROP DELTROL 8GPM V2       | 1   |
| 3                    | 105033 | WINCH 5000 TI2CC W/100 FT ROPE         | 1   |
| 4                    | 27813  | COLLAR 0.38X0.75X0.38 UHMW             | 2   |
| 5                    | C5902  | WASHER 0.63 SAE FLAT YELLOW GR8        | 22  |
| 6                    | 77555  | CAP SCR 0.63-11X4.00 HHGR8 W/RED PATCH | 14  |
| 7                    | 0343   | WASHER 0.31 USS FLAT                   | 4   |
| 8                    | C0933  | CAP SCR 0.31-18X4.50 HHGR5             | 2   |
| 9                    | 0342   | NUT 0.31-18 HHGR5 NYLOC                | 2   |
| 10                   | 44533  | BUSHING COMPOSITE 2.00X0.75            | 4   |
| 11                   | D0894  | CAP SCR #10-24X0.75 BTNHD SS           | 4   |
| 12                   | 0333   | NUT 0.25-20 HHGR5 NYLOC                | 6   |
| 13                   | 0340   | WASHER 0.25 USS FLAT                   | 12  |
| 14                   | 0437   | CAP SCR 0.25-20X1.25 HHGR5             | 6   |
| 15                   | 101846 | PLATE RADIO MNT MAST 76 HSS            | 1   |
| 16                   | 84053  | CAP SCR 0.63-11X2.25 HHGR8             | 4   |
| 17                   | 24868  | NUT 0.63-11 HHGR8 NYLOC                | 4   |
| 18                   | D0178  | WASHER #10 SAE FLAT                    | 4   |
| 19                   | 26034  | NUT #10-24 HH NYLOC                    | 4   |
| REV. INITIAL RELEASE |        |                                        |     |


## NOTES:

### HARDWARE KITS:

128035

128036

## Winch - PN 105033

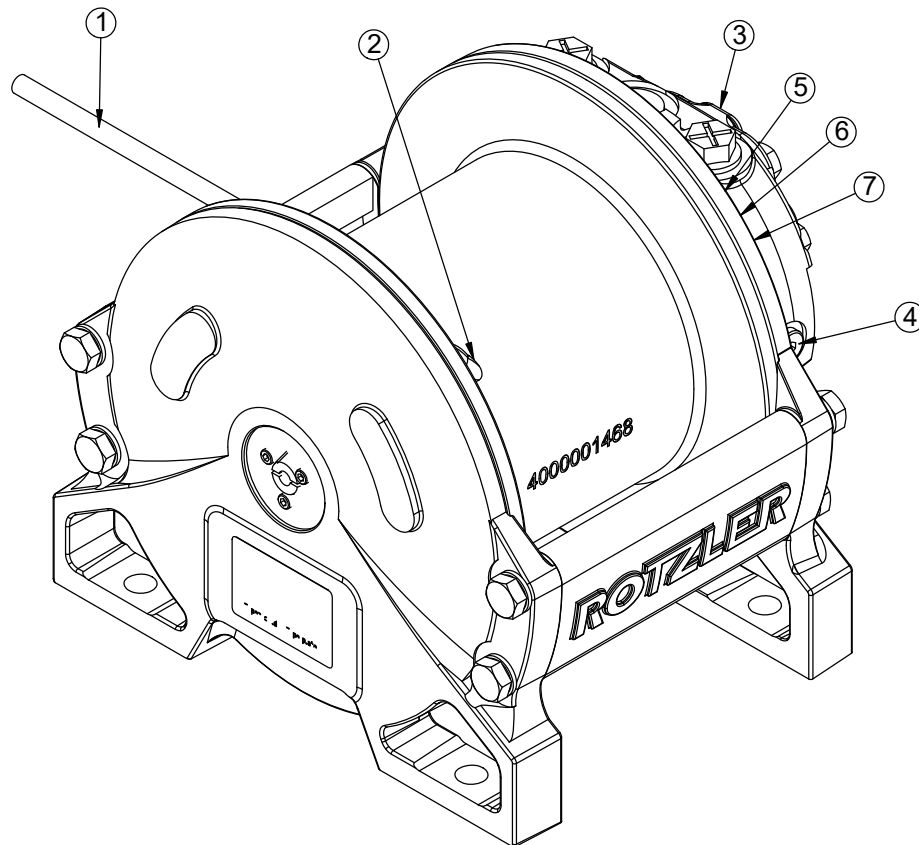


# Winch - PN 105033

| PN 105033            |        |                                         |     |
|----------------------|--------|-----------------------------------------|-----|
| ITEM                 | PART   | DESCRIPTION                             | QTY |
| 1                    | 44812  | WIRE ROPE 7/16 6X19 IWRC-DGXXIP100      | 1   |
| 2                    | 92074  | WEDGE ROTZLER TH2/TI2                   | 1   |
| 3                    | 106853 | MOTOR WINCH 5000 ROTZLER TI2-31         | 1   |
| 4                    | 106855 | VALVE COUNTERBALANCE ROTZLER TI2        | 1   |
| 5                    | 106856 | SEAL KIT WINCH ROTZLER TI2              | 1   |
| 6                    | 106857 | SEAL KIT WINCH BRAKE ROTZLER TI2        | 1   |
| 7                    | 137956 | SEAL KIT WINCH MOTOR CHANGE ROTZLER TI2 | 1   |
| REV. INITIAL RELEASE |        |                                         |     |

**NOTES:****WHEN REPLACING MOTOR, ALSO USE KIT 137956****COUNTERBALANCE VALVE TORQUE SPEC: 60-65 FT-LB**

# Main Boom Assembly - PN 122423

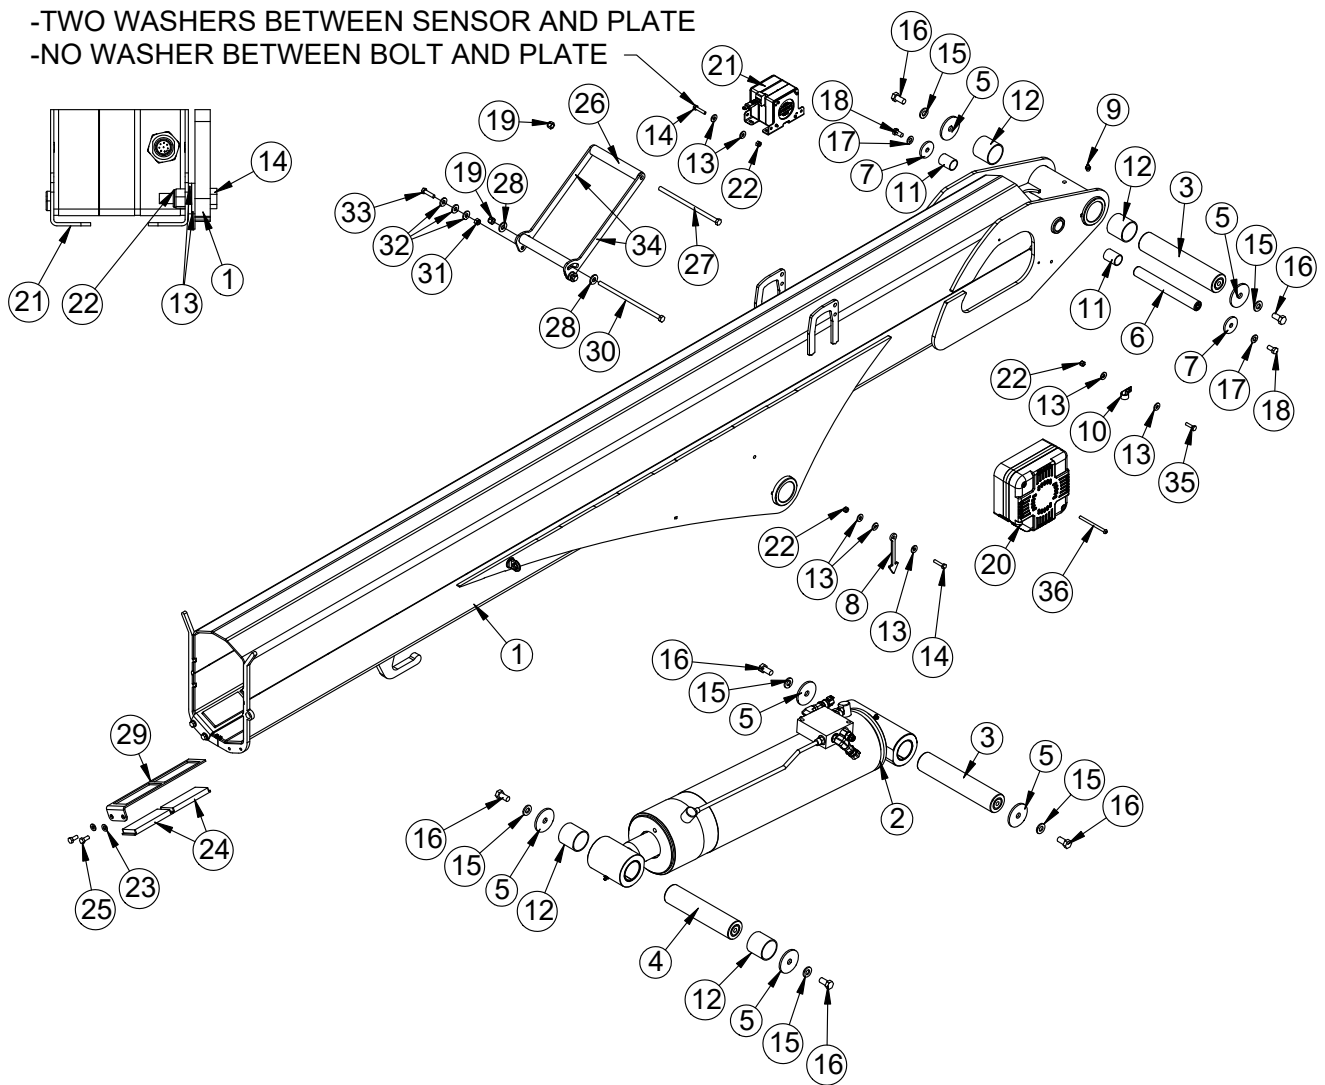


# Main Boom Assembly - PN 122423 Parts List

| PN 122423 |          |                                    |     |
|-----------|----------|------------------------------------|-----|
| ITEM      | PART     | DESCRIPTION                        | QTY |
| 1         | 122424   | INNER BOOM 12621 HSS               | 1   |
| 2         | 122923   | CYLINDER ASM 5.50X22.50 126 HSS    | 1   |
| 3         | 9709CR   | PIN 2.00X10.19 D&T ZC              | 2   |
| 4         | 9711CR   | PIN 2.00X8.88 D&T ZC               | 1   |
| 5         | 9142     | PIN CAP 0.56X2.50X0.19 YZ          | 6   |
| 6         | 107028CR | PIN 1.00X8.50 D&T ZC               | 1   |
| 7         | 9320     | PIN CAP 0.44X1.75X0.19 YZ          | 2   |
| 8         | 102289   | PLATE ANGLE INDICATOR 76 HSS BLACK | 2   |
| 9         | C1592    | ZERK 1/8 NPT STRAIGHT              | 1   |
| 10        | C0078    | CLAMP 0.38 BLK VINYL               | 1   |
| 11        | 0068     | BUSHING BPC16DXR24 1.00X1.50       | 2   |
| 12        | 4381     | BUSHING BPC32DXR32 2.00X2.00       | 4   |
| 13        | 0340     | WASHER 0.25 USS FLAT               | 12  |
| 14        | 0437     | CAP SCR 0.25-20X1.25 HHGR5         | 4   |
| 15        | D0790    | WASHER 0.50 SAE FLAT YELLOW GR8    | 6   |
| 16        | 10172    | CAP SCR 0.50-13X1.00 HHGR8         | 6   |
| 17        | C6353    | WASHER 0.38 SAE FLAT YELLOW GR8    | 2   |
| 18        | 9843     | CAP SCR 0.38-16X0.75 HHGR8         | 2   |
| 19        | 0347     | NUT 0.38-16 HHGR5 NYLOC            | 2   |
| 20        | 123760   | CORD REEL 29FT 4 WIRE SEALED       | 1   |
| 21        | 110460   | ENCODER BOOM VECTOR 6M CANOPEN     | 1   |
| 22        | 0333     | NUT 0.25-20 HHGR5 NYLOC            | 5   |
| 23        | 5591     | WASHER 0.31 SAE FLAT YELLOW GR8    | 4   |
| 24        | 107026   | WEAR PAD INNER 76 HSS              | 4   |
| 25        | 0420     | CAP SCR 0.31-18X0.75 HHGR5         | 4   |
| 26        | 107776   | SPACER ROPE GUIDE 76 HSS UHMW      | 2   |
| 27        | 90913    | CAP SCR 0.38-16X8.00 HHGR5         | 1   |
| 28        | 0346     | WASHER 0.38 USS FLAT               | 2   |
| 29        | 106801   | PLATE WEAR PAD GUIDE INNER 76 HSS  | 2   |
| 30        | 87979    | CAP SCR 0.38-16X8.50 HHGR5         | 1   |
| 31        | 0342     | NUT 0.31-18 HHGR5 NYLOC            | 2   |
| 32        | 0343     | WASHER 0.31 USS FLAT               | 6   |
| 33        | 0485     | CAP SCR 0.31-18X1.25 HHGR5         | 2   |
| 34        | 109670   | PLATE ROPE GUIDE 76 HSS SLOT BLACK | 2   |
| 35        | 0480     | CAP SCR 0.25-20X1.00 HHGR5         | 1   |
| 36        | 66795    | CAP SCR 0.25-20X3.50 BTNHD SS      | 2   |
| REV. A    |          |                                    |     |

**NOTES:**  
**HARDWARE KITS:**  
**97628**  
**118867**  
**118868**

## Extension Boom Assembly - PN 125509

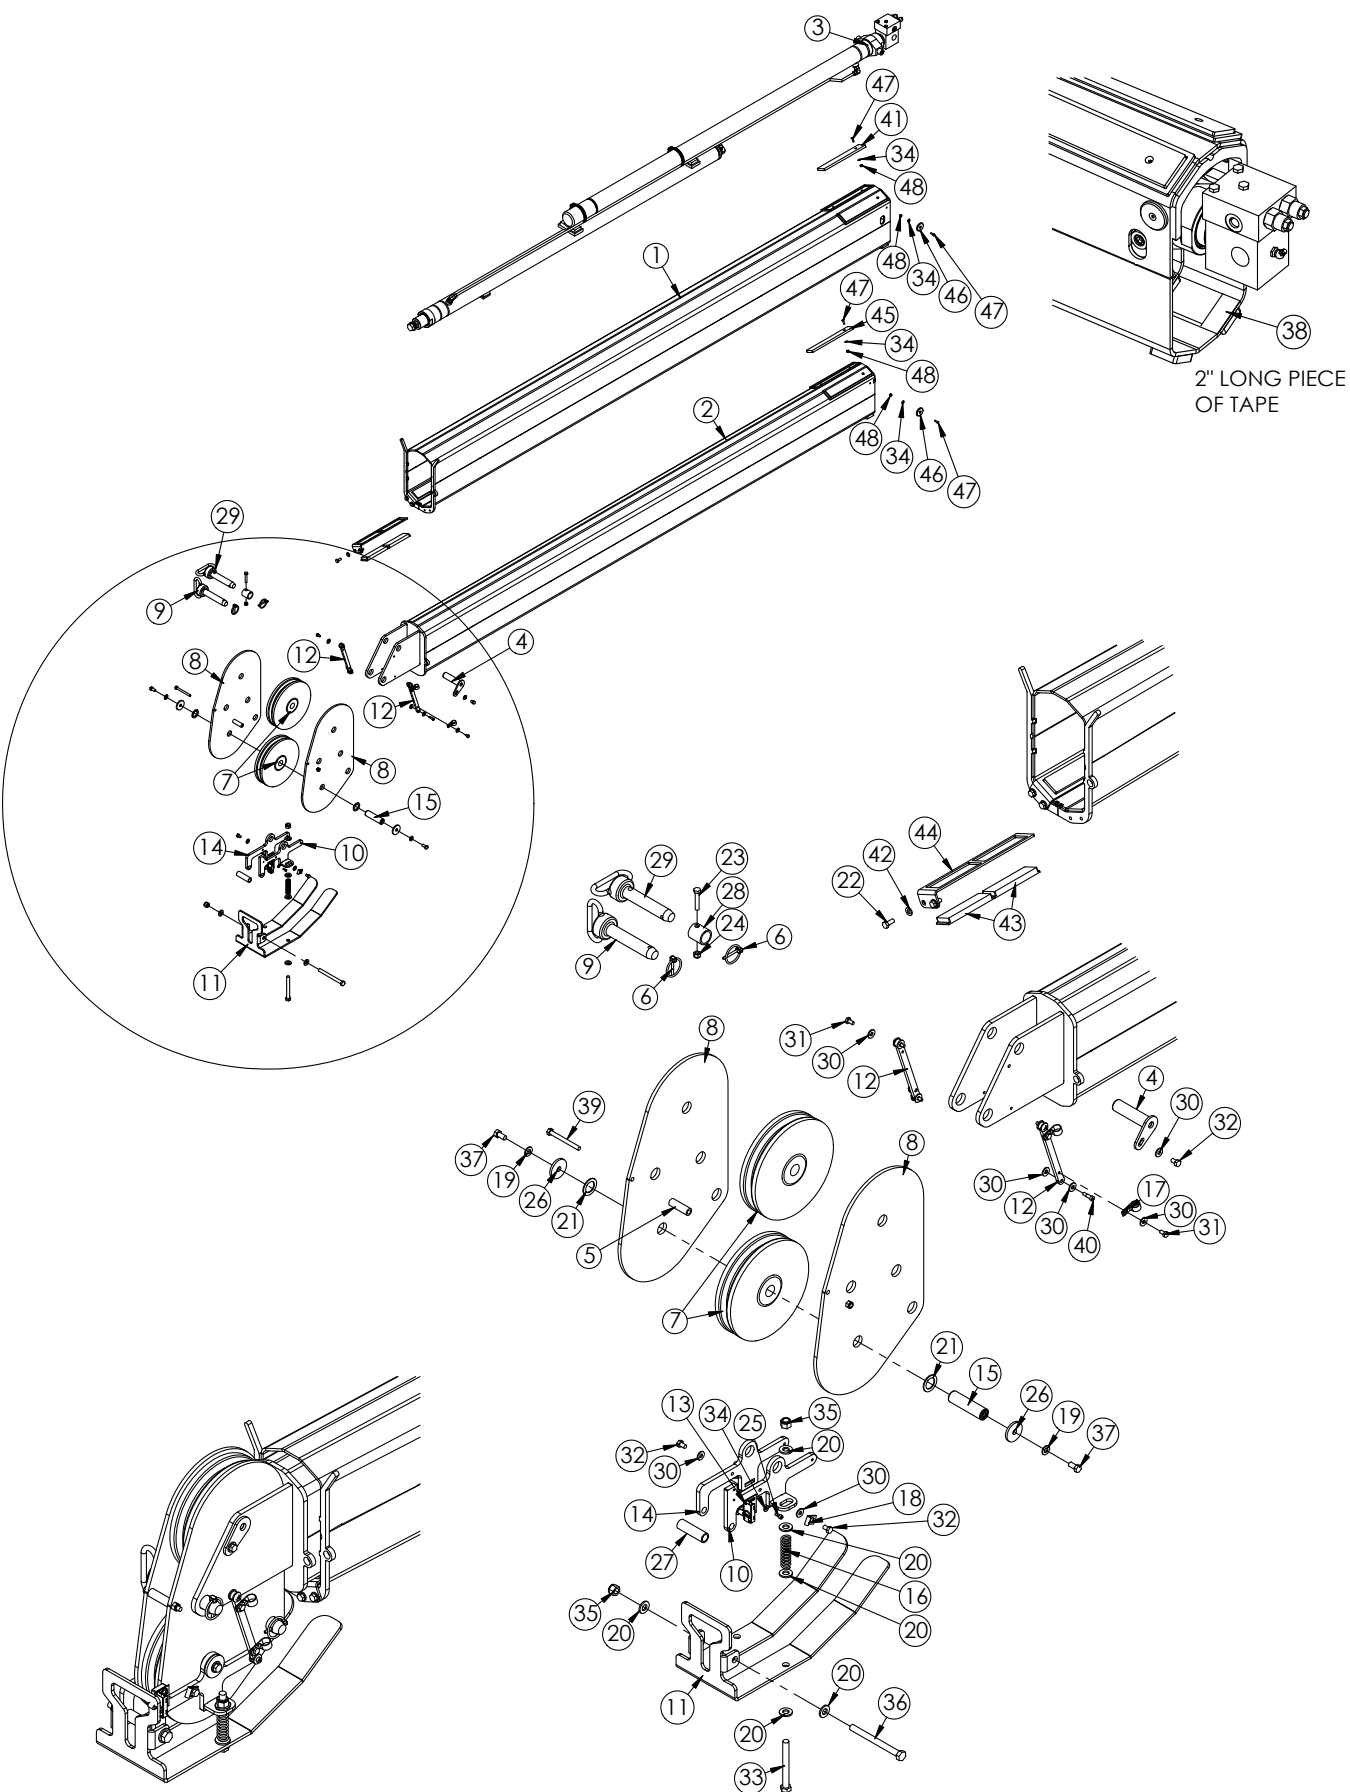

# Extension Boom Assembly - PN 125509 Parts List

| PN 125509 |          |                                            |     |
|-----------|----------|--------------------------------------------|-----|
| ITEM      | PART     | DESCRIPTION                                | QTY |
| 1         | 125727   | EXT BOOM 1ST 12621/10621/9621 HSS          | 1   |
| 2         | 125730   | EXT BOOM 2ND 12621/10621/9621 HSS          | 1   |
| 3         | 125733   | CYLINDER EXT ASM 12621 HSS                 | 1   |
| 4         | 13399ZP  | PIN TEAR DROP 1.00X3.81 ZC                 | 1   |
| 5         | 27719    | SPACER BOOM TIP 6620 UHMW                  | 1   |
| 6         | 5753     | PIN 0.19X1.56 LYNCH                        | 2   |
| 7         | 43858    | SHEAVE 10621 9.25 DIA .44R/1.88THK         | 2   |
| 8         | 119853   | PLATE SHEAVE MOUNT 126 HSS PC BLACK        | 2   |
| 9         | 12824    | PIN HITCH 1.00X4.50                        | 1   |
| 10        | 122399   | MNT CRADLE LH FS/CRADLE A2B 126 HSS YELLOW | 1   |
| 11        | 106839   | PLATE CRADLE A2B 76 HSS YELLOW             | 1   |
| 12        | 106982   | PLATE LINK FS/CRADLE 76 HSS TAPPED YELLOW  | 2   |
| 13        | 35105    | SWITCH LIMIT E1117-B9111-6C                | 1   |
| 14        | 122429   | MNT CRADLE RH FS/CRADLE A2B 126 HSS YELLOW | 1   |
| 15        | 106985CR | PIN 1.00X3.69 D&T                          | 1   |
| 16        | 27710    | SPRING ANTI 2 BLOCK CRADLE A2B             | 2   |
| 17        | C0078    | CLAMP 0.38 BLK VINYL                       | 2   |
| 18        | 31279    | CLAMP 0.31D 0.75W 0.40HL GALV BLK VINYL    | 1   |
| 19        | C6353    | WASHER 0.38 SAE FLAT YELLOW GR8            | 2   |
| 20        | D0790    | WASHER 0.50 SAE FLAT YELLOW GR8            | 10  |
| 21        | 0867     | MACHY WASHER 1.00ID 14GA                   | 2   |
| 22        | 0420     | CAP SCR 0.31-18X0.75 HHGR5                 | 4   |
| 23        | 0487     | CAP SCR 0.31-18X1.75 HHGR5                 | 1   |
| 24        | 0342     | NUT 0.31-18 HHGR5 NYLOC                    | 2   |
| 25        | 31132    | CAP SCR #10-24X0.550 SH SS 18-8            | 2   |
| 26        | 9320     | PIN CAP 0.56X3.50X.25                      | 2   |
| 27        | 106986   | PIPE 0.50X2.81 SCH40 YELLOW                | 1   |
| 28        | 106984   | TUBE SPACER HITCH PIN 1.00X1.38 BLACK      | 1   |
| 29        | 45125    | PIN HITCH 1.00 FORK KPCC                   | 1   |
| 30        | 0340     | WASHER 0.25 USS FLAT                       | 15  |
| 31        | 0478     | CAP SCR 0.25-20X0.50 HHGR5                 | 4   |
| 32        | 0484     | CAP SCR 0.31-18X0.50 HHGR5                 | 3   |
| 33        | 0507     | CAP SCR 0.50-13X4.50 HHGR5                 | 2   |
| 34        | D0178    | WASHER #10 SAE FLAT                        | 10  |
| 35        | C6106    | NUT 0.50-13 HHGR5 NYLOC                    | 3   |
| 36        | C1001    | CAP SCR 0.50-13X5.50 HHGR5                 | 1   |
| 37        | 9843     | CAP SCR 0.38-16X0.75 HHGR8                 | 2   |
| 38        | 12178    | CAP SCR 0.31-18X3.25 HHGR5                 | 1   |
| 39        | 106806   | BOLT SHOULDER 0.25X0.50 0.25-20X0.38       | 4   |
| 40        | 106802   | WEAR PAD 1ST EXT TOP 76 HSS                | 2   |

# Extension Boom Assembly - PN 125509 Parts List

| PN 125509 |        |                                       |     |
|-----------|--------|---------------------------------------|-----|
| ITEM      | PART   | DESCRIPTION                           | QTY |
| 41        | 5591   | WASHER 0.31 SAE FLAT YELLOW GR8       | 4   |
| 42        | 107027 | WEAR PAD 1ST EXT BOTTOM 76 HSS        | 4   |
| 43        | 106860 | PLATE WEAR PAD GUIDE 76 HSS 1ST FRONT | 2   |
| 44        | 106862 | WEAR PAD 2ND EXT TOP 76 HSS           | 2   |
| 45        | 107029 | WEAR PAD 0.19X1.50 ROUND              | 4   |
| 46        | D0896  | CAP SCR #10-24X0.75 FHSB SS           | 8   |
| 47        | 26034  | NUT #10-24 HH NYLOC                   | 8   |
| REV. B    |        |                                       |     |

**NOTES:**


**HARDWARE KITS:**

**118869**

**118870**

**This page left intentionally blank.**

## Main Cylinder Assembly - PN 122923

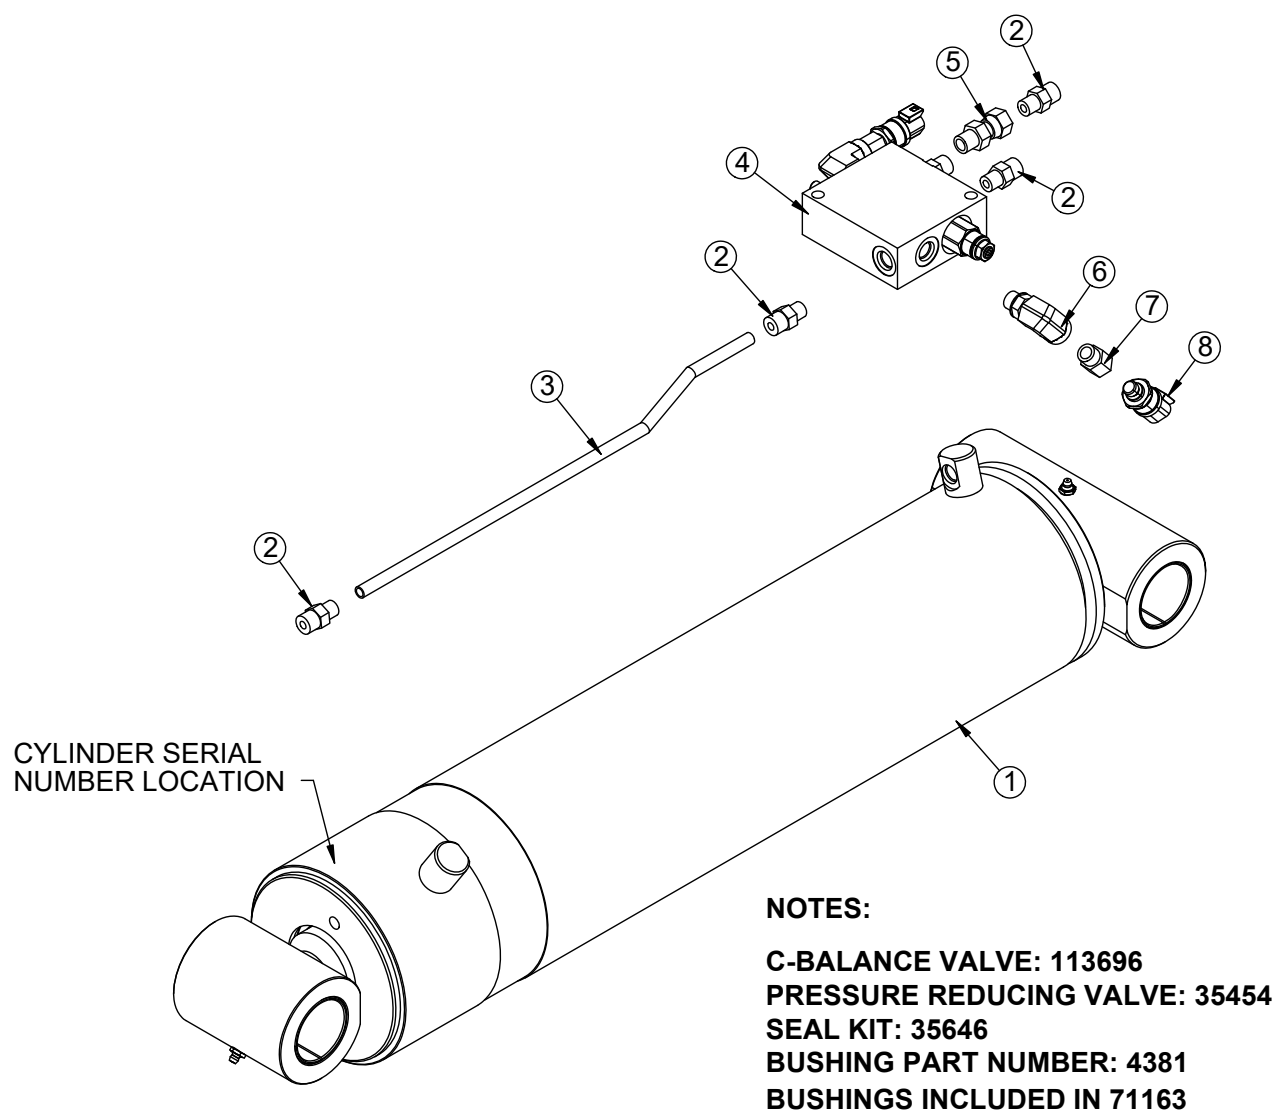

# Main Cylinder Assembly - PN 122923 Parts List

| PN 122923            |        |                                         |     |
|----------------------|--------|-----------------------------------------|-----|
| ITEM                 | PART   | DESCRIPTION                             | QTY |
| 1                    | 71163  | CYLINDER 5.50X22.50 ROT EXT PORT        | 1   |
| 2                    | 0279   | FTG 6-6 MFS-MORB STRAIGHT               | 5   |
| 3                    | 114689 | TUBE ASM 0.38X16.72 86 MAIN CYL ZC      | 1   |
| 4                    | 113695 | MANIFOLD SINGLE LA C'BAL W/PRV          | 1   |
| 5                    | 33743  | FTG 6-6 FFSS-MORB STRAIGHT              | 1   |
| 6                    | 3861   | FTG 6-6 MAORB-FORB 90                   | 2   |
| 7                    | 15111  | FTG 6-4 MORB-FORB STRAIGHT REDUCER      | 2   |
| 8                    | 108268 | TRANSDUCER PRESSURE 0-5000PSI #4 SAE DT | 2   |
| REV. INITIAL RELEASE |        |                                         |     |

**NOTES:**

**C-BALANCE VALVE: 113696**


**PRESSURE REDUCING VALVE: 35454**

**SEAL KIT: 35646**

**BUSHING PART NUMBER: 4381**

**BUSHINGS INCLUDED IN 71163**

# Extension Cylinder Assembly - PN 125733

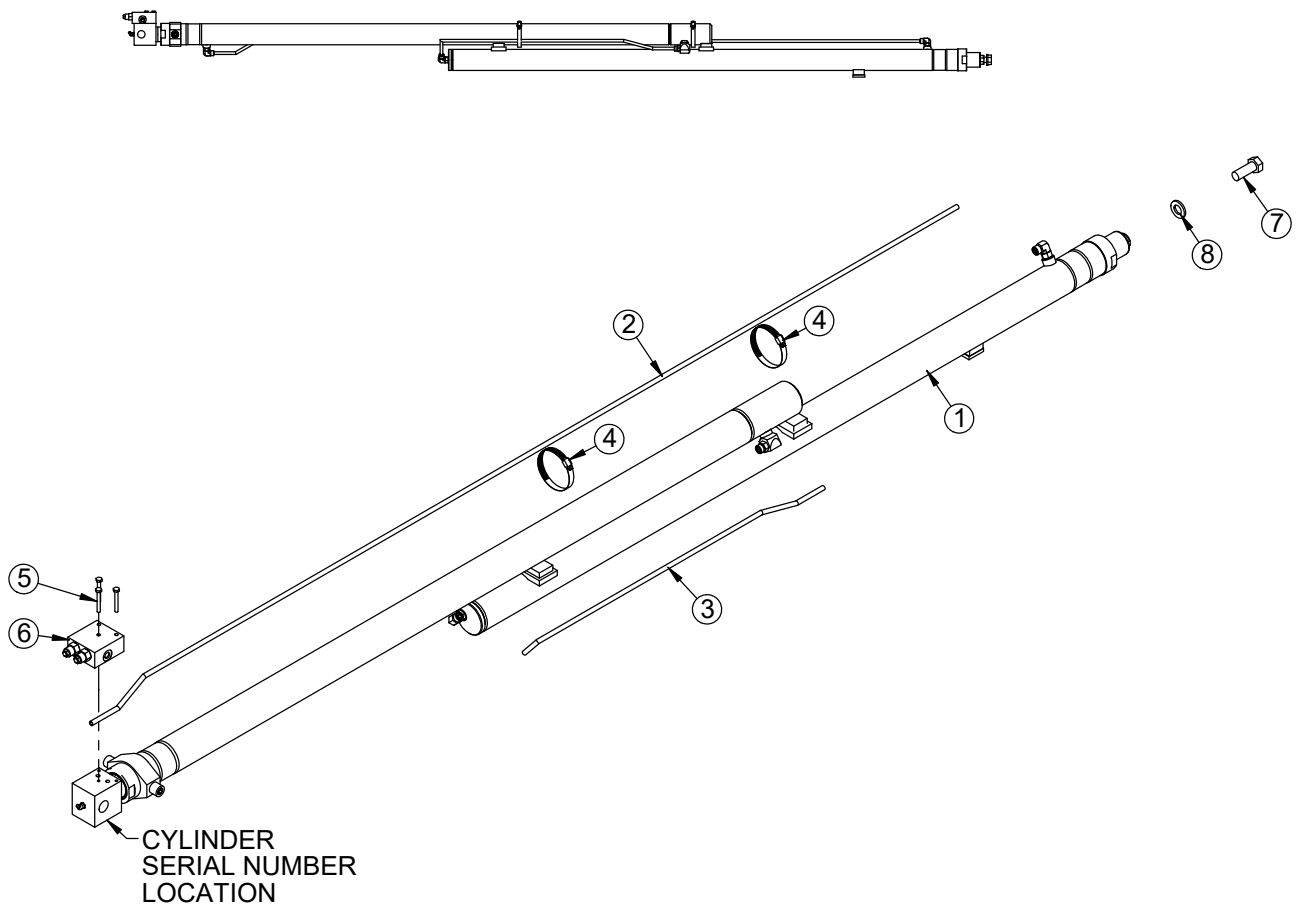

# Extension Cylinder Assembly - PN 125733 Parts List

| PN 125733 |        |                                             |     |
|-----------|--------|---------------------------------------------|-----|
| ITEM      | PART   | DESCRIPTION                                 | QTY |
| 1         | 125734 | CYLINDER EXT 12621 HSS 2 STAGE 2.5/2.5      | 1   |
| 2         | 125791 | TUBE ASM 0.38X96.63 EXT CYL 12621 HSS       | 1   |
| 3         | 125792 | TUBE ASM 0.38X31.88 EXT CYL 12621 HSS       | 1   |
| 4         | 24729  | HOSE CLAMP #52 3.00 - 3.75                  | 2   |
| 5         | 0481   | CAP SCR 0.25-20X2.00 HHGR5                  | 3   |
| 6         | 106830 | MANIFOLD ASM 76 HSS EXT CBBB-LJN-XVN CUSTOM | 1   |
| 7         | 4543   | CAP SCR 0.75-10X2.00 HHGR8                  | 1   |
| 8         | C6219  | WASHER 0.75 SAE FLAT YELLOW GR8             | 1   |
| REV. A    |        |                                             |     |


## NOTES:

**C-BALANCE VALVE: 9803**

**CYLINDER SEAL KIT: 128007**

**HARDWARE KIT: 118871**

# Snatch Block Assembly - PN 55898

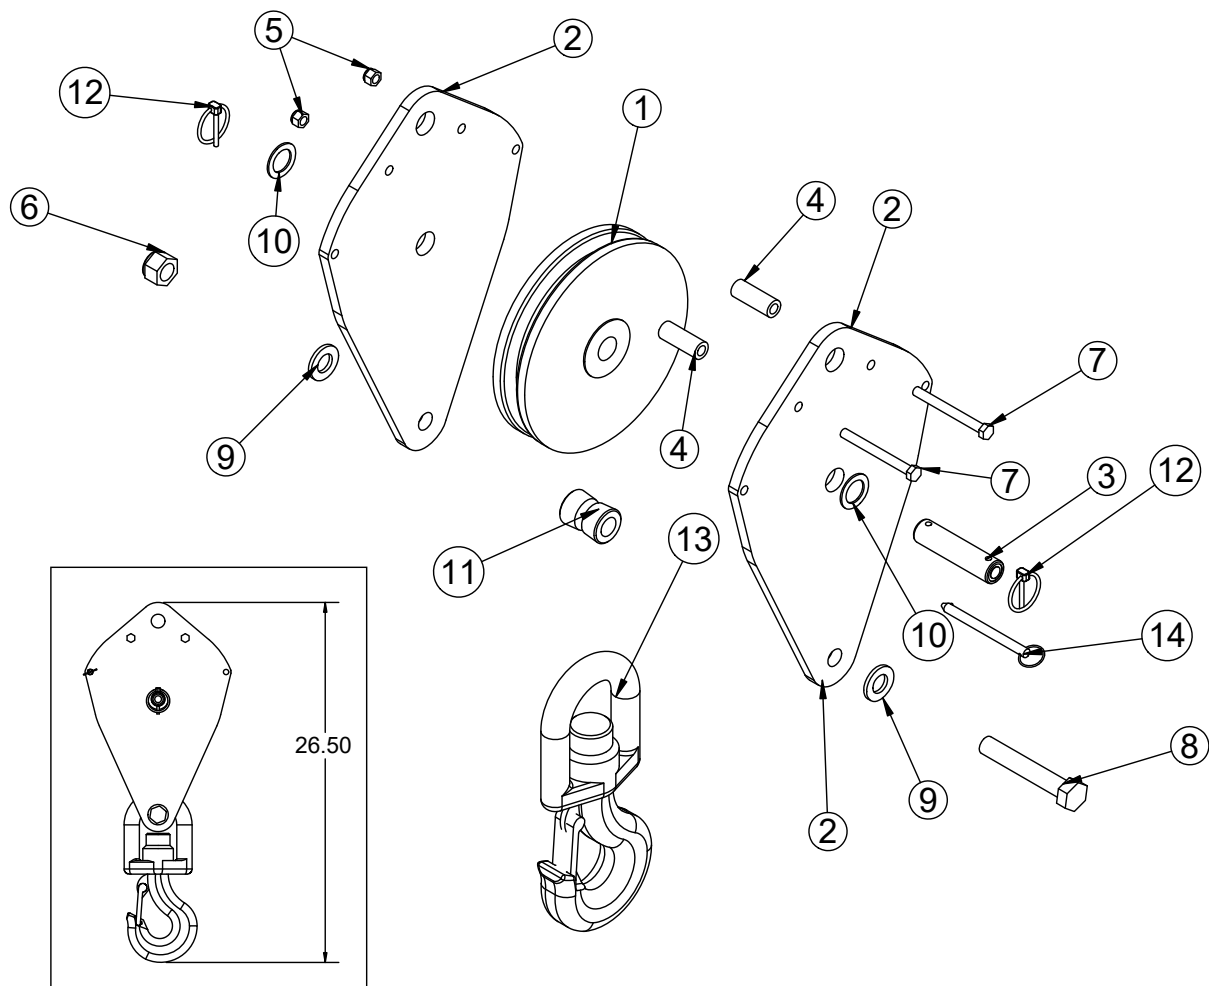

# Snatch Block Assembly - PN 55898 Parts List


| PN 55898 |         |                                                 |     |
|----------|---------|-------------------------------------------------|-----|
| ITEM     | PART    | DESCRIPTION                                     | QTY |
| 1        | 43858   | SHEAVE 10621 9.25 DIA .44R/1.88THK              | 1   |
| 2        | 44643   | COLLAR 0.44X0.75X2.00 ZINC COATED               | 2   |
| 3        | 347     | NUT 0.38-16 HHGR5 NYLOC                         | 2   |
| 4        | C0538   | NUT 0.75-10 HHGR8 NYLOC                         | 1   |
| 5        | 532     | CAP SCR 0.38-16X3.75 HHGR5                      | 2   |
| 6        | 5841    | CAP SCR 0.75-10X4.50 HHGR8                      | 1   |
| 7        | C6219   | WASHER 0.75 SAE FLAT YELLOW GR8                 | 2   |
| 8        | 867     | MACHY WASHER 1.00ID 14GA                        | 2   |
| 9        | 5753    | PIN 0.19X1.56 LYNCH                             | 2   |
| 10       | 26762   | HOOK 7 TON SWIVEL CROSBY 1028632                | 1   |
| 11       | 13436   | PIN .38X4.00 QUICK RELEASE                      | 1   |
| 12       | 53263   | PLATE SNATCH BLOCK 76/96/106/126 PC RED ET-5391 | 2   |
| 13       | 39874CR | PIN 1.00X4.06 COTTER ZC                         | 1   |
| 14       | 39844CR | BUSHING V HOOK SS ZC                            | 1   |
| REV. C   |         |                                                 |     |

**NOTE:**

IF THIS ASSEMBLY IS FOR A SERVICE ORDER DECAL PN 56405 MUST GO WITH. IF IT IS NOT ON THE ORDER, CONTACT CUSTOMER SERVICE (800-321-3741) TO HAVE IT ADDED.

**HARDWARE KIT: 97639**

# Wireless Remote Replacement Parts

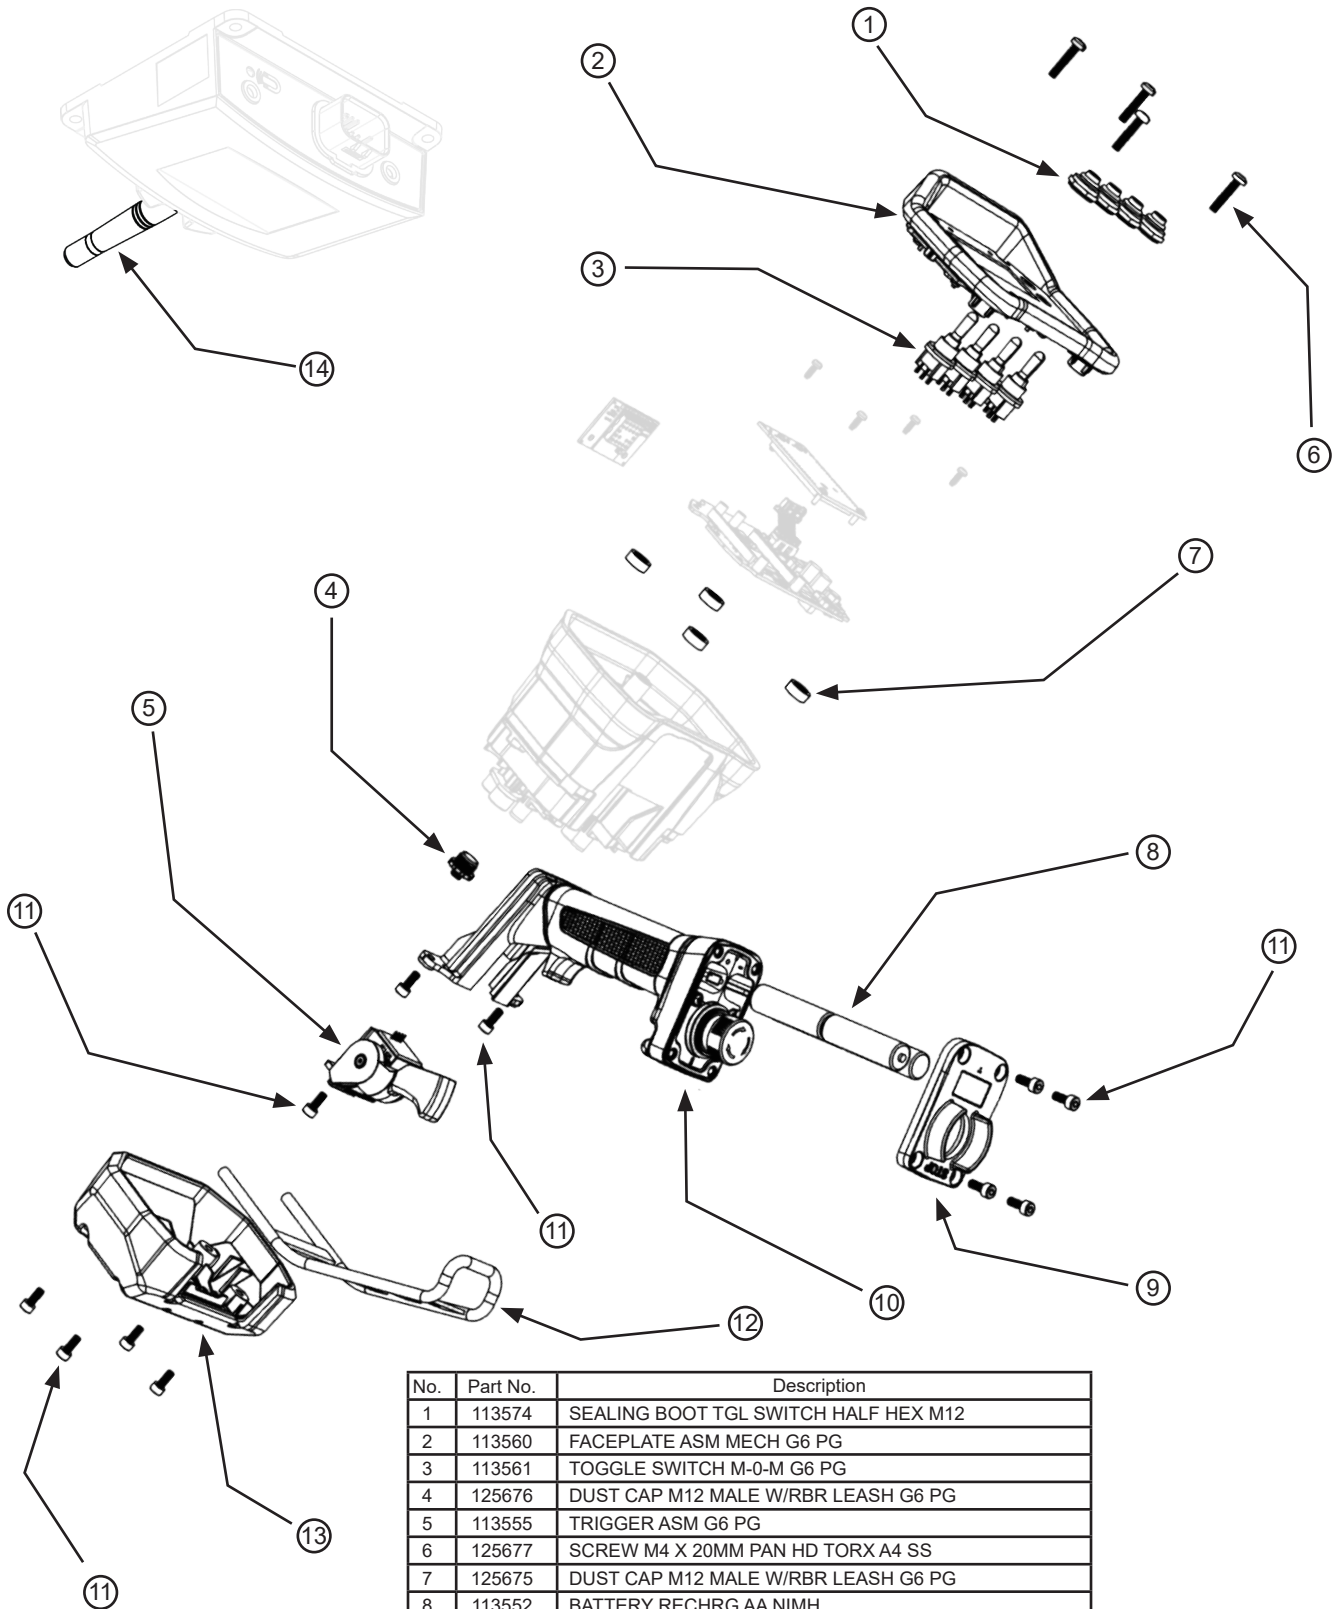

| No. | Part No. | Description                          |
|-----|----------|--------------------------------------|
| 1   | 113574   | SEALING BOOT TGL SWITCH HALF HEX M12 |
| 2   | 113560   | FACEPLATE ASM MECH G6 PG             |
| 3   | 113561   | TOGGLE SWITCH M-0-M G6 PG            |
| 4   | 125676   | DUST CAP M12 MALE W/RBR LEASH G6 PG  |
| 5   | 113555   | TRIGGER ASM G6 PG                    |
| 6   | 125677   | SCREW M4 X 20MM PAN HD TORX A4 SS    |
| 7   | 125675   | DUST CAP M12 MALE W/RBR LEASH G6 PG  |
| 8   | 113552   | BATTERY RECHRG AA NIMH               |
| 9   | 113558   | BATTERY COVER G6 PG                  |
| 10  | 113557   | HANDLE ASM G6 PG                     |
| 11  | 125678   | SCREW M4 X 10MM SHCS BLK STL         |
| 12  | 113554   | GUARD FRAME G6 PG                    |
| 13  | 113556   | SHROUD ASM G6 PG                     |
| 14  | 113579   | ANTENNA 2.4GHZ TNC 80MM FLEX BLUE    |





Subject to Change without Notification.  
© 2024 Stellar Industries, Inc.