 


QUICK START

FUYL Tower 5 Network Kit



What's required?



x1



x1*



x5



x1



x1**




x5

*Network hub not included. Note: The customer supplied hub requires a minimum of 7 ports.

** Supplied with the FUyl Tower 5.




1

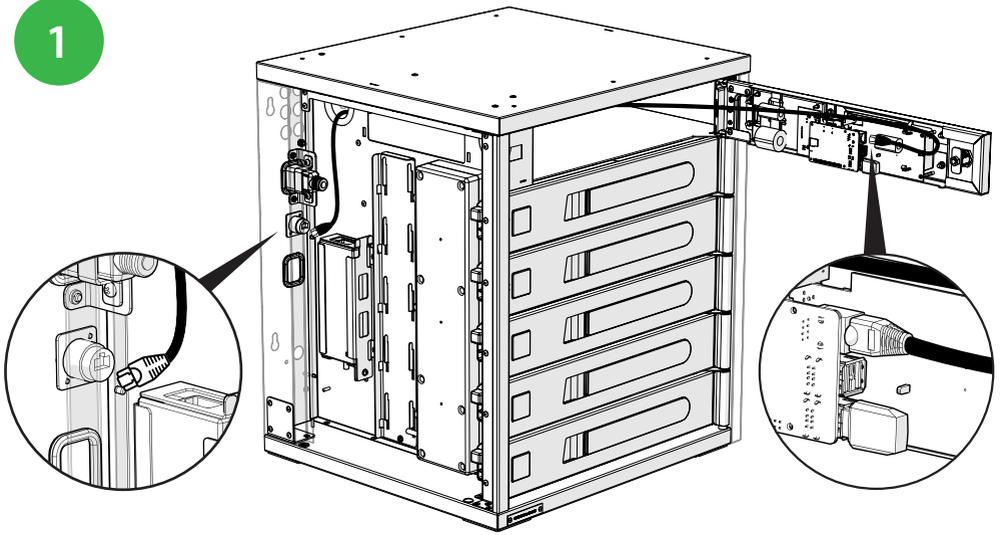


Disconnect the pre-installed ethernet cable from the internal RJ45 port at the rear of the FUYL Tower only.

2

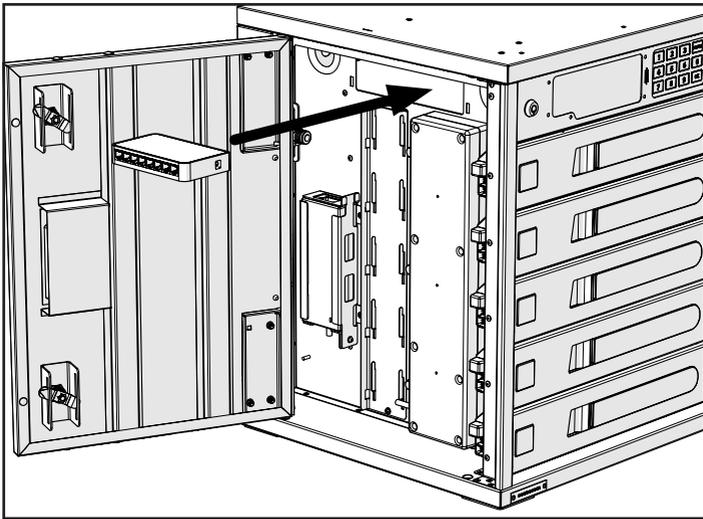


Place your network hub (not included) inside the top shelf, behind the control door.

3

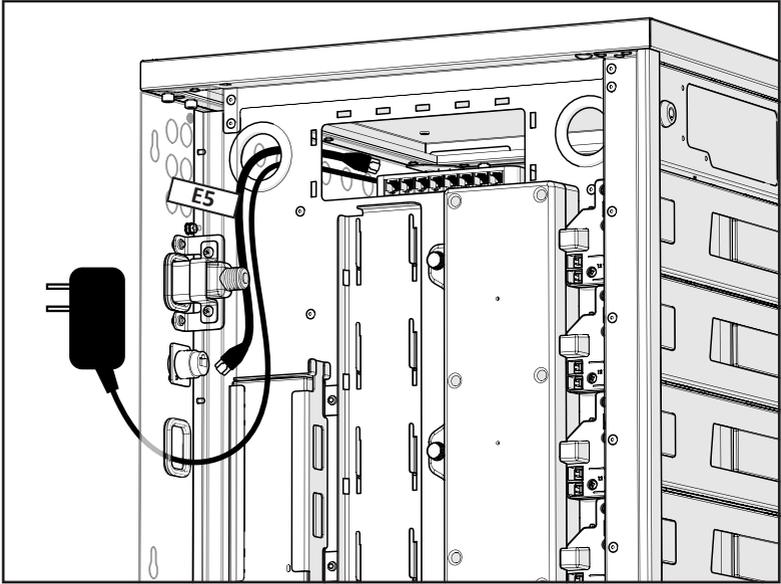


- i. Route the hub's power cable through the rear hole to a power outlet.
- ii. Connect the network hub to the rear internal RJ45 port using the "E5" ethernet cable.

4

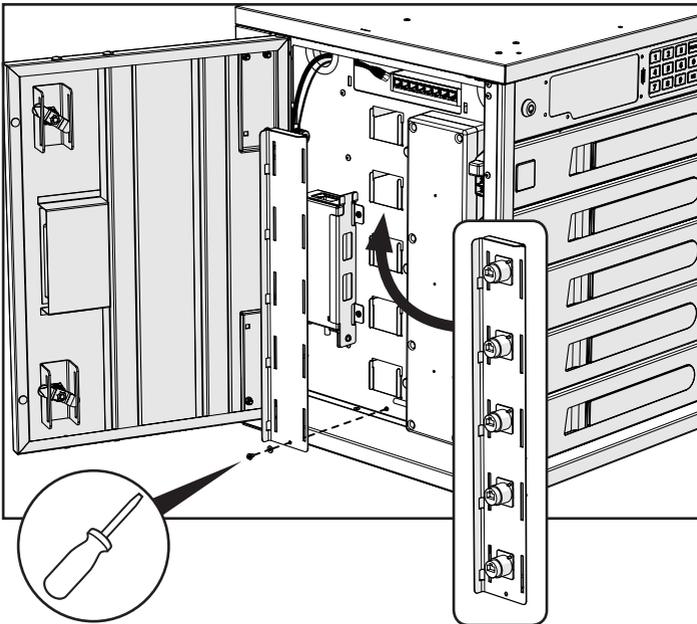


- i. Remove blanking plate and replace it with the RJ45 port plate.
- ii. Fix it in place with the locating screw.

5

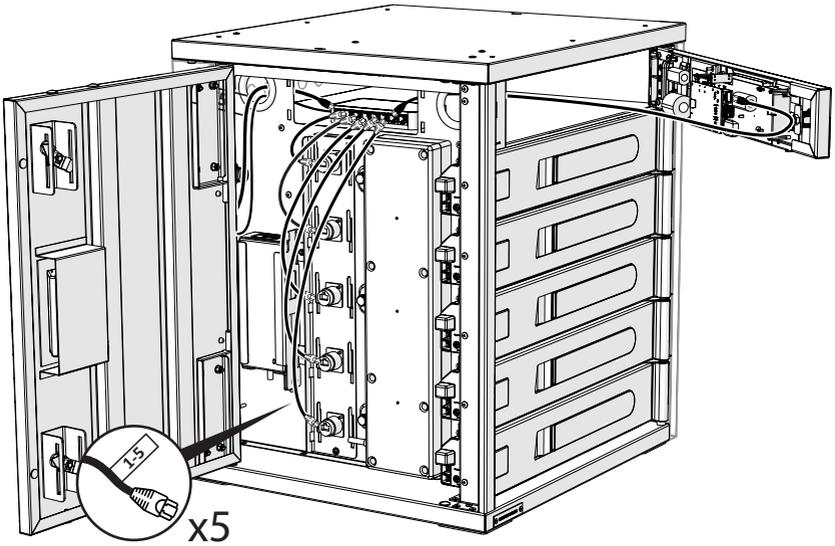

- i. Connect all 5 shelves (RJ45 ports) to the network hub with the numbered ethernet cables.
- ii. Reconnect the pre-installed ethernet cable from the control door to the network hub.

6

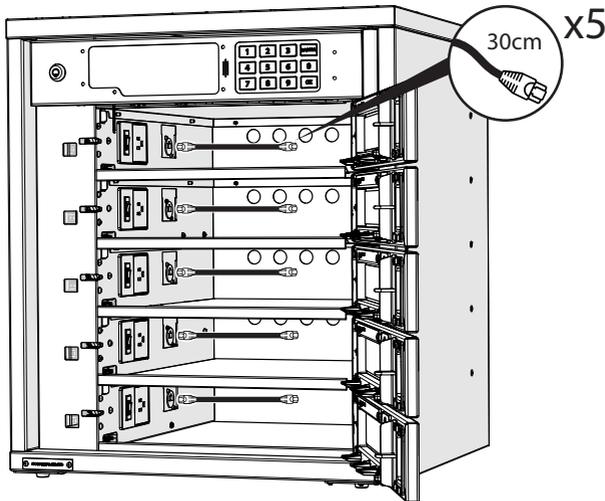

Plug the 30cm ethernet cables to the RJ45 port inside each shelf.
Network kit setup for the FUYL Tower 5 is complete.