

# QUICK START

## FUYL Tower 5



### VIDEO INSTRUCTIONS:

<https://vimeo.com/339043097>

Visit our website for detailed instructions.

[www.lockncharge.com/support](http://www.lockncharge.com/support) (International)

[www.pclocs.com.au/support](http://www.pclocs.com.au/support) (AUS and NZ)

### What's required?



x1



x1




x1



# 1


## SETTING UP THE FUYL TOWER 5

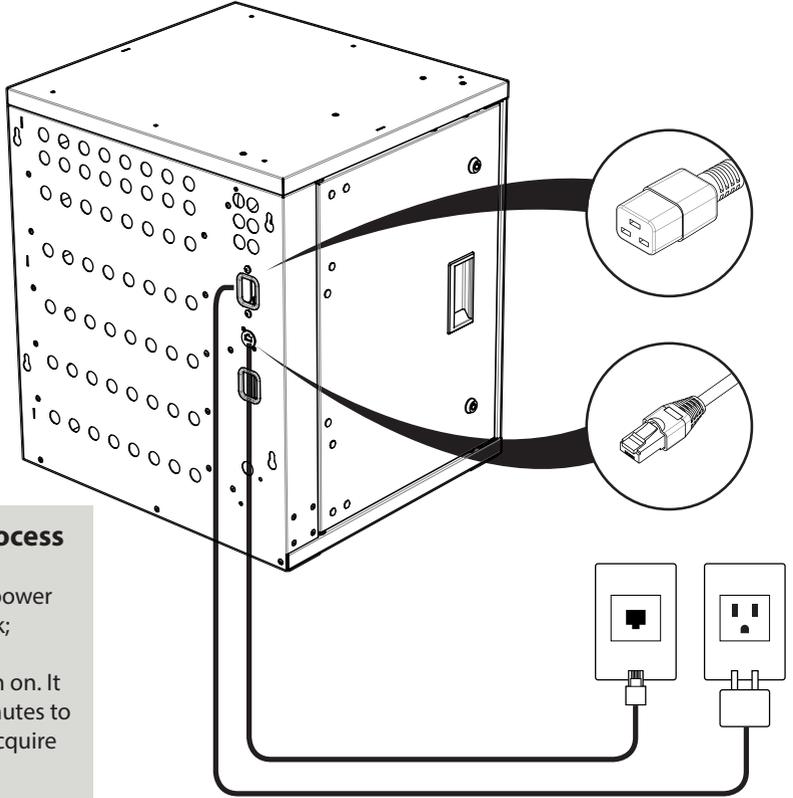

### Initialization process

Once connected to power and the LAN network;

- 1) The Tower will turn on. It may take several minutes to boot, initialize and acquire network settings
- 2) The doors will begin opening sequentially
- 3) The Tower is ready to use with the default mode being 'User Mode'

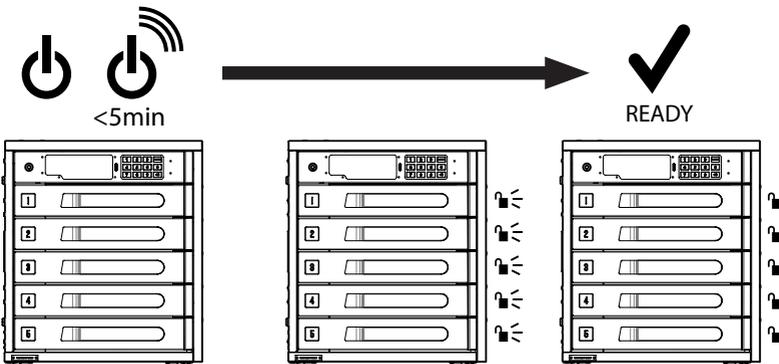

2

## SETTING UP THE MANAGEMENT PORTAL



On the tower keypad, press '00' to launch the admin screen.  
Enter the default password: 3 1 0 8 2 0 1 8

3



Go to the Network Status page by pressing '5'. Record the Portal URL.

4



Open a web browser on your computer and type the Portal URL.  
A login page will be displayed.

The default credentials are:  
Username: admin  
Password: U63r6a5k3t

### IMPORTANT:

Please change the Tower's passwords immediately after setup to ensure security.  
For details on how to change your passwords, go to the FUYL Tower 5 support page of our website and download the Management Portal Manual.

5

## OPTIONAL: FITTING THE WINDOW COVER

