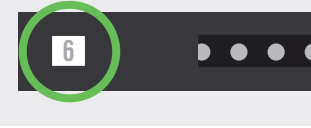


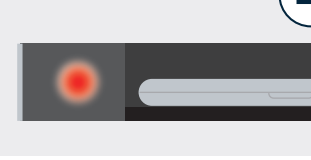
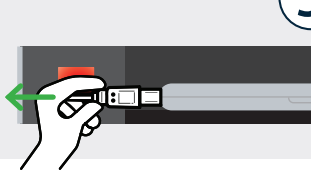



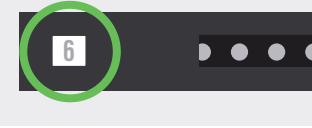


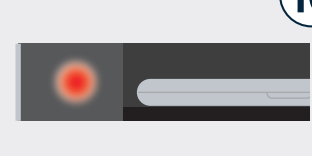
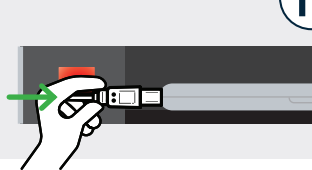

# Break your device?

## Exchange it for a loaner here!

### Exchange for a Loaner Device:

-  **1 Locate the bay that was assigned to you.**  
This number is provided to you by your tech dept.
-  **2 Enter the **bay number** and press **OK**.**
-  **3 When asked for a PIN, enter your **assigned PIN** number and press **OK**.**  
Your PIN is provided to you by your tech dept.
-  **4 If correct credentials were entered, door will **automatically open**.**
-  **5 Unplug the loaner device and **take it out** of the bay. **Place** your broken device **inside**.**
-  **6 Firmly close the door.**  
The light will turn **green**, indicating bay is **no longer accessible**.

### Collect Your Fixed Device:

-  **7 Locate the bay that was assigned to you.**  
This number is provided to you by your tech dept.
-  **8 Enter the **bay number** and press **OK**.**
-  **9 When asked for a PIN, enter your **assigned PIN** number and press **OK**.**  
Your PIN is provided to you by your tech dept.
-  **10 If correct credentials were entered, door will **automatically open**.**
-  **11 Unplug the fixed device and **take it out**. **Place the loaner inside** and **plug it in**.**
-  **12 Firmly close the door.**  
The light will turn **green**, indicating "**good to go!**"

*Temporary, One-Time PIN assigned to bay.*

# Break your device?

## Exchange it for a loaner here!

*Temporary, One-Time PIN assigned to bay.*

### **Cloud Setup Cheat Sheet**

Cloud Admin needs to assign temporary credentials to a bay on the fly (as requests come in) and provide the bay number and PIN to the user.

