Portable Pump Instruction Sheet

Introduction

The portable pump (Cat. No. 3206) uses a peristaltic pump to collect liquid samples from open channels and shallow monitoring wells. The pump is self-priming and able to run dry with a maximum lift of 27 feet. The pump is housed in a rugged NEMA 4X, 6 fiberglass housing and is able to withstand temporary submersion.

Operating the Portable Pump

- 1. Secure the 12 V dc battery pack (Cat. No. 1414) to the portable pump using the two rubber hold-down clamps. Pull the clamps up and over the clips on each end of the power supply (Figure 1).
- 2. Connect the battery pack to the 12 V dc receptacle on the side of the pump (Figure 1).
- 3. Attach vinyl tubing to the stainless steel fitting. Place the end of the vinyl tubing in a collection container (bottle, bucket, etc.) (Figure 2).
- **4.** Attach an Intake Strainer (Cat. No. 926) to the pump tubing. Place the intake strainer in the open channel that will be monitored (Figure 2).
- **5.** Collect the sample using the Reverse/Forward toggle on the side of the pump.

Replacing the Pump Tubing


- 1. Loosen the four thumbscrews on the pump cover (Figure 2).
- 2. Remove the front cover of the pump housing.
- 3. Remove the existing tubing. Locate the black dot on the new tubing.
- 4. Install the pump tube in the pump housing until the black dots are visible just outside the pump body (Figure 2).
- **5.** The shorter end of the tube that extends beyond the black dot attaches to the stainless steel tubing connector.
- **6.** After inserting the new pump tube, reinstall the front cover and secure with the four thumbscrews until finger tight. See Figure 3 to view the final assembly.

Replacement Parts and Accessories

Description	Catalog Number
Fuse, 5 amp Slow Blow	8753
Pump Tubing, 15 ft	
Roller Assembly	
Thumbscrew, Pump Tubing	
Vinyl Intake Tubing	


Portable Pump Instruction Sheet

Figure 1 Portable Pump

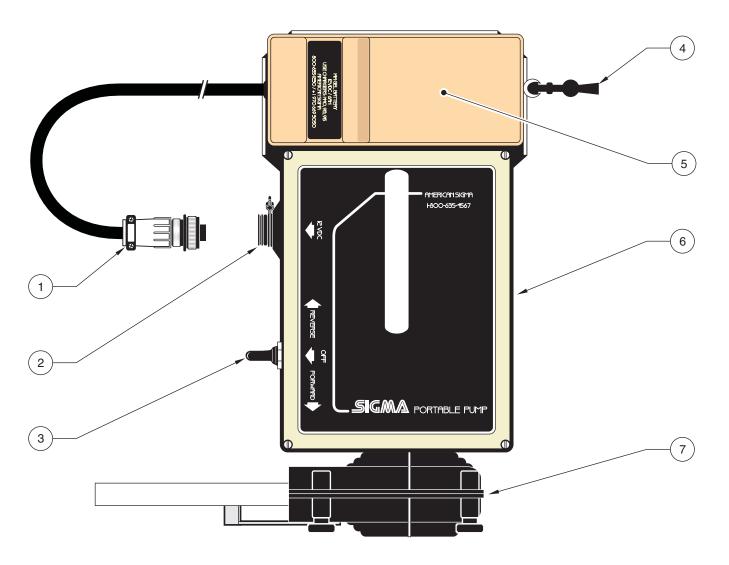


_			
1.	Battery Connector	5.	Gel Battery Pack
2.	12 V dc Power Connector (from Battery)	6.	Portable Pump
3.	Off, Reverse and/or Forward Toggle Switch for Pump	7.	Peristaltic Pump
4.	Rubber Hold-down Clamps (2)		

Figure 2 Replacing the Tubing

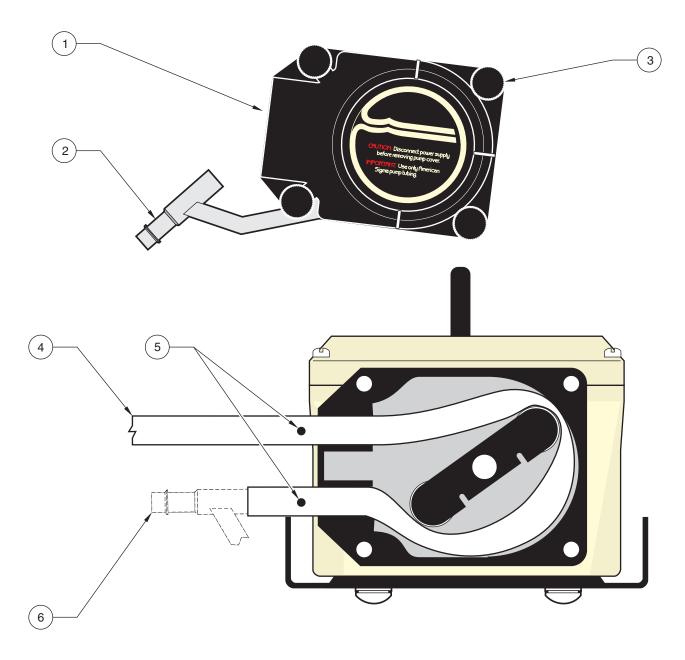

1.	Cover, Peristaltic Pump	4.	Vinyl Tubing
2.	Stainless Steel Tubing Connector	5.	Black Dots on Vinyl Tubing
3.	Thumbscrew (4)	6.	Stainless Steel Tubing Connector

Figure 3 Final Assembly

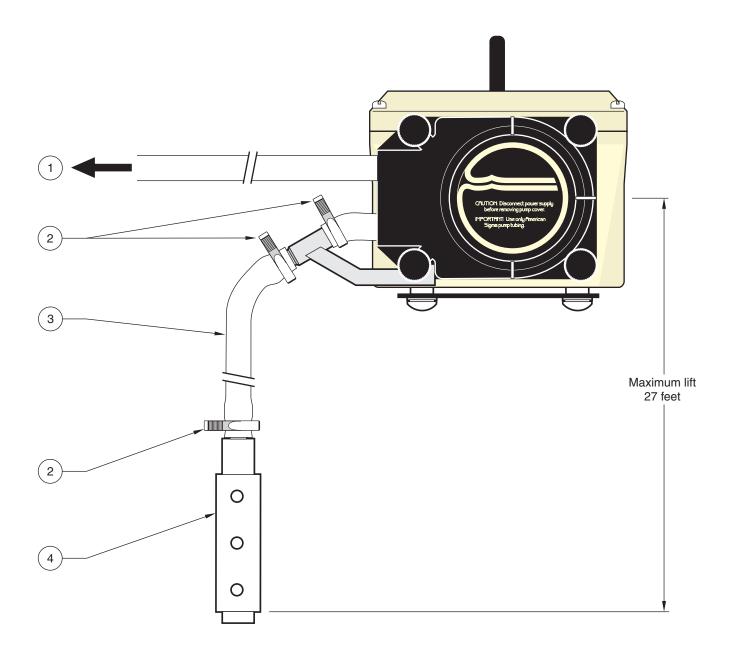

1.	Vinyl Tubing to Collection Container	3.	Vinyl Tubing to Collection Site
2.	Tubing Clamps (as required)	4.	Intake Strainer