


Top View

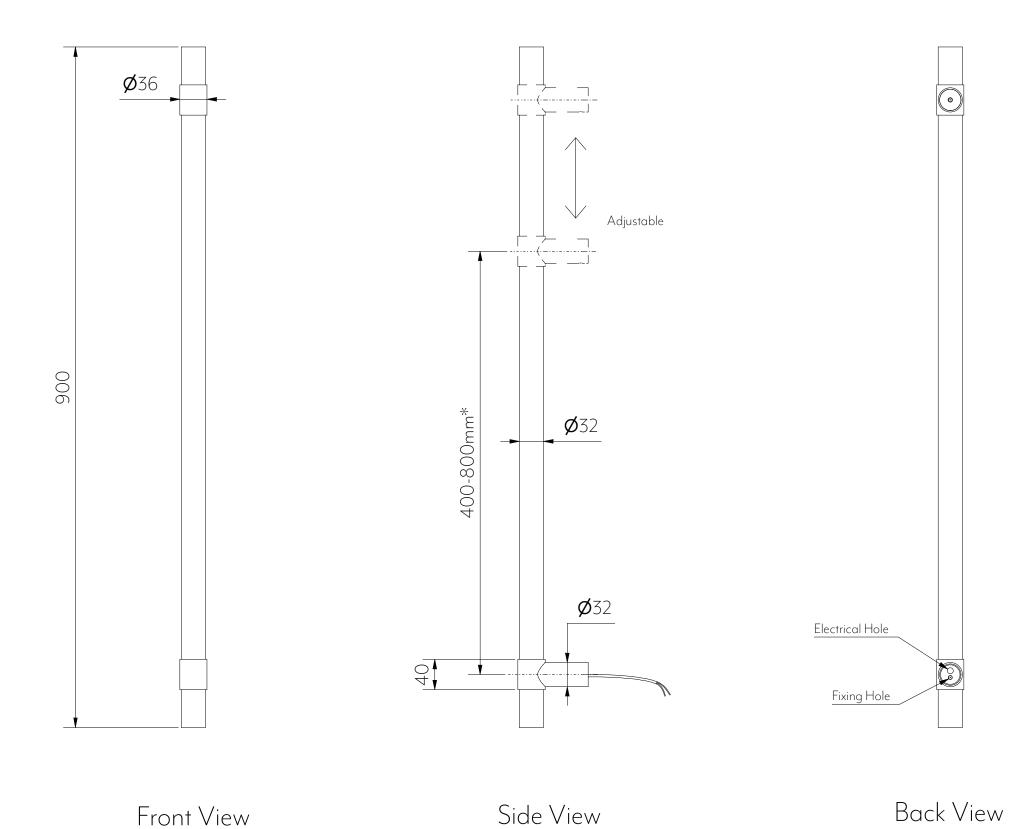

*The top collar is adjustable, allowing the fixing point to be moved along the rail, we recommend anywhere between 400-800 spacing.

Note: Dimensions are nominal measurements only