





SpecSeal® EX Intumescent Firestop Collar (16" & 18")


General: Walls require symmetrical applications and collars must be applied to both sides.

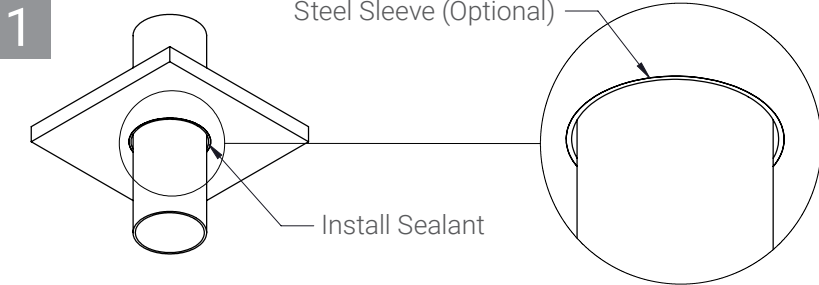


Install SpecSeal® Sealant as required in the UL system
(Sealant not included & purchased separately)

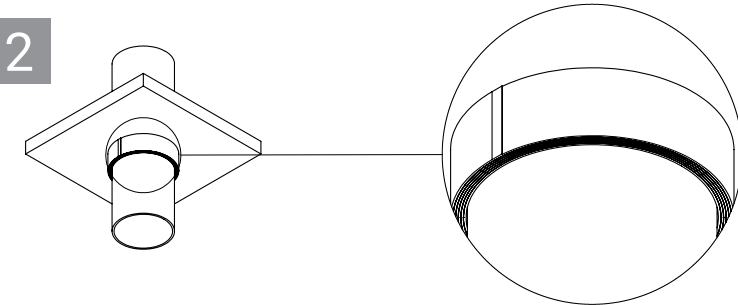

Continuously wrap min. six (6) layers of intumescent wrap strip around the pipe. Wrap strip to be installed flush with the bottom surface of the floor or both sides of the wall. Use tape at the wrap strip seam to temporarily hold the wrap strip in place.

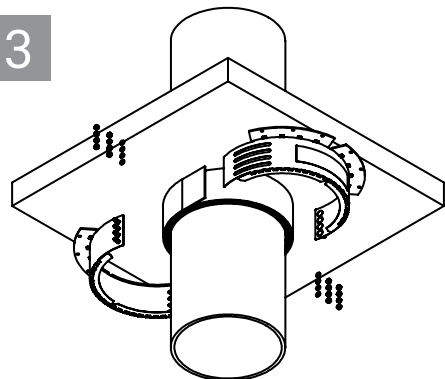

Position collar halves around the wrap strip with the flanges facing towards the bottom of the floor or side of the wall on both sides. Insert threaded bolts through slots in collar shells, and secure together using the provided washers and nuts. Ensure that collar flange is tight to the bottom surface of the floor or both wall surfaces.

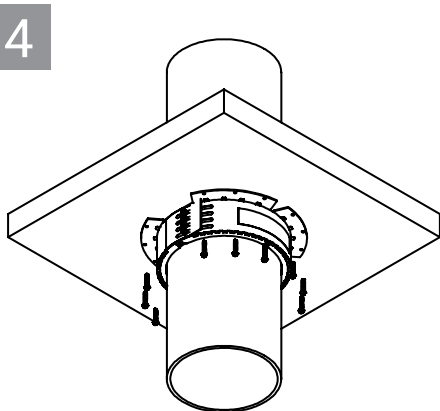


Fasten collar flanges to the bottom of the floor or both sides of the wall as required in the UL System

(Fasteners not included & purchased separately)

Note: For more information on firestop installation, refer to ASTM E3157.

SpecSeal[®] EX Intumescent Firestop Collar (16" & 18")

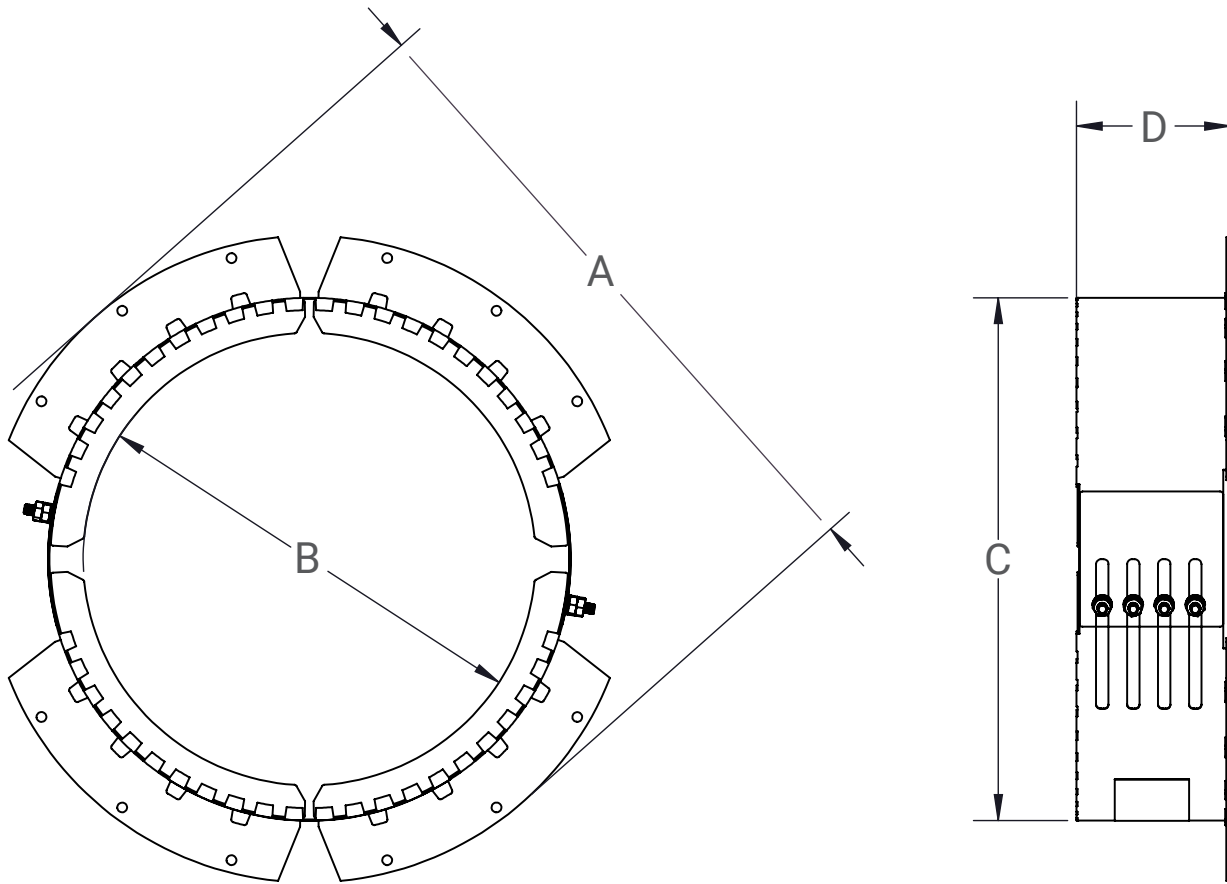

COLLAR DIMENSIONS

	EXC1600	EXC1800
A	24.09" (612 mm)	26.09" (663 mm)
B	16.25" (413 mm)	18.28" (464 mm)
C	19.09" (485 mm)	21.09" (536 mm)
D	6.23" (158 mm)	6.23" (158 mm)

Note: For more information on firestop installation, refer to ASTM E3157.