



COYOTE® PEDESTAL ANCHOR STAKE KIT

INSTALLATION INSTRUCTIONS




IMPORTANT SAFETY INFORMATION

READ AND COMPLETELY UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLING PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY OR DEATH.

This product is intended for use by trained technicians only. This product should not be used by anyone who is not familiar with and not trained to use it. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol. These instructions are not intended to supersede any company construction or safety standards. These instructions are offered only to illustrate safe installation for the individual. PLP products are intended for the specified application only. Do not modify this product under any circumstances. Do not reuse or reinstall any PLP product unless that capability is expressly indicated in the product's Installation Instructions. For proper performance and personal safety, be sure to select the proper PLP product before installation. PLP products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.

PACKAGE COMPONENTS

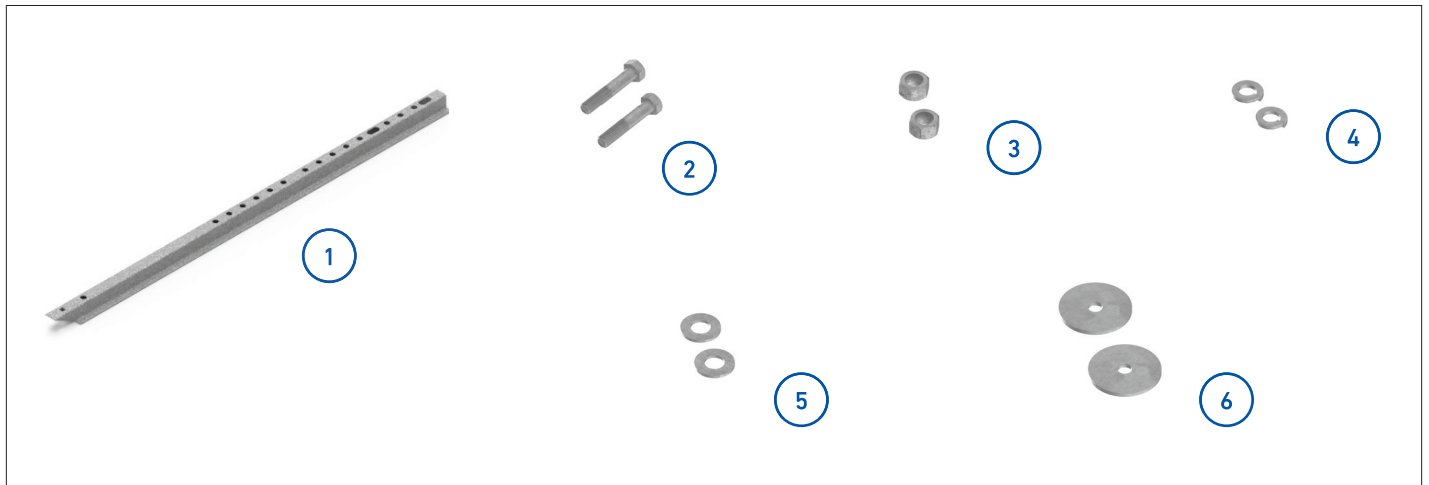

1. Anchor Stake (Either 42" or 32" Long) (1)
2. Bolt, 3/8-16 x 2" (2)
3. Nut, 3/8-16 (2)
4. Lock Washer, 3/8" (2)
5. Flat Washer, 3/8" (2)
6. Fender Washer, 3/8" (2)

Tools Required:

- 9/16" Socket Wrench
- Crescent Wrench or 9/16" Box Wrench

- 1 Using the back half of the base, create an impression in the trench to determine the position of the anchor stake. For harder ground use a tool to mark the stake location.

NOTE: The base should be installed in the trench so that existing conduits or feed cables are towards the rear of the base.



- 2 The anchor stake will attach to the rear half of the base with the flat edge sitting in the stake channel.




- 3 Install the anchor stake into the trench following your standard company practices. Ensure the anchor stake is level per company practice.



4

Attach the rear half of the base to the installed anchor stake using the hardware provided.

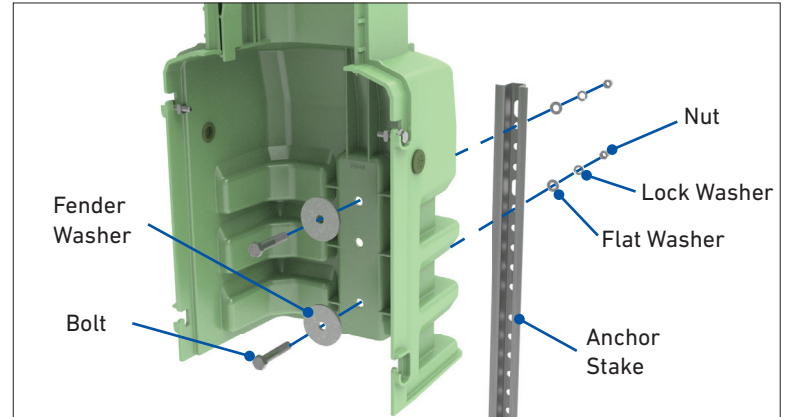



GLOBAL HEADQUARTERS
660 BETA DRIVE
CLEVELAND, OH 44143

+1 440 461 5200
INFO@PLP.COM
PLP.COM