PN 2-EXP-023-000-00



VIKING PUMP, INC. • A Unit of IDEX Corporation 406 State Street • Cedar Falls, IA 50613 • Phone: 319.266.1741 • Fax: 319.273.8157 www.vikingpump.com



NOTE: Kit may not apply to all models of these pumps. Contact your Viking Pump distributor with pump serial number for correct kit part numbers for that pump. Additional non-kit parts, such as gears and shafts, may also be required depending on wear.

ITEM	PART (may not exactly match parts list descriptions)	PART INCLUDED IN SEAL KIT	
		SERIES SG-04/05	SERIES SG-404/405
2	Mounting Flange & Bushing		
7	O-Ring for Mounting Flange		✓
8	Mechanical Seal ①		1
8A	Lip Seal ①	1	
9	C.W. Separation Plate & Bushings Assembly		
11	O-Ring Between Sections (Quantity Based on Model) ①	1	√
12	Driver Shaft (Woodruff Key)		
12A	Driver Shaft (Tang on End)		
13	Driven Shaft		
14	Retaining Rings		
15	Balls & Pins Kit		
17	Dowel Pin (2-Req'd) (Bracket to Casing)		
18	Match Ground Casing & (2) Gears Assembly		
20	Assembly Capscrew 1/2" 13NC Grade 8 - Length Dependant on Model (2 Req'd)		
20A	Self-locking Capscrew 10-32 x 3/8" Lg. Grade 5 - (2 Req'd)		
26	Key, Square 3/16" x 1-1/4" Lg.	√	1
27	Relief Vavle Adjusting Screw Cap		
28	Relief Valve Gasket (2 Req'd)	√	1
29	Relief Valve Adjusting Screw Lock Nut		
30	Relief Valve Adjusting Screw		
31	Relief Valve Spring		
32	Relief Valve Poppet		
33	Separation Plate & Bearing/Bushing Assembly		
34	Head & (2) Bearing/Bushing Assembly for Relief Valve		
34A	Plain Head & (2) Bearing/Bushing Assembly		

① Elastomers in this kit are specified in seal kit description.

② Kits include parts for Relief Valve head. Plain head pumps will not need Relief Valve gaskets. Discard extra parts.

Use seal lubricant in seal kit for installing mechanical seal.

©Viking Pump, Inc. Rev. 10.02.2012

Important safety information and rebuild instructions are found in the Technical Service Manual.

Download current Technical Service Manuals from www.vikingpump.com:

TSM 340 - Installation, Startup, Troubleshooting, Preventative Maintenance, Do's & Don'ts for SG-04, SG-05 & SG-07 Spur Gear Pumps