



Technical Bulletin for Duct Sealing with Aeroseal®

DEALER ALERT

Update Windows on the Laptop

Number: 2025-003 | Date: April 2025 | Category: Announcement

BACKGROUND

Run Windows updates on the Aeroseal laptop at least once a week.



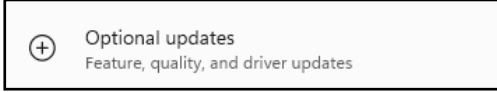
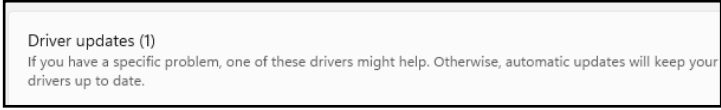

DEALER ACTIONS

Steps to Update Windows

Step	Action
1	Connect the laptop to the internet, preferably at the business office. If the Wifi is slow, consider connecting using the internet cable.
2	At the Windows search bar, type Updates . The updates icon displays. <div data-bbox="841 1079 1057 1234" data-label="Image"></div>
3	Click the Check for updates icon. The Windows Update screen displays. <div data-bbox="667 1346 1252 1518" data-label="Image"></div>
4	Click Check for updates . Some updates are automatic; some need to be manually installed.
5	Scroll down the screen to Advanced options to find additional updates. <div data-bbox="667 1713 1304 1808" data-label="Image"></div>

Continued on Page 2

Steps to Update Windows. Continued

Step	Action
6	Click Optional updates .  A screenshot of the Windows Update interface showing the 'Optional updates' section. It features a plus sign icon in a circle and the text 'Optional updates' followed by 'Feature, quality, and driver updates'.
7	Click on all available updates.  A screenshot of the Windows Update interface showing the 'Driver updates' section. It displays 'Driver updates (1)' and a note: 'If you have a specific problem, one of these drivers might help. Otherwise, automatic updates will keep your drivers up to date.'
8	Click Download & install . Windows is fully updated.  A screenshot of the Windows Update interface showing the 'Download & install' button. The text 'Install selected updates (1)' is visible on the left, and the 'Download & install' button is on the right.

CONTACT US

If you have any questions about updating Windows on the laptop, please contact **Technical Support at 1-800-772-6459**.