



Kubota



ORANGE MAINTENANCE



M SERIES



Orange Maintenance. No time for downtime.

Kubota Orange Maintenance puts your equipment in a prime position to help keep you working for the long haul. Regular scheduled maintenance ensures that issues are spotted early, enhancing equipment reliability, and maximizing uptime when it matters most.*

Your Kubota belongs in the field, not in the shop.

Plan your uptime and help protect your equipment with Kubota Orange Maintenance. All M Series have purchasable 4 years/3,500 hour plans available, helping you to reduce your operating costs, while keeping your equipment working at peak performance.*

*Technician travel costs / machine transport costs not included.
Available on all M series models.

Lower maintenance costs let you focus on what's important.

Season after season, with Kubota Orange Maintenance, you can enjoy peace of mind knowing that you are protected from the rising costs of maintenance over time.

Planned maintenance is a powerful investment.

It's not just about saving on maintenance. It's also about ensuring you get the highest quality of service and genuine Kubota parts, designed specifically for your machine.

More than ever, it takes dedication and ingenuity to keep a farm successful. That means making smart investments on all your equipment and ensuring that it's reliable and well-suited to your unique needs. That's where Kubota comes in.

Orange Maintenance M4D Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Engine Start System	Check	–	✘	–	✘	–	✘	–	✓
	Neutral Circuit	Check	–	✘	–	✘	–	✘	–	✓
	Greasing Main Tractor	Perform	✘	✘	✓	✘	✓	✓	✓	✓
	Battery Condition	Check	–	✘	–	✘	–	✘	–	✓
	Inner Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Fresh Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Brake Pedal	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Parking Brake Lever	Check	–	✘	–	✘	–	✘	–	✓
	Toe-In	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Pipes and Hoses	Check	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Drive Belt	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Condenser	Check	–	✘	–	✘	–	✘	–	✓
	CAB Isolation Cushion	Check	–	✘	–	✘	–	✘	–	✓
	Alternator Belt	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Master Cylinder Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Supply Pump	Check	–	✘	–	✘	–	✘	–	✓
	All Lighting and Switches	Check	–	✘	–	✘	–	✘	–	✓
	Engine	Engine Oil	Change	✓	✘	✓	✘	✓	✓	✓
Engine Oil Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fan Belt		Check and Adjust	–	✘	–	✘	–	✘	–	✓
Fuel Tank Water		Drain	–	✘	–	✘	–	✘	–	✓
Fuel Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fuel Line		Check	–	✘	–	✘	–	✘	–	✓
Fuel Injector Nozzle Tip		Check and Adjust	–	✘	–	✘	–	✘	–	✓
Water Separator		Clean	–	✘	–	✘	–	✘	–	✓
Radiator Hose and Clamps		Check	–	✘	–	✘	–	✘	–	✓
Coolant System		Flush	✘	✘	✓	✘	✓	✓	✓	✓
Intake Air Line		Check	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Clean	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Exhaust Manifold		Check	–	✘	–	✘	–	✘	–	✓
Oil Separator Element		Replace	✘	✘	✓	✘	✓	✓	✓	✓
Engine Valve Clearance		Check and Adjust	–	✘	–	✘	–	✘	–	✓
PCV Valve Hose		Check	–	✘	–	✘	–	✘	–	✓
DPF Muffler		Clean	–	✘	–	✘	–	✘	–	✓
EGR System		Clean	–	✘	–	✘	–	✘	–	✓
EGR Cooler	Check	–	✘	–	✘	–	✘	–	✓	
EGR Pipe	Check	–	✘	–	✘	–	✘	–	✓	
Turbocharger	Check	–	✘	–	✘	–	✘	–	✓	
Transmission & Hydraulics	Transmission Fluid	Change	✓	✘	✓	✘	✓	✓	✓	✓
	Hydraulic Oil Filter	Replace	✓	✘	✓	✘	✓	✓	✓	✓
	Power Steering Oil Line	Check	–	✘	–	✘	–	✘	–	✓
	Lift Cylinder Hose	Check	–	✘	–	✘	–	✘	–	✓
Axles	Wheel Bolt Torque	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Tie-Rod Dust Cover	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Pivot	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓
	Front Differential Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓

Orange Maintenance M4D Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Drive Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Condenser	Check		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check		✓	✓	✓	✓	✓	✓	✓
	Alternator Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Master Cylinder Filter	Clean					✓			
	Supply Pump	Check								✓
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Fuel Injector Nozzle Tip		Check and Adjust				✓			✓	
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓
Coolant System		Flush					✓			
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Air Cleaner Primary Element		Clean	✓	✓		✓		✓		✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
Oil Separator Element		Replace				✓			✓	
Engine Valve Clearance		Check and Adjust					✓			
PCV Valve Hose		Check					✓			
DPF Muffler		Clean								✓
EGR System		Clean								✓
EGR Cooler	Check			✓		✓		✓	✓	
EGR Pipe	Check		✓	✓	✓	✓	✓	✓	✓	
Turbocharger	Check								✓	
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓
Axles	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	

Orange Maintenance M60 Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Engine Start System	Check	–	✘	–	✘	–	✘	–	✓
	Neutral Circuit	Check	–	✘	–	✘	–	✘	–	✓
	Greasing Main Tractor	Perform	✘	✘	✓	✘	✓	✓	✓	✓
	Battery Condition	Check	–	✘	–	✘	–	✘	–	✓
	Inner Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Fresh Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Brake Pedal	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Parking Brake Lever	Check	–	✘	–	✘	–	✘	–	✓
	Toe-In	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Pipes and Hoses	Check	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Drive Belt	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Condenser	Check	–	✘	–	✘	–	✘	–	✓
	CAB Isolation Cushion	Check	–	✘	–	✘	–	✘	–	✓
	Alternator Belt	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Master Cylinder Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Supply Pump	Check	–	✘	–	✘	–	✘	–	✓
	All Lighting and Switches	Check	–	✘	–	✘	–	✘	–	✓
	Engine	Engine Oil	Change	✓	✘	✓	✘	✓	✓	✓
Engine Oil Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fan Belt		Check and Adjust	–	✘	–	✘	–	✘	–	✓
Fuel Tank Water		Drain	–	✘	–	✘	–	✘	–	✓
Fuel Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fuel Line		Check	–	✘	–	✘	–	✘	–	✓
Water Separator		Clean	–	✘	–	✘	–	✘	–	✓
Radiator Hose and Clamps		Check	–	✘	–	✘	–	✘	–	✓
Coolant System		Flush	✘	✘	✓	✘	✓	✓	✓	✓
Intake Air Line		Check	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Clean	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Exhaust Manifold		Check	–	✘	–	✘	–	✘	–	✓
Oil Separator Element		Replace	✘	✘	✓	✘	✓	✓	✓	✓
PCV Valve Hose		Check	–	✘	–	✘	–	✘	–	✓
DPF Muffler		Clean	–	✘	–	✘	–	✘	–	✓
EGR System		Clean	–	✘	–	✘	–	✘	–	✓
EGR Cooler		Check	–	✘	–	✘	–	✘	–	✓
EGR Pipe		Check	–	✘	–	✘	–	✘	–	✓
Turbocharger	Check	–	✘	–	✘	–	✘	–	✓	
Transmission & Hydraulics	Transmission Fluid	Change	✓	✘	✓	✘	✓	✓	✓	✓
	Hydraulic Oil Filter	Replace	✓	✘	✓	✘	✓	✓	✓	✓
	Power Steering Oil Line	Check	–	✘	–	✘	–	✘	–	✓
	Lift Cylinder Hose	Check	–	✘	–	✘	–	✘	–	✓
Axles	2WD Front Wheel Hub Greasing	Perform	✘	✘	✓	✘	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Tie-Rod Dust Cover	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Pivot	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓
	Front Differential Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓

*CAB Only

*CAB Only

*CAB Only

*CAB Only

*CAB Only

*CAB Only

Orange Maintenance M60 Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check		✓	✓	✓	✓	✓	✓	✓
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Drive Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Condenser	Check		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check		✓	✓	✓	✓	✓	✓	✓
	Alternator Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Master Cylinder Filter	Clean					✓			
	Supply Pump	Check								✓
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓
Coolant System		Flush					✓			
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Air Cleaner Primary Element		Clean		✓		✓		✓		✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
Oil Separator Element		Replace			✓		✓		✓	
PCV Valve Hose		Check					✓			
DPF Muffler		Clean							✓	
EGR System		Clean							✓	
EGR Cooler		Check			✓		✓		✓	
EGR Pipe		Check		✓	✓	✓	✓	✓	✓	✓
Turbocharger	Check								✓	
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓
Axles	2WD Front Wheel Hub Greasing	Perform		✓	✓	✓	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	

Orange Maintenance M4N/5N Plans

Item			Bronze		Silver		Gold		Platinum			
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour		
General	Engine Start System	Check	–	x	–	x	–	x	–	✓		
	Neutral Circuit	Check	–	x	–	x	–	x	–	✓		
	Greasing Main Tractor	Perform	x	x	✓	x	✓	✓	✓	✓		
	Battery Condition	Check	–	x	–	x	–	x	–	✓		
	Inner Air Filter	Clean	–	x	–	x	–	x	–	✓	*CAB Only	
	Fresh Air Filter	Clean	–	x	–	x	–	x	–	✓	*CAB Only	
	Brake Pedal	Check and Adjust	–	x	–	x	–	x	–	✓		
	Parking Brake Lever	Check	–	x	–	x	–	x	–	✓		
	Parking Brake Cable	Replace	x	x	✓	x	✓	✓	✓	✓		
	Brake Hose	Check	–	x	–	x	–	x	–	✓		
	Toe-In	Check and Adjust	–	x	–	x	–	x	–	✓		
	Air Conditioner Pipes and Hoses	Check	–	x	–	x	–	x	–	✓	*CAB Only	
	Air Conditioner Drive Belt	Check	–	x	–	x	–	x	–	✓	*CAB Only	
	Air Conditioner Condenser	Check	–	x	–	x	–	x	–	✓	*CAB Only	
	CAB Isolation Cushion	Check	–	x	–	x	–	x	–	✓	*CAB Only	
	Supply Pump	Check	–	x	–	x	–	x	–	✓		
	Intake Air Heater	Check	–	x	–	x	–	x	–	✓		
	All Lighting and Switches	Check	–	x	–	x	–	x	–	✓		
	Engine	Engine Oil	Change	✓	x	✓	x	✓	✓	✓	✓	
		Engine Oil Filter	Replace	✓	x	✓	x	✓	✓	✓	✓	
Fan Belt		Check and Adjust	–	x	–	x	–	x	–	✓		
Fuel Tank Water		Drain	–	x	–	x	–	x	–	✓		
Fuel Filter		Replace	✓	x	✓	x	✓	✓	✓	✓		
Fuel Line		Check	–	x	–	x	–	x	–	✓		
Fuel Solenoid Pump		Clean	–	x	–	x	–	x	–	✓		
Water Separator		Clean	–	x	–	x	–	x	–	✓		
Radiator Hose and Clamps		Check	–	x	–	x	–	x	–	✓		
Coolant System		Flush	x	x	✓	x	✓	✓	✓	✓		
Intake Air Line		Check	–	x	–	x	–	x	–	✓		
Air Cleaner Primary Element		Clean	–	x	–	x	–	x	–	✓		
Air Cleaner Primary Element		Replace	✓	x	✓	x	✓	✓	✓	✓		
Air Cleaner Secondary Unit		Replace	✓	x	✓	x	✓	✓	✓	✓		
Exhaust Manifold		Check	–	x	–	x	–	x	–	✓		
DEF Injector Tip		Check	–	x	–	x	–	x	–	✓		
Def (AdBlue) Line		Check	–	x	–	x	–	x	–	✓		
DEF Pump Filter		Replace	x	x	✓	x	✓	✓	✓	✓		
Oil Separator Element		Replace	x	x	✓	x	✓	✓	✓	✓		
PCV Valve		Check	–	x	–	x	–	x	–	✓		
DPF Muffler	Clean	–	x	–	x	–	x	–	✓			
EGR System	Clean	–	x	–	x	–	x	–	✓			
EGR Cooler	Check	–	x	–	x	–	x	–	✓			
EGR Pipe	Check	–	x	–	x	–	x	–	✓			
Turbocharger	Check	–	x	–	x	–	x	–	✓			
Transmission & Hydraulics	Transmission Fluid	Change	✓	x	✓	x	✓	✓	✓	✓		
	Hydraulic Oil Filter	Replace	✓	x	✓	x	✓	✓	✓	✓		
	Power Steering Oil Line	Check	–	x	–	x	–	x	–	✓		
	Lift Cylinder Hose	Check	–	x	–	x	–	x	–	✓		
If Equipped	Wheel Bolt Torque	Check and Adjust	–	x	–	x	–	x	–	✓		
	Tie-Rod Dust Cover	Check and Adjust	–	x	–	x	–	x	–	✓		
	Front Axle Pivot	Check and Adjust	–	x	–	x	–	x	–	✓		
	Front Axle Case Oil	Change	x	x	✓	x	✓	✓	✓	✓		
	Front Differential Case Oil	Change	x	x	✓	x	✓	✓	✓	✓		
If Equipped	Antifrost Heater for Oil Separator	Check	–	x	–	x	–	x	–	✓		

Orange Maintenance M4N/5N Schedule

			50	500	1000	1500	2000	2500	3000	3500	
Overall	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓	
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓	
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓	
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Parking Brake Lever	Check		✓	✓	✓	✓	✓	✓	✓	
	Parking Brake Cable	Replace							✓		
	Brake Hose	Check		✓	✓	✓	✓	✓	✓	✓	
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓	
	Air Conditioner Drive Belt	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Air Conditioner Condenser	Check		✓	✓	✓	✓	✓	✓	✓	
	CAB Isolation Cushion	Check		✓	✓	✓	✓	✓	✓	✓	
	Supply Pump	Check								✓	
	Intake Air Heater	Check								✓	
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓	✓
		Engine Oil Filter	Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓	
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓	
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓	
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓	
Fuel Solenoid Pump		Clean		✓	✓	✓	✓	✓	✓	✓	
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓	
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓	
Coolant System		Flush					✓				
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓	
Air Cleaner Primary Element		Clean		✓		✓		✓		✓	
Air Cleaner Primary Element		Replace			✓		✓		✓		
Air Cleaner Secondary Unit		Replace			✓		✓		✓		
Exhaust Manifold		Check			✓		✓		✓		
DEF Injector Tip		Check			✓		✓		✓		
Def (AdBlue) Line		Check			✓		✓		✓		
DEF Pump Filter		Replace							✓		
Oil Separator Element		Replace			✓		✓		✓		
PCV Valve		Check			✓		✓		✓		
DPF Muffler	Clean								✓		
EGR System	Clean								✓		
EGR Cooler	Check			✓		✓		✓			
EGR Pipe	Check		✓	✓	✓	✓	✓	✓	✓		
Turbocharger	Check								✓		
Transmission & Hydraulics	Transmission Fluid	Change			x		x		✓		
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓	
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓	
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓	
If Equipped	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓	
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓	
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Front Axle Case Oil	Change			✓		✓		✓		
	Front Differential Case Oil	Change			✓		✓		✓		
If Equipped	Antifrost Heater for Oil Separator	Check		✓	✓	✓	✓	✓	✓	✓	

Orange Maintenance M5 Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Engine Start System	Check	–	✘	–	✘	–	✘	–	✓
	Neutral Circuit	Check	–	✘	–	✘	–	✘	–	✓
	Greasing Main Tractor	Perform	✘	✘	✓	✘	✓	✓	✓	✓
	Battery Condition	Check	–	✘	–	✘	–	✘	–	✓
	Inner Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Fresh Air Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Brake Pedal	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Parking Brake Lever	Check	–	✘	–	✘	–	✘	–	✓
	Toe-In	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Pipes and Hoses	Check	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Drive Belt	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Air Conditioner Condenser	Check	–	✘	–	✘	–	✘	–	✓
	CAB Isolation Cushion	Check	–	✘	–	✘	–	✘	–	✓
	Master Cylinder Filter	Clean	–	✘	–	✘	–	✘	–	✓
	Supply Pump	Check	–	✘	–	✘	–	✘	–	✓
	Intake Air Heater	Check	–	✘	–	✘	–	✘	–	✓
	All Lighting and Switches	Check	–	✘	–	✘	–	✘	–	✓
	Engine	Engine Oil	Change	✓	✘	✓	✘	✓	✓	✓
Engine Oil Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fan Belt		Check and Adjust	–	✘	–	✘	–	✘	–	✓
Fuel Tank Water		Drain	–	✘	–	✘	–	✘	–	✓
Fuel Filter		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Fuel Line		Check	–	✘	–	✘	–	✘	–	✓
Water Separator		Clean	–	✘	–	✘	–	✘	–	✓
Radiator Hose and Clamps		Check	–	✘	–	✘	–	✘	–	✓
Coolant System		Flush	✘	✘	✓	✘	✓	✘	✓	✓
Intake Air Line		Check	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Clean	–	✘	–	✘	–	✘	–	✓
Air Cleaner Primary Element		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	✘	✓	✘	✓	✓	✓	✓
Exhaust Manifold		Check	–	✘	–	✘	–	✘	–	✓
DEF Injector Tip		Check	–	✘	–	✘	–	✘	–	✓
Def (AdBlue) Line		Check	–	✘	–	✘	–	✘	–	✓
DEF Pump Filter		Replace	✘	✘	✓	✘	✓	✓	✓	✓
Oil Separator Element		Replace	✘	✘	✓	✘	✓	✓	✓	✓
PCV Valve		Check	–	✘	–	✘	–	✘	–	✓
DPF Muffler		Clean	–	✘	–	✘	–	✘	–	✓
EGR System		Clean	–	✘	–	✘	–	✘	–	✓
EGR Cooler	Check	–	✘	–	✘	–	✘	–	✓	
EGR Pipe	Check	–	✘	–	✘	–	✘	–	✓	
Turbocharger	Check	–	✘	–	✘	–	✘	–	✓	
Transmission & Hydraulics	Transmission Fluid	Change	✓	✘	✓	✘	✓	✓	✓	✓
	Hydraulic Oil Filter	Replace	✓	✘	✓	✘	✓	✓	✓	✓
	Power Steering Oil Line	Check	–	✘	–	✘	–	✘	–	✓
	Lift Cylinder Hose	Check	–	✘	–	✘	–	✘	–	✓
Axles	2WD Front Wheel Hub Greasing		✘	✘	✓	✘	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Tie-Rod Dust Cover	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Pivot	Check and Adjust	–	✘	–	✘	–	✘	–	✓
	Front Axle Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓
	Front Differential Case Oil	Change	✘	✘	✓	✘	✓	✓	✓	✓
If Equipped	Antifrost Heater for Oil Separator	Check	–	✘	–	✘	–	✘	–	✓

*CAB Only
*CAB Only
*CAB Only
*CAB Only
*CAB Only

Orange Maintenance M5 Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check		✓	✓	✓	✓	✓	✓	✓
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Drive Belt	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Condenser	Check		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check		✓	✓	✓	✓	✓	✓	✓
	Master Cylinder Filter	Clean			✓		✓		✓	
	Supply Pump	Check								✓
	Intake Air Heater	Check								✓
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓
Coolant System		Flush					✓			
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Air Cleaner Primary Element		Clean		✓		✓		✓		✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
DEF Injector Tip		Check			✓		✓		✓	
Def (AdBlue) Line		Check			✓		✓		✓	
DEF Pump Filter		Replace							✓	
Oil Separator Element		Replace			✓		✓		✓	
PCV Valve		Check			✓		✓		✓	
DPF Muffler		Clean								✓
EGR System		Clean								✓
EGR Cooler	Check			✓		✓		✓		
EGR Pipe	Check		✓	✓	✓	✓	✓	✓	✓	
Turbocharger	Check								✓	
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓
Axles	2WD Front Wheel Hub Greasing	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	
If Equipped	Antifrost Heater for Oil Separator	Check		✓	✓	✓	✓	✓	✓	✓

Orange Maintenance M5L Plans

Item			Bronze		Silver		Gold		Platinum			
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour		
General	Engine Start System	Check	–	×	–	×	–	×	–	✓		
	Neutral Circuit	Check	–	×	–	×	–	×	–	✓		
	Greasing Main Tractor	Perform	×	×	✓	×	✓	✓	✓	✓		
	Battery Condition	Check	–	×	–	×	–	×	–	✓		
	Brake Pedal	Check and Adjust	–	×	–	×	–	×	–	✓	*CAB Only	
	Parking Brake Lever	Check	–	×	–	×	–	×	–	✓	*CAB Only	
	Toe-In	Check and Adjust	–	×	–	×	–	×	–	✓		
	Master Cylinder Filter	Clean	–	×	–	×	–	×	–	✓		
	Supply Pump	Check	–	×	–	×	–	×	–	✓		
	Intake Air Heater	Check	–	×	–	×	–	×	–	✓	*CAB Only	
	All Lighting and Switches	Check	–	×	–	×	–	×	–	✓	*CAB Only	
	Engine	Engine Oil	Change	✓	×	✓	×	✓	✓	✓	✓	*CAB Only
Engine Oil Filter		Replace	✓	×	✓	×	✓	✓	✓	✓	*CAB Only	
Fan Belt		Check and Adjust	–	×	–	×	–	×	–	✓		
Fuel Tank Water		Drain	–	×	–	×	–	×	–	✓		
Fuel Filter		Replace	✓	×	✓	×	✓	✓	✓	✓		
Fuel Line		Check	–	×	–	×	–	×	–	✓		
Fuel Injector Nozzle Tip		Clean	–	×	–	×	–	×	–	✓		
Water Separator		Clean	–	×	–	×	–	×	–	✓		
Radiator Hose and Clamps		Check	–	×	–	×	–	×	–	✓		
Coolant System		Flush	×	×	✓	×	✓	✓	✓	✓		
Intake Air Line		Check	–	×	–	×	–	×	–	✓		
Air Cleaner Primary Element		Clean	–	×	–	×	–	×	–	✓		
Air Cleaner Primary Element		Replace	✓	×	✓	×	✓	✓	✓	✓		
Air Cleaner Secondary Unit		Replace	✓	×	✓	×	✓	✓	✓	✓		
Exhaust Manifold		Check	–	×	–	×	–	×	–	✓		
DEF Injector Tip		Check	–	×	–	×	–	×	–	✓		
Def (AdBlue) Line		Check	–	×	–	×	–	×	–	✓		
DEF Pump Filter		Replace	×	×	✓	×	✓	✓	✓	✓		
Oil Separator Element		Replace	×	×	✓	×	✓	✓	✓	✓		
Engine Valve Clearance		Check and Adjust	–	×	–	×	–	×	–	✓		
PCV Valve		Check	–	×	–	×	–	×	–	✓		
DPF Muffler		Clean	–	×	–	×	–	×	–	✓		
EGR System		Clean	–	×	–	×	–	×	–	✓		
EGR Cooler		Check	–	×	–	×	–	×	–	✓		
EGR Pipe		Check	–	×	–	×	–	×	–	✓		
Turbocharger		Check	–	×	–	×	–	×	–	✓		
Transmission & Hydraulics		Transmission Fluid	Change	✓	×	✓	×	✓	✓	✓	✓	
		Hydraulic Oil Filter	Replace	✓	×	✓	×	✓	✓	✓	✓	
	Power Steering Oil Line	Check	–	×	–	×	–	×	–	✓		
	Lift Cylinder Hose	Check	–	×	–	×	–	×	–	✓		
Axles	2WD Front Wheel Hub Greasing	Perform	×	×	✓	×	✓	✓	✓	✓		
	Wheel Bolt Torque	Check and Adjust	–	×	–	×	–	×	–	✓		
	Tie-Rod Dust Cover	Check and Adjust	–	×	–	×	–	×	–	✓		
	Front Axle Pivot	Check and Adjust	–	×	–	×	–	×	–	✓		
	Front Axle Case Oil	Change	×	×	✓	×	✓	✓	✓	✓		
	Front Differential Case Oil	Change	×	×	✓	×	✓	✓	✓	✓		
If Equipped	Antifrost Heater for Oil Separator	Check	–	×	–	×	–	×	–	✓		

Orange Maintenance M5L Schedule

			50	500	1000	1500	2000	2500	3000	3500	
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Neutral Circuit	Check									
	Greasing Main Tractor	Perform		✓	✓	✓	✓	✓	✓	✓	
	Battery Condition	Check		✓	✓	✓	✓	✓	✓	✓	
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Parking Brake Lever	Check		✓	✓	✓	✓	✓	✓	✓	
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Master Cylinder Filter	Clean			✓		✓		✓		
	Supply Pump	Check								✓	
	Intake Air Heater	Check								✓	
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓	
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓	
Fan Belt		Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓	
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓	
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓	
Fuel Injector Nozzle Tip		Clean				✓			✓		
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓	
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓	
Coolant System		Flush					✓				
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓	
Air Cleaner Primary Element		Clean		✓		✓		✓		✓	
Air Cleaner Primary Element		Replace			✓		✓		✓		
Air Cleaner Secondary Unit		Replace			✓		✓		✓		
Exhaust Manifold		Check			✓		✓		✓		
DEF Injector Tip		Check				✓			✓		
Def (AdBlue) Line		Check				✓			✓		
DEF Pump Filter		Replace							✓		
Oil Separator Element		Replace							✓		
Engine Valve Clearance		Check and Adjust					✓			✓	
PCV Valve		Check					✓			✓	
DPF Muffler		Clean								✓	
EGR System		Clean								✓	
EGR Cooler		Check				✓			✓		
EGR Pipe		Check		✓	✓	✓	✓	✓	✓	✓	
Turbocharger		Check								✓	
Transmission & Hydraulics		Transmission Fluid	Change			✓		✓		✓	
		Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓	
	Lift Cylinder Hose	Check								✓	
Axles	2WD Front Wheel Hub Greasing	Perform		✓	✓	✓	✓	✓	✓	✓	
	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓	
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓	
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Front Axle Case Oil	Change			✓		✓		✓		
	Front Differential Case Oil	Change			✓		✓		✓		
If Equipped	Antifrost Heater for Oil Separator	Check		✓	✓	✓	✓	✓	✓	✓	

Orange Maintenance M6 Plans

Item		Bronze		Silver		Gold		Platinum		
		Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour	
General	Engine Start System	Check	—	×	—	×	—	×	—	✓
	Neutral Circuit	Check	—	×	—	×	—	×	—	✓
	Greasing Main Tractor	Perform	×	×	✓	×	✓	✓	✓	✓
	Battery Condition	Check	—	×	—	×	—	×	—	✓
	Inner Air Filter	Clean	—	×	—	×	—	×	—	✓
	Fresh Air Filter	Clean	—	×	—	×	—	×	—	✓
	Brake Pedal	Check and Adjust	—	×	—	×	—	×	—	✓
	Parking Brake Lever	Check and Adjust	—	×	—	×	—	×	—	✓
	Parking Brake Cable	Replace	×	×	✓	×	✓	✓	✓	✓
	Toe-In	Check and Adjust	—	×	—	×	—	×	—	✓
	Air Conditioner Pipes and Hoses	Check	—	×	—	×	—	×	—	✓
	Air Conditioner Belt	Check and Adjust	—	×	—	×	—	×	—	✓
	CAB Isolation Cushion	Check	—	×	—	×	—	×	—	✓
	Power Shift	Check and Adjust	—	×	—	×	—	×	—	✓
	PCV Valve	Check	—	×	—	×	—	×	—	✓
	EGR Cooler	Check	—	×	—	×	—	×	—	✓
	Supply Pump	Check	—	×	—	×	—	×	—	✓
	EGR System	Check	—	×	—	×	—	×	—	✓
	Intake Air Heater*	Check	—	×	—	×	—	×	—	✓
	DPF Muffler*	Clean	—	×	—	×	—	×	—	✓
All Lighting and Switches	Check	—	×	—	×	—	×	—	✓	
Engine	Engine Oil	Change	✓	×	✓	×	✓	×	✓	✓
	Engine Oil Filter	Replace	✓	×	✓	×	✓	×	✓	✓
	Fan Belt	Check and Adjust	—	×	—	×	—	×	—	✓
	Fuel Tank Water	Drain	—	×	—	×	—	×	—	✓
	Pre-Fuel Filter Clean (M6-131 & M6-141 only)	Clean	—	×	—	×	—	×	—	✓
	Fuel Filter	Replace	✓	×	✓	×	✓	×	✓	✓
	Fuel Line	Check	—	×	—	×	—	×	—	✓
	Radiator Hose and Clamps	Check	—	×	—	×	—	×	—	✓
	Coolant System	Flush	×	×	✓	×	✓	×	✓	✓
	Intake Air Line	Check	—	×	—	×	—	×	—	✓
	Air Cleaner Primary Element	Replace	✓	×	✓	×	✓	×	✓	✓
	Air Cleaner Secondary Element	Replace	✓	×	✓	×	✓	×	✓	✓
	Exhaust Manifold	Check	—	×	—	×	—	×	—	✓
	DEF Injector Tip	Check	—	×	—	×	—	×	—	✓
	Def (AdBlue) Line	Check	—	×	—	×	—	×	—	✓
	DEF Pump Filter	Replace	×	×	✓	×	✓	×	✓	✓
	Oil Separator Element	Replace	×	×	✓	×	✓	×	✓	✓
	Antifrost Heater for Oil Separator	Check	—	×	—	×	—	×	—	✓
	Water Separator	Clean	—	×	—	×	—	×	—	✓
	Fuel Solenoid Pump	Clean	—	×	—	×	—	×	—	✓
DPF Sensor Pipe	Check	—	×	—	×	—	×	—	✓	
EGR Pipe	Check	—	×	—	×	—	×	—	✓	
Turbocharger	Check	—	×	—	×	—	×	—	✓	
Transmission & Hydraulics	Transmission Fluid	Change	✓	×	✓	×	✓	×	✓	✓
	Hydraulic Oil Filter	Replace	✓	×	✓	×	✓	×	✓	✓
	Oil Cooler Line	Check	—	×	—	×	—	×	—	✓
	Power Steering Oil Line	Check	—	×	—	×	—	×	—	✓
	Lift Cylinder Hose	Check	—	×	—	×	—	×	—	✓
	Clutch Hose	Check	—	×	—	×	—	×	—	✓
Axles	Wheel Bolt Torque	Check	—	×	—	×	—	×	—	✓
	Tie-Rod Dust Cover	Check	—	×	—	×	—	×	—	✓
	Differential Lock Hose	Check	—	×	—	×	—	×	—	✓
	Brake Hose	Check	—	×	—	×	—	×	—	✓
	Front Axle Gear Case Oil	Change	×	×	✓	×	✓	×	✓	✓
	Front Differential Case Oil	Change	×	×	✓	×	✓	×	✓	✓
If Equipped	Front Axle Pivot	Check and Adjust	—	×	—	×	—	×	—	✓
	King Pin Pivot	Check and Adjust	—	×	—	×	—	×	—	✓
	Accumulator	Check	—	×	—	×	—	×	—	✓
Front Suspension Hose	Check	—	×	—	×	—	×	—	✓	

*Applicable to M6-101 & M6-111 only

Orange Maintenance M6 Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check		✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform		✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check			✓	✓	✓	✓	✓	✓
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Cable	Replace								✓
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Belt	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check			✓		✓		✓	
	Power Shift	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	PCV Valve	Check				✓				✓
	EGR Cooler	Check				✓				✓
	Supply Pump	Check								✓
	EGR System	Check								✓
	Intake Air Heater*	Check								✓
	DPF Muffler*	Clean								✓
All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓	
Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓	✓
	Engine Oil Filter	Replace	✓	✓	✓	✓	✓	✓	✓	✓
	Fan Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Fuel Tank Water	Drain		✓	✓	✓	✓	✓	✓	✓
	Fuel Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Fuel Line	Check		✓	✓	✓	✓	✓	✓	✓
	Radiator Hose and Clamps	Check		✓	✓	✓	✓	✓	✓	✓
	Coolant System	Flush					✓			
	Intake Air Line	Check		✓	✓	✓	✓	✓	✓	✓
	Air Cleaner Primary Element	Replace			✓		✓		✓	
	Air Cleaner Secondary Element	Replace			✓		✓		✓	
	Exhaust Manifold	Check					✓			✓
	DEF Injector Tip	Check					✓			✓
	Def (AdBlue) Line	Check					✓			✓
	DEF Pump Filter	Replace								✓
	Oil Separator Element	Replace					✓			✓
	Antifrost Heater for Oil Separator	Check		✓	✓	✓	✓	✓	✓	✓
	Water Separator	Clean		✓	✓	✓	✓	✓	✓	✓
	Fuel Solenoid Pump	Clean		✓	✓	✓	✓	✓	✓	✓
	DPF Sensor Pipe	Check		✓	✓	✓	✓	✓	✓	✓
EGR Pipe	Check		✓	✓	✓	✓	✓	✓	✓	
Turbocharger	Check								✓	
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Oil Cooler Line	Check		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓
	Clutch Hose	Check		✓	✓	✓	✓	✓	✓	✓
Axles	Wheel Bolt Torque	Check		✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check		✓	✓	✓	✓	✓	✓	✓
	Differential Lock Hose	Check		✓	✓	✓	✓	✓	✓	✓
	Brake Hose	Check		✓	✓	✓	✓	✓	✓	✓
	Front Axle Gear Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	
If Equipped	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	King Pin Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Accumulator	Check				✓			✓	
Front Suspension Hose	Check		✓	✓	✓	✓	✓	✓	✓	

Orange Maintenance M6H Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Engine Start System	Check	–	x	–	x	–	x	–	✓
	Neutral Circuit	Check	–	x	–	x	–	x	–	✓
	Greasing Main Tractor	Perform	x	x	✓	x	✓	✓	✓	✓
	Battery Condition	Check	–	x	–	x	–	x	–	✓
	Brake Pedal	Check and Adjust	–	x	–	x	–	x	–	✓
	Parking Brake Lever	Check and Adjust	–	x	–	x	–	x	–	✓
	Parking Brake Cable	Replace	x	x	✓	x	✓	✓	✓	✓
	Toe-In	Check and Adjust	–	x	–	x	–	x	–	✓
	Master Cylinder Filter	Clean	–	x	–	x	–	x	–	✓
	Supply Pump	Check	–	x	–	x	–	x	–	✓
	All Lighting and Switches	Check	–	x	–	x	–	x	–	✓
	Engine	Engine Oil	Change	✓	x	✓	x	✓	✓	✓
Engine Oil Filter		Replace	✓	x	✓	x	✓	✓	✓	✓
Fan Belt		Check and Adjust	–	x	–	x	–	x	–	✓
Fuel Tank Water		Drain	–	x	–	x	–	x	–	✓
Fuel Filter		Replace	✓	x	✓	x	✓	✓	✓	✓
Fuel Line		Check	–	x	–	x	–	x	–	✓
Water Separator		Clean	–	x	–	x	–	x	–	✓
Fuel Injector Nozzle		Check	–	x	–	x	–	x	–	✓
Radiator Hose and Clamps		Check	–	x	–	x	–	x	–	✓
Coolant System		Flush	x	x	✓	x	✓	✓	✓	✓
Intake Air Line		Check	–	x	–	x	–	x	–	✓
Intake Air Heater		Check	–	x	–	x	–	x	–	✓
Air Cleaner Primary Element		Clean	–	x	–	x	–	x	–	✓
Air Cleaner Primary Element		Replace	✓	x	✓	x	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	x	✓	x	✓	✓	✓	✓
Exhaust Manifold		Check	–	x	–	x	–	x	–	✓
Oil Separator Element		Replace	x	x	✓	x	✓	✓	✓	✓
PCV Valve Hose		Check	–	x	–	x	–	x	–	✓
DPF Muffler		Clean	–	x	–	x	–	x	–	✓
DPF Injector		Check	–	x	–	x	–	x	–	✓
DPF Pump Filter		Replace	x	x	✓	x	✓	✓	✓	✓
DEF Injector Tip		Check	–	x	–	x	–	x	–	✓
DEF (AdBlue) Line		Check	–	x	–	x	–	x	–	✓
EGR System		Clean	–	x	–	x	–	x	–	✓
EGR Cooler		Check	–	x	–	x	–	x	–	✓
EGR Pipe		Check	–	x	–	x	–	x	–	✓
Engine Valve Clearance		Check and Adjust	–	x	–	x	–	x	–	✓
Turbocharger		Check	–	x	–	x	–	x	–	✓
Transmission & Hydraulics	Transmission Fluid	Change	✓	x	✓	x	✓	✓	✓	✓
	Hydraulic Oil Filter	Replace	✓	x	✓	x	✓	✓	✓	✓
	Power Steering Oil Line	Check	–	x	–	x	–	x	–	✓
	Oil Cooler Line	Check	–	x	–	x	–	x	–	✓
Axles	Wheel Bolt Torque	Check and Adjust	–	x	–	x	–	x	–	✓
	Tie-Rod Dust Cover	Check and Adjust	–	x	–	x	–	x	–	✓
	King Pin Pivot	Check and Adjust	–	x	–	x	–	x	–	✓
	Front Axle Pivot	Check and Adjust	–	x	–	x	–	x	–	✓
	Front Axle Case Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Front Differential Case Oil	Change	x	x	✓	x	✓	✓	✓	✓

Orange Maintenance M6H Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Cable	Replace							✓	✓
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Master Cylinder Filter	Clean					✓			
	Supply Pump	Check								✓
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓
Fuel Injector Nozzle		Check				✓				✓
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓
Coolant System		Flush					✓			
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Intake Air Heater		Check								✓
Air Cleaner Primary Element		Clean		✓		✓		✓		✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
Oil Separator Element		Replace				✓		✓		✓
PCV Valve Hose		Check					✓			
DPF Muffler		Clean								✓
DPF Injector		Check								✓
DPF Pump Filter		Replace								✓
DEF Injector Tip		Check								✓
DEF (AdBlue) Line		Check				✓				✓
EGR System		Clean								✓
EGR Cooler		Check								✓
EGR Pipe		Check		✓	✓	✓	✓	✓	✓	✓
Engine Valve Clearance		Check and Adjust					✓			
Turbocharger		Check								✓
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Oil Cooler Line	Check		✓	✓	✓	✓	✓	✓	✓
Axles	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	King Pin Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	

Orange Maintenance M6S Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Engine Start System	Check	–	✖	–	✖	–	✖	–	✓
	Neutral Circuit	Check	–	✖	–	✖	–	✖	–	✓
	Greasing Main Tractor	Perform	✖	✖	✓	✖	✓	✓	✓	✓
	Battery Condition	Check	–	✖	–	✖	–	✖	–	✓
	Inner Air Filter	Clean	–	✖	–	✖	–	✖	–	✓
	Fresh Air Filter	Clean	–	✖	–	✖	–	✖	–	✓
	Brake Pedal	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Parking Brake Lever	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Parking Brake Cable	Replace	✖	✖	✓	✖	✓	✓	✓	✓
	Toe-In	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Air Conditioner Pipes and Hoses	Check	–	✖	–	✖	–	✖	–	✓
	Air Conditioner Drive Belt	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Air Conditioner Condenser	Check	–	✖	–	✖	–	✖	–	✓
	CAB Isolation Cushion	Check	–	✖	–	✖	–	✖	–	✓
	Master Cylinder Filter	Clean	–	✖	–	✖	–	✖	–	✓
	Supply Pump	Check	–	✖	–	✖	–	✖	–	✓
	All Lighting and Switches	Check	–	✖	–	✖	–	✖	–	✓
	Engine	Engine Oil	Change	✓	✖	✓	✖	✓	✓	✓
Engine Oil Filter		Replace	✓	✖	✓	✖	✓	✓	✓	✓
Fan Belt		Check and Adjust	–	✖	–	✖	–	✖	–	✓
Fuel Tank Water		Drain	–	✖	–	✖	–	✖	–	✓
Fuel Filter		Replace	✓	✖	✓	✖	✓	✓	✓	✓
Fuel Line		Check	–	✖	–	✖	–	✖	–	✓
Water Separator		Clean	–	✖	–	✖	–	✖	–	✓
Fuel Injector Nozzle		Check	–	✖	–	✖	–	✖	–	✓
Radiator Hose and Clamps		Check	–	✖	–	✖	–	✖	–	✓
Coolant System		Flush	✖	✖	✓	✖	✓	✓	✓	✓
Intake Air Line		Check	–	✖	–	✖	–	✖	–	✓
Intake Air Heater		Check	–	✖	–	✖	–	✖	–	✓
Air Cleaner Primary Element		Clean	–	✖	–	✖	–	✖	–	✓
Air Cleaner Primary Element		Replace	✓	✖	✓	✖	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	✖	✓	✖	✓	✓	✓	✓
Exhaust Manifold		Check	–	✖	–	✖	–	✖	–	✓
Oil Separator Element		Replace	✖	✖	✓	✖	✓	✓	✓	✓
PCV Valve Hose		Check	–	✖	–	✖	–	✖	–	✓
DPF Muffler		Clean	–	✖	–	✖	–	✖	–	✓
DPF Injector		Check	–	✖	–	✖	–	✖	–	✓
DPF Pump Filter		Replace	✖	✖	✓	✖	✓	✓	✓	✓
DEF Injector Tip		Check	–	✖	–	✖	–	✖	–	✓
DEF (AdBlue) Line		Check	–	✖	–	✖	–	✖	–	✓
EGR System		Clean	–	✖	–	✖	–	✖	–	✓
EGR Cooler		Check	–	✖	–	✖	–	✖	–	✓
EGR Pipe		Check	–	✖	–	✖	–	✖	–	✓
Engine Valve Clearance		Check and Adjust	–	✖	–	✖	–	✖	–	✓
Turbocharger		Check	–	✖	–	✖	–	✖	–	✓
Transmission & Hydraulics	Transmission Fluid	Change	✓	✖	✓	✖	✓	✓	✓	✓
	Hydraulic Oil Filter	Replace	✓	✖	✓	✖	✓	✓	✓	✓
	Power Steering Oil Line	Check	–	✖	–	✖	–	✖	–	✓
	Oil Cooler Line	Check	–	✖	–	✖	–	✖	–	✓
Axles	2WD Front Wheel Hub Greasing	Perform	✖	✖	✓	✖	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Tie-Rod Dust Cover	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	King Pin Pivot	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Front Axle Pivot	Check and Adjust	–	✖	–	✖	–	✖	–	✓
	Front Axle Case Oil	Change	✖	✖	✓	✖	✓	✓	✓	✓
	Front Differential Case Oil	Change	✖	✖	✓	✖	✓	✓	✓	✓

*CAB Only
*CAB Only
*CAB Only
*CAB Only
*CAB Only

Orange Maintenance M6S Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Engine Start System	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Neutral Circuit	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor	Perform	✓	✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Inner Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Fresh Air Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Brake Pedal	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Parking Brake Cable	Replace								
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Drive Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Condenser	Check		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check		✓	✓	✓	✓	✓	✓	✓
	Master Cylinder Filter	Clean					✓			
	Supply Pump	Check								✓
	All Lighting and Switches	Check	✓	✓	✓	✓	✓	✓	✓	✓
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Water Separator		Clean		✓	✓	✓	✓	✓	✓	✓
Fuel Injector Nozzle		Check				✓			✓	
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓
Coolant System		Flush					✓			
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Intake Air Heater		Check							✓	
Air Cleaner Primary Element		Clean		✓		✓		✓		✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
Oil Separator Element		Replace					✓		✓	
PCV Valve Hose		Check						✓		
DPF Muffler		Clean								✓
DPF Injector		Check								✓
DPF Pump Filter		Replace								✓
DEF Injector Tip		Check						✓		✓
DEF (AdBlue) Line		Check					✓			✓
EGR System		Clean								✓
EGR Cooler		Check					✓			✓
EGR Pipe		Check		✓	✓	✓	✓	✓	✓	✓
Engine Valve Clearance		Check and Adjust					✓			✓
Turbocharger		Check								✓
Transmission & Hydraulics	Transmission Fluid	Change			✓		✓		✓	
	Hydraulic Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓
	Oil Cooler Line	Check		✓	✓	✓	✓	✓	✓	✓
Axles	2WD Front Wheel Hub Greasing	Perform		✓	✓	✓	✓	✓	✓	✓
	Wheel Bolt Torque	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	Tie-Rod Dust Cover	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
	King Pin Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Pivot	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Front Axle Case Oil	Change			✓		✓		✓	
	Front Differential Case Oil	Change			✓		✓		✓	

Orange Maintenance M7 Plans

Item			Bronze		Silver		Gold		Platinum		
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour	
Overall	Neutral Circuit	Check	–	x	–	x	–	x	–	✓	
	Greasing Main Tractor	Perform	x	x	✓	x	✓	✓	✓	✓	
	Battery Condition	Check	–	x	–	x	–	x	–	✓	
	Inner Air Filter	Clean	–	x	–	x	–	x	–	✓	
	Fresh Air Filter	Clean	–	x	–	x	–	x	–	✓	
	Inner Air Filter	Replace	✓	x	✓	x	✓	✓	✓	✓	
	Fresh Air Filter	Replace	✓	x	✓	x	✓	✓	✓	✓	
	Brake Pedal	Check and Adjust	–	x	–	x	–	x	–	✓	
	Parking Brake Lever	Check and Adjust	–	x	–	x	–	x	–	✓	
	Parking Brake Cable	Replace	x	x	✓	x	✓	✓	✓	✓	
	Toe-In	Check and Adjust	–	x	–	x	–	x	–	✓	
	Air Conditioner Pipes and Hoses	Check	–	x	–	x	–	x	–	✓	
	Air Conditioner Drive Belt	Check	–	x	–	x	–	x	–	✓	
	CAB Isolation Cushion	Check	–	x	–	x	–	x	–	✓	
	Engine	Engine Oil	Change	✓	x	✓	x	✓	✓	✓	✓
		Engine Oil Filter	Replace	✓	x	✓	x	✓	✓	✓	✓
		Fan Belt	Check and Adjust	–	x	–	x	–	x	–	✓
Fuel Tank Water		Drain	–	x	–	x	–	x	–	✓	
Pre-Fuel Filter		Clean	–	x	–	x	–	x	–	✓	
Fuel Filter		Replace	✓	x	✓	x	✓	✓	✓	✓	
Fuel Line		Check	–	x	–	x	–	x	–	✓	
Radiator Hose and Clamps		Check	–	x	–	x	–	x	–	✓	
Coolant System		Flush	x	x	✓	x	✓	✓	✓	✓	
Intake Air Line		Check	–	x	–	x	–	x	–	✓	
Air Cleaner Primary Element		Replace	✓	x	✓	x	✓	✓	✓	✓	
Air Cleaner Secondary Unit		Replace	✓	x	✓	x	✓	✓	✓	✓	
Exhaust Manifold		Check	–	x	–	x	–	x	–	✓	
DEF Injector Tip		Clean	–	x	–	x	–	x	–	✓	
Def (AdBlue) Line		Check	–	x	–	x	–	x	–	✓	
DEF Pump Filter		Replace	x	x	✓	x	✓	✓	✓	✓	
Oil Separator Hose		Check	–	x	–	x	–	x	–	✓	
Check Valve		Check	–	x	–	x	–	x	–	✓	
Antifrost Heater for Oil Separator		Check	–	x	–	x	–	x	–	✓	
DPF Sensor Pipe		Check	–	x	–	x	–	x	–	✓	
EGR Pipe	Check	–	x	–	x	–	x	–	✓		
Turbocharger	Check	–	x	–	x	–	x	–	✓		
Transmission & Hydraulics	Transmission Fluid	Change	x	x	✓	x	✓	✓	✓	✓	
	Transmission Fluid Filter	Replace	x	x	✓	x	✓	✓	✓	✓	
	Hydraulic Oil Filter (Suction)	Replace	✓	x	✓	x	✓	✓	✓	✓	
	Hydraulic Oil Filter (Return)	Replace	✓	x	✓	x	✓	✓	✓	✓	
	Oil Cooler Line	Check	–	x	–	x	–	x	–	✓	
	Power Steering Oil Filter	Replace	x	x	✓	x	✓	✓	✓	✓	
	Power Steering Oil Line	Check	–	x	–	x	–	x	–	✓	
	Lift Cylinder Hose	Check	–	x	–	x	–	x	–	✓	
	Axles	Wheel Bolt Torque	Check	–	x	–	x	–	x	–	✓
Tie-Rod Dust Cover		Check	–	x	–	x	–	x	–	✓	
Differential Lock Hose		Check	–	x	–	x	–	x	–	✓	
Brake Hose		Check	–	x	–	x	–	x	–	✓	
Rear Axle Case Oil		Change	x	x	✓	x	✓	✓	✓	✓	
Front Axle Case Oil		Change	x	x	✓	x	✓	✓	✓	✓	
Front Differential Case Oil		Change	x	x	✓	x	✓	✓	✓	✓	
If Equipped	Air Brake	Check	–	x	–	x	–	x	–	✓	
	Front PTO Oil	Change	x	x	✓	x	✓	✓	✓	✓	
	Front Suspension Hose	Check	–	x	–	x	–	x	–	✓	

Orange Maintenance M7 Schedule

			50	500	1000	1500	2000	2500	3000	3500	
Overall	Neutral Circuit	Check		✓	✓	✓	✓	✓	✓	✓	
	Greasing Main Tractor	Perform		✓	✓	✓	✓	✓	✓	✓	
	Battery Condition	Check			✓	✓	✓	✓	✓	✓	
	Inner Air Filter	Clean		✓		✓		✓		✓	
	Fresh Air Filter	Clean		✓		✓		✓		✓	
	Inner Air Filter	Replace			✓		✓		✓		
	Fresh Air Filter	Replace			✓		✓		✓		
	Brake Pedal	Check and Adjust			✓	✓	✓	✓	✓	✓	
	Parking Brake Lever	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Parking Brake Cable	Replace								✓	
	Toe-In	Check and Adjust		✓	✓	✓	✓	✓	✓	✓	
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓	
	Air Conditioner Drive Belt	Check		✓	✓	✓	✓	✓	✓	✓	
	CAB Isolation Cushion	Check			✓		✓		✓		
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓	✓
		Engine Oil Filter	Replace	✓	✓	✓	✓	✓	✓	✓	✓
		Fan Belt	Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Tank Water		Drain		✓	✓	✓	✓	✓	✓	✓	
Pre-Fuel Filter		Clean		✓	✓	✓	✓	✓	✓	✓	
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓	
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓	
Radiator Hose and Clamps		Check		✓	✓	✓	✓	✓	✓	✓	
Coolant System		Flush					✓				
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓	
Air Cleaner Primary Element		Replace			✓		✓		✓		
Air Cleaner Secondary Unit		Replace			✓		✓		✓		
Exhaust Manifold		Check			✓		✓		✓		
DEF Injector Tip		Clean				✓			✓		
Def (AdBlue) Line		Check				✓			✓		
DEF Pump Filter		Replace				✓			✓		
Oil Separator Hose		Check			✓		✓		✓		
Check Valve		Check			✓		✓		✓		
Antifrost Heater for Oil Separator		Check			✓		✓		✓		
DPF Sensor Pipe		Check					✓		✓		
EGR Pipe	Check					✓		✓			
Turbocharger	Check								✓		
Transmission & Hydraulics	Transmission Fluid	Change		✓	✓		✓		✓		
	Transmission Fluid Filter	Replace	✓	✓	✓		✓		✓		
	Hydraulic Oil Filter (Suction)	Replace			✓	✓	✓	✓	✓	✓	
	Hydraulic Oil Filter (Return)	Replace			✓	✓	✓	✓	✓	✓	
	Oil Cooler Line	Check		✓	✓	✓	✓	✓	✓	✓	
	Power Steering Oil Filter	Replace		✓	✓	✓	✓	✓	✓	✓	
	Power Steering Oil Line	Check		✓	✓	✓	✓	✓	✓	✓	
	Lift Cylinder Hose	Check		✓	✓	✓	✓	✓	✓	✓	
	Axles	Wheel Bolt Torque	Check		✓	✓	✓	✓	✓	✓	✓
Tie-Rod Dust Cover		Check		✓	✓	✓	✓	✓	✓	✓	
Differential Lock Hose		Check		✓	✓	✓	✓	✓	✓	✓	
Brake Hose		Check		✓	✓	✓	✓	✓	✓	✓	
Rear Axle Case Oil		Change		✓	✓	✓	✓	✓	✓	✓	
Front Axle Case Oil		Change		✓	✓	✓	✓	✓	✓	✓	
Front Differential Case Oil		Change		✓	✓	✓	✓	✓	✓	✓	
If Equipped	Air Brake	Check		✓	✓	✓	✓	✓	✓	✓	
	Front PTO Oil	Change			✓	✓	✓	✓	✓	✓	
	Front Suspension Hose	Check		✓	✓	✓	✓	✓	✓	✓	

Orange Maintenance M8 Plans

Item			Bronze		Silver		Gold		Platinum	
			Parts	Labour	Parts	Labour	Parts	Labour	Parts	Labour
General	Neutral Circuit	Check	—	x	—	x	—	x	—	✓
	Greasing Main Tractor and Hitches	Perform	x	x	✓	x	✓	✓	✓	✓
	Battery Condition	Check	—	x	—	x	—	x	—	✓
	Cab Air Filter	Clean	—	x	—	x	—	x	—	✓
	Cab Air Filter	Replace	x	x	✓	x	✓	✓	✓	✓
	Brake Pedal	Check and Adjust	—	x	—	x	—	x	—	✓
	Parking Brake Lever	Check and Adjust	—	x	—	x	—	x	—	✓
	Toe-In	Check and Adjust	—	x	—	x	—	x	—	✓
	Alternator	Clean	—	x	—	x	—	x	—	✓
	Accessory Drive Belt and Tensioner	Check	—	x	—	x	—	x	—	✓
	Air Conditioner Pipes and Hoses	Check	—	x	—	x	—	x	—	✓
	Air Conditioner Drive Belt	Check	—	x	—	x	—	x	—	✓
	CAB Isolation Cushion	Check	—	x	—	x	—	x	—	✓
	Engine	Engine Oil	Change	✓	x	✓	x	✓	✓	✓
Engine Oil Filter		Replace	✓	x	✓	x	✓	✓	✓	✓
Fan Belt		Check and Adjust	—	x	—	x	—	x	—	✓
Fuel Filter		Replace	✓	x	✓	x	✓	✓	✓	✓
Fuel Tank		Check and Drain	—	x	—	x	—	x	—	✓
Fuel Line		Check	—	x	—	x	—	x	—	✓
Fuel Injector Nozzle Tip		Check	—	x	—	x	—	x	—	✓
Water Separator Element		Drain	—	x	—	x	—	x	—	✓
Radiator Hose and Clamps		Check	—	x	—	x	—	x	—	✓
Coolant System		Flush	x	x	✓	x	✓	✓	✓	✓
Intake Air Line		Check	—	x	—	x	—	x	—	✓
Air Cleaner Primary Element		Replace	✓	x	✓	x	✓	✓	✓	✓
Air Cleaner Secondary Unit		Replace	✓	x	✓	x	✓	✓	✓	✓
Exhaust Manifold		Check	—	x	—	x	—	x	—	✓
DEF In-Tank Filter		Replace	x	x	✓	x	✓	✓	✓	✓
Turbocharger		Check	—	x	—	x	—	x	—	✓
Transmission & Hydraulics	Transmission Fluid	Change	✓	x	✓	x	✓	✓	✓	✓
	Transmission Fluid Filter	Replace	✓	x	✓	x	✓	✓	✓	✓
	Hydraulic Oil Filter (Suction)	Clean	—	x	—	x	—	x	—	✓
	Hydraulic Oil Filter (Return)	Replace	✓	x	✓	x	✓	✓	✓	✓
	Hydraulic Oil Filter (Charge)	Replace	✓	x	✓	x	✓	✓	✓	✓
	Hydraulic Oil Filter (Steering)	Replace	✓	x	✓	x	✓	✓	✓	✓
Axles	Hydraulic Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Wheel Bolt Torque	Check	—	x	—	x	—	x	—	✓
	Wheel Condition	Check	—	x	—	x	—	x	—	✓
	Rear Final Drive Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Rear Planetary Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Front Planetary Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Front Axle Differential Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Front PTO Filter	Clean	—	x	—	x	—	x	—	✓
	Front PTO Oil	Change	x	x	✓	x	✓	✓	✓	✓
	Grease PTO Drive Shaft	Perform	x	x	✓	x	✓	✓	✓	✓
	PTO Gearbox Mounting Bolts	Check	—	x	—	x	—	x	—	✓
PTO Gearbox	Check	—	x	—	x	—	x	—	✓	

Orange Maintenance M8 Schedule

			50	500	1000	1500	2000	2500	3000	3500
General	Neutral Circuit	Check		✓	✓	✓	✓	✓	✓	✓
	Greasing Main Tractor and Hitches	Perform		✓	✓	✓	✓	✓	✓	✓
	Battery Condition	Check		✓	✓	✓	✓	✓	✓	✓
	Cab Air Filter	Clean	✓	✓		✓		✓		✓
	Cab Air Filter	Replace			✓		✓		✓	
	Brake Pedal	Check and Adjust			✓	✓	✓	✓	✓	✓
	Parking Brake Lever	Check and Adjust		✓	✓	✓	✓	✓	✓	✓
	Toe-In	Check and Adjust			✓	✓	✓	✓	✓	✓
	Alternator	Clean	✓	✓	✓	✓	✓	✓	✓	✓
	Accessory Drive Belt and Tensioner	Check			✓		✓		✓	
	Air Conditioner Pipes and Hoses	Check		✓	✓	✓	✓	✓	✓	✓
	Air Conditioner Drive Belt	Check		✓	✓	✓	✓	✓	✓	✓
	CAB Isolation Cushion	Check			✓		✓		✓	
	Engine	Engine Oil	Change	✓	✓	✓	✓	✓	✓	✓
Engine Oil Filter		Replace	✓	✓	✓	✓	✓	✓	✓	✓
Fan Belt		Check and Adjust	✓	✓	✓	✓	✓	✓	✓	✓
Fuel Filter		Replace		✓	✓	✓	✓	✓	✓	✓
Fuel Tank		Check and Drain		✓	✓	✓	✓	✓	✓	✓
Fuel Line		Check		✓	✓	✓	✓	✓	✓	✓
Fuel Injector Nozzle Tip		Check			✓		✓		✓	
Water Separator Element		Drain	✓	✓	✓	✓	✓	✓	✓	✓
Radiator Hose and Clamps		Check			✓		✓		✓	
Coolant System		Flush			✓		✓		✓	
Intake Air Line		Check		✓	✓	✓	✓	✓	✓	✓
Air Cleaner Primary Element		Replace			✓		✓		✓	
Air Cleaner Secondary Unit		Replace			✓		✓		✓	
Exhaust Manifold		Check			✓		✓		✓	
DEF In-Tank Filter		Replace			✓		✓		✓	
Turbocharger		Check			✓		✓		✓	
Transmission & Hydraulics	Transmission Fluid	Change		✓	✓		✓		✓	
	Transmission Fluid Filter	Replace		✓	✓		✓		✓	
	Hydraulic Oil Filter (Suction)	Clean		✓	✓	✓	✓	✓	✓	✓
	Hydraulic Oil Filter (Return)	Replace		✓	✓		✓		✓	
	Hydraulic Oil Filter (Charge)	Replace		✓	✓		✓		✓	
	Hydraulic Oil Filter (Steering)	Replace		✓	✓		✓		✓	
	Hydraulic Oil	Change		✓	✓		✓		✓	
	Wheel Bolt Torque	Check		✓	✓	✓	✓	✓	✓	✓
Axles	Wheel Condition	Check		✓	✓	✓	✓	✓	✓	✓
	Rear Final Drive Oil	Change		✓	✓		✓		✓	
	Rear Planetary Oil	Change		✓	✓		✓		✓	
	Front Planetary Oil	Change		✓	✓		✓		✓	
	Front Axle Differential Oil	Change		✓	✓		✓		✓	
	Front PTO Filter	Clean		✓	✓	✓	✓	✓	✓	✓
	Front PTO Oil	Change		✓	✓		✓		✓	
	Grease PTO Drive Shaft	Perform		✓	✓	✓	✓	✓	✓	✓
	PTO Gearbox Mounting Bolts	Check		✓	✓	✓	✓	✓	✓	✓
	PTO Gearbox	Check		✓	✓	✓	✓	✓	✓	✓



Extended Warranty **Orange Protection Plan.**

Kubota offers some of the best warranty coverage in the industry, ensuring your investment remains protected. For even greater peace of mind, additional coverage options are available to extend both basic and powertrain warranties on the full M Series.

Transferable

Both Orange Protection and Orange Maintenance Plans are fully transferable if you sell your machine. It remains with the machine for the duration of your purchased plan, increasing the resale value of your Kubota tractor.



Tailor-made financial **solutions to suit your needs.**

Kubota has a variety of purchase and leasing programs to meet your business needs. From cash flow matched payment plans to financing at great low rates, Kubota Canada's in-house financial services division can provide you with flexible solutions.



Kubota*NOW* Telematics

Kubota*NOW* Telematics is a reporting and processing system for select Kubota equipment models, giving you increased insight into the performance of your Kubota equipment.

Using the myKubota app, you can track the location, view telematics data, create geofences, and more. You can also access operator's manuals, model-specific maintenance information, and more.*

Exceptional Service. Kubota Genuine Parts.

We understand that downtime costs money, so when you need equipment support, you can count on parts and service from our extensive dealer network. Our service team uses Genuine Kubota Parts which are designed and manufactured to strict factory standards.

A Canadian Presence, Focusing on Canadians.

Kubota Canada takes pride in our Canadian-based operations with dealers in approximately 140 local communities across the country. We are focused on delivering products tested for Canada's tough climate and services that are there when you need them so that you can focus on getting work done.

*Features and capabilities vary by model. Visit kubota.ca/KubotaNow-telematics for more information.





This promotional maintenance package will cover all standard maintenance services for the first 4 years or 3,500 hours (whichever comes first) of the tractor's operation, subject to the following: (1) this package includes but is not limited to, filters, fluids, and regular maintenance items as outlined in the maintenance plan documentation provided with the tractor; (2) the customer will be responsible for contacting their dealer for the initial 50 hour service and every 500-hour interval of the tractor's service life during this period to book a scheduled maintenance visit; and (3) the customer will be responsible for performing daily checks, regular visual inspections, and general monitoring of the tractor as outlined in the maintenance section of the tractor operator's manual. Costs associated with labour and transport to and from the dealership are not included in this maintenance package.

Orange Protection Plan: For full warranty terms, conditions, limits and exclusions, visit: [Kubota.ca/en/parts-services/warranty](https://www.kubota.ca/en/parts-services/warranty)

Kubota Canada LTD.

Head office: 1155 Kubota Drive, Pickering, ON L1X 0H4

M7PM-2022-EN 01/25