







Keep working at your best with Kubota Orange Plus.

Buying a new Kubota means you've made a commitment to getting the job done right. We're just as committed to ensuring that your Kubota equipment stays in optimal condition, year-in and year-out. That's why Kubota Orange Plus offers tailored solutions including financing, maintenance and warranty options for added peace of mind. Kubota Orange Maintenance ensures you receive high-quality maintenance in accordance with Kubota's technical specifications with factory trained technicians to help maximize reliability and minimize downtime.
Kubota's Orange Protection Plan is additional warranty that a customer can purchase in addition to the standard warranty that is included with your Kubota purchase. The standard warranty covers your unit for one to six years, depending on the model.

Kubota's Lease and Finance options can be tailored to meet your financial requirements. When coupled with Orange Maintenance Plan and Orange Protection Plan, this not only ensures your Kubota equipment is kept in peak condition to offer better reliability, but it also provides enhanced value and fixed operating costs.

Overall, **Kubota Orange Plus** offers great value and helps protect against rising costs and inflation to help manage your overall operating costs while maximizing your output, allowing you to focus on what you do best – being productive.



Orange Maintenance. No time for downtime.

Kubota Orange Maintenance puts your equipment in a prime position to help keep you working for the long haul. Regular scheduled maintenance by trained technicians is designed to ensure that issues are spotted early, enhancing equipment reliability, and maximizing uptime when it matters most.

Trust the experts.

No one knows your Kubota like our trained technicians, and nothing fits better than genuine Kubota parts. Combined, they're expertly trained to keep your equipment running for years to come. Why trust such important work to anyone else?

Keep costs down and productivity up.

Get a maintenance package that suits your budget and your needs. The result? Reduced operating costs while ensuring that your equipment is working at its best, all year round.

What you need, when you want it.

Your work doesn't need to stop for our maintenance schedule. With Kubota Orange Maintenance, you get total flexibility: our residential plans allow for an annual service to be performed for 3 years at your convenience. If you're putting in some serious hours on your machine, you have the option to use 3 prepaid services sooner; you can also choose to defer them.*



KUBOTA ORANGE PLUS | 5



Orange Maintenance Z200 & Z400 Annual Plan Schedule

Available for Z232KW, Z242KW, Z252KW, Z242KH, Z252KH, Z411KW-3, Z412KW, Z421KW-3, Z422KW models.

| | | Item | | Service Schedule | | |
|--------------|-----------------------|------------------|----------|------------------|----------|--|
| | | em | 1st Year | 2nd Year | 3rd Year | |
| | OPC System | Check | X | x | Х | |
| Comorol | Tires | Check | X | X | X | |
| General | Machine | Clean | X | x | Х | |
| | Battery | Check / Test | X | X | X | |
| | Starting System | Change | X | x | X | |
| | Fuel filter | Replace | X | x | X | |
| | Engine oil | Replace | X | x | X | |
| | Engine oil filter | Replace | X | x | Х | |
| Engine | Air filter | Replace | X | x | Х | |
| | Spark arrestor | Check | Х | x | Х | |
| | Throttle/choke cables | Check / Adjust | X | X | X | |
| | Spark plug | Check / Clean | Х | x | Х | |
| | Engine shroud | Remove and Clean | Х | x | Х | |
| | Parking brake | Check / Adjust | Х | x | Х | |
| | Transaxle Filter | Replace | Х | - | - | |
| ransmission | Transaxle oil | Replace | X | - | - | |
| | Transaxle Belt | Check | X | x | Х | |
| | Deck alignment | Check / Adjust | X | x | Х | |
| Manuar Daala | Mower Blades | Sharpen | Х | x | Х | |
| Mower Deck | Mower Belt | Check | X | x | Х | |
| | Mower Deck Underside | Clean | X | X | Х | |

Follow the maintenance interval as listed in the owners manual for your machine. Excludes daily check requirements and periodic checks and adjustments as listed in the Owners manual. All service intervals must be used within 84 months of purchase.

Tackle your yard's terrain without worry.

Flexibility: the Kubota Orange Maintenance plans for compact tractor models provide annual maintenance for 3 years.

For standard compact tractor packages include tractor and loader services. For tractors with factory installed backhoes, please select a package that includes loader and backhoe services. If you have a mower deck, service can be added as an option to your maintenance package.



Orange Maintenance BX Annual Plan Schedule

| | llam | | Service Schedule | | |
|--------------|---------------------------|--------------------------------------|------------------|----------|----------|
| | | Item | 1st Year | 2nd Year | 3rd Year |
| | Engine oil | Change | X | X | X |
| | Engine oil filter | Replace | Х | X | Х |
| | Engine Breather hose | Check | Х | X | Х |
| | Air Cleaner Element | Clean | Х | X | Х |
| | Intake Airline | Check | Х | X | Х |
| | Engine start system | Check | Х | X | Х |
| Engine | Fuel Filter Element | Replace | Х | X | Х |
| | Fan Belt | Check and Adjust | Х | X | Х |
| | Coolant Level | Check | Х | X | Х |
| | Radiator hoses and clamps | Check | Х | X | Х |
| | Radiator clean | Check | Х | X | Х |
| | Fuel line | Check | Х | X | Х |
| | Coolant chage | Replace (year 2/Second service only) | Х | X | Х |
| | OPC system | Check | Х | X | Х |
| | Greasing Main tractor | As required | Х | X | Х |
| | Wheel Bolt Torque | Check | Х | X | Х |
| | Lock Lever | Clean | Х | X | Х |
| General | Battery condition | Check | Х | X | Х |
| | Tire Pressure | Check | Х | X | Х |
| | Brake Pedal | Check and Adjust | Х | X | Х |
| | Front axle case oil | Check | Х | X | Х |
| | All lighting and switches | Check | Х | X | Х |
| | HST Oil Filter | Replace | Х | X | Х |
| Transmission | Transmission Fluid | Check | Х | X | Х |
| | HST Neutral Spring | Check and Adjust | Х | X | Х |

| Loader Installed | | All BX Models | | |
|--|-------------|---------------|----------|----------|
| | | 1st Year | 2nd Year | 3rd Year |
| Grease loader | As required | X | X | Х |
| Subframe Hardware torque | Check | X | X | Х |
| Check hyd hoses for leaks damage | Check | X | X | Х |
| Re and Re loader to confirm proper operation | Check | X | X | Х |
| Engine oil Check for proper Loader operation | Check | X | X | Х |

| Backhoe Installed | | Compatble on BX23s Model Only 1st Year 2nd Year 3rd Year | | |
|---|-------------|---|---|---|
| Grease all points | As required | X | X | X |
| Check hyd hoses for leaks damage | Check | X | Х | Х |
| Check for proper backhoe operation | Check | X | Х | Х |
| Subframe Hardware torque | Check | X | X | Х |
| Re and Re backhoe to confirm proper operation | Check | X | X | Х |

| 48" Mower Installed | | Compatble on BX23s Model Only | | | |
|-------------------------------|-------------|-------------------------------|----------|----------|--|
| 40 MOWEI MISTAILEN | | 1st Year | 2nd Year | 3rd Year | |
| Gear box oil level | Replace | X | X | Х | |
| Remove blades and sharpen | Check | X | X | Х | |
| Mower deck Belt | Check | X | X | Х | |
| Grease mower deck | As required | X | X | Х | |
| Mounting hardware and linkage | Check | X | X | Х | |
| Clean underside of deck | Check | X | X | Х | |

| 54" Mower Installed | | All BX Mowers | | | |
|-------------------------------|-------------|---------------|----------|----------|--|
| J4 WOWEI INStalleu | | 1st Year | 2nd Year | 3rd Year | |
| Gear box oil level | Replace | X | X | Х | |
| Remove blades and sharpen | Check | X | X | X | |
| Mower deck Belt | Check | X | X | Х | |
| Grease mower deck | As required | X | X | Х | |
| Mounting hardware and linkage | Check | X | X | X | |
| Clean underside of deck | Check | X | X | Х | |

| 60" Mower Installed | | Mower Compatabile on BX2380/BX2680/BX23s | | | |
|-------------------------------|-------------|--|-----------------------|----------|--|
| | | 1st Year | ² 2nd Year | 3rd Year | |
| Gear box oil level | Replace | X | X | Х | |
| Blade replacement | Replace | X | X | Х | |
| Remove blades and sharpen | Check | X | X | Х | |
| Mower deck Belt | Check | X | X | Х | |
| Grease mower deck | As required | X | X | Х | |
| Mounting hardware and linkage | Check | X | X | Х | |
| Clean underside of deck | Check | X | X | Х | |

Follow the maintenance interval as listed in the owners manual for your machine. Excludes daily check requirements and periodic checks and adjustments as listed in the Owners manual. All service intervals must be used within 84 months of purchase.



Orange Maintenance B01 Annual Plan Schedule

| | Item | | | | |
|--------------|-----------------------------|------------------|----------|----------|----------|
| | | | 1st Year | 2nd Year | 3rd Year |
| | Engine oil | Change | X | X | X |
| | Engine oil filter | Replace | X | X | X |
| | Air Cleaner Primary Element | Replace | X | X | X |
| | Air Cleaner Secondary Unit | Replace | - | - | X |
| | Engine start system | Check | X | X | X |
| | Fuel Filter Element | Clean | Х | Х | - |
| Engine | Fuel Filter Element | Replace | - | - | X |
| | Fuel Line | Check | Х | Х | Х |
| | Fan Belt | Check and adjust | Х | X | Х |
| | Coolant Level | Check | Х | X | Х |
| | Coolant System Flush | Replace | - | X | - |
| | Radiator Hose and Clamp | Check | Х | X | Х |
| | Intake Air Line | Check | Х | X | Х |
| | OPC system | Check | Х | X | Х |
| | Greasing Main tractor | As required | Х | X | Х |
| | Wheel Bolt Torque | Check | Х | X | Х |
| | Battery condition | Check | Х | X | Х |
| 0 | Tire Pressure | Check | Х | X | X |
| General | Brake Pedal | Check and adjust | Х | Х | X |
| | Front Axle Pivot | Adjust | - | - | Х |
| | Front axle case oil | Change | - | - | X |
| | Toe-In | Adjust | - | Х | Х |
| | All lighting and switches | Check | X | X | X |
| | HST Oil Filter | Replace | X | X | X |
| Transmission | Transmission Fluid | Change | | - | Х |
| | Hydraulic Oil Filter | Replace | X | - | X |

| Loader Installed | | All BX Models | Ond Veer | Ord Voor |
|--|-------------|---------------|---------------|---------------|
| Grease loader | As required | 1st Year X | 2nd Year X | 3rd Year X |
| Subframe Hardware torgue | Check | X | X | X |
| Check hyd hoses for leaks damage | Check | X | X | Х |
| Re and Re loader to confirm proper operation | Check | X | Х | Х |
| Check for proper Loader Operation | Check | X | Х | Х |

| Backhoe Installed | | 1st Year | 2nd Year | 3rd Year |
|---|-------------|----------|----------|----------|
| Grease all points | As required | X | Х | X |
| Check hyd hoses for leaks damage | Check | X | Х | Х |
| Check for proper backhoe operation | Check | X | Х | X |
| Subframe Hardware torque | Check | X | Х | X |
| Re and Re backhoe to confirm proper operation | Check | X | X | X |

| 54" Mower Installed | | 1st Year | 2nd Year | 3rd Year |
|---|-------------|----------|----------|----------|
| Gear box oil level | Replace | X | X | X |
| Remove blades and sharpen | Check | X | X | X |
| Mower deck Belt | Check | X | X | X |
| Grease mower deck | As required | X | X | X |
| Re and Re mower to Confirm Proper Operation | Check | X | X | X |
| Clean underside of deck | Check | X | X | X |
| Gear box oil seal | Check | X | X | Х |

| 60" Mower Installed | | 1st Year | 2nd Year | 3rd Year |
|---|-------------|----------|----------|----------|
| Gear box oil level | Replace | X | X | X |
| Remove blades and sharpen | Check | X | X | X |
| Mower deck Belt | Check | X | X | X |
| Grease mower deck | As required | X | X | X |
| Re and Re mower to Confirm Proper Operation | Check | X | X | X |
| Clean underside of deck | Check | X | X | X |
| Gear box oil seal | Check | X | X | X |



Orange Maintenance LX10 Annual Plan Schedule

| | Item | ļ į | | 1st Year | 2nd Year | 3rd Year |
|--|--|--|---|----------|---|---|
| | Engine Oil | Chang | e | Х | X | Х |
| | Engine Oil Filter | Replac | | Х | X | X |
| | Air Cleaner Primary Element | Replac | e | Х | X | Х |
| | Air Cleaner Secondary Unit | Replac | | Х | X | X |
| | Engine Start System | Check | | X | X | X |
| | Fuel Filter Element | Clean | | X | X | - |
| | Fuel Filter Element | Replac | | - | - | Х |
| Engine | Fuel Filter | Replac | | - | - | X |
| | Water Separator | Replac | | - | - | X |
| | Fuel Line | Check | | X | X | X |
| | Fan Belt | Check and | | <u>X</u> | X | X |
| | | | | <u> </u> | ^ | |
| | Coolant Level | Check | | - | v | X - |
| | Coolant System Flush | Replac | | | X | |
| | Radiator Hose and Clamp | Check | | X | X | X |
| | Intake Air Line | Check | | X | X | X |
| | OPC System | Check | | X | X | X |
| | Greasing Main Tractor | Perforr | | X | X | X |
| | Wheel Bolt Torque | Check | | Х | X | X |
| | Battery Condition | Check | | Х | X | X |
| | Tire Pressure | Check | | Х | X | X |
| | Power Steering Oil Line | Check | (| Х | X | Х |
| | Brake Pedal | Check and | | Х | X | X |
| | Front Axle Pivot | Check and | | • | - | X |
| | Front Axle Case Oil | Chang | | - | - | X |
| . . | Toe-In | Adjus | | - | X | X |
| General | All Lighting and Switches | Check | | X | X | X |
| | Exhaust Manifold | Check | | <u> </u> | X | X |
| | Differential Pressure Sensor Hose | Check | | <u>х</u> | X | X |
| | | Check | | <u>х</u> | X X | X |
| | A/C Pipes and Hoses | | | | | |
| | Isolation Cushion | Check | | <u>X</u> | X | X |
| | Inner Air Filter | Clean | | X | X | X |
| | Fresh Air Filter | Clean | | <u>X</u> | X | X |
| | A/C Condenser | Check | | <u>X</u> | X | X |
| | Cab Isolation Cushion | Check | | X | X | X |
| | Tension of A/C Drive Belt | Check and | | <u>X</u> | X | X |
| Tronsmission | HST Oil Filter | Replac | | X | X | X |
| Transmission | Transmission Fluid Hydraulic Oil Filter | Chang Replac | | - X | - | X |
| | | | | ^ | | |
| ader Installed | | | 1st Year | 21 | nd Year | 3rd Year |
| ease All Points | | | | | Х | Х |
| | | Perform | Х | | Λ | |
| oframe Hardware Torg | | Perform Check | Х | | Х | Х |
| oframe Hardware Torg | | Check Check | | | | X X |
| oframe Hardware Torg eck Hyd Hoses for Lea and Re Loader to Cor | aks and Damage nfirm Proper Operation | Check Check Check | X X X | | X X X | X X |
| oframe Hardware Torg eck Hyd Hoses for Lea and Re Loader to Cor | aks and Damage nfirm Proper Operation | Check Check | X X | | X X | Х |
| oframe Hardware Torq eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader | aks and Damage nfirm Proper Operation | Check Check Check | X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X |
| oframe Hardware Torq eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed | aks and Damage nfirm Proper Operation | Check Check Check Check | X X X X 1st Year | 21 | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points | aks and Damage firm Proper Operation Operation | Check Check Check Check Perform | X X X X 1st Year X | 21 | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed pase All Points eck Hydraulic Hoses fo | Aks and Damage firm Proper Operation | Check Check Check Check Perform Check | X X X X 1st Year X X | 21 | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Con eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses fo eck for Proper Backho | Aks and Damage firm Proper Operation Operation or Leaks Damage be Operation | Check Check Check Check Perform Check Check | X X X X 1st Year X X X | 21 | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Corr eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro | Aks and Damage firm Proper Operation Operation or Leaks Damage be Operation ue | Check Check Check Check Perform Check Check Check | X X X X 1st Year X X X X X X | 21 | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X |
| oframe Hardware Torq eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware torq and Re Backhoe to Co | Aks and Damage firm Proper Operation Operation or Leaks Damage be Operation | Check Check Check Check Perform Check Check | X X X X 1st Year X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X |
| oframe Hardware Torq eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware torq and Re Backhoe to Co | Aks and Damage firm Proper Operation Operation or Leaks Damage be Operation ue | Check Check Check Check Perform Check Check Check | X X X X 1st Year X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backhoo oframe Hardware toro and Re Backhoe to Co " Mower Installed | Aks and Damage firm Proper Operation Operation or Leaks Damage be Operation ue | Check Check Check Check Perform Check Check Check | X X X X 1st Year X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co "Mower Installed ar Box Oil Level move Blades and Shai | aks and Damage | Check Check Check Check Perform Check Check Check Check Check | X X X X 1st Year X X X X 1st Year X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X X 3rd Year X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt | aks and Damage | Check Check Check Check Perform Check | X X X X 1st Year X X X X 1st Year X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Corr eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co "Mower Installed ar Box Oil Level move Blades and Shai wer Deck Belt ease Mower Deck | aks and Damage | Check Check Check Perform Check Perform | X X X X 1st Year X X X X 1st Year X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co " Mower Installed ar Box Oil Level move Blades and Shai wer Deck Belt ase Mower Deck and Re Mower to Cor | Aks and Damage | Check Check Check Perform Check Check Check Check Check Check Replace Check Check Check Perform Check Perform Check | X X X X 1st Year X X X X 1st Year X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower to Cor and Re Mower to Cor an Underside of Deck | Aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Check Check Check Check Check Perform Check Check Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Co " Mower Installed ar Box Oil Level move Blades and Shai wer Deck Belt and Re Mower to Cor an Underside of Deck ar Box Oil Seal | Aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Replace Check Check Perform Check Perform Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| oframe Hardware Toro ock Hyd Hoses for Lea and Re Loader to Cor ock for Proper Loader ckhoe Installed ease All Points ock for Proper Backho oframe Hardware toro and Re Backhoe to Cor ' Mower Installed ar Box Oil Level move Blades and Shau wer Deck Belt and Re Mower to Cor an Underside of Deck ar Box Oil Seal | Aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Check Check Check Check Check Perform Check Check Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor an Underside of Deck ar Box Oil Seal k Joint | Aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Replace Check Check Perform Check Perform Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor an Underside of Deck ar Box Oil Seal k Joint "Mower Installed | Aks and Damage | Check Check Check Perform Check Perform Check | X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X | X X X 3rd Year X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| bframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backhoc bframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor ean Underside of Deck ar Box Oil Seal ik Joint "Mower Installed ar Box Oil Level | aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Replace Check Check Perform Check Perform Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X 3rd Year X X X X X 3rd Year X X X X X X X X X X X X X X X X |
| bframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed base All Points eck Hydraulic Hoses for eck for Proper Backho bframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shat wer Deck Belt and Re Mower to Cor an Underside of Deck ar Box Oil Seal k Joint "Mower Installed ar Box Oil Level move Blades and Shat wer Deck Belt | aks and Damage | Check Check Check Check Perform Check Check Check Check Check Check Check Check Check Perform Check | X X X X 1st Year X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X | X X X 3rd Year X X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| bframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho bframe Hardware toro and Re Backhoe to Co "Mower Installed ar Box Oil Level move Blades and Shan wer Deck Belt ease Mower Installed ar Box Oil Seal k Joint "Mower Installed ar Box Oil Seal k Joint "Mower Installed ar Box Oil Seal k Joint | aks and Damage | Check Check Check Check Perform Check Perform Check Check Check Check Perform Check Check Check Check Perform Check Chec | X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| bframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho bframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor ean Underside of Deck ar Box Oil Seal k Joint "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor | aks and Damage | Check Check Check Check Perform Check Perform Check Check Perform Check Check Perform Check Chec | X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor an Underside of Deck ar Box Oil Seal k Joint "Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Installed ar Box Oil Level move Blades and Shar wer Deck Belt ease Mower Deck and Re Mower to Cor an Underside of Deck | aks and Damage | Check Check Check Perform Check Chec | X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X X X X | X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |
| oframe Hardware Toro eck Hyd Hoses for Lea and Re Loader to Cor eck for Proper Loader ckhoe Installed ease All Points eck Hydraulic Hoses for eck for Proper Backho oframe Hardware toro and Re Backhoe to Cor "Mower Installed ar Box Oil Level move Blades and Sha wer Deck Belt ease Mower Deck and Re Mower to Cor an Underside of Deck ar Box Oil Seal k Joint "Mower Installed ar Box Oil Level move Blades and Sha wer Deck Belt ease Mower Deck and Re Mower to Cor | aks and Damage | Check Check Check Check Perform Check Perform Check Check Perform Check Check Perform Check Chec | X X X X 1st Year X X X X X X X X X X X X X X X X X X X | | X X X X X X X X X X X X X X X X X X X | X X X X 3rd Year X X X X X X X X X X X X X X X X X X X |



Orange Maintenance LX20 Annual Plan Schedule

| | Item | | 1st Year | 2nd Year | 3rd Year |
|-------------------------|-----------------------------------|------------------|----------|----------|---------------|
| | Engine Oil | Change | X | X | Х |
| | Engine Oil Filter | Replace | X | Х | Х |
| | Air Cleaner Primary Element | Replace | X | Х | Х |
| | Air Cleaner Secondary Unit | Replace | X | X | Х |
| | Engine Start System | Check | X | Х | Х |
| | Fuel Filter Element | Clean | X | X | - |
| | Fuel Filter Element | Replace | - | - | Х |
| Engine | Fuel Filter | Replace | - | - | Х |
| v - | Water Separator | Replace | - | - | X |
| | Fuel Line | Check | X | X | X |
| | Fan Belt | Check and Adjust | X | X | X |
| | Coolant Level | Check | X | - | X |
| | Coolant System Flush | Replace | - | X | - |
| | Radiator Hose and Clamp | Check | X | X | Х |
| | Intake Air Line | Check | X | X | X |
| | OPC System | Check | X | X | <u> </u> |
| | Greasing Main Tractor | Perform | х Х | × X | <u>х</u> |
| | Wheel Bolt Torque | | X | X | <u>х</u> Х |
| | | Check | | | |
| | Battery Condition | Check | X | X | <u>X</u> |
| | Tire Pressure | Check | X | X | <u>X</u> |
| | Power Steering Oil Line | Check | X | X | X |
| | Brake Pedal | Check and Adjust | X | X | <u>X</u> |
| | Front Axle Pivot | Check and Adjust | - | - | <u>X</u> |
| | Front Axle Case Oil | Change | - | - | X |
| General | Toe-In | Check | - | Х | Х |
| 30110101 | All Lighting and Switches | Check | X | Х | Х |
| | Exhaust Manifold | Check | X | X | Х |
| | Differential Pressure Sensor Hose | Check | X | Х | Х |
| | A/C Pipes and Hoses | Check | X | Х | X |
| | Isolation Cushion | Check | X | X | X |
| | Inner Air Filter | Clean | X | X | X |
| | Fresh Air Filter | Clean | X | X | X |
| | A/C Condenser | Check | X | X | X |
| | Cab Isolation Cushion | Check | X | X | X |
| | Tension of A/C Drive Belt | Check and Adjust | X | X | X |
| | HST Oil Filter | Replace | X | X | X |
| Transmission | Transmission Fluid | Change | - | - | X |
| | Hydraulic Oil Filter | Replace | X | - | Х |
| | | • | | | |
| oader Installed | | | 1st Year | 2nd Year | 3rd Year |
| rease All Points | | Perform | Х | X | Х |
| ubframe Hardware Torq | ue | Check | X | X | X |
| heck Hyd Hoses for Lea | | Check | X | X | X |
| e and Re Loader to Con | | Check | X | X | X |
| heck for Proper Loader | | Check | X | X | X |
| | | | ~ | | |
| ackhoe Installed | | | 1st Year | 2nd Year | 3rd Year |
| rease All Points | | Perform | Х | Х | Х |
| heck Hydraulic Hoses fo | or Leaks Damage | Check | X | X | X |
| heck for Proper Backho | | Check | X | X | X X |
| Subframe Hardware torg | | Check | X | X | X |
| | onfirm Proper Operation | Check | X | X | X X |
| | | CINON | ~ ~ ~ | ^ | ~ |
| 0" Mower Installed | | | 1st Year | 2nd Year | 3rd Year |
| ear Box Oil Level | | Replace | Х | Х | Х |
| lemove Blades and Shar | pen | Check | X | X | X |
| Nower Deck Belt | | Check | X | X | X |
| Grease Mower Deck | | Perform | X | X | X |
| le and Re Mower to Con | firm Proper Operation | Check | X | Х | Х |
| lean Underside of Deck | | Check | X | Х | Х |
| ear Box Oil Seal | | Check | X | Х | Х |
| ink Joint | | Check | Х | Х | Х |



| | Item | - | 1 of Voor | 2nd Year | Ord Voor |
|--|---|------------------|---------------|---------------|---------------|
| | Engine Start System | Check | 1st Year X | Zhd Year X | 3rd Year X |
| | Engine Oil | Change | X | - | X |
| | Engine Oil Filter | Replace | X | - | X |
| | Air Cleaner Primary Element | Replace | <u> </u> | X | × X |
| | Air Cleaner Secondary Unit | Replace | X | X | <u>x</u> |
| | Fuel Filter Element | Clean | X | X | - |
| | Fuel Filter Element | Replace | - | - | X |
| | Fuel Filter | Replace | - | - | X |
| Engine | Water Separator | Clean | - | - | X |
| | Fuel Line | Check | X | X | X |
| | Fuel Grommet | Check | X | X | X |
| | Fan Belt | Check and Adjust | X | X | X |
| | Coolant Level | Check | X | - | X |
| | Coolant System Flush | Replace | - | X | - |
| | Radiator Hose and Clamp | Check | X | X | X |
| | Intake Air Line | Check | X | X | X |
| | OPC system | Check | X | X | X |
| | Greasing Main Tractor | Perform | X | X | X |
| | Wheel Bolt Torque | Check | X | X | X |
| | Battery condition | Check | X | X | X |
| | Tire Pressure | Check | X | X | X |
| | Power Steering Oil Line | Check | X | - | X |
| | Brake Pedal | Check and Adjust | X | X | X |
| | Front Axle Pivot | Check and Adjust | - | - | X |
| | Front Wheel Hub Greasing | Perform | - | - | X |
| General | Oil Cooler Line | Check | X | X | X |
| uonorui | Oil Seperator Hose | Check | X | X | X * |
| | Toe-In | Check | - | X | - |
| | All lighting and switches | Check | X | X | X |
| | Exhaust Manifold | Check | X X | X | X * |
| | Differential Pressure Sensor Pipe | Check | X | X | X * |
| | EGR Pipe | Check | X | X | X * |
| | Relief Valve | Check | X | X | X * |
| | CCV Pressure Switch | Check | X | X | X * |
| | Antifrost Heater for Oil Separator (if appl.) | Check | X | X | X * |
| | HST Oil Filter | Replace | X | X | X |
| - | Hydraulic Oil Filter | Replace | X | • | X |
| Transmission | Transmission Fluid | Replace | - | - | X |
| | Clutch | Check | Х | X | Х |
| Loader Installed | | | 1st Year | 2nd Year | 3rd Year |
| Grease All Points | | Perform | X | X | X |
| | 0 | Check | <u> </u> | X | <u> </u> |
| Subframe Hardware Torque Check Hyd Hoses for Leaks and Damage | | Check | <u> </u> | X | <u> </u> |
| Re and Re Loader to Confirm Proper Operation | | Check | <u> </u> | X | <u> </u> |
| Check for Proper Loader Operation | | Check | X | X | × X |
| · | | | | | |
| Backhoe Installed | | | 1st Year | 2nd Year | 3rd Year |
| Grease All Points | | Perform | Х | X | X |
| Check Hydraulic Hoses for | | Check | Х | X | Х |
| Check for Proper Backhoe | | Check | Х | X | Х |
| Subframe Hardware torqu | | Check | X | X | X |
| Re and Re Backhoe to Cor | ntirm Proper Operation | Check | X | X | X |

**L3302, L3902, & L4802 Only



Orange Maintenance LO2 Annual Plan Schedule



Orange Maintenance L60 Annual Plan Schedule

| | Item | | 1st Year | 2nd Year | 3rd Year |
|-------------------------|---|------------------|----------|----------|----------|
| | Engine Start System | Check | X | X | X |
| | Engine Oil | Change | Х | X | Х |
| | Engine Oil Filter | Replace | Х | X | Х |
| | Air Cleaner Primary Element | Replace | Х | X | Х |
| | Air Cleaner Secondary Unit | Replace | Х | X | Х |
| Engine | Fuel Filter | Replace | - | - | Х |
| | Water Separator | Clean | - | - | Х |
| • | Fuel Line | Check | Х | X | Х |
| | Fan Belt | Check and Adjust | Х | X | Х |
| | Coolant Level | Check | Х | - | Х |
| | Coolant System Flush | Replace | - | X | - |
| | Radiator Hose and Clamp | Check | Х | X | Х |
| | Intake Air Line | Check | Х | X | Х |
| | OPC System | Check | Х | X | Х |
| | Greasing Main Tractor | Perform | Х | X | Х |
| | Wheel Bolt Torque | Check | Х | X | Х |
| | Battery Condition | Check | Х | X | Х |
| | Tire Pressure | Check and Adjust | Х | X | Х |
| | Power Steering Oil Line | Check | X | X | Х |
| | Brake Pedal | Check and Adjust | Х | X | Х |
| | Front Axle Pivot | Check | - | - | Х |
| | Front Axle Case Oil | Change | - | - | Х |
| | Oil Cooler Line | Check | Х | X | Х |
| | Toe-In | Check and Adjust | - | X | Х |
| | All Lighting and Switches | Check | Х | X | Х |
| General | Exhaust Manifold | Check | Х | X | X |
| | Differential Pressure Sensor Pipe | Check | Х | X | X |
| | EGR Pipe | Check | Х | X | Х |
| | Oil Separator Hose | Check | X | X | X |
| | Lift Cyinder Hose | Check | Х | X | X |
| | Antifrost Heater for Oil Separator (if appl.) | Check | Х | X | Х |
| | A/C Pipes and Hoses | Check | X | X | X |
| | Isolation Cushion | Check | X | X | X |
| | Inner Air Filter | Clean | • | X | • |
| | Fresh Air Filter | Clean | - | X | - |
| | A/C Condenser | Check | - | X | - |
| | Cab Isolation Cushion | Check | Х | X | Х |
| | Tension of A/C Drive Belt | Check and Adjust | - | X | - |
| | HST Oil Filter | Replace | Х | X | X |
| Transmission | Hydraulic Oil Filter | Replace | - | - | Х |
| 110113111351011 | Transmission Fluid | Replace | - | - | Х |
| | Clutch | Check | X | X | X |
| oader Installed | | | 1st Year | 2nd Year | 3rd Year |
| rease All Points | | Perform | | | |
| ubframe Hardware Torq | | Check | <u> </u> | X X | X X |
| heck Hyd Hoses for Lea | | Check | <u> </u> | X | <u>х</u> |
| e and Re Loader to Con | | Check | <u> </u> | X | <u>х</u> |
| heck for Proper Loader | | Check | <u> </u> | X | <u>х</u> |
| · | | | | | |
| ackhoe Installed | | | 1st Year | 2nd Year | 3rd Year |
| rease All Points | | Perform | X | X | <u>X</u> |
| heck Hydraulic Hoses fo | - | Check | X | X | X |
| heck for Proper Backho | | Check | X | X | X |
| ubframe Hardware torqu | | Check | X | X | X |
| e and Re Backhoe to Co | onfirm Proper Operation | Check | Х | X | Х |

*CAB Only **L3560, L4060, L4760, L5460, & L6060 Only



This promotional maintenance package will cover all standard maintenance services for the first 4 years or 3,500 hours (whichever comes first) of the tractor's operation, subject to the following: (1) this package includes but is not limited to, filters, fluids, and regular maintenance items as outlined in the maintenance plan documentation provided with the tractor; (2) the customer will be responsible for contacting their dealer for the initial 50 hour service and every 500-hour interval of the tractor's service life during this period to book a scheduled maintenance visit; and (3) the customer will be responsible for performing daily checks, regular visual inspections, and general monitoring of the tractor as outlined in the maintenance section of the tractor operator's manual. Costs associated with labour and transport to and from the dealership are not included in this maintenance package.

Orange Protection Plan: For full warranty terms, conditions, limits and exclusions, visit: Kubota.ca/en/parts-services/warranty

Kubota Canada LTD. Head office: 1155 Kubota Drive, Pickering, ON L1X 0H4