

Kenmore®/MD



2-Slice Toaster



Use and Care Guide

KKTS2SB
KKTS2SR
KKTS2SS
KKTS2SW

IMPORTANT SAFEGUARDS

When using electrical appliances such as your Kenmore 2-Slice Toaster, basic safety precautions should always be followed, including the following:

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse toaster, power cord, or plugs in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the toaster to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the Kenmore may cause injuries or property damage.
8. Do not use the appliance outdoors.
9. Do not let the cord hang over edge of a table or counter or touch hot surfaces.
10. Do not place the toaster on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn all controls to OFF, then remove plug from wall outlet.
13. Do not use the appliance for anything other than its intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. Never operate the toaster on its side.
16. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
17. Do not attempt to dislodge food while the toaster is plugged in.

18. **CAUTION:** This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot material and allow metal parts to cool before cleaning. Do not place anything on top of the toaster while it is operating or while it is hot.
19. **CAUTION:** DO NOT toast pastries with runny fillings or frosting.
20. **CAUTION:** DO NOT toast torn slices of bread.
21. **CAUTION:** DO NOT place buttered bread or wrapped food into the Toaster.
22. **CAUTION:** DO NOT toast small-size bread, mini-baguettes, breadsticks.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

IMPORTANT NOTES

NOTES ON THE CORD

The provided short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

PLASTICIZER WARNING

CAUTION: To prevent plasticizers from migrating to the finish of the countertop or tabletop or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the countertop or tabletop. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.


ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

USAGE PRECAUTIONS

1. If toaster starts to smoke, press CANCEL to stop toasting immediately.
2. Remove all protective wrapping before using the toaster.
3. Do not toast food with runny ingredients.
4. Never attempt to remove bread jammed in the slots without first unplugging the toaster from the electrical outlet. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. Never use the toaster to toast irregular shaped bread.
6. If the toast is not dark enough, you can toast the bread again. Adjust the browning control to a higher setting and replace the toast. Ensure the toast does not burn while re-toasting.

KNOW YOUR TOASTER

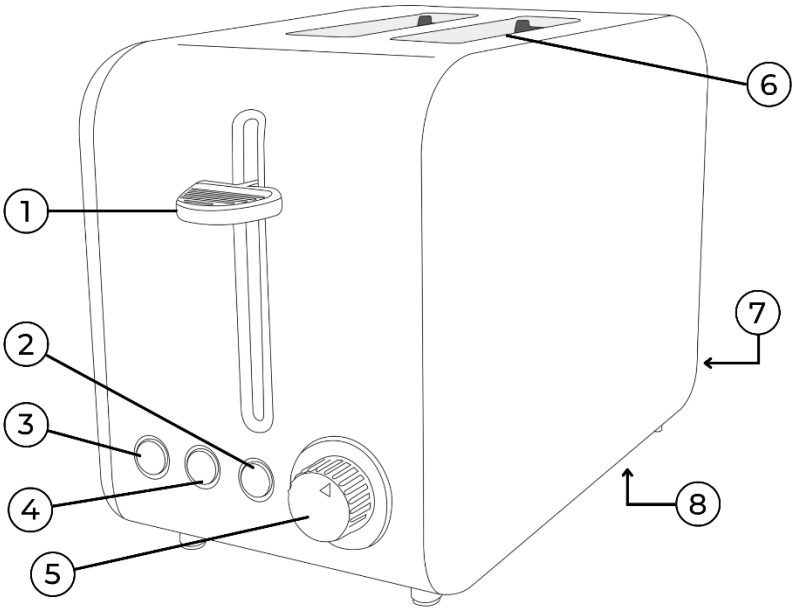

- | | |
|-------------------|-----------------------|
| 1. Loading lever | 5. Browning dial |
| 2. Bagel button | 6. Toast slots |
| 3. Cancel button | 7. Crumb tray |
| 4. Defrost button | 8. Power cord storage |

Product may vary slightly from illustrations.

PRESET BROWNING LEVELS

BROWNING LEVEL	TOAST SHADE
1-2	Light
3-4	Medium
5-6	Dark

BEFORE FIRST USE

1. Remove all packaging materials including those that may be inside the toast slots or loading lever slots.
2. Wipe the exterior with a damp cloth and dry thoroughly. Do not use abrasive cleaners and do not put the toaster, power cord, or plug in water.
3. Ensure that the crumb tray is pushed all the way into the back of the toaster and the loading lever is in the UP position.
4. Plug the power cord into a 120V AC outlet.
5. Push down the loading lever until it locks in place and turn the browning selector dial to the lightest setting (1).
6. Operate the toaster without bread once or twice to burn off any manufacturing residue.
NOTE: There may be a small amount of smoke and/or a burning odor from manufacturing residue or oil remaining in the toaster or heating element. This is normal and will stop as the heating elements continue to heat up.
7. Let the toaster cool down before you start toasting the first slice.

OPERATING YOUR TOASTER

TOAST MODE

1. Ensure the toaster is connected to the main power supply.
2. Place one to two slices of bread in the toasting slots and adjust the browning dial to your desired setting.
3. Press the loading lever down until it latches. The toaster will start heating up.
4. When toasting finishes, the loading lever will pop up automatically and the toast can be safely removed. To stop toasting at any time during the toasting cycle, press the CANCEL button.
5. If the toast is not dark enough, you can replace it in the slots and start again. Monitor the toasting process to ensure that the toast does not burn while re-toasting.

BAGEL FUNCTION

This feature directs additional heat to the center heating elements to cook the insides of your cut bagel without burning the outside. It works well for English muffins too!

1. Place one bagel half in each toasting slot with the cut sides facing the center.
2. Adjust the browning dial to your desired setting and press the Bagel button. The Bagel indicator will light up.
3. Press the loading lever down until it latches and monitor the toasting progress to ensure that the bagel does not burn.
4. When toasting finishes, the loading lever will pop up automatically and the bagel can be safely removed. To stop the toasting cycle before it is finished, press Cancel.

OPERATING YOUR TOASTER

DEFROST FUNCTION

This feature adds additional time to toast frozen items.

1. Place frozen item(s) in the toast slots and adjust the browning dial to your desired level.
2. Press the Defrost button. The defrost indicator will light up.
3. Press the loading lever down until it latches. At the end of the cycle, the carriage(s) will pop up and you can remove your items. To stop before the cycle finishes, press Cancel.

CANCEL FUNCTION

Press the CANCEL button if bread starts to smoke. The CANCEL button can be pressed at any time during toasting to interrupt the toasting cycle.

CLEANING YOUR TOASTER

1. Always allow the toaster to cool completely and unplug the power cord from the electrical outlet before cleaning.
2. If the toaster is used frequently, accumulated crumbs should be removed at least once a week. Pull out the crumb tray from the back of the toaster and discard the crumbs. Wipe the crumb trays with a clean damp cloth and dry thoroughly. Make sure the crumb tray is inserted correctly and completely closed before using the toaster again.
3. Wipe the outside of the toaster with a clean damp cloth and dry thoroughly. Do not use abrasive cleansers or metal polish.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. The power cord may be wound under the bottom of the toaster when not in use or for storage.

ENVIRONMENTAL NOTICE



This marking indicates that this product should not be disposed with regular household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Please contact your local authorities or the retailer where the product was purchased for information about environmentally safe disposal of this product.

USAGE TIPS

1. Toasting is a combination of cooking and drying the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times. For dryer bread, use a lower browning level than you normally would and for very fresh bread or whole wheat bread, use a higher browning level.
2. Thicker pieces of bread (including bagels) will take longer to toast. Very thick pieces may require two cycles. Breads with very uneven surfaces such as English muffins will also require a higher browning level.
3. When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before putting it into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.

Before toasting bagels, slice each bagel into two equal halves. Place the bagel halves in the toaster slots with the cut sides facing towards the center of each carriage.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Toaster will not stay on	Power supply issue	Check if the outlet works by plugging another device into it.
	Browning level too low	The browning level dial might be at too low of a setting to activate the heating coil. Turn the browning level up slightly and try again.
Carriage lever will not stay down	Power supply issue	Make sure the toaster is plugged into a working 120V AC outlet.
	Browning level too low	The browning level dial might be at too low of a setting to activate the heating coil. Turn the browning level up slightly and try again.
Toast does not pop up at the end of the cycle	Bread too soft	Try again using a thicker slice or a different type of bread.
Constant burning smell	Crumb tray needs emptying	Remove and clean the crumb trays (see "Care and Cleaning")
	Stuck debris in toaster	Turn the toaster upside down and gently shake to remove stuck debris (see "Care and Cleaning")

WARRANTY

2 Year Limited Warranty

FOR TWO YEARS from the date of sale this product is warranted against defects in material or workmanship.

WITH PROOF OF SALE a defective product will be repaired or replaced free of charge.

Direct all claims for warranty service to Kenmore Customer Assistance, call 1-800-265-8456 or email KenmoreCustomerCare@koolatron.com

This warranty covers manufacturer's defects including electrical and mechanical defects provided the appliance is correctly assembled, operated and maintained according to the supplied instructions. It does not cover damage caused by accident, misuse or abuse including overheating, unauthorized repairs or alterations, or use with a voltage converter or aftermarket accessories, and it does not apply to scratches, stains, discoloration or other surface damage that does not impair the product function. This warranty is void if the appliance is ever used for purposes other than private household use.

Koolatron Corporation
4320 Federal Drive, Batavia, NY 14020 U.S.A.
139 Copernicus Blvd., Brantford, ON N3P 1N4 Canada

Kenmore and the Kenmore logo are registered trademarks to Transform SR Brands LLC and are used under license by Koolatron Corporation