

Kenmore®/MD



4-Slice Toaster



Use and Care Guide

KKTSDC4SB
KKTSDC4SR
KKTSDC4SS
KKTSDC4SW

IMPORTANT SAFEGUARDS

Before using your Kenmore 4-Slice Toaster, read and follow all instructions and save this manual for future reference:

1. This appliance is for household use only.
2. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
3. Do not leave the appliance unattended when in use.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always use the appliance on a dry, leveled surface.
6. Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.
7. Do not use this appliance near or below combustible materials like curtains or placemats.
8. A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
9. Do not allow hot surfaces of the toaster to come in contact with countertops or tables.
10. Do not touch hot surfaces. Appliance surfaces are hot during and after use. To prevent burns or personal injury, always use protective hot pads or oven mitts, or use handles and knobs where available.
11. Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
12. The use of accessory attachments that are not recommended by Kenmore may cause risk of injury to persons, fire or electric shock.
13. Oversize foods, metal foil packages, or utensils must not be inserted into the toaster as they may cause a fire or risk of electric shock.

14. Never add any food substance to the bread, bagel or any other item prior to toasting (such as butter, jelly or marmalade). This may cause a fire as well as lead to electrocution.
15. Never operate the toaster on its side.
16. Do not use the toaster without the slide out crumb tray in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.
17. To turn off the appliance, switch it off and remove the plug from the wall outlet.
18. Unplug the unit from the wall outlet and allow it to cool before cleaning, covering, storing, or attempting to dislodge food.
19. Strictly follow the Care and Cleaning instructions.
20. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

This appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If an extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT NOTES

1. The carriage lever will not lock into position unless the toaster is plugged into a 120V AC electrical outlet.
2. Never operate the toaster without the crumb trays in place.
3. When toasting a single slice, the bread may be placed in any toasting slot.
4. To prevent a fire hazard, never place bread over the top of the toast slots. Always insert the bread in the slots.
5. Do not change the browning level while the toasting cycle is in progress. First press the Cancel button, then adjust the browning level and restart the toasting process.
6. Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.

SPECIFICATIONS


Product name:	Kenmore 4-Slice Toaster
Model:	KKTSDC4SB, KKTSDC4SR, KKTSDC4SS, KKTSDC4SW
Rated Voltage:	120V 60Hz
Power:	1500W

ENVIRONMENTAL NOTICE



This marking indicates that this product should not be disposed with regular household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Please contact your local authorities or the retailer where the product was purchased for information about environmentally safe disposal of this product.


KNOW YOUR TOASTER

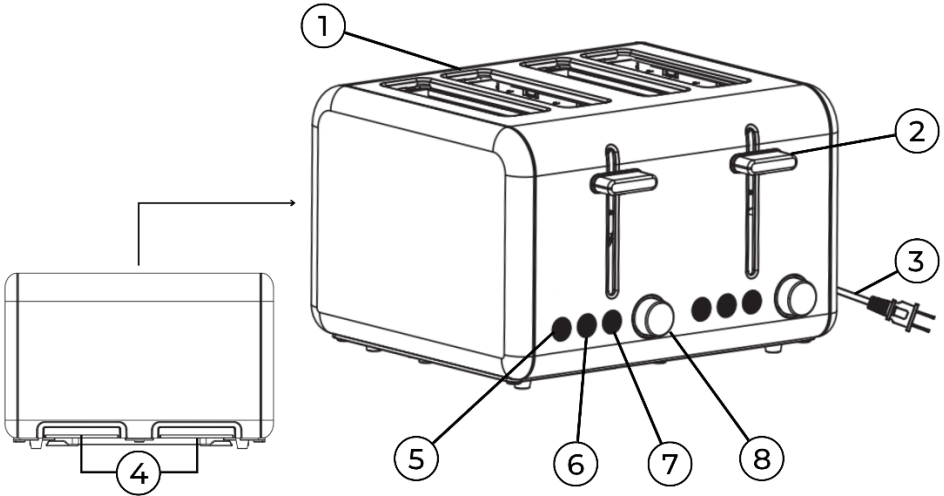

- | | |
|--------------------------|-------------------------|
| 1. Toast slots | 5. Cancel button |
| 2. Carriage lever | 6. Defrost button |
| 3. Power cord | 7. Bagel button |
| 4. Removable crumb trays | 8. Browning/reheat dial |

DUAL CONTROLS

This 4-slice toaster has independent controls for each pair of toast slots to allow for toasting different items at the same time.

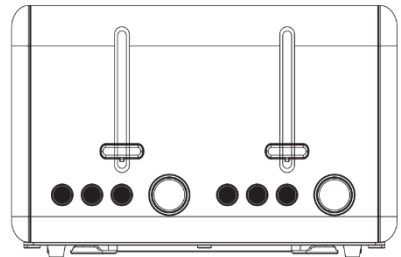

PRESET BROWNING LEVELS

BROWNING LEVEL	TOAST SHADE
1	Light
2	Light
3	Medium
4	Medium
5	Medium

BROWNING LEVEL	TOAST SHADE
6	Medium
7	Medium
8	Dark
9	Dark
Reheat	None

BEFORE FIRST USE

1. Remove all packaging materials including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth and dry thoroughly. Do not use abrasive cleaners and do not put the toaster, power cord, or plug in water.
3. Ensure that the crumb trays are pushed all the way into the back of the toaster and both carriage levers are in the UP positions.
4. Unwrap the power cord from the cord storage area on the underside of the toaster and plug it into a 120V AC outlet.
5. Push down both carriage levers until they lock in place and turn the browning selector dial to the lightest setting (1).
6. Operate the toaster without bread once or twice to burn off any manufacturing residue. There may be a small amount of smoke and/or a burning odor. This is normal and will stop as the heating elements continue to heat up.

OPERATING YOUR TOASTER

TOAST MODE

1. Place slice(s) of bread in the toast slot(s) and push down the carriage lever(s) until they lock in place and the Cancel button lights up.
2. Turn the browning dial to your desired level. Toasting will start automatically.
3. When the toasting cycle ends, the carriage(s) will pop up, and you can remove your toast. To stop the toasting cycle before it is finished, press Cancel.

NOTE: In Toast mode, the toaster will remember the previous browning level for 3 minutes after the end of the toasting cycle. If you start another cycle within that timeframe, it will automatically retain that setting unless you manually adjust it.

BAGEL FUNCTION

This feature directs additional heat to the center heating elements to cook the insides of your cut bagel without burning the outside.

1. Place bagel halves in the slots with the cut sides facing the center of each carriage and push down the carriage lever(s) as before.
2. Press the Bagel button and turn the browning dial to your desired level. Toasting will start automatically.
3. When the toasting cycle ends, the carriage(s) will pop up, and you can remove your bagel halves. To stop the toasting cycle before it is finished, press Cancel.

OPERATING YOUR TOASTER

DEFROST MODE

This feature adds additional time to toast frozen items.

1. Place frozen item(s) in the toast slots and push down lever(s) as before.
2. If toasting bagel halves, press the Bagel button.
3. Press the Defrost button and turn the browning dial to your desired level. The applicable indicators, browning level, and countdown time will be displayed and toasting will start.
4. At the end of the cycle, the carriage(s) will pop up, and you can remove your items. To stop before the cycle finishes, press Cancel.

REHEAT MODE

This feature allows you to reheat items without browning them further.

1. Place item(s) in the toast slots and push down the carriage lever(s) as before.
2. If reheating bagels, press the Bagel button.
4. Turn the browning dial to Reheat. Toasting will start automatically.
3. At the end of the cycle, the carriage(s) will pop up, and you can remove your items. To stop before the cycle finishes, press Cancel.

IMPORTANT: After pulling down the lever, functions can only be chosen and changed within 15 seconds. Once that time is past, all functions are locked and only the browning level can be adjusted.

CLEANING YOUR TOASTER

1. Always allow the toaster to cool completely and unplug the power cord from the electrical outlet before cleaning.
2. To remove crumbs, slide the crumb trays out and discard crumbs. Wipe the crumb trays with a clean damp cloth and dry thoroughly. Always replace the crumb trays before using the toaster again.
3. Wipe the outside of the toaster with a clean damp cloth and dry thoroughly. Do not use abrasive cleansers.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.

USAGE TIPS

1. Toasting is a combination of cooking and drying the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times. For dryer bread, use a lower browning level than you normally would and for very fresh bread or whole wheat bread, use a higher browning level.
2. Thicker pieces of bread (including bagels) will take longer to toast. Very thick pieces may require two cycles. Breads with very uneven surfaces such as English muffins will also require a higher browning level.
3. When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before putting it into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.
4. Before toasting bagels, slice each bagel into two equal halves. Place the bagel halves in the toaster slots with the cut sides facing towards the center of each carriage.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Toaster will not stay on	Power supply issue	Check if the outlet works by plugging another device into it.
	Browning level too low	The browning level dial might be at too low of a setting to activate the heating coil. Turn the browning level up slightly and try again.
Carriage lever will not stay down	Power supply issue	Make sure the toaster is plugged into a working 120V AC outlet.
	Browning level too low	The browning level dial might be at too low of a setting to activate the heating coil. Turn the browning level up slightly and try again.
Toast does not pop up at the end of the cycle	Bread too soft	Try again using a thicker slice or a different type of bread.
Constant burning smell	Crumb tray needs emptying	Remove and clean the crumb trays (see "Care and Cleaning")
	Stuck debris in toaster	Turn the toaster upside down and gently shake to remove stuck debris (see "Care and Cleaning")

WARRANTY

2 Year Limited Warranty

FOR TWO YEARS from the date of sale this product is warranted against defects in material or workmanship.

WITH PROOF OF SALE a defective product will be repaired or replaced free of charge.

Direct all claims for warranty service to Kenmore Customer Assistance, call 1-800-265-8456 or email KenmoreCustomerCare@koolatron.com

This warranty covers manufacturer's defects including electrical and mechanical defects provided the appliance is correctly assembled, operated and maintained according to the supplied instructions. It does not cover damage caused by accident, misuse or abuse including overheating, unauthorized repairs or alterations, or use with a voltage converter or aftermarket accessories, and it does not apply to scratches, stains, discoloration or other surface damage that does not impair the product function. This warranty is void if the appliance is ever used for purposes other than private household use.

Koolatron Corporation
4320 Federal Drive, Batavia, NY 14020 U.S.A.
139 Copernicus Blvd., Brantford, ON N3P 1N4 Canada

Kenmore and the Kenmore logo are registered trademarks to Transform SR Brands LLC and are used under license by Koolatron Corporation