

InVue

L440Replacement Adhesive Kit PL942

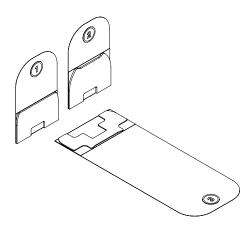


Remove the two screws and the spacer from the L440 front housing.

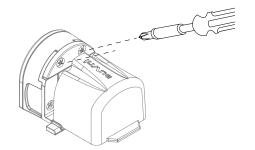




Use a putty knife to remove the old adhesive from the front housing.

Be careful not to damage the ribbon cable at the bottom.

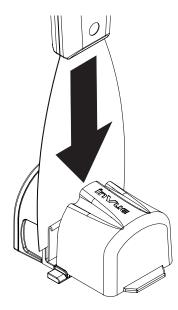


Use a putty knife to remove the old adhesive from the rear housing.


Be careful not to damage the ribbon cable at the bottom.

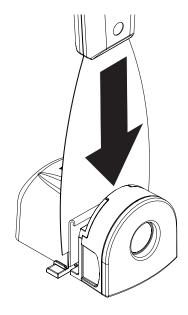


Wipe the inner surfaces of the front and rear housings with an alcohol wipe.

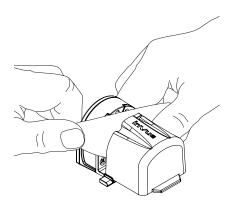


Fold the adhesive pull tab (labeled "1") for the front housing adhesive as shown. Remove the adhesive liner.

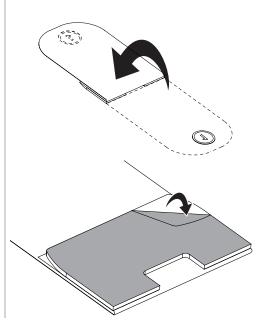


Attach the front housing adhesive to the front housing.

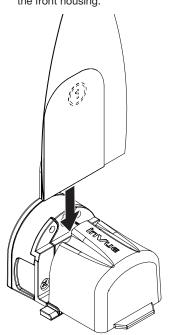


Use the putty knife to press the adhesive against the front housing for at least 10 seconds.

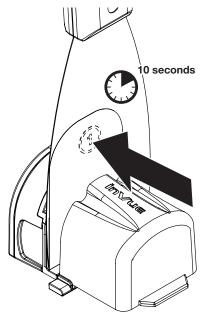


Fold the adhesive pull tab (labeled "2") for the rear housing adhesive as shown. Remove the adhesive liner.

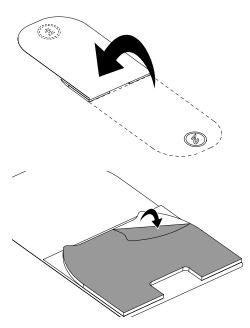


9 Attach the rear housing adhesive to the rear housing.

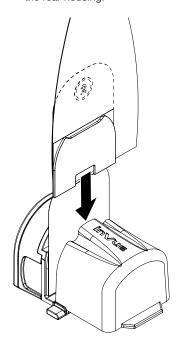


Use the putty knife to press the adhesive against the rear housing for at least 10 seconds.

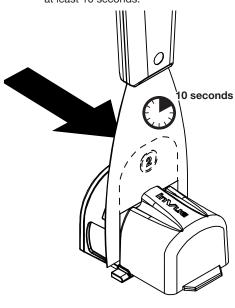

Attach the spacer to the front housing with the 2 screws.

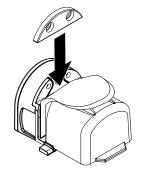

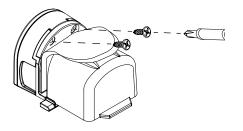


Remove the old adhesive from the screw mount strike plate. Wipe the bottom of the strike plate with an alcohol wipe.






Fold the adhesive pull tab for the strike plate adhesive as shown.

Remove the adhesive liner.

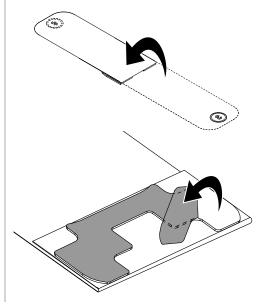

Attach the adhesive to the strike plate as shown and apply pressure for at least 10 seconds.

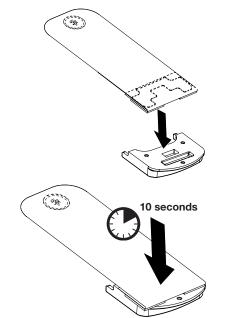

SD0481 Rev3 05/22/2017



To reinstall the L440, please see the instructions for PL901 or PL901-Sound.



www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE EMEA // +31.23.8900150 APAC // +852.3127.6811

© 2016 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.