


invue

Universal Lock *(For 6 mm panels)*

PL106

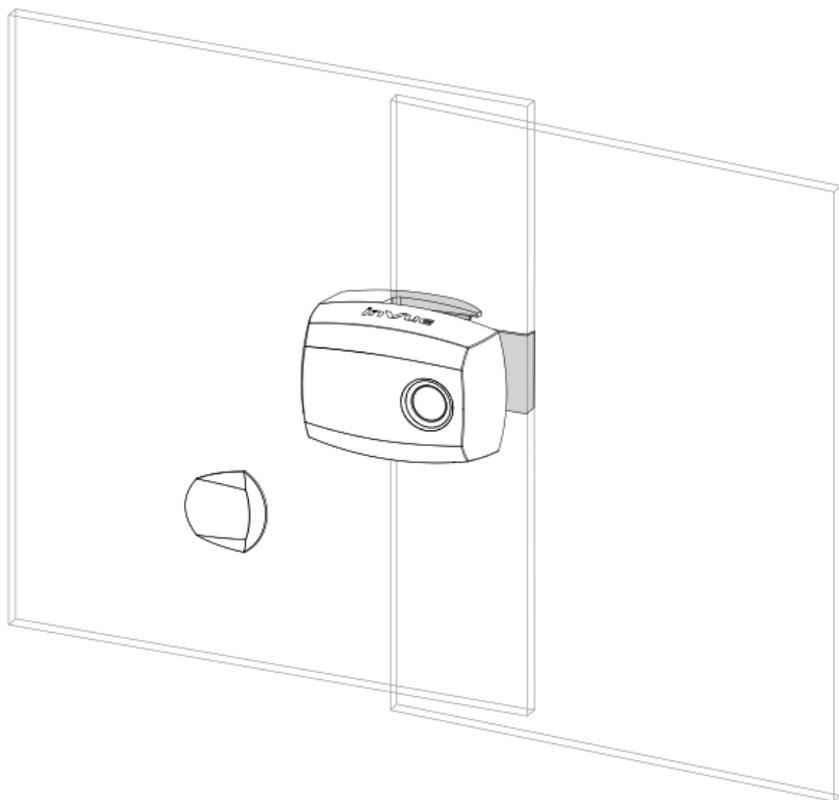

OVERVIEW

Review entire instruction guide before starting installation.

System Components

1. Universal Lock & Panel Handle (PL106)
2. Strike Plate (PL120)*
3. IR2 Key (PK4400)

Setup in 4 easy steps:

1. Mount strike place onto back panel
2. Mount lock onto front panel
3. Use template to position panel handle
4. Use IR2 Key to operate lock





Caution:

Wear appropriate safety gear (gloves and eye protection) when working with and around glass panels.


*Multiple lengths available.

Note: Adhesive is single use. If damaged during installation or use replace with new adhesive.

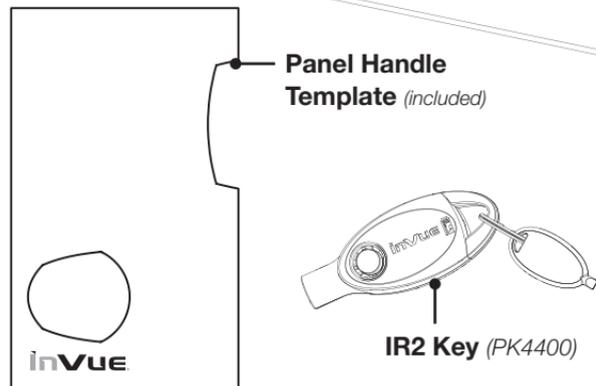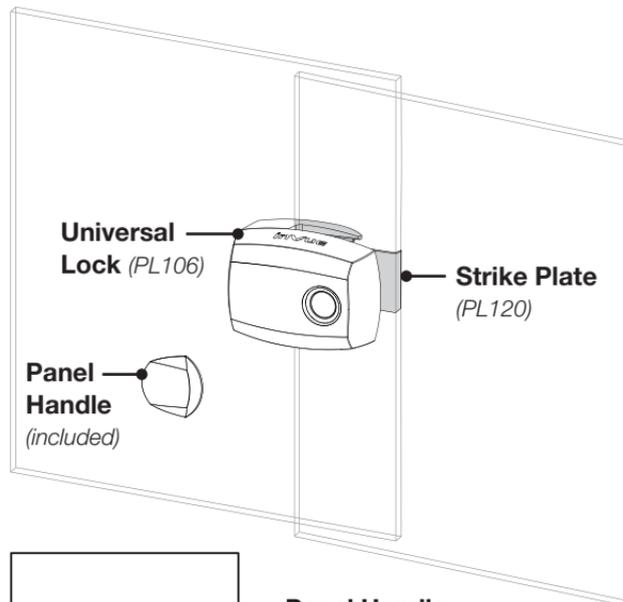


- 1** Determine if the front panel is on the left or right hand side. **Note: The illustrations in this booklet are for right front panel orientation. For left front panel cabinet install in opposite direction.**

A cabinet install in opposite direction.

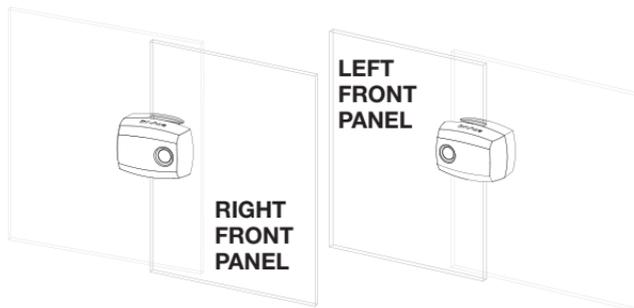

Wipe front and back of both panel surfaces with alcohol wipe where you intend to mount the lock.

B

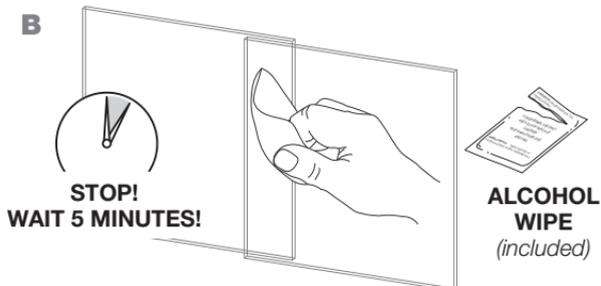



**STOP!
WAIT 5 MINUTES!**

**ALCOHOL
WIPE**
(included)

IMPORTANT! Allow alcohol to air dry for a minimum of 5 minutes or dry alcohol with lint free cloth before moving to step 2.

2

Fully close panels. Insert correctly sized strike plate behind front panel where lock will be positioned. Use sizing tool (PL156) or strike plate selection guide below to identify correct part.

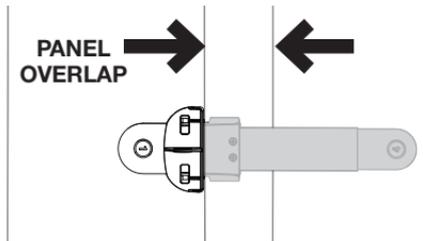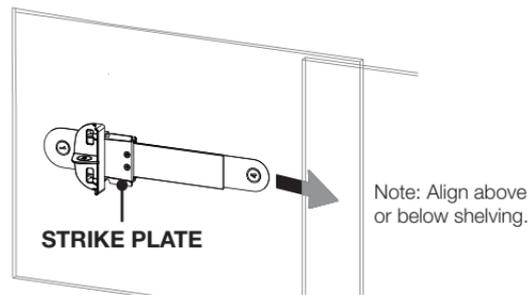


Note: Strike Plate size is determined by width of panel overlap.

Strike Plate Selection Guide:

Panel Overlap	Order Code
22 - 25 mm	PL120-1
26 - 35 mm	PL120-2
36 - 55 mm	PL120-3
56 - 85 mm	PL120-4
86 - 110 mm	PL120-5


- 3** Push tab 2 firmly against edge of front panel while SLOWLY pulling tab 1.

A

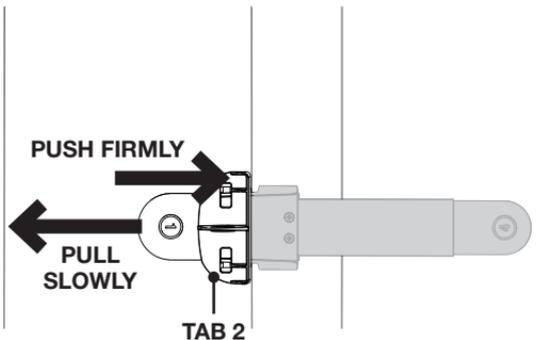


Press tab 2 towards back panel and hold for 10 seconds.


B

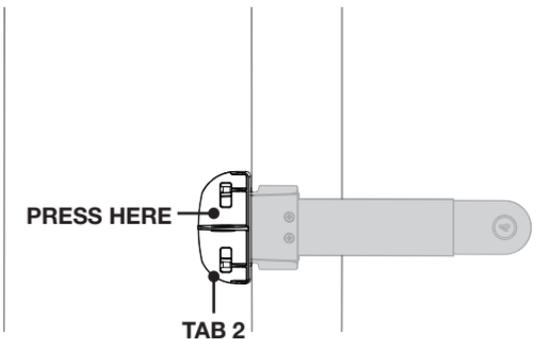

- 4** Break off tab 2 by pulling firmly on leading edge. Discard tab 2.

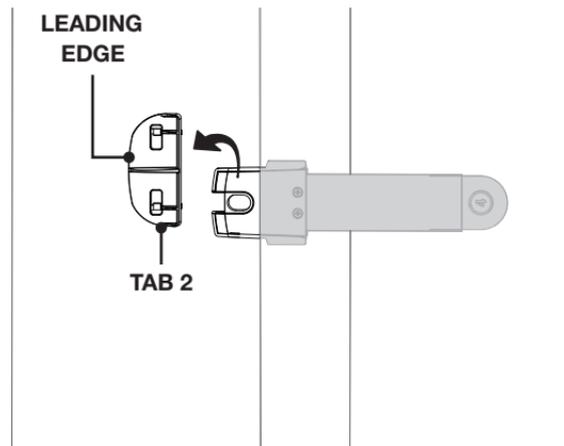


- 5** Slide lock onto edge of front panel and over strike plate. **Important! Tab 3 should remain on outside of front panel.**

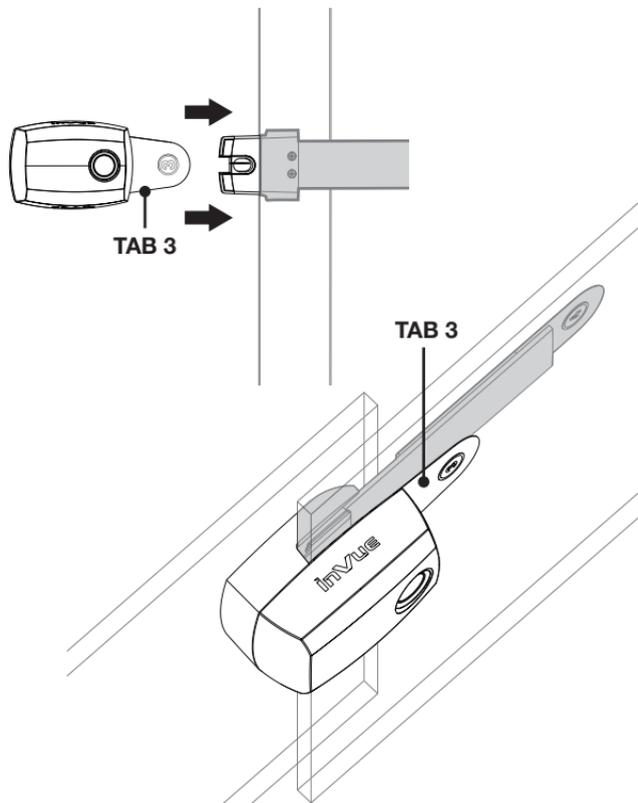


- 6** Push lock firmly against edge of front panel while **SLOWLY** pulling tab 3.

A

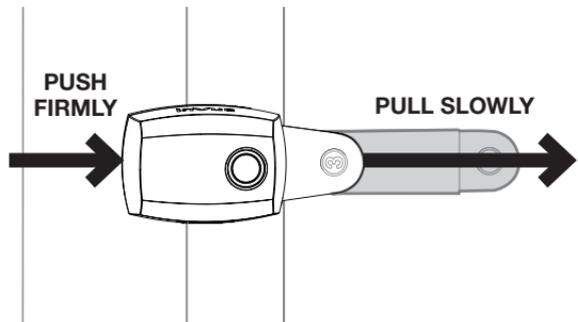


After tab 3 has been removed, press lock against front panel for 10 seconds to set adhesive.

B

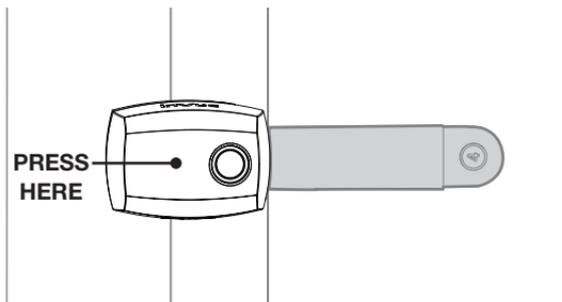


- 7** Open and close panels to ensure lock and strike plate engage smoothly.

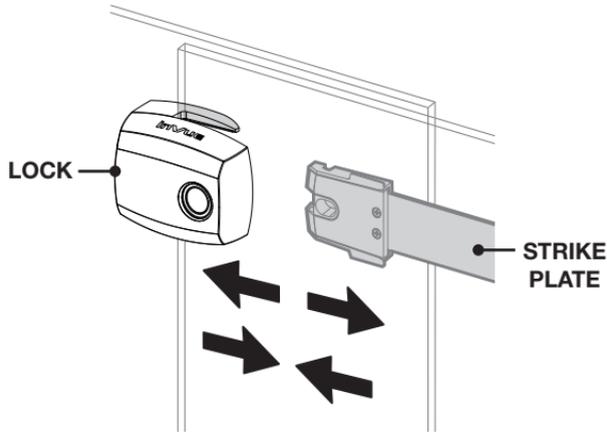


- 8** Open panel. Peel away tab 4 on back side of strike plate.

A

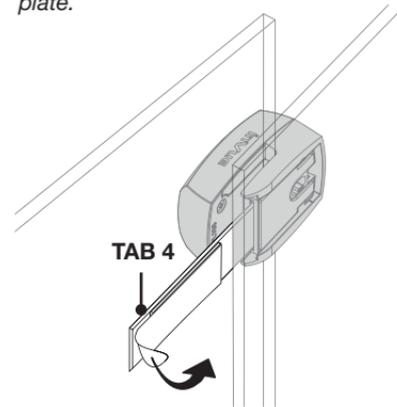


Tightly wrap strap around back panel. Firmly press entire surface of strap to ensure full contact with panel. Repeat and press down entire surface 10 times.

B

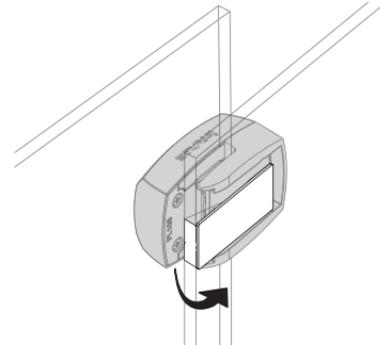


9

Fully close panels. Position template against lock body. Remove clear film on panel handle. Position handle inside template and press for 10 seconds against panel to set adhesive.

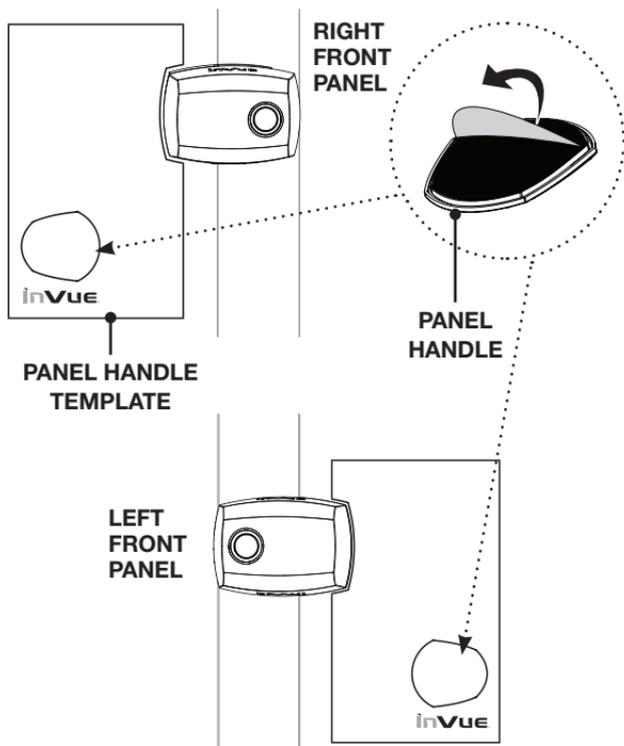

Note: Panel Handle can be installed above or below lock.

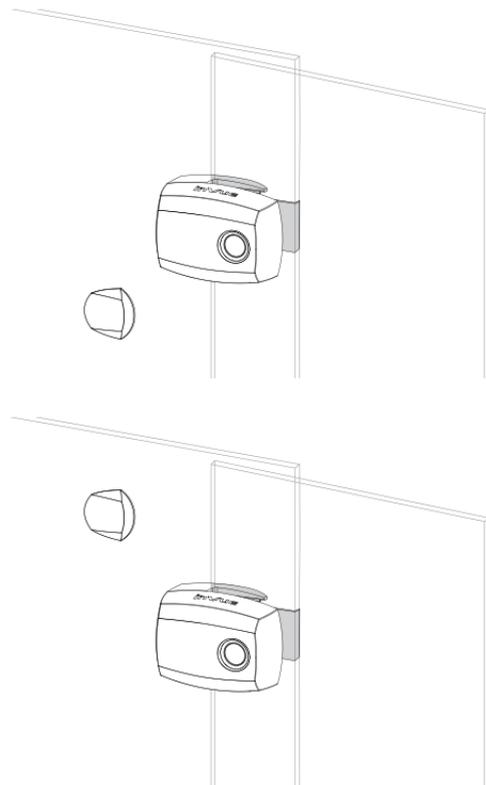

10

Use panel handle to ensure glass panels are fully closed. Position IR2 Key* against lock, push button and wait for "beep" before removing key. Lock and unlock product several times to ensure proper operation.



*IR2 Key must be charged and activated. See IR2 Key instruction guide.

**PRESS
HERE**




"BEEP"


Note: If double "buzz," then an error has occurred. Ensure panels are fully closed and try again.




LOCK STATUS INDICATORS

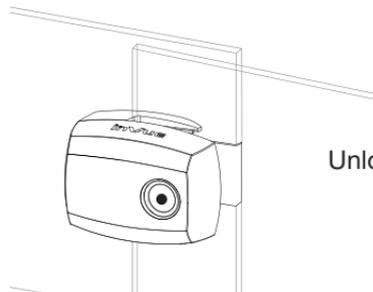

Unlocked

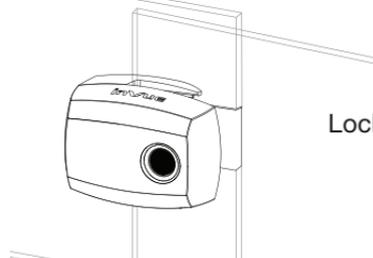

Locked

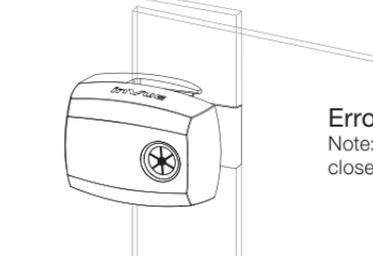

Error (not fully locked)

Note: Ensure panels are fully closed and try again)

invue[®]

tough security made easy

www.invuesecurity.com

Corporate Office (North America) // 704.752.6513 • 888.55.INVUE

Europe, Middle East & Africa // +31.23.8900150

Asia Pacific // +852.3127.6811

Latin America // +52.55.9000.3957