

Smart Lock

Cam Lock PL302



Overview

Review entire instruction guide and complete cabinet assessment before starting installation. Proper operation requires cam arm to latch to optional bracket or cabinet structure.

Application & Cabinet Specification

The Cam Lock is designed for glass, wood or metal swing-out or pull-out doors and drawers with panels up to 21 mm (0.83") thick. A 19 mm (0.75") hole is required to mount the lock body into a fixture latch. Latch brackets are optional.

System Components

- 1. Cam Lock (PL302)
 - .) 1.
- 2. Cam Arm*
- 3. L-Bracket or Flat Bracket (optional)
- **Tool Requirements**
- 1. Pencil
- 2. Adjustable Wrench
- 3. Power Drill and Bit
- 4. Phillips #1 Screwdriver
- 4. IR2 Key (PK4400)

Setup in 5 easy steps:

- 1. Gain access to front and back of door or drawer
- 2. Place Cam Lock body into hole from outside of fixture
- 3. Affix anti-rotation brackets (wood or glass applications)
- 4. Attach cam arm to lock body and test alignment and rotational direction
- 5. Attach latch bracket (L or flat) to cabinet if needed

*The cam arm should rotate without obstruction when locking and unlocking device. InVue offers a broad range of cam arms should it be determined that a different cam arm dimension is required.

FC CE C N13611





L-Bracket

Flat Bracket

LOCK ASSEMBLY - WOOD MOUNT

CABINET ASSESSMENT

Note: Installation instructions in this guide are for wood mount. For glass and metal mount, see page 22 and 23.



- 1. Cam Lock
- 2. Wood Mount Bracket
- 3. Wood Mount Screws
- 4. Anti-Rotation Washer
- 5. Cam Lock Nut
- 6. Cam Arm
- 7. Washer & Screw





Determine lock body orientation on cabinet. Determine if lock will be installed vertically or horizontally. Note: If there is no existing hole, consider proximity before drilling (consider latch bracket, internal shelving, frame, etc.).



A new lock will arrive in "unlocked" position. Using IR2 Key, lock Cam.



Horizontal Mount

Vertical Mount



Unlocked



Locked

Begin test fitting assembly. Confirm enough space on back panel to screw mount bracket to panel. Note: DO NOT attach screws.





Assemble and hand tighten parts 1 - 5 below.



- 1. Cam Lock
- 2. Wood Mount Bracket
- 3. Wood Mount Screws (will be applied later)
- 4. Anti-Rotation Washer
- 5. Cam Lock Nut

Cam arm rotates 90 degrees during operation. Cam arm can be placed in 4 different orientations. Attach cam arm in "locked" orientation relative to future location of latch. Hand tighten washer and screw.





Unlock Cam Lock with IR2 Key. Confirm cam arm rotates correctly without obstruction. Use small switch to change arm direction if needed.





Once cam arm orientation is confirmed, remove all hand tightened parts. Reassemble ALL lock parts onto cabinet in order below. Predrill holes for wood mount screws.





Bend prongs on anti-rotation washer onto nut to lock in place.



- 1. Cam Lock
- 2. Wood Mount Bracket
- 3. Wood Mount Screws
- 4. Anti-Rotation Washer
- 5. Cam Lock Nut
- 6. Cam Arm
- 7. Washer & Screw





Optional for latch bracket: Return lock to unlocked position. To correctly position latch bracket: Measure width between front of cabinet door/drawer and front of cam arm.



Determine location of latch bracket. Use measurement from step 9a - 2 mm (0.08") to measure location of latch bracket on inside of cabinet. Position latch bracket with adhesive on back to test fit.

100

00

Inside Right Cabinet Panel



Close door and operate lock. Confirm cam arm rotates behind bracket or cabinet structure without obstruction. If using bracket, attach bracket to cabinet using wood screws provided.

Note: Latch bracket and/or cabinet structure create a security system.



TEST LOCK



Close cabinet door. Press gray button on key once and wait for "beep" to confirm cabinet is locked. Confirm Cam Lock is "locked." If Cam Lock shows error, see page 19.





If error, return lock to "unlocked" position using IR Key.



Unlocked

LOCK OPERATION USING IR2 KEY

Position IR2 Key against lock, push button and wait for "beep" before removing key. Lock and unlock cabinets several times to ensure proper operation.



LOCK STATUS INDICATORS



Error (not fully locked) Note: Unlock lock. Confirm no obstructions. Fully close cabinet and try again.

LOCK ASSEMBLY – GLASS MOUNT

Note: Orientation of glass mount bracket (#2) will dictate horizontal or vertical mounting of Cam Lock.



- 3. Plastic Washers
- 4. Anti-Rotation Washer
- 5. Cam Lock Nut
- 6. Cam Arm
- 7. Washer & Screw



LOCK ASSEMBLY - METAL MOUNT



- 1. Cam Lock
- 2. Anti-Rotation Washer
- 3. Cam Lock Nut
- 4. Cam Arm
- 5. Washer & Screw



ÌnVue

tough security made easy

www.invuesecurity.com

Corporate Office (North America) // 704.752.6513 • 888.55.INVUE Europe, Middle East & Africa // +31.23.8900150 Asia Pacific // +65.6766.4844 Latin America // +52.55.9000.3957

> © 2013 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.