



LIVE U-Lock LL401 & LL402




- 1 Pull the battery tabs.

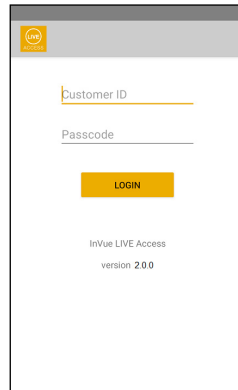


- 2 Open the InVue LIVE Access app and enter your login credentials.
Note: Your Passcode is the same as your OKM User PIN.

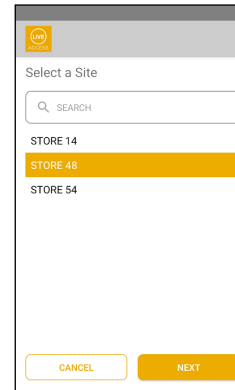


- 3 If prompted, select the site where the lock has been installed.

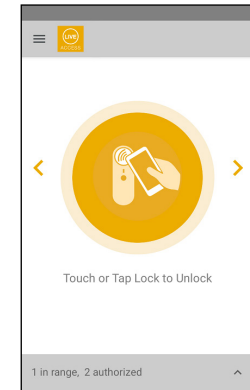


- 4 Tap the lock knob with the NFC antenna of the device being used. The lock will unlock and relock within 4 seconds.

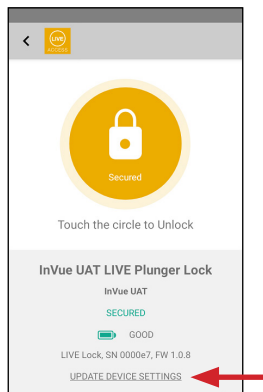


- 5 Click on the "Update Device Settings" link to modify the Device Name, Description, or Zone to complete the enrollment.
Note: You must have the "Manage Devices" permission to see and access this link.

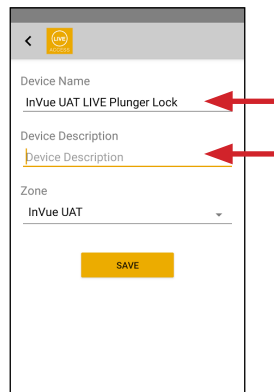

- 6 Rename the device and enter an optional description if desired.

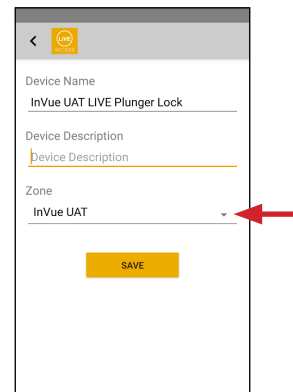

- 7 Assign the device to the appropriate Zone in your store or site.
Note: Zones are created in Access Manager

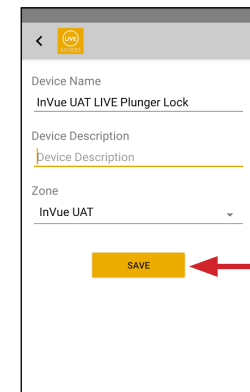

- 8 Click "Save" once the lock description fields have been filled out.

LIVE U-Lock LL401 & LL402



- 9a Tether Installation (Recommended):**
Loop the open cable through a part of the fixture near where the lock will be secured.



- 9b** Insert the screw end of the cable through the loop.



- 9c** Insert and tighten the screw into the hole on the back of the U-Lock body.



- 9d** Use a TT20 bit to fully tighten the screw



- 10** Place a charged and coded OneKEY against the lens on the lock and press the button the Key. The LED on the Key and the lock will flash green.

Note: The lock can also be opened using a device with the LIVE Access app installed.



- 11** Rotate the knob 90 degrees clockwise to disengage the locking mechanism. The shackle will automatically pop out.



- 12** Hook the shackle through the feature that will be secured.



- 13** Push the shackle into the lock body. The knob will automatically rotate to the locked position and the LED on the U-Lock will turn red.

LIVE U-Lock LL401 & LL402



- 14a Lock Activation Using OneKEY:** Place a charged and coded OneKEY against the lens on the lock and press the button the Key. The LED on the Key and the lock will flash green.



- 14b** You will have several seconds to turn the knob to unlock and open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again. The shackle will automatically pop out.




- 15a Lock Activation Using NFC:** Open the InVue LIVE Access App on your smart device. Tap your device against the round panel on the lock. Once confirmed by the App displaying “unlocked” and the LED flashing green.



- 15b** You will have several seconds to turn the knob to unlock and open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again. The shackle will automatically pop out.



- 16a Using the 2D Barcode:** Insert a thin edged tool into the small notch between the lock knob and the round plate.

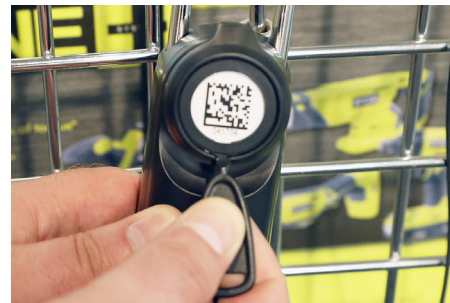

- 16b** Remove the panel to reveal the barcode.




- 17a Lock Activation Using Scanning Device:** If your smart device has a built in barcode reader, aim and scan the code on the front of the lock while the InVue LIVE Access App is open. Once confirmed by the App displaying “unlocked” and the LED flashing.



- 17b** You will have several seconds to turn the knob to unlock and open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again. The shackle will automatically pop out.

LIVE U-Lock LL401 & LL402

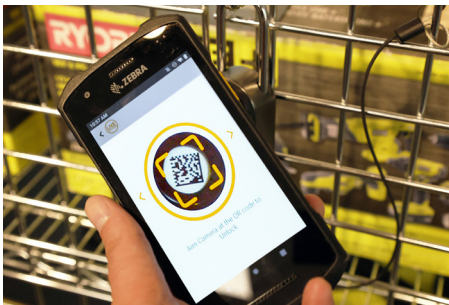

- 18a Lock Activation Using Device Camera:** Open the InVue LIVE Access App on your smart device and toggle to the “Camera Scan” screen. Center the barcode in the viewfinder. Once confirmed by the App displaying “unlocked” and the LED flashing green.



- 18b** You will have several seconds to turn the knob to unlock and open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again. The shackle will automatically pop out.



- 19a Optional Silicon Sleeve (LL498) Installation:** Open the U-Lock and remove it from the fixture. Turn the shackle away from the lock body.



- 19b** Invert the LL498 silicon sleeve and insert the shackle through the nearest hole as shown above.



- 19c** Slide the silicon sleeve down the shackle.



- 19d** Fit the lock knob through the opening in the sleeve.




- 19e** Ensure that the lip on the back of the sleeve fits over the back of the lock body.



- 19f** The U-Lock is ready to be reinstalled on the fixture.



- 20a Battery Replacement Steps:**
Place a magnet key near the end of the battery panel on the lock.
Note: Even with low batteries the lock will still function with a OneKEY.

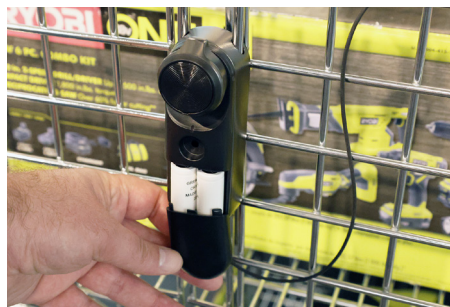

- 20b** Remove the battery panel from the lock.



- 20c** Replace the old batteries with new CR123A non-rechargeable lithium batteries.



- 20d** Slide the battery panel back into place.



Warning – Fire, Explosion, Burn Hazard:

InVue recommends the use of Great Power or Energizer CR123A batteries. Use of other batteries, mixing of used and new or different battery chemistries may present a risk of leakage, fire, explosion and serious personal injury. Do not ingest, recharge, misuse, short circuit, improperly store or discard, disassemble or heat above 212°F (100°C). Keep away from children.