





Back the 2 plastic screws out to allow it to fit over the panel.



Place the strike plate onto the back panel.

#### **Optional:**

For ease of installation, use an Installer Key (if you have one) to unlock the lock. If using the Installer Key in a lock with the battery tabs in place, it will pause the lock in an unlocked state. Use the provided alcohol wipe to clean the edge of the BACK panel where the strike plate will be mounted. Allow it to dry completely.

2

У

3



5

Lightly tighten the 2 screws to hold the strike plate in place.

- 6 Pull the red tab to expose the adhesive. Note: Back the screws off slightly if the tab is not easy to pull.



Fully tighten the screws.



8

Slide the panels into the closed position. The strike plate should emerge from between the 2 panels.





9 Clean the edge of the front panel near the strike plate. Allow it to dry completely.



Slide the lock onto the strike plate.



Pull the 2 red tabs to expose the adhesives.

**(11**)



Press the lock against the panel for at least 10 seconds.



13 Pull the battery tabs.

ACCESS
Customer ID
Passcode
LOGIN
InVue LIVE Access
version 2.0.0

10

14

Select a Site

 Q. SEARCH

 STORE 14

 STORE 48

 STORE 54

Open the InVue LIVE Access app and enter your login credentials. **Note:** Your Passcode is the same as your OKM User PIN. If prompted, select the site where the lock has been installed.



16 Tap the lock knob with the NFC antenna of the device being used. The lock will unlock and relock within 4 seconds.

#### For technical assistance call **NA / LATAM** // 704.752.6513 • 888.55.INVUE **EMEA** // +31.23.8900150 **APAC** // +852.3127.6811



(15)

< 问	
Secured Touch the circle to Unlock	
InVue UAT LIVE Plunger Lock InVue UAT SECURED	č.
LIVE Lock, SN 0000e7, FW 1.0.8	-

Click on the "Update Device Settings" link to modify the Device Name, Description, or Zone to complete the enrollment. **Note:** You must have the "Manage Devices" permission to see and access this link.



Rename the device and enter an optional description if desired.

Device Name		
InVue UAT LI	VE Plunger Lock	
Device Descri	ption	
Device Descr	iption	
Zone		
InVue UAT		 -
	SAVE	

ی				
Device Nam	ne			
InVue UAT LIVE Plunger Lock				
Device Desc	cription			
Device Des	scription			
Zone				
InVue UAT		v		
	SAVE			

Assign the device to the appropriate Zone in your store or site. Note: Zones are created in Access Manager



22b

Click "Save" once the lock description fields have been filled out.





Lock Activation Using OneKEY: Place a charged and coded OneKEY against the lens on the lock and press the button the Key. The LED on the Key and the lock will flash green.



You will have several seconds to slide the door panels open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again.







Once confirmed by the App displaying "unlocked" and the LED flashing green, you will have several seconds to slide the door panels open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again.

For technical assistance call NA / LATAM // 704.752.6513 • 888.55.INVUE EMEA // +31.23.8900150 APAC // +852.3127.6811







#### Using the 2D Barcode: Insert a thin edged tool into the small notch between the lock body and the round plate.



Remove the panel to reveal the barcode.





If your smart device has a built in barcode reader, aim and scan the code on the front of the lock while the InVue LIVE Access App is open.



Once confirmed by the App displaying "unlocked" and the LED flashing green, you will have several seconds to slide the door panels open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again.



Lock Activation Using Device Camera:

Open the InVue LIVE Access App on your smart device and toggle to the "Camera Scan" screen. Center the barcode in the viewfinder.



Once confirmed by the App displaying "unlocked" and the LED flashing green, you will have several seconds to slide the door panels open. If the LED on the lock flashes red before the lock is opened, it will need to be unlocked again.





Battery Replacement Steps: Place a magnet key near the end of the battery panel on the lock. Note: Even with low batteries the lock will still function with a OneKEY.



Remove the battery panel from the lock.





26







Replace the old batteries with new CR123A non-rechargeable lithium batteries.



Slide the battery panel back into place.

#### War Bur InVi

Warning – Fire, Explosion, Burn Hazard: InVue recommends the use

of Great Power or Energizer CR123A batteries. Use of other batteries, mixing of used and new or different battery chemistries may present a risk of leakage, fire, explosion and serious personal injury. Do not ingest, recharge, misuse, short circuit, improperly store or discard, disassemble or heat above 212°F (100°C). Keep away from children.

