



Below fixture: Place the washer onto the bolt and insert the bolt up through the hole in the fixture into the hole on the left side of the base plate. Above fixture: Place the lock nut onto the bolt and tighten fully.

 



See the arm kit instructions for installing the security arms and device to the stand.

 
Attach stand to base plate. Plug OEM power supply into merchandise and connect to power.

б


390



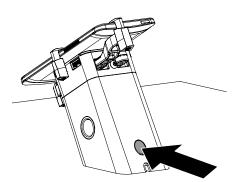



SD0450 Rev6 11/03/17

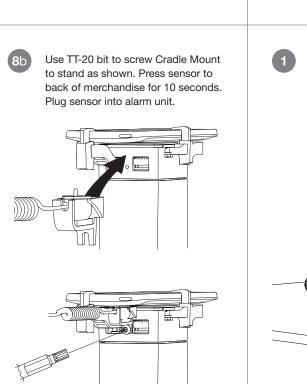




6

Stand Removal:

Insert a coded IR key into the lens on the side of the stand and press the button. The button on the back of the stand will pop out indicating that the stand is unlocked.

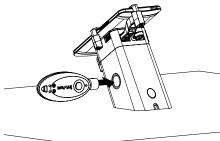


ÌnVue

www.invue.com

NA / LATAM // 704.752.6513 • 888.55.INVUE EMEA // +31.23.8900150 APAC // +852.3127.6811

 © 2015 InVue Security Products Inc. All rights reserved. InVue is a registered trademark of InVue Security Products.



Remove clear film from adhesive on sensor.