


Cable Lock Anchor Usage



- 1 Identify the 2 parts of the Cable Lock Anchor
 - The side with the shorter tether will attach to a fixture
 - The longer tether will attach to the merchandise. The Merchandise side will also have a gray dot on the housing near the tether connection (shown in the inset above).

- 2 Use a TT20 bit to loosen (do NOT remove) the screws in the cable clamps on each side of the Cable Anchor Lock.

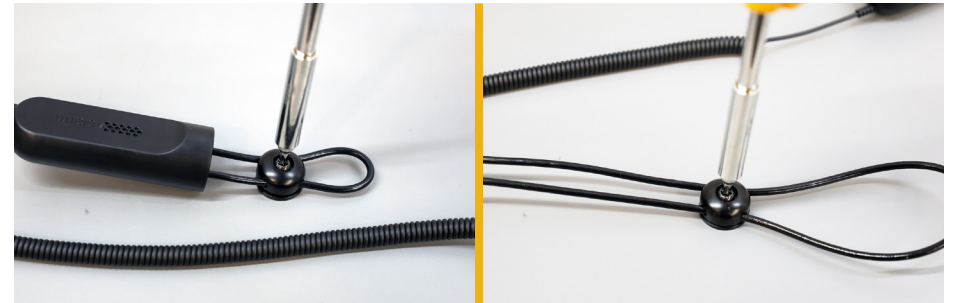


- 3a Place a charged and coded OneKEY into the IR Port on the MERCHADISE side and press the button.

- 3b Pull the end of the tether free from the housing.

- 4a Place a charged and coded OneKEY into the IR Port on the FIXTURE side and press the button.

- 4b Pull the end of the tether free from the housing.

 **IMPORTANT:** Always release the MERCHANDISE side first. Releasing the FIXTURE side will result in an alarm event.


Cable Lock Anchor Usage



- 5 Remove the loose end of the FIXTURE tether from the cable clamp.



- 6 Route the tether around a permanent feature in the fixture.

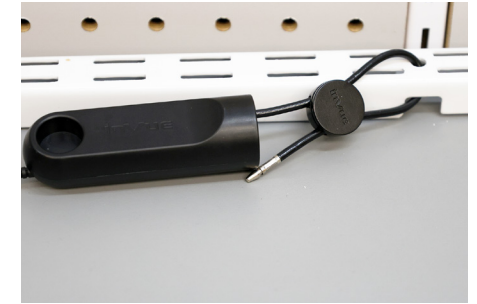

- 7 Insert the tether into the cable clamp.



- 8 Plug the tether back into the housing.



- 9 Slide the cable clamp against the fixture.



- 10 Tighten the screw using a TT20 bit.



- 11 Slide the cable clamp on the MERCHANDISE down to allow it to fit around the intended merchandise.
Note: The tether can be removed from the housing if this is easier for install.

Cable Lock Anchor Usage



- 12a Place the loop around a permanent feature on the merchandise.



- 12b **Optional:** The tether can be wrapped around the merchandise if desired.



- 13 If the tether was removed, insert it back into the cable clamp. Slide the cable clamp up the tether so that it is tight against the merchandise.



- 14 Plug the tether back into the housing.



- 15 Tighten the screw using a TT20 bit.



- 16 Final assembly should resemble the above image.

Cable Lock Anchor Usage

Remerchandising/Removal



- 17 To remerchandise or remove, place a charged and coded OneKEY into the IR Port on the MERCHADISE side and press the button.

! **IMPORTANT:** Always release the MERCHANDISE side first. Releasing the FIXTURE side side will result in an alarm event.



- 18 Remove the tether from the housing and loosen the screw in the cable clamp to access the merchandise.



- 19 If the position needs to be moved, place a charged and coded OneKEY into the IR Port on the FIXTURE side and press the button.



- 20 Remove the tether from the housing



- 21 Loosen the screw in the cable clamp.



- 22 Remove the tether from the cable clamp and fixture. The Cable Lock Anchor is now ready to be reinstalled.

SD0967 Rev2 01/26/24