



UVCS V2 Conveyor with 5000-EC Lamp(s)

Quick Start Instructions



1. Uncrate the conveyor and remove protective coverings. Place the conveyor on a convenient work surface.
2. Install the exhaust ventilation stack on the blower motor's outlet flange. Secure the exhaust stack with the three fasteners provided
3. Unpack the 5000-EC UVCS lamps. Each lamp includes a power supply, reflector assembly, a 400-watt bulb, lamp connector cord, and a power cord.
4. Install the bulb into the reflector housing ensuring that the bulb is properly seated.



5. Attach the connector cord to the back of each reflector.



6. Install up to four reflector assemblies into the conveyor's upper lamp support brackets (2 shown above). Adjust the position of the lamps and tighten the four securing knobs.




7. Attach the connector cable leading from each reflector to the rear of each power supply. Connect the conveyor's power cord to a 120 volt AC power source (230V AC for 230-volt units). Connect each power supply's power cord to a 95-260 volt AC power source



8. Turn the conveyor on by means of the power switch. Adjust belt speed by turning the speed control knob. Belt speed will be indicated on the speed display indicator.



9. When the conveyor is operating, and the belt is in motion, turn each power supply on. Allow 5 minutes for the bulbs to reach full output intensity. If the temperature of the 5000 lamps are not around 122°F, remove the blower speed control cover and adjust the blower control knob to optimize bulb temperature. Wait about 5 minutes in between adjustments for temperature stabilization. Your UVCS Conveyor is ready for operation.

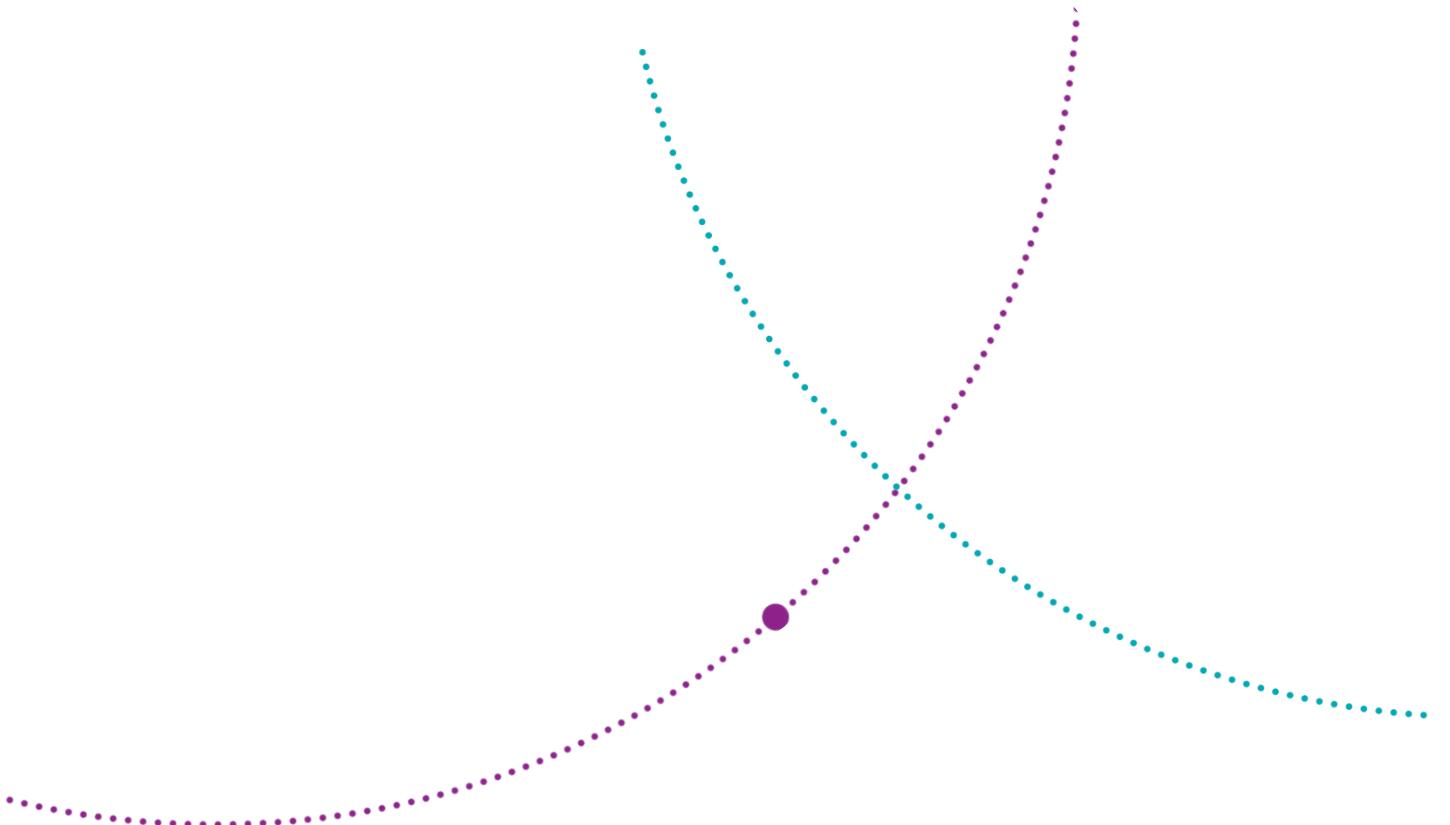

Please Refer to Component Technical Manuals for Detailed Operating Instructions.

www.dymax.com

Americas
USA | +1.860.482.1010 | info@dymax.com

Europe
Germany | +49 611.962.7900 | info_de@dymax.com
Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia
Singapore | +65.67522887 | info_ap@dymax.com
China | +86.755.83485759 | dymaxasia@dymax.com
Hong Kong | +852.2460.7038 | dymaxasia@dymax.com
Korea | +82.31.608.3434 | info_kr@dymax.com

© 2021 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax's standard Conditions of Sale. Dymax does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax or act as a grant of license under any Dymax Corporation Patent. Dymax recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide. QS004 08/05/2021