



Assembly Instructions for the ECE 2000 with Manual Shutter & ECE Light Shield

1. Remove the Filler Plate from the bottom of the ECE 2000 Lamp (Figure 1).



2. Place the Glass Shield on the Lamp.

3. Align the Spacers over the screw holes (Figure 2).



4. Install the Lamp Supports by aligning the supports with the spacers and then securing them with M3 x 16 mm pan-head screws and M3 washers.

NOTE: Do not overtighten the screws; doing so may cause the glass to crack.

5. Remove the four inner screws from the Light Shield's Top Plate (Figure 4).



Figure 3. Install Lamp Supports

6. Remove the Adapter Plate from the Manual Shutter by removing the four 8-32 x $\frac{3}{8}$ " screws.

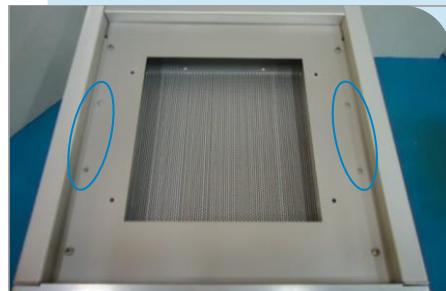


Figure 4. Light Shield Top Plate, Remove Center M4 x 8 mm Screws

7. Place the Manual Shutter on the Light Shield.

8. Attach the Reflector Housing/Shutter Plate Assembly to the Shutter and Light Shield with the Securing Brackets (Figure 5). Use M4 x 8 mm screws to attach the Light Shield to the Shutter and to secure the bottom portion of the brackets to the Light Shield's Top Plate.



Figure 5. Attach Securing Bracket with M4 x 8 mm screws

9. Connect the Power Supply to the Lamp with the Interconnect Cable (PN 40695) (Figure 6).



Figure 6. Rear Cable Connections

10. Using a second Interconnect Cable (PN 40878), connect the ECE Light Shield to the J5 Receptacle on the rear panel of the Lamp.

11. Install the Bypass Connector in the J4 Receptacle on the rear panel of the Lamp.

12. Connect the Power Cable to the Power Supply and connect the opposite end to a power source. Unit is now ready to operate.



Figure 7. Assembled System

For detailed operating instructions, please refer to the ECE Flood Lamp User Guide.

www.dymax.com

Americas

USA | +1.860.482.1010 | info@dymax.com

Europe

Germany | +49 611.962.7900 | info_de@dymax.com
Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia

Singapore | +65.67522887 | info_ap@dymax.com
Shanghai | +86.21.37285759 | dymaxasia@dymax.com
Shenzhen | +86.755.83485759 | dymaxasia@dymax.com
Hong Kong | +852.2460.7038 | dymaxasia@dymax.com
Korea | +82.31.608.3434 | info_kr@dymax.com

© 2021 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax's standard Conditions of Sale. Dymax does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax or act as a grant of license under any Dymax Corporation Patent. Dymax recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide. QS061 08/12/2021