



## Installation of the ECE 5000 Lamp to the ECE Light Shield

1. Remove the Filler Plate from the bottom of the ECE 5000 Lamp (Figure 1). Look at the bottom plate of the ECE 5000 Lamp. Notice the cut-out in the Filler Plate.



Figure 1. Lamp with Filler Plate Removed

2. Place the Glass Shield on the Lamp.

3. Place the Filler Plate over the Glass Shield with the cut-out face down. Check that the glass is sitting in this pocket.

**NOTE:** If the glass is not positioned correctly there is the potential to crack the glass.



Figure 2. Install Filler Plate

4. Secure the Glass Shield under the Filler Plate by installing the four screws (Figure 2). The screws should be hand tightened.

**NOTE:** Do not over tighten the screws. Doing so may cause the glass to crack.

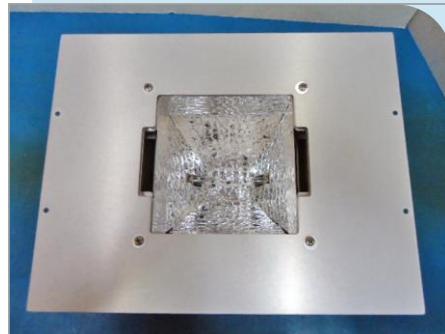


Figure 3. Install Adapter Plate to Lamp

5. Align the Adapter Plate on the Lamp (Figure 3) and secure it with M4 x 8 mm pan-head screws. The screws should be hand tightened.

**NOTE:** Do not over tighten the screws. Doing so may cause the glass to crack.

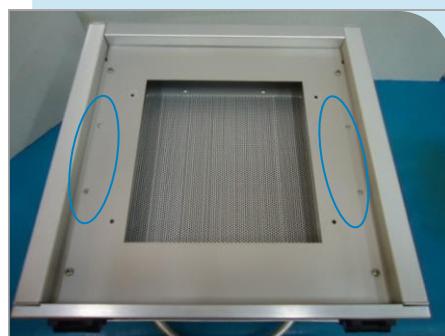


Figure 4. Light Shield Top Cover, Remove Center M4 x 8 mm Screws

6. On the Light Shield, remove the two inner M4 x 8 mm screws from the left and right sides of the Top Cover Plate (Figure 4).

7. Install the Lamp/Adapter Plate Assembly to the Light Shield. Secure both assemblies together with the previously removed M4 x 8 mm screws (Figure 5).
8. Install the Bypass Connector in the J4 Receptacle on the rear panel of the Lamp.
9. Connect the Power Supply to the Lamp with the Interconnect Cable (PN 40695) (Figure 6).
10. Using a second Interconnect Cable (PN 40878), connect the ECE Light Shield to the J5 Receptacle on the rear panel of the Lamp.
11. Connect the Power Cable to the Power Supply and connect the opposite end to a power source. Unit is now ready to operate.



**WARNING!** *With the lamp installed directly to the light shield assembly, the lamp is continuously on when power is applied to the unit. Take appropriate safety precautions when using the equipment in this configuration.*



**Figure 5.** Lamp/Adapter Plate Assembly Installed on the Light Shield



**Figure 6.** Rear Cable Connections

[www.dymax.com](http://www.dymax.com)

**Americas**  
USA | +1.860.482.1010 | [info@dymax.com](mailto:info@dymax.com)

**Europe**  
Germany | +49 611.962.7900 | [info\\_de@dymax.com](mailto:info_de@dymax.com)  
Ireland | +353 21.237.3016 | [info\\_ie@dymax.com](mailto:info_ie@dymax.com)

**Asia**  
Singapore | +65.67522887 | [info\\_ap@dymax.com](mailto:info_ap@dymax.com)  
China | +86.755.83485759 | [dymaxasia@dymax.com](mailto:dymaxasia@dymax.com)  
Hong Kong | +852.2460.7038 | [dymaxasia@dymax.com](mailto:dymaxasia@dymax.com)  
Korea | +82.31.608.3434 | [info\\_kr@dymax.com](mailto:info_kr@dymax.com)

**For detailed operating instructions, please refer to the ECE Flood Lamp User Guide.**

[www.dymax.com](http://www.dymax.com)

**Americas**

USA | +1.860.482.1010 | [info@dymax.com](mailto:info@dymax.com)

**Europe**

Germany | +49 611.962.7900 | [info\\_de@dymax.com](mailto:info_de@dymax.com)

Ireland | +353 21.237.3016 | [info\\_ie@dymax.com](mailto:info_ie@dymax.com)

**Asia**

Singapore | +65.67522887 | [info\\_ap@dymax.com](mailto:info_ap@dymax.com)

China | +86.755.83485759 | [dymaxasia@dymax.com](mailto:dymaxasia@dymax.com)

Hong Kong | +852.2460.7038 | [dymaxasia@dymax.com](mailto:dymaxasia@dymax.com)

Korea | +82.31.608.3434 | [info\\_kr@dymax.com](mailto:info_kr@dymax.com)

© 2021 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax does not warrant the data contained in this bulletin. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax's standard Conditions of Sale. Dymax does not assume responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax or act as a grant of license under any Dymax Corporation Patent. Dymax recommends that each user adequately test its proposed use and application before actual repetitive use, using the data contained in this bulletin as a general guide. QS062 08/12/2021