



A Division of Sunstate Equipment Co.

TRENCH SAFETY

TRENCH SHIELD MANUFACTURER'S TABULATED DATA

HA8DS

MODEL NO.

36424

SERIAL NO.

9/30/2019

DATE SHIPPED

HEIGHT ADAPTER DEPTH CHART

SOIL TYPE	SHIELD LENGTH (FT)			
	12	16	20	24
B - 45	40'	31'	25'	20'
C - 60	30'	24'	20'	16'
C - 80	24'	18'	15'	12'

CONDITIONS FOR USE OF TABULATED DATA:

1. This Tabulated Data has been prepared by a registered professional engineer as required to comply with the OSHA standard 29 CFR Part 1926, Subpart P.

2. The Soil Types A - 25, B - 45, and C - 80 are as defined in the OSHA Standard. Soil Type C - 60 is a moist, cohesive soil or a moist dense granular soil, which is not flowing or submerged and has an Equivalent Fluid Pressure (EFP) of 60 PSF per foot of depth. The competent person must monitor the excavation for signs of deterioration that may alter soil pressures and produce the Soil Type C - 80 condition. Such signs are indicated by, but not limited to, freely seeping water or flowing soil entering the excavation around or below the shield.

3. Height Adapters shall be used in accordance with the depth chart. The maximum depth is the distance from the surface of the excavation to the bottom of the trench. Depth ratings shown are based upon examples of homogeneous soil conditions. Soil pressures may vary due to non-homogeneous soils, surcharge loads, and slope of embankment (layback). Actual soil pressures should be verified to be sure that the shield capacity is not exceeded.

4. Surcharge loads are not included in the maximum depth table. Surcharge loads are possible due to heavy equipment, vibrations, or soil piles adjacent to the trench. (Adjacent is defined as within a distance equal to the depth of the trench.)

5. Height adapters and Trench Shields are not intended to provide stability to adjacent buildings or other structures.

6. 2 inch diameter pins furnished by Arcosa Shoring Products shall be placed in all Height Adapter to collar connections. Some connections require two pins.

7. The horizontal spreader elements of the Height Adapter shall be subject to the following provisions:

- Only non-galvanized, 1" Diameter - A325 bolts may be used to connect the collars of the Height Adapter.
- The bolts should be tightened in accordance with pages 5-302 to 5-307 of the AISC Manual (9th Edition)

8. The maximum horizontal width of the Height Adapter is 180 inches, and the maximum vertical clearance of the Height Adapter is 120 inches. The maximum length of spreaders or extensions is 144 inches.

GENERAL NOTES FOR TRENCH SHIELD USE:

1. Any modifications to shields using parts not manufactured by Arcosa Shoring Products will void Tabulated Data unless otherwise specified or allowed in writing by Arcosa Shoring Products.

2. Arcosa Shoring Products Trench Shields may be stacked provided that appropriate connections are made between stacked shields as specified by Arcosa Shoring Products. Each stacked shield shall have a depth rating equal to or greater than the actual depth at which it is used.

3. Maximum depths are based on shields being in structurally sound condition. Trench Shields should be inspected prior to each use for any damage or deterioration. If a shield has sustained major structural damage or permanent deformation of a structural member or connection, the Tabulated Data is void until repairs are made as specified by a registered professional engineer.

4. The use of Arcosa Shoring Products Trench Shields shall be in accordance with this tabulated data and all requirements of the OSHA standard. Trench Shield usage other than specified or required may create unsafe conditions that could cause a cave-in, structural failure, or collapse resulting in a disabling injury or even death. Arcosa Shoring Products shall not be liable for shield usage other than specified.



9/24/19

ARCOSA
SHORING PRODUCTS


TRENCH SHIELD ASSEMBLY & USAGE

- ANY USE OF A TRENCH SHIELD WITHOUT MANUFACTURER'S SPREADERS AND PINS OR EQUAL WILL VOID THE TABULATED DATA AND WARRANTY.
- TRENCH SHIELD WAS DESIGNED TO BE USED WITHOUT PLATES EXTENDING BELOW, ABOVE, OR NEXT TO IT. ANY USE OF SUCH PLATES OR PANELS MAY VOID THE TABULATED DATA AND MAY REQUIRE SITE SPECIFIC ENGINEERING.
- TRENCH SHIELDS ARE DESIGNED TO BE PUSHED TO GRADE IF NECESSARY. AS NOTED BELOW, ANY UNNECESSARY ABUSE BY THE EXCAVATOR AND OR OPERATOR (SUCH AS POUNDING WITH THE BUCKET) WILL VOID THE TABULATED DATA AS WELL AS THE WARRANTY.
- CONDITION OF SHIELD, SPREADER PIPES, AND SPREADER PINS MUST BE CHECKED/ INSPECTED FOR SERVICEABILITY BY THE COMPETENT PERSON PRIOR TO EACH USE. PSF RATING IS NOT VALID IF THERE IS ANY VISIBLE DAMAGE TO, OR REPAIRS MADE TO THE SHIELD THAT HAS NOT BEEN DOCUMENTED AND CERTIFIED BY A REGISTERED PROFESSIONAL ENGINEER.
- A MINIMUM OF 2 SPREADERS, 1 ARCH, OR 1 SPREADER AND 1 MUDPLATE MUST BE INSTALLED ON EACH END OF TRENCH SHIELD PRIOR TO USE.
- DEPTH AND PSF RATING ARE FOR LATERAL EARTH PRESSURES ONLY AND DO NOT TAKE ANY SURCHARGES INTO ACCOUNT.
- WARNING: LIFTING EYES ARE DESIGNED AND INTENDED FOR ASSEMBLY/DISASSEMBLY AND LIFTING ONLY. DO NOT PULL OR LIFT BY EYES WHEN SHIELD IS STUCK OR HAS PRESSURE AGAINST IT. LOOSEN SHIELD BY PULLING ON SPREADER OR DIGGING ALONG SIDES BEFORE USING LIFT EYES.


ASSEMBLY





1) REMOVE FROM TRUCK BY LIFTING PANELS WITH 4 POINT LIFT LUGS. ALWAYS USE OSHA APPROVED SLINGS. PLACE ONE SIDEWALL FLAT ON THE GROUND WITH COLLARS FACING UP.

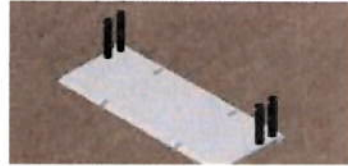

2) PLACE SPREADER PIPE AND/OR MUD PLATE ON TO COLLARS OR BRACKETS AND PIN IN PLACE. SECURE PINS WITH KEEPERS.

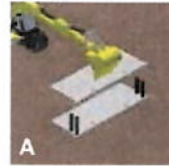

3A) LOWER SECOND SIDEWALL ONTO SPREADERS AND PIN IN PLACE.
3B) FOR SPREADERS LONGER THAN 72" LIFT SIDEWALL WITH SPREADERS OVER MATCHING SIDEWALL PRIOR TO PINNING IN PLACE.

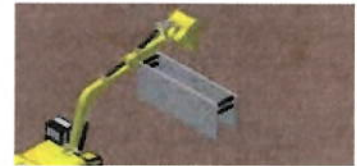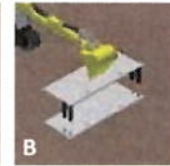

4) PLACE SLING IN TOP 4 LIFT LUGS. STAND SHIELD IN UPRIGHT POSITION AND PREPARE FOR INSTALLATION.

DISASSEMBLY



1) PLACE OSHA APPROVED SLING IN TOP 4 LIFT LUGS. STAND SHIELD IN UPRIGHT POSITION AND LIFT BOX FROM EXCAVATION. WARNING: LIFT LUGS ARE INTENDED FOR LIFTING ONLY.



2) PLACE SHIELD ON EITHER SIDEWALL.




3) CONNECT SLING TO 4 LIFTING EYES OF TOP SIDEWALL. REMOVE SPREADER PINS FROM THE UPPER PORTION OF THE SPREADERS. LIFT THE TOP SIDEWALL FROM THE SPREADERS.



4) UNPIN SPREADERS FROM THE LOWER SIDEWALL AND REMOVE SPREADERS.


USING A TRENCH SHIELD IN STABLE SOIL

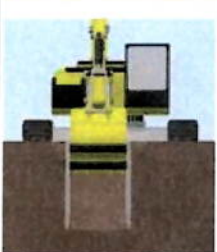

1) EXCAVATED TO GRADE JUST SLIGHTLY WIDER THAN THE TRENCH SHIELD. DIG WALLS VERTICAL TO MINIMUM OF 18" BELOW THE TOP OF THE SHIELD. SLOPE SOILS ABOVE SHIELD ACCORDING TO MANUFACTURER'S TABULATED DATA. INSTALL SHIELD IN TRENCH.



2) PERFORM DESIRED WORK, THEN EXCAVATE IN FRONT OF THE TRENCH SHIELD.

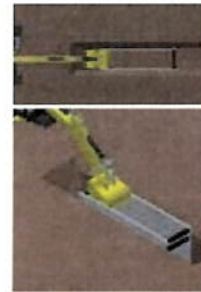


3) PULL SHIELD FORWARD BY FRONT TOP SPREADER PIPE OR PULLING EYES. PULLING EYES SHALL BE USED WITH SPREADERS WIDER THAN 72" OR WHEN SOIL PRESSURE IS SEVERE ENOUGH TO CAUSE SPREADER TO DEFLECT. CONTINUE EXCAVATING AND PULL SHIELD FORWARD, BACKFILL AS WORK PROGRESSES.


USING A TRENCH SHIELD IN UNSTABLE SOIL



1) EXCAVATE UNTIL SOIL BEGINS TO CRUMBLE BEYOND DESIRED TRENCH WIDTH. PLACE SHIELD IN LINE OF EXCAVATION AND EXCAVATE FROM WITHIN.

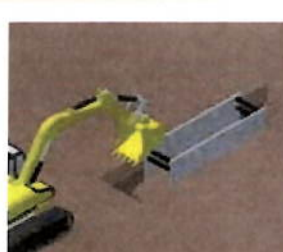

2) CONTINUE EXCAVATING WITHIN SHIELD WHILE ALTERNATELY PUSHING DOWN ON SHIELD CORNERS UNTIL PROPER GRADE IS REACHED.

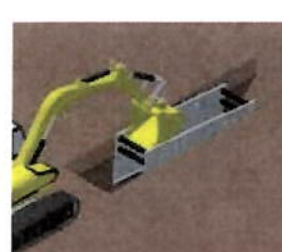

3) PERFORM DESIRED WORK, THEN PULL SHIELD FORWARD AND UP AT APPROPRIATE ANGLE AND REPEAT PREVIOUS STEPS AS NECESSARY.