

OWNER'S MANUAL

CARE AND MAINTENANCE

Congratulations on your Safariland purchase. You have selected a product with construction technology that is unique and state of the art in the manufacturing of holsters, belts, and accessories.

This Safariland holster product can be cleaned by wiping with a damp cloth. Disinfectants will not harm the material.

It is important to note that most natural man-made products may eventually "wear out" or become unsuitable for the function for which they were designed. Stress and strain placed on any given holster vary according to usage; therefore it is difficult to indicate a recommended replacement date. It is the user's responsibility to assure after use, that the holster is able to continue service within its design parameters.

It is the user's responsibility to inspect products daily for signs of excessive wear or loss of retention of the handgun, and tightness of all screws and hardware. If any possible problem is detected or any doubt exists, do not use. Contact the Safariland Customer Care at (800) 347-1200.

Read and understand all owner's manuals, instructions, and guides prepared by the manufacturer your handgun.

OWNER'S MANUAL

WARRANTY

EXPRESS LIMITED WARRANTY FOR HOLSTER AND ACCESSORY PRODUCTS

Safariland™ (the "Company") warrants its holster products to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty is subject to the proper Care and Maintenance of the product and proper use of the product as detailed in the Consumer and Safety Information.

If you believe this product has any defects in materials or workmanship, cease use immediately and contact customer service for a remedy. If a product proves to be defective in material or workmanship, we will repair or replace the product and send it to you at the Company's expense. All returns must include the proof of purchase and documentation specifying the claimed defect.

This is a LIMITED WARRANTY, and is the sole and exclusive warranty of this product by the Company. It shall not be enlarged by any representations, descriptions, course of dealing, trade usage, rendering of technical advice, service or otherwise. Furthermore, it shall not be altered or expanded by any acts, statements, or agreements of any dealer, employee or agent of the Company (other than by a duly authorized officer of the Company).

THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY.

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES, ANTICIPATED OR LOST PROFITS, INCIDENTAL DAMAGES, LOSS OF TIME, OR OTHER INDIRECT LOSSES OR EXPENSES THAT ARISE FROM ANY CAUSE RELATING TO THE PRODUCT, REGARDLESS OF THE FORM OF THE ACTION, WHETHER IN TORT (INCLUDING NEGLIGENCE), CONTRACT, STRICT LIABILITY OR OTHERWISE, AND REGARDLESS OF WHETHER THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For any warranty issue, please contact customer care for a prompt resolution to your concern at the number provided below.

Safariland, LLC

3120 E. Mission Blvd.

Ontario, CA 91761

Customer Care: 800.347.1200 (USA Only) or 909.923.7300

**THE SAFARILAND
GROUP**

©2017 Safariland, LLC 1204632-0118

OWNER'S MANUAL

SAFARILAND® USER'S GUIDE

MODEL 557



557



SAFARILAND

**READ AND UNDERSTAND ENTIRE
MANUAL BEFORE USING HOLSTER**

OWNER'S MANUAL

SAFARILAND® USER'S GUIDE



557

MODEL 557

OPERATING INSTRUCTIONS

STEP 1

In order to draw a handgun from a Safariland Model 557 holster, it is necessary to install on a dress or gun belt. The 557 comes with belt loops up to widths of 1.75"

STEP 2

Insert unloaded handgun straight down into holster. When placing a handgun in the holster, do not place finger in trigger guard, or near the trigger. Position trigger finger adjacent to but away from the trigger and, if possible, support tip of finger on the front of trigger guard. While inserting the handgun in the holster, always place thumb over the hammer or behind the slide. Be certain handgun is thoroughly seated in holster with trigger guard lock engaged. While holstering weapon, there should be an audible click that is felt to signify that the weapon has been fully holstered.

STEP 3

To draw handgun, obtain a shooting grip and draw straight out of the holster. A bit of resistance should be encountered until handgun is released from Ejection Port Detent.

CAUTIONS & WARNINGS

CAUTION: Prior to wearing the holster, the user must accomplish a draw from a fully secured holster in less than two seconds while under simulated stress or life-threatening situation. Have a partner time a surprise command to completed draw.

A handgun seated in a new holster will fit more tightly than after a reasonable break-in period has occurred. Thus, the holster should not be used with a loaded handgun or on duty until the under two-second drawing standard indicated above is accomplished. Should the holster remain tight after a reasonable break-in period, apply a liberal amount of silicone spray to the inside of the holster. Should the holster continue to bind or remain tight and adjusting it does not help, **cease use immediately** and contact the Safariland Customer Care department at (800) 347-1200.

CAUTION: Practice and training as prescribed in this manual are mandatory prior to using the holster on duty. Do not use a loaded handgun during practice and training. Practice using the holster with an unloaded handgun until thoroughly competent and proficient in its safe use.

Regular practice to assure proficiency is using the holster must be continued as long as it is to be used. The amount of practice and training required will depend upon the dexterity, coordination and prior experience with holsters and handguns of each particular user.

Improper or careless use of a firearm and holster may result in serious injury or death. It is the user's responsibility to have thorough knowledge of and be properly trained in all aspects of firearm and holster safety and use.

- Do not place a loaded handgun in a holster without first testing the holster for proper fit with the handgun in an unloaded condition.
- Do not carry any handgun with a round in the chamber unless you have received professional training in the use of the handgun and holster and are willing to assume responsibility and risk (including accidental discharge) of carrying a loaded handgun.
- If your handgun is equipped with a safety lever, be sure that safety is engaged when holstering the handgun.
- When drawing a handgun from a holster or placing it into a holster, do not place finger in the trigger guard or near the trigger guard. Position trigger finger adjacent to but away from the trigger and, if possible, support the tip of the finger on the front of the trigger guard.
- When putting a handgun in the holster always place thumb over the hammer or behind the slide.
- Never holster any semi-automatic handgun in a single-action mode (except handguns which are single action only; ex. Colt 1911 or the Browning Hi-Power).
- Do not attempt to cock a holstered handgun as this can cause severe damage to the handgun or holster or both and may contribute to an accidental discharge.
- Always place hand on the handgun and holster when running or performing other vigorous activity.
- Do not use customized, modified, worn or broken handguns or those that are not of original manufacturer's specifications in Safariland holsters.
- Do not, in any way modify, disassemble or remove any part from this holster.

- Do not expose this holster to extreme heat conditions.
- Do not leave holster in trunk of vehicle during extremely hot weather.
- Do not rely on any holster being "snatch proof". There is no such holster. Rely only on extensive, proper training and vigilance.
- It is the user's responsibility to properly maintain the holster by checking components such as snaps, screws, etc for proper function.
- Be aware that handguns with lights mounted to them create an opening in the holster that could possible allow access to the trigger.

WARNING! Never store your Safariland holster or accessories near a heat source. Space heaters, radiators, heating registers, fireplaces, or other heating sources emit high temperatures that can deform or destroy the polymer from which many Safariland products are manufactured. The non-reflective surface on Safariland products will efficiently absorb radiant heat and can reach temperatures in excess of 200 F, even several feet away from certain heating source. Exposure to high heat in some cases can cause the handgun to be locked into place. If accidental high heat exposure has occurred immediately remove product from heat. Allow product to cool to room temperature and operate to ensure correct function.

Failure to heed these warnings or follow the operating instructions may result in accidental discharge of a handgun causing serious injury or death.

Safariland holsters are designed to carry specific handguns. Before use, be sure holster selected is designed to carry corresponding handgun. If there is any doubt, do not use the holster. Contact the Safariland Customer Care department at (800) 347-1200. Carrying a handgun in an ill-fitting or improper holster can result in serious injury or death.

The purchase and use of this Safariland holster is done at the sole and exclusive risk of the user.