

**WARNING** — To reduce the risk of

burns, electrocution, fire, or injury to persons:

5. Use only in a dry area.

4. Do not place for an appliance that has fallen

into water. **Unplug immediately.**

3. Do not place in, or drop into water or

other liquids.

2. Do not place or store appliance where it can

fall or be pulled into a tub or sink.

**After use and before cleaning.**

To reduce the risk of death by electric shock:

live even when the switch is off.

**DANGER** — Any appliance is electrically

## READ ALL INSTRUCTIONS BEFORE USING

When using electric appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## IMPORTANT SAFETY INSTRUCTIONS

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## INSTRUCCIONES DE USO

## INSTRUCCIONES DE USO

- Llene el depósito de agua con agua destilada.
- Enchufe el cable en una toma de corriente.
- Presione el botón ON/OFF para encender el aparato; la pantalla digital se encenderá y empezará a parpadear. Deje que el aparato se caliente por 25 segundos. El aparato está listo para su uso cuando la pantalla digital deja de parpadear y permanece encendida.
- Mantenga presionado el botón STEAM por 1 segundo para activar el vapor. Para desactivarlo, mantenga presionado el botón STEAM por 1 segundo otra vez.
- Sostenga el aparato de tal manera que el vapor no esté dirigido a nadie. Para activar el sensor inteligente “SMART TOUCH”, mantenga presionado el botón SMART por 1 segundo; la luz LED azul se encenderá, lo que indica que el sensor inteligente está activo.
- Para planchar a vapor, mantenga presionado el botón MODE por 1 segundo, repetidamente, para elegir uno de los 6 ajustes de vapor, desde “1” el más bajo (para telas delicadas) hasta “6” el más alto (para telas gruesas y arrugas persistentes).
- Agarre el aparato y empiece a planchar.
- Al colocar el aparato en una superficie plana, el sensor inteligente desactiva automáticamente el vapor. Para volver a activar el vapor, simplemente agarre el aparato.

any opening.

9. Never drop or insert any object into

electrical. Do not change the plug in any way.

the plug. If it still does not fit, contact a qualified

19. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.

18. Do not hold hand in front of steam.

17. Burns could occur from touching hot parts, to disconnect.

16. Never yank cord to disconnect from outlet; instead, grasp plug and pull

15. Do not operate steamer without properly

filling the water container with distilled water.

14. Unplug this appliance before filling or

emptying the water container and when not in

use.

13. Do not place the steam nozzle directly on

any surface or on the appliance power cord

while it is hot or plugged in.

12. Surfaces of this appliance are hot when

in use. Do not let heated surfaces touch eyes

or skin.

11. If an extension cord is absolutely necessary,

rated for less amperage may overheat. Care

should be taken to arrange the cord so that the

cord cannot be pulled or tripped over.

10. Do not use outdoors or operate where

aerosol (spray) products are being used or

from condensation. Ensure that the unit is off,

an attachment, as it may contain hot water

with hot water.

22. When emitting steam, this appliance may

cause burns if it is used too close to the skin

or eyes, or if it is used incorrectly. To reduce

the risk of contact with hot water emitting from

the steam vents, test appliance before use by

holding it away from the body.

21. Never steam clothes you, or someone else,

are wearing.

20. Use caution when installing or removing

an attachment, as it may contain hot water

with hot water.

19. To reduce likelihood of circuit overload, do

not operate another high-wattage appliance on

the same circuit.

18. Do not hold hand in front of steam.

17. Burns could occur from touching hot parts,

to disconnect.

16. Never yank cord to disconnect from

outlet; instead, grasp plug and pull

15. Do not operate steamer without properly

filling the water container with distilled water.

14. Unplug this appliance before filling or

emptying the water container and when not in

use.

13. Do not place the steam nozzle directly on

any surface or on the appliance power cord

while it is hot or plugged in.

12. Surfaces of this appliance are hot when

in use. Do not let heated surfaces touch eyes

or skin.

11. If an extension cord is absolutely necessary,

rated for less amperage may overheat. Care

should be taken to arrange the cord so that the

cord cannot be pulled or tripped over.

10. Do not use outdoors or operate where

aerosol (spray) products are being used or

from condensation. Ensure that the unit is off,

an attachment, as it may contain hot water

with hot water.

22. When emitting steam, this appliance may

cause burns if it is used too close to the skin

or eyes, or if it is used incorrectly. To reduce

the risk of contact with hot water emitting from

the steam vents, test appliance before use by

holding it away from the body.

21. Never steam clothes you, or someone else,

are wearing.

20. Use caution when installing or removing

an attachment, as it may contain hot water

with hot water.

19. To reduce likelihood of circuit overload, do

not operate another high-wattage appliance on

the same circuit.

## SAVE THESE INSTRUCTIONS

holding it away from the body.

21. Never steam clothes you, or someone else,

are wearing.

20. Use caution when installing or removing

an attachment, as it may contain hot water

with hot water.

22. When emitting steam, this appliance may

cause burns if it is used too close to the skin

or eyes, or if it is used incorrectly. To reduce

the risk of contact with hot water emitting from

the steam vents, test appliance before use by

holding it away from the body.

21. Never steam clothes you, or someone else,

are wearing.

20. Use caution when installing or removing

an attachment, as it may contain hot water

with hot water.

19. To reduce likelihood of circuit overload, do

not operate another high-wattage appliance on

the same circuit.

18. Do not hold hand in front of steam.

17. Burns could occur from touching hot parts,

to disconnect.

16. Never yank cord to disconnect from

outlet; instead, grasp plug and pull

15. Do not operate steamer without properly

filling the water container with distilled water.

14. Unplug this appliance before filling or

emptying the water container and when not in

use.

13. Do not place the steam nozzle directly on

any surface or on the appliance power cord

while it is hot or plugged in.

12. Surfaces of this appliance are hot when

in use. Do not let heated surfaces touch eyes

or skin.

11. If an extension cord is absolutely necessary,

rated for less amperage may overheat. Care

should be taken to arrange the cord so that the

cord cannot be pulled or tripped over.



and is secure.

7. Close the inlet cover and return the reservoir

to its place, making sure that it snaps in place

water system.

We recommend that you use distilled water

only, as this will prevent mineral deposits in the

boiler that can reduce performance or clog the

distilled water (which can be found in grocery

stores).

6. Open the inlet cover and fill the reservoir with

of the water reservoir.

5. The rubber inlet cover is located on the top

body.

4. Pull the reservoir out, away from the steamer

aligned.

3. Turn the water reservoir until unlock mark

water reservoir by the other hand.

2. Hold the unit handle by one hand, and grasp

1. Make sure the unit is unplugged.

### IMPORTANT FOR HOUSEHOLD USE ONLY

17. Las superficies, el agua y el vapor calientes

pueden causar quemaduras. Ten cuidado

al vaciar el depósito de agua o al voltear el

aparato, puesto que puede haber agua caliente

en el depósito. Siempre oriente la boquilla de tal

manera que el vapor no esté dirigido a nadie,

incluso cuando encienda el aparato.

18. No ponga la mano frente al vapor.

19. Para evitar el riesgo de sobrecarga, no

conecte otro aparato de alta potencia al mismo

circuito eléctrico que este aparato.

20. Tenga cuidado al quitar accesorios,

puesto que pueden contener agua caliente.

Compruebe que el aparato esté apagado y que

los accesorios estén secos y fríos antes de

manipularlos.

21. Nunca use el aparato en prendas que usted

o alguien lleven puestas.

22. El vapor que sale de la boquilla puede

causar quemaduras si se usa el aparato muy

cerca de la piel, del cuero cabelludo o de los


ojos, o si se usa de forma incorrecta. Para

reducir el riesgo de quemaduras, prueba el

vapor lejos de su cuerpo antes de usar el

aparato.

## GUARDE ESTAS INSTRUCCIONES

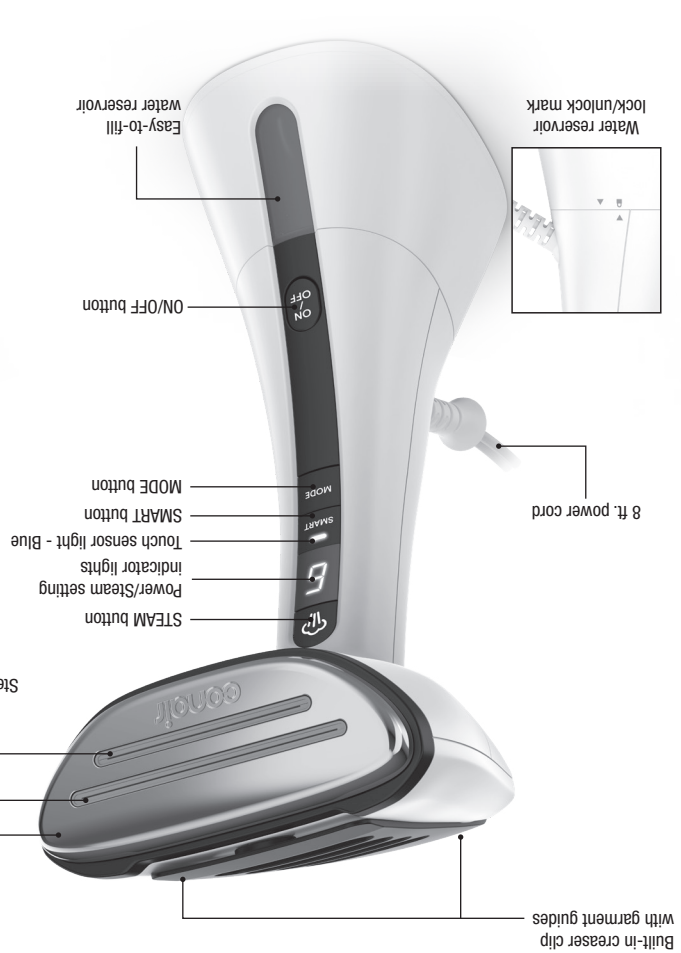

### GETTING TO KNOW YOUR STEAMER

completamente antes de guardarlo. Enrolle el

cable sin apretar alrededor del aparato para

guardarlo.

8. Para reducir el riesgo de descarga eléctrica,

el cable de este aparato cuenta con un enchufe

polarizado (una pata es más ancha que la otra).

Como medida de seguridad, se podrá enchufar

de una sola manera en las tomas de corriente

polarizadas. Si no entra en la toma de corriente,

inviértalo. Si aún así no entra completamente,

comuníquese con un electricista. No intente

modificar el enchufe de ninguna manera.

9. Nunca deje caer ni inserte ningún objeto en

ninguna de las aberturas.

10. No use este producto en exteriores, ni

donde se estén usando productos en aerosol

(spray) o donde se esté administrando oxígeno.

11. Si debe usar un alargador, use uno de 15

amperios. Un alargador de menor amperaje

puede calentar excesivamente. Coloque el

alargador de tal manera que nadie lo pueda

jalar o tropezar con él.

12. Las superficies de este aparato se ponen

muy calientes durante el uso; mantenga los ojos

y la piel alejados de las superficies calientes.

13. No coloque la boquilla en ninguna superficie

mientras esté caliente o mientras el aparato

está enchufado, y manténgala alejada del cable

eléctrico.

14. Siempre desenchufe el aparato antes de

llenar o vaciar el depósito de agua, y cuando no

esté en uso.

15. Siempre llene el depósito de agua con agua

destilada *antes* de encender el aparato.

16. Nunca jale el cable para desenchufar el

aparato; agárrelo por el enchufe.

9. To manually turn off the SENSOR mode, press

pick up steamer and begin steaming.

8. Once steamer is placed down and your hand

releases, the SMART TOUCH SENSOR goes into

auto pause. To restart the steamer again, simply

pick up steamer and begin steaming.

7. Pick up steamer and begin steaming.

articles.

6. Your steamer has a steam rate for use on

delicate fabric, while 6 indicates the highest

steam rate for use on delicate fabric, while 6

indicates the minimum steam rate for use

on one full second until you reach desired setting.

5. Point the steam jets away from you. To

activate the SMART TOUCH SENSOR, press and

hold the “MODE” button for one full

second and the blue LED light will lit up. The

SMART TOUCH SENSOR is active.

4. Press and hold the “STEAM” button for one

full second to start steaming. Press and hold

the “STEAM” button for one full second again to

stop steaming.

3. Press the ON/OFF button located in front of the

steamer to turn the unit on. The digital display

will illuminate and begin blinking. Allow 25

seconds for the unit to warm up. The appliance

stops blinking and remains solid.

2. Plug the unit into the electrical outlet.

1. Fill water reservoir with distilled water.

## CONSERVE PARA FUTURA REFERENCIA. LEA CUIDADOSAMENTE.

## MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en

presencia de niños, siempre se deben tomar

precauciones básicas de seguridad, entre ellas

las siguientes:

## LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

riesgo de quemaduras, electrocución, incendio

o lesiones personales:

1. **Nunca descuide/deje el aparato sin**

