

*Sunbeam*<sup>®</sup>

Includes  
**QUICK  
SET-UP  
GUIDE**  
pages 4-5

heated bedding  
USER MANUAL

TRUSTED FOR OVER  
**100 YEARS**

P.N. 174822

# **IMPORTANT INSTRUCTIONS DO NOT DESTROY**

## **WARNINGS AND SAFEGUARDS**

**AS WITH ALL ELECTRICAL PRODUCTS, MISUSE OF PRODUCT OR FAILURE TO PROPERLY FOLLOW THE INSTRUCTIONS MAY CAUSE OVERHEATING, FIRE OR PERSONAL INJURY. PLEASE READ THE PRODUCT LABEL AND ALL OF THE INSTRUCTIONS BEFORE USING YOUR HEATED PRODUCT.**

- 1. DO NOT USE THIS HEATED PRODUCT WITH AN INFANT, A CHILD, AN INCAPACITATED OR IMMOBILE PERSON, A PARAPLEGIC, A QUADRIPLAGIC, A DIABETIC, ONE INSENSITIVE TO HEAT SUCH AS A PERSON WITH POOR BLOOD CIRCULATION, OR ANYONE WHO CANNOT CLEARLY UNDERSTAND THE INSTRUCTIONS AND/OR OPERATE THE CONTROLS.**
- 2. DO NOT USE BLANKET/MATTRESS PAD ON A WATERBED, SOFA, BUNK BED OR MECHANICALLY ADJUSTABLE BED AND DO NOT USE THROW ON A WATERBED, BUNK BED OR MECHANICALLY ADJUSTABLE BED.**
- 3. FOR THROW BLANKETS: DO NOT USE WITH ROCKING CHAIRS, RECLINERS, CHAIRS WITH CASTERS OR WHEELS, OR OTHER FURNITURE SUBJECT TO MOVEMENT.**
- 4. DO NOT USE WITH ANOTHER ELECTRICALLY HEATED PRODUCT SUCH AS A BLANKET, MATTRESS PAD OR THROW.**
- 5. DO NOT ROUTE ELECTRICAL CORDS BETWEEN THE MATTRESS AND BOX SPRING. DO NOT ALLOW THE CORDS TO BE PINCHED.**
- 6. DO NOT USE WITH DAMAGED CORDS. DAMAGED CORDS CAN LEAD TO POSSIBLE OVERHEATING OR FIRE.**
- 7. WRAPPING THE CORD AROUND THE CONTROLLER MAY DAMAGE THE CORD. LOOP LOOSELY WHEN STORING.**
- 8. DO NOT DRY CLEAN THIS HEATED PRODUCT. CLEANING LIQUID MAY DAMAGE THE INSULATION OF THE HEATING ELEMENT. IMPROPER LAUNDERING MAY CAUSE PROBLEMS WITH THE HEATING WIRE WHICH CAN LEAD TO FIRE.**
- 9. DO NOT TUCK IN, PINCH, FLEX OR EXPOSE THE HEATING WIRE. DO NOT WRAP OR TUCK THE HEATED PRODUCT, SUPPLY CORD OR CONTROL IN A SOFA OR OTHER FURNITURE. ALL PORTIONS OF THE HEATED PRODUCT AND CONTROLLERS SHOULD BE VISIBLE AT ALL TIMES.**
- 10. TURN OFF OR UNPLUG THE CONTROL FOR THE HEATED PRODUCT WHEN NOT USING.**

11. CONTROLLER IS NOT WATERPROOF. DO NOT IMMERSE IN WATER.
12. KEEP THE CONTROL AWAY FROM DRAFTY AREAS THAT MAY BECOME DAMP OR WET SUCH AS AN OPEN WINDOW.
13. DO NOT USE PINS; THEY MAY DAMAGE THE ELECTRIC WIRING.
14. BE SURE THIS BLANKET/MATTRESS PAD/TROW IS USED ONLY ON AN AC SUPPLY CURRENT CIRCUIT OF 110-120 VOLTS 60 HZ. DO NOT USE WITH AN EXTENSION CORD. DO NOT USE WITH GENERATORS, POWER CONVERTERS, OR INVERTERS.
15. THE PRODUCT MAY EXPERIENCE INCREASED HEAT IN AREAS WHERE HEATED PRODUCT IS BUNCHED OR FOLDED WHILE IN USE.
16. KEEP ALL DOGS, CATS AND OTHER PETS AWAY FROM THIS HEATED PRODUCT. THIS IS AN ELECTRICAL APPLIANCE THAT THEY CAN DAMAGE OR BE INJURED BY.
17. USE THE PROPER SIZE BLANKET/MATTRESS PAD FOR YOUR BED. FOR EXAMPLE, USE A TWIN SIZE WARMING BLANKET ON A TWIN SIZE BED.
18. NOT FOR HOTEL, MOTEL OR OTHER INSTITUTIONAL USE.
19. IF IMPROPER OPERATION OF THIS PRODUCT IS OBSERVED, UNPLUG IMMEDIATELY, DISCONTINUE USE AND CALL SUNBEAM CONSUMER CARE IN THE U.S AT 800-892-7684 OR IN CANADA AT 800-667-8623.
20. CHECK WITH YOUR HEALTHCARE PROVIDER BEFORE USING WITH A PACEMAKER OR ANY MEDICAL DEVICES.
21. THROW CONTROLLERS MUST NOT BE WRAPPED, COVERED OR TUCKED WHEN OPERATING.

## **SAVE THESE INSTRUCTIONS; DO NOT DESTROY**

### **POLARIZED PLUG:**

Plug power cord into a 110-120 volt wall outlet. Do not attempt to force the plug. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit only one way into an outlet. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature



**IF THE FOLLOWING IMPORTANT INSTRUCTIONS ARE NOT FOLLOWED, THE HEATED PRODUCT WILL NOT OPERATE PROPERLY.**

# QUICK SET-UP GUIDE

## Mattress Pad & Blanket

### TWIN/FULL SINGLE CONTROL SET-UP

**STEP 1** Place on bed with label at foot of bed facing out

**STEP 2** Connect the Control Cord connector and module securely

Control Cord Connector



 
Flag Tag

**STEP 4** Plug Power Cord into wall

Power Cord  
Control

**STEP 3** Run Control Cord under the bed

### BASE UNIT FOR REMOTE CONTROL SET-UP

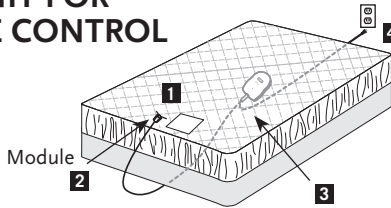

Run Base Unit Cord under the bed

### QUEEN/KING/CALIFORNIA KING DUAL CONTROL SET-UP

**STEP 1** Place on bed with label at foot of bed facing out

**STEP 2** Connect the Control Cord connector and module securely

Control Cord Connector



Left (Secondary) Control

Left Side

**STEP 4** Plug Power Cord into wall

Power Cord

Right (Primary) Control  
(Label on back of control)

 
**STEP 3** Run Control Cord under the bed

# QUICK SET-UP GUIDE

## Heated Throw

**STEP 1** Connect the Control Cord connector and module securely

**STEP 2** Plug Power Cord into wall

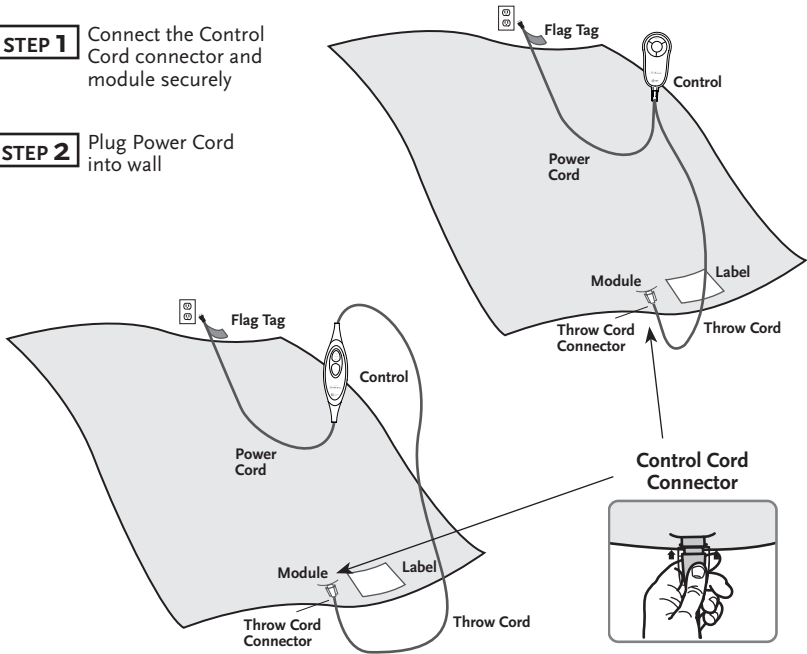

**PLEASE** follow these directions in the order they are given to ensure your product will work correctly. Do not turn on the product until it has been fully assembled.

### CAUTION:

- Always make sure cords and controls are NOT trapped or pinched between bed slats, mattress, springs, against wall, foot board or bed frame, or between furniture, walls or chairs.
- Do not plug main power cord into the wall outlet until you have completely set up your heated product per the instructions.



# Table of Contents

Quick Set-Up Guide..... 4-5

Heated Blanket, Mattress Pad and Comforter

    Setup..... 7

    Controllers..... 8-10

Heated Throw

    Setup..... 11

    Control Features..... 11

Care and Cleaning..... 12

Frequently Asked Questions..... 13-14

Warranty..... 15-16

How to Obtain Warranty Service..... 16

**DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.**  
If you have any questions while setting up or using your product, please visit us on the World Wide Web at: [www.sunbeam.com](http://www.sunbeam.com) or contact Sunbeam Consumer Care in the U.S. at (800) 892-7684 or in Canada at (800) 667-8623.



- CAUTION:** Do not plug main power cord into the wall outlet until you have completely set up your heated product per the instructions.
- Disconnect power cord from wall before detaching control from heated product.
  - Always make sure cords and controls are NOT trapped or pinched between bed slats, mattress, springs, against wall, foot board or bed frame, or between furniture, walls or chairs.

 
**CAUTION:** Do not attempt to force the plug. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit only one way into an outlet. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

# Heated Blanket, Mattress Pad and Comforter Setup


- 1 Place the heated blanket/mattress pad on the bed with the label at the foot of the bed facing upward.
- 2 Connect the cord into the module at the bottom of the heated blanket/ mattress pad until the plastic hinges click into place.  
**CAUTION:** Cord must be COMPLETELY CONNECTED. A risk of fire could result from a loose connection.
- 3 Run the control cord on the floor under the bed. Do not sandwich cord between the mattress and box spring. Avoid any tangling or pinching.
- 4 Plug power cord into a 110-120 volt wall outlet.  
**CAUTION:** Do not use with generator power.

## Control Placement:

- **Dual Control for heated blanket or mattress pad** – place primary control (label on back of control) on the right side of the bed.

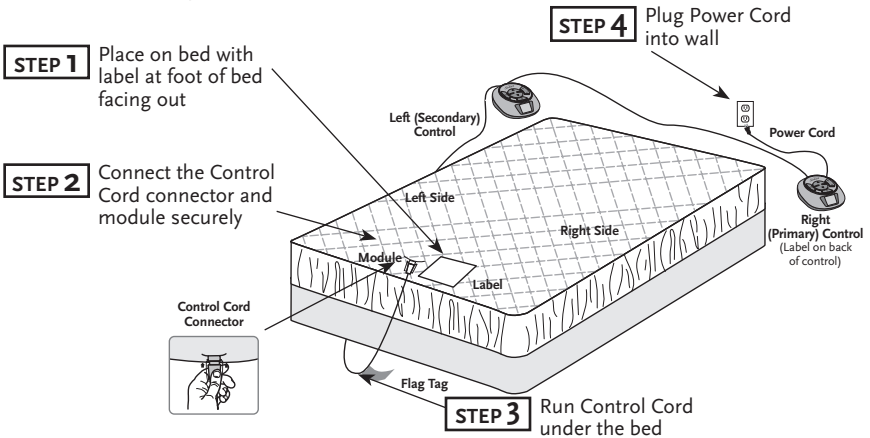

 - **Single Control for heated blanket or mattress pad** – the control can be placed on either side of the bed.

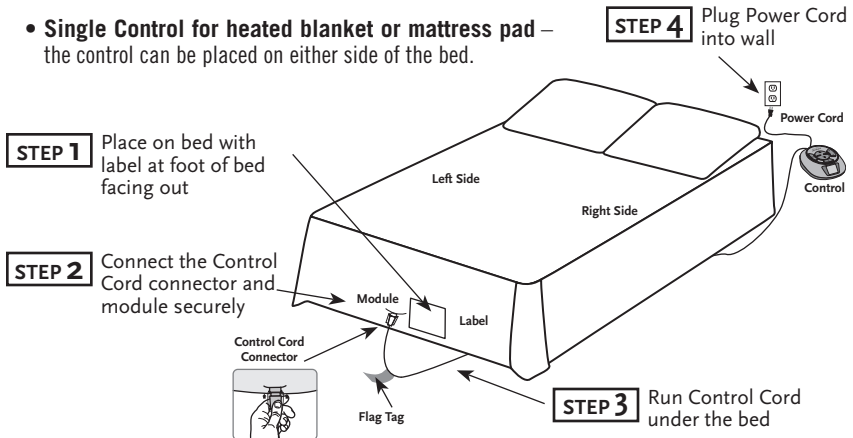

See Control Features on page 8 for your individual control.

If there is a flashing light or your control displays a flashing "F", "FF", "F1" or "F2" see page 8.

# Control Chart

	OneSet™	SimpliTouch™ SimpliTouch™ Pro	EasySet™ Pro	StyleSmart™ II	ComfortSet™	SelectTouch™	ChoicePlus™	DesignSmart™	ChoiceTouch™	EliteStyle™	PrimeStyle™ AO	EliteStyle™ II
Style # (Single Control)	Y85	K85P	S85/S85A	U85/U85A	O85	P85/ P85A	85P	W85/ W85A	X85/X85A			
Style # (Dual Control)	Y85KQ	K85KQP	S85KQ/ S85KQA	U85KQ/ U85KQA	O85KQ	P85KQ/ P85KQA	85KQP	W85KQ/ W85KQA	X85KQ/ X85KQA	N85AP Throw	M85AP Throw	T85A Throw
Backlit Display					*	*	*	*	*			
LED Display				*								
Ambient Temperature Compensation						*		*	*			
Auto-Off	10 hour	10 hour	10 hour* (S85A, S85KQA)*	10 hour	10 hour	Select	10 hour	Selectable A/O 2, 6 or 10 hour	Selectable A/O 2, 6 or 10 hour	3 hour	3 hour	3 hour
Warming Settings	5	10	10	10	10	20	20	10	10	3	3	3
Preheat				*	*	*	*	*	Programmable			
Easy Grip		*	*				*			*	*	*

\* S85KQA only

If your controller does not appear on the chart, please visit our website for more information.

## Control Features

(for all controllers except DesignSmart™ and ChoiceTouch™, see page 9 for detailed features.)



Auto-Off

### Auto-Off Feature:

The “Auto-Off” feature is designed for conservation of energy by automatically turning your blanket or mattress pad off after 10 hours of continuous use (3 hours for throws).

### For Dual Controls:

Each control operates independently and will turn off 10 hours after the control is turned “On”.

### Auto-Off Select\* Feature (selected models only):

Some models with the “Auto-Off” feature (see control chart) offer an “Auto-Off Select” button that can disable the “Auto-Off” feature so the heated product will not automatically turn off.

Controls with the “Auto-Off Select” feature have the “Auto-Off” active as the default so the heated product will automatically turn off after 10 hours.

To disable the “Auto-Off”, press the “Auto-Off Select” button. The word “StayOn” will appear in the digital display to indicate the “Auto-Off” feature is deactivated and the heated product will NOT automatically turn off after 10 hours. The heated product will remain on until the product is manually turned off by pressing the “On/Off” button.

To activate auto-off, press the “Auto-Off Select” button. The word “AutoOff” will appear in the digital display to indicate the “Auto-Off” feature is activated and the heated product will automatically turn off after 10 hours.

**Note:** After a power outage, the “Auto-Off” feature automatically resets the timer.

### To restart all heated products after a power failure:

Press the power button and the heated product will begin to warm.

### **Preheat Feature** (selected models only):

The preheat function will heat the bed for a period of 30 minutes and the control will return to its original setting.

- 1 To use the preheat feature, simply turn on the warming product by pressing the “On/Off” button and then press the “Preheat” button. The display will show “PH” while the function is activated.
- 2 To reset the preheat feature, simply turn off the control by pressing the “On/Off” button and then turn it back on by pressing the “On/Off” button.

### **Using Your Control:**

1 To turn the control on, press the “On/Off” button.

**Note:** For SelectTouch™, ComfortSet™, and ChoicePlus™ controls, the backlit display light will reset itself by flashing “88” and then will return to the previous setting and will begin to warm.

- 2 **Note:** For OneSet™ control, press the button to turn on to the lowest heat setting. Repeat pressing the button to scroll to desired heat setting (5 total). To turn off, scroll through heat settings until all LED indicator lights turn off.
- 3 Adjust the warming setting to your personal comfort by rotating the top knob left or right for ChoicePlus™, SimpliTouch™, and EasySet™ controls.
- 4 **Note:** For SelectTouch™ and ComfortSet™ controls, press the large left button with the “-” sign to lower the heat setting and the large right button with the “+” sign to increase your heat setting.
- 5 To turn the heated blanket/mattress pad OFF, press the “On/Off” button.

**CAUTION:** ALWAYS turn the heated blanket/mattress pad “OFF” when not in use.

## **DesignSmart™ Controller**

### **Selectable Auto Off:**

You can set the auto-off time at 2hrs, 6hrs or 10hrs.

- 1 To use the auto-off feature, Press the Mode button until the “Auto-Off” words begin to flash.
- 2 While the “auto-off” is flashing, use the + (dimmer increase) and - (dimmer decrease) buttons to scroll through the 3 auto off options.

Auto off will be set at the highlighted time. (The control will remember the auto off setting unless AC power is disconnected.

If no button is pressed after 6 seconds, the highlighted setting will be set.

### **Preheat:**

The preheat function will heat the bed for a period of 30 minutes and the control will return to its original setting.

- 1 Press the mode button until “Preheat” appears on the screen. The preheat will then start.
- 2 To turn off the Preheat feature press the mode button until the “Preheat” disappears from the screen or press the On/Off button to power off the unit.

### **Heat Adjustment:**

There are 10 settings from Low to Hi.

To adjust the heat setting, simply press the + (raise heat temp) or the – (lower heat temp) on the large circular button in the center of the control.

### **Dimmer:**

Your controller gives you the ability to adjust the brightness of the display.

To adjust the brightness, Press the + (dimmer increase) or the – (dimmer decrease) buttons to change the brightness level.

## **ChoiceTouch™ Controller**

### **Setting the clock:**

1. Turn the unit over to find the Slide switch.
2. Slide the switch to Time Set. The clock will begin to flash.
3. Press the + (dimmer increase) or the – (dimmer decrease) buttons to scroll through the time. (if you hold down the button, the time will scroll at a faster pace).

**Note:** there is a P to the right of the clock to denote PM.

4. Release the button to stop at the desired time.
5. When the desired time has been reached, slide the switch to the center position to save the time and return to normal operation.

**Note:** The clock will blink until the time has been set.

The control will remember the time settings unless AC power is disconnected.

### **Selectable Auto Off:**

You can set the auto-off time at 2hrs, 6hrs or 10hrs.

If the personalized options are not selected, the auto off feature is designed for conservation of energy by automatically turning your blanket or mattress pad off after 10 hrs of continuous use.

To use the auto-off feature, Press the Mode button until the “Auto-Off” words begin to flash.

While the “auto-off” is flashing, use the + (dimmer increase) and - (dimmer decrease) buttons to scroll through the 3 auto off options.

Auto off will be set at the highlighted time. (The control will remember the auto off setting unless AC power is disconnected.

If no button is pressed after 6 seconds, the highlighted setting will be set.

### **Preheat:**

The preheat function will heat the bed for a period of 30 minutes and the control will return to its original setting. Your controller allows you to set the time that you would like your blanket to start preheating each night. That way you can always get into a cozy warm bed.

To set the preheat time with a set time

1. Make sure the clock has been set. To set the clock, please see the clock set instructions.
2. Set the time you would like the pre-heat to come on.
3. Turn the unit over to find the Slide switch. (if the clock has not been set, please see clock set instructions.)
4. Slide the switch to Preheat Time Set. The clock and “Preheat will flash”. Press the + (dimmer increase) or the - (dimmer decrease) buttons to scroll through the time. (if you hold down the button, the time will scroll at a faster pace).

**Note:** there is a P to the right of the clock to denote PM.

4. Release the button to stop at the desired time.
5. When the desired time has been reached, slide the switch to the center position to save the time and return to normal operation.

**Note:** The Preheat time will blink until you have set the Clock. Please set the Clock before you set the time you would like preheat to start.

The control will remember the time settings unless AC power is disconnected.

### **To use the preheat function without setting the time**

1. Press the mode button until Preheat flashes on the screen.
2. Press the + (dimmer increase) or – (dimmer decrease) to scroll through the options. Each press moves changes the options as follows:
  - Preheat On with the time displayed. This will set the preheat to turn on automatically at the pre-set time displayed. If you do not press any button for 6 seconds, the preheat time will be set and the unit will be ready to preheat at the set time.
  - Preheat On without the time displayed. This will start the preheat when you leave the mode setting. You can leave the mode setting by not pressing any button for 6 seconds.
  - Preheat off. This stops any preheat functionality.

If no button is pressed after 6 seconds, the last setting will be stored.

**Note:** When the Preheat Mode is set to turn on at the set time, the clock display will show the time the blanket will begin the preheat, not the actual time of day. This is to remind you when you have the blanket set to start preheat.

**Heat Adjustment:**

There are 10 Heat level settings from Low to Hi.

To adjust the heat setting, simply press the + (raise heat temp) or the - (lower heat temp) on the large circular button in the center of the control.

**Dimmer:**

You can adjust the brightness of the display.

Press the + (dimmer increase) or the - (dimmer decrease) buttons to change the brightness level.

## Heated Throw Setup

When setting up your heated throw, be sure to follow the steps below in order.

- 1 Locate the heated throw's information label near the module.
- 2 Connect the cord into the module at the bottom of the heated throw until the plastic hinges click into place. **CAUTION:** Cord must be COMPLETELY CONNECTED. A risk of fire could result from a loose connection.
- 3 Plug the [heated throw] power cord into a 110-120 volt wall outlet.

**CAUTION:** Do not plug main power cord into the wall outlet until you have completely set up your heated product per the instructions.

 
- Disconnect power cord from wall before detaching control from heated product.
- Always make sure cords and controls are NOT trapped or pinched between bed slats, mattress, springs, against wall, foot board or bed frame, or between furniture, walls or chairs.
- Do not wrap control in throw when in use.
- Do not use with generator power.

### Using Your Heated throw Control:



- 1 To turn on the throw press the button in the middle of the control. The indicator light will glow, depending on which setting the heated throw is set, and the heated throw will begin to warm.

**CAUTION:** ALWAYS turn the heated throw "OFF" and disconnect the power cord from the outlet when not in use.

- 2 To turn the heated throw OFF press the button through the different settings until the temperature setting lights are not glowing.

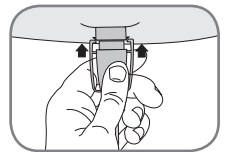

  If there is a flashing light on your control, see page 8.

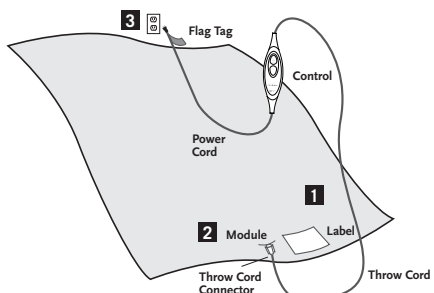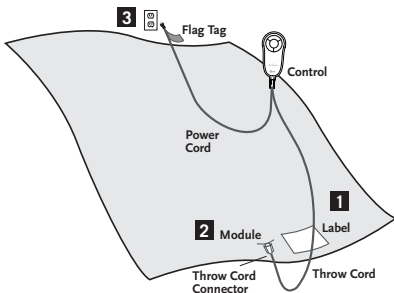

# Care and Cleaning OF YOUR HEATED BEDDING PRODUCT

We recommend washing before initial use.

## Before Washing or Storing Your Heated Bedding Product:

- 1 Disconnect power cord from wall BEFORE detaching control cord from the heated product.
  - 2 Ensure that no cords are still connected and none of the wires have worn through the fabric.
  - 3 Carefully follow all washing instructions or your heated product may shrink and possibly cause a fire hazard.
- DO NOT submerge control in water.
  - DO NOT dry clean your heated product. Dry cleaning solvents may damage the wires.
  - DO NOT use bleach or cleaning fluids.
  - DO NOT use a wringer.
  - DO NOT iron your heated product.
  - DO NOT use mothballs or sprays of any kind.
  - DO NOT reconnect the heated product or use it until it is COMPLETELY dry.
  - DO NOT wash or put into water the power cord or any of the product's cords.
  - DO NOT use analgesic cream in combination with your heated product.

Taking care of your heated product is easy and safe as long as you follow a few simple steps.

## Machine Washing

- 1 Presoak the blanket/mattress pad/throw for 15 minutes in mild soap and cold water.
- 2 Wash in mild soap and cold water on the "delicate" or "gentle" cycle in the washer for two minutes. Remember, do not use bleach.
- 3 Rinse in fresh, cold water.
- 4 Spin dry in the washing machine. Then gently stretch to its original size.

## Machine Drying

Caution: Do not use commercial dryers or the dryers at your local laundromat. They get too hot and would damage the wiring of the heated product.

- 1 Preheat the dryer on the "low" temperature setting for 2 minutes.
- 2 Place blanket/mattress pad/throw into the dryer and tumble dry for 10 minutes at a low temperature.
- 3 Remove the blanket/mattress pad/throw while it is still damp and gently stretch it to its original size.
- 4 Drape the heated product over a clothesline or a shower rod. DO NOT use clothespins.
- 5 Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

## Hand Drying

- 1 Gently stretch the blanket/mattress pad/throw back to its original size.
- 2 Drape the heated product over a clothesline or hang over a shower rod. DO NOT use clothespins.
- 3 Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

# Frequently Asked Questions

## ABOUT YOUR HEATED BEDDING PRODUCT

**Q** *Who should NOT use the heated blanket, heated mattress pad or heated throw?*

- A** The following people should NOT use the heated blanket, heated mattress pad or warming throw:
- An infant
  - A child
  - An incapacitated or immobile person
  - A paraplegic
  - A quadriplegic
  - A diabetic
  - Anyone insensitive to heat such as a person with poor blood circulation
  - Anyone who cannot clearly understand the instructions and/or operate the controls

**Q** *What do I do if my pet chews the cord, I lose my control or the control does not operate properly?*

- A** Please stop using the heated product immediately. Call our Consumer Service number listed under How to Obtain Warranty Service and ask for instructions on how and where to send the heated product.

 
**Q** *My control feels warm to the touch. Is this a problem?*

- A** No. The control will feel warm to the touch when functioning properly.

**Q** *My heated blanket/heated mattress pad/heated throw doesn't heat properly.*

- A** Your heated product is not a heating pad. It will not feel hot to the touch when laid out flat in a normal manner. Try the following fold test to see if it is operating properly:

- 1 Fold the heated blanket, heated mattress pad or warming throw 3 times over.
- 2 Make sure the control cord is connected to the module and then plug the power cord into an outlet.
- 3 Turn on your heated product, then turn the control to the highest setting and wait 5 to 7 minutes.
- 4 Put your hand between the folds and you should feel the blanket/ mattress pad/throw warming up.

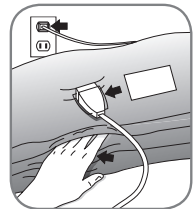

**Caution:** DO NOT continue the test for more than 7 minutes. DO NOT attempt to make any internal adjustments to this appliance. If you have tried all of the solutions above and the heated product still doesn't work, stop using it immediately, disconnect the power cord and contact Sunbeam Consumer Care.

**Q** *What does “F”, “FF”, “F1” or “F2” mean on my Electronic Digital Control?*

**A** The digital controls are designed to notify you in the event that a problem has been discovered by flashing “FF”, “F1” or “F2” on the display.

**FF** **Models: ChoicePlus™**  
Follow instructions below.

**F1** **Models: SelectTouch™, ComfortSet™**  
Follow instructions below.

**F2** **Models: SelectTouch™, ComfortSet™**  
Follow instructions below.

**F** **Models: StyleSmart™ II, DesignSmart™, ChoiceTouch™**  
Follow instructions below.

- 1.) Follow the instructions on the flag tag attached to the control cord to reset control.
- 2.) Check the blanket/mattress pad for visual damage.
- 3.) If no visual damage is found, unplug the system from wall outlet.
- 4.) Check that the control is well-connected to the module.
- 5.) Plug the power cord into the wall outlet.
- 6.) Set the control to “On”.
- 7.) If the system does not operate after 2 or 3 times trying to reset, disconnect the power cord and contact Sunbeam Consumer Care.

**Q** *What does a flashing light mean on my OneSet™, EasySet™, PrimeStyle™ A0 or EliteStyle™ control?*

**A** These controls are designed to notify you in the event that a problem has been discovered by flashing the light on the control. Follow instructions on the flag tag to reset control. First, check the heated product for visual damage. If no visual damage is found, unplug the system from wall outlet. Check that the control is well-connected to the module. Plug the power cord into the wall outlet and turn the control On. If the product still does not operate after 2 or 3 times trying to reset, disconnect the power cord and contact Sunbeam Consumer Care.

**PLEASE DO NOT RETURN THIS PRODUCT TO PLACE OF PURCHASE.**

## Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period stated below from the date of purchase, this product will be free from defects in material and workmanship.

- All heated products branded “Arlington™” will carry a ONE year limited warranty.
- All heated products branded “Sunbeam® HomeChoice™” will carry a TWO year limited warranty.
- All heated waterproof mattress pads will carry a THREE year limited warranty, with the exception of “Arlington™” and “Sunbeam® HomeChoice™”.
- All other heated products branded “Sunbeam®” and “SlumberRest®” will carry a FIVE year limited warranty, except heated waterproof mattress pads.

JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value.

This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS’s Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

## **PLEASE DO NOT RETURN THIS PRODUCT TO PLACE OF PURCHASE**

We're Here to Help, Please contact Jarden Consumer Care Centers listed below:

### **How to Obtain Warranty Service**

#### **In the U.S.A.**

If you have any question regarding your heated product, this warranty or would like to obtain warranty service, please visit our web site at: [www.sunbeam.com](http://www.sunbeam.com) or contact Jarden Consumer Care at 1-800-892-7684 and a convenient service center address will be provided to you.

#### **In Canada**

If you have any question regarding your heated product, this warranty or would like to obtain warranty service, please visit our web site at: [www.sunbeam.com](http://www.sunbeam.com) or contact Jarden Consumer Care at: 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please contact our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Printed in China

© 2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

DW-012814

*For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.*