



**POWER<sup>3</sup>**™

Up to 3 Motors

# **USER MANUAL**

**UNIVERSAL RECHARGEABLE  
POWER BATTERY PACK**

**FOR MOTION RECLINER**

# THANK YOU

## for your purchase Universal Rechargeable Power Battery Pack!



To protect you from electric hazards, please read the user manual very carefully before operating.

Proper use of the product will help extend the lifecycle as well.



# CONTENTS

---

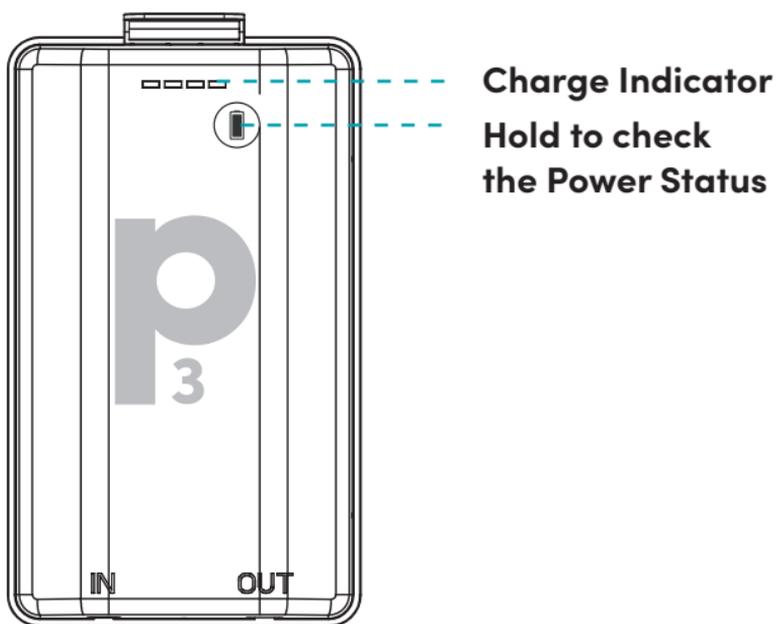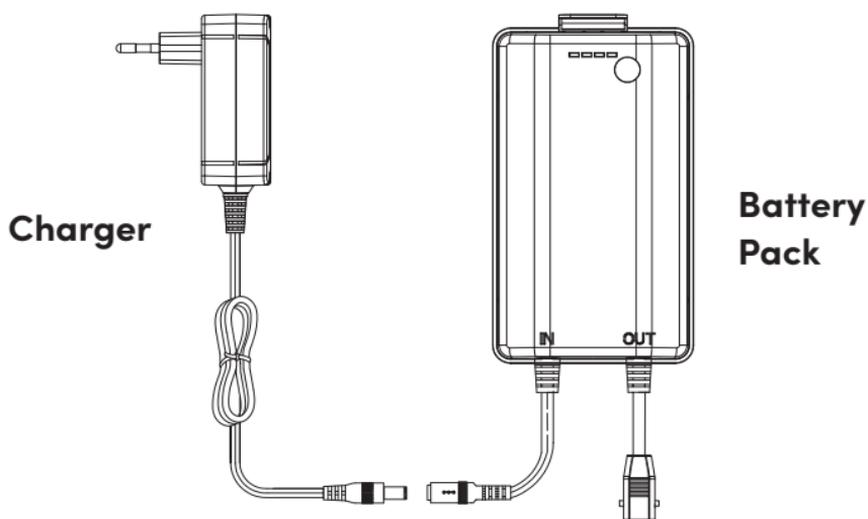



## SAFETY WARNINGS

---

1. Please only use the original charger to charge the battery pack. Non-authorized chargers may damage the product.
2. The specification for the charger is DC 29V 0.8A-2A. Please ensure to use the correct voltage charger.
3. Avoid putting the battery pack in proximity close to heat sources. Avoid using it when the room temperature is over 100 degrees F.
4. Avoid immersing the battery pack in any liquids.
5. Avoid dropping, crushing, throwing, striking and shaking the product.
6. Never insert anything into the unit.
7. Avoid having the product repaired by unauthorized personnel. Please contact your place of purchase if it is not working properly.
8. Never operate the unit if it has a damaged cord, power or plug.
9. Never operate the unit if it's over-heated or deformed.
10. This product is made for Indoor use only, please avoid exposure to direct sunlight.

# USER INSTRUCTIONS

---



## Step 1

Fully charge the battery pack before the first use

■■■■■  
Charge Indicators  
State of Charge at 100%



## Step 2

Unplug recliner from the power source. Move and lean the recliner into different positions as needed to access the power switch.



## Step 3

Locate the AC Adapter, usually located near the power switch



## Step 4

Disconnect the power cord from AC Adapter

# USER INSTRUCTION

---



## Step 5

Connect the corresponding battery cables into the AC Adapter



## Step 6

Return the recline to upright position, and enjoy!

## LED Charge Indicators

-  1 Light: State of Charge at 25%
-  2 Light: State of Charge at 50%
-  3 Light: State of Charge at 75%
-  4 Light: State of Charge at 100%

When charging, the LED lights flash.

Press  for 2 seconds

if the battery begins to buzz after self-inspection, it's an alert for low state of charge. Please recharge the battery pack ASAP.

# TROUBLESHOOTING

Issue	Probable Cause	Troubleshooting
<b>No output</b>	Battery pack auto shut off to prevent overload.	Unplug the battery pack and let sit for 10 minutes. Recharge to reset the battery pack.
	Battery pack short circuited.	Unplug the battery pack and let sit for 10 minutes. Recharge to reset the battery pack.
	Battery pack auto shut off to prevent overheating.	Unplug the battery pack and let cool down for 1 hour or until battery pack is not warm to touch. Recharge to reset the battery pack.
	Battery pack is out of charge.	Charge the battery pack.
<b>Battery pack cannot be charged</b>	Battery pack is overheated.	Unplug the battery pack and let cool down for 1 hour or until battery pack is not warm to touch. Recharge to reset the battery pack.

If the above actions do not work, please call **1-888-406-0838** for additional assistance

## BATTERY SPECIFICATIONS

**P3 Capacity: 2,200 mAh**

**P3 (1 battery) Life Cycle Count**

**1 motor (power feet): Approx. 350 cycles**

**2 motor (power feet and headrest): Approx. 250 cycles**

**3 motor (power feet, headrest and lumbar): Approx. 125 cycles**

**Charging voltage: 29.4VDC / 56.98 Wh**

**Charging time: Approx. 6 hours**

Please note that more powerful reclining furniture with USB, lights, cup warmers, etc. dramatically drain the battery so you may need to charge it more often.

p  
3

POWER<sup>3</sup><sub>TM</sub>

---

Up to 3 Motors