

DINAMICA plus



QUICK START GUIDE

De'Longhi

VISIT US AT DELONGHI.COM



ECAM37095TI



EASILY REGISTER YOUR MACHINE & GET MORE OUT OF YOUR ESPRESSO EXPERIENCE

Register your Fully Automatic Espresso Machine and become De'Longhi Club Member. Join the De'Longhi Club to get more out of your coffee experience.



RECEIVE 1
ADDITIONAL YEAR
OF WARRANTY
FOR REGISTERING
PRODUCT



MEMBERSHIP
DISCOUNT ON
ACCESSORIES



PRIVATE
ONLINE SALES



DE'LONGHI
SPECIALIST
SUPPORT



EASY
ORDERING




EXCLUSIVE
COFFEE EVENTS
& NEWS

De'Longhi Club Member discount: Only members of the Club will receive special offers on coffee accessories.

STEP #1: TAKE A PHOTO

- Snap a photo of the camera icon, including the points.

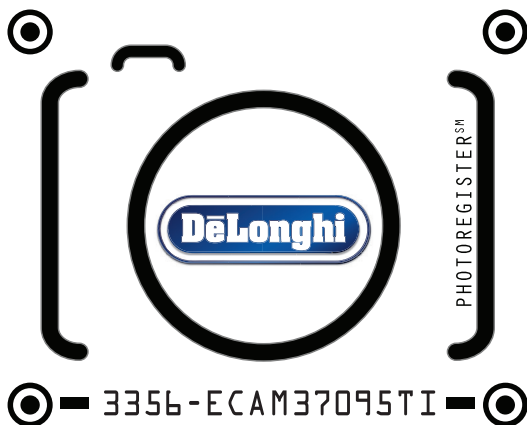 

STEP #2: SEND PHOTO

- Send a photo via text, Facebook Messenger or upload online.



TEXT PHOTO
TO 71403



MESSANGER @
PHOTOREGISTER



ONLINE:
WWW.DELONGHI.PHOTO

NEED HELP?:

Visit photoregister.com/help
or text HELP to 71403.

CONTACT US

- Call 1-800-945-0929
- Online: Delonghi.com

IN THE BOX

- A1. Beans container lid
- A2. Pre-ground coffee funnel lid
- A3. Bean container
- A4. Pre-ground coffee funnel
- A5. Grinding adjustment dial
- A8. Hot water and steam connection nozzle
- A9. Coffee spouts (adjustable height)
- A10. Condensate tray
- A11. Coffee grounds container
- A15. Drip tray
- A17. Water tank
- A20. Infuser
- A22. Main switch
- B-C. Display Panel
- D2. Pre-ground coffee measuring scoop
- D3. Milk container
- D6. Hot water spout



Get Started &
Owner's Instructions
Booklets


This short guide is not intended to explain
all the functions of the appliance.
Please read all the owner's
instruction booklet before use.

ECAM37095TI





- | | | | |
|-----|-------------------------------------|-----|--|
| B1. | Bluetooth active symbol | C3. | Settings menu |
| B2. | Energy Saving active symbol | C4. | Exit from the selected function and go back to the main menu |
| B3. | Selected strength | C5. | My beverages selection menu. Unless previously programmed from the settings menu as described in chapter "12. Customizing the beverages", the beverage is programmed directly the first time you use the appliance |
| B4. | Directly selected beverages | C6. | Beverage strength selection |
| B5. | Scroll arrow | | |
| B6. | Quantity selected | | |
| B7. | Descalc required alarm | | |
| B8. | Milk container needs cleaning alarm | | |
| B9. | Filter needs replacing alarm | | |
| C1. | Beverage quantity selection | | |
| C2. | Profile selection | | |

 GET READY


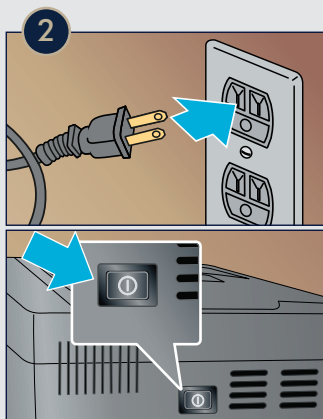


Download the De'Longhi Coffee Link App. Connect via Bluetooth to your machine to access many functions and settings remotely.

  Remove all stickers and clean all accessories with warm water and mild detergent and dry them. Follow the instructions on the display of the machine. Priming the machine is only required the first time out of the box.

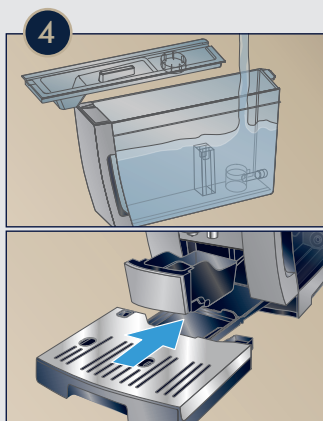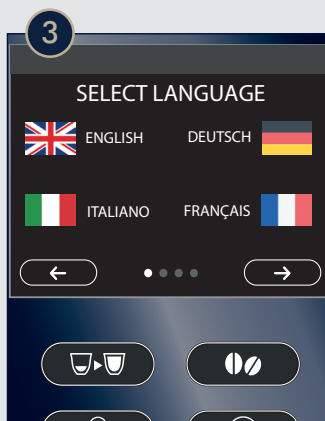

6 The machine will deliver hot water and will shut off automatically once rinsing is complete.


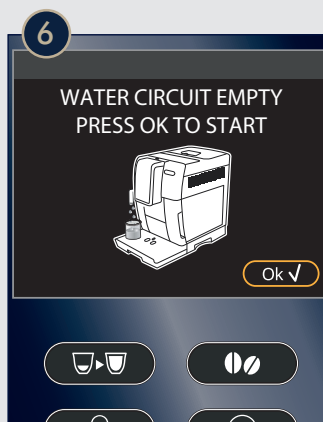
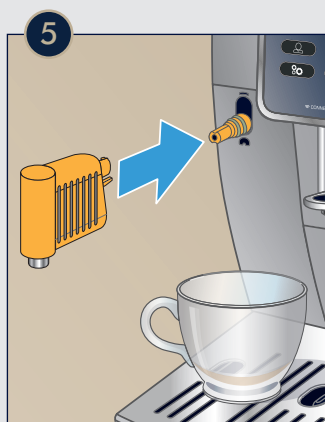


BREW ESPRESSO



The first time using the machine, brew and dump the first 3-4 espressos. If you haven't been using the machine for 3-4 days, perform a rinsing cycle (⚙️ setting menu → 🚰 rinsing) before brewing.

2 To brew the perfect espresso set your grinder following the “Extraction Guidelines” on page 9.



5 Select one of the recipes on the touch screen. Preparation will start with default strength and quantity, which can be changed by customizing your recipes.

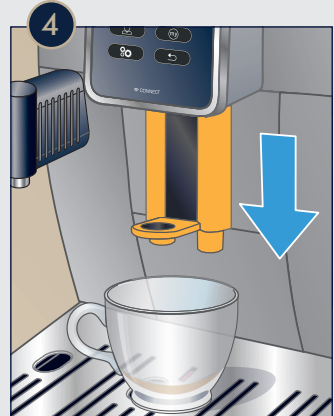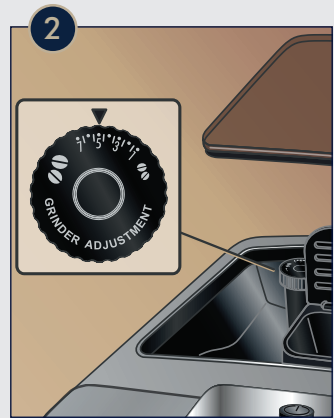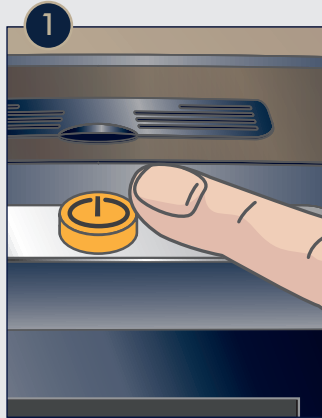

MILK RECIPIES

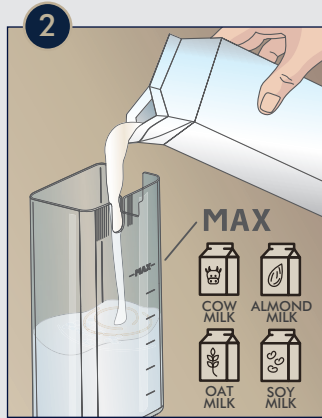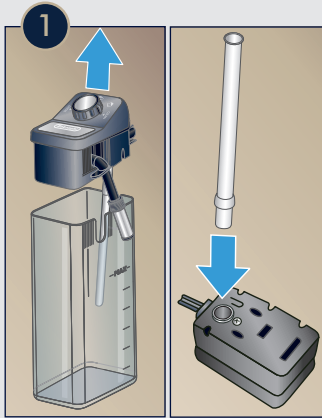

To make a Milk recipe, use the provided milk container. Use cold cow milk or your preferred milk alternative. Whole milk or oat milk will give the best results.

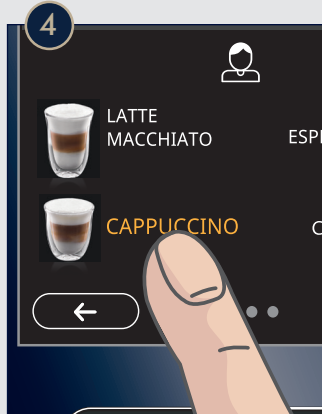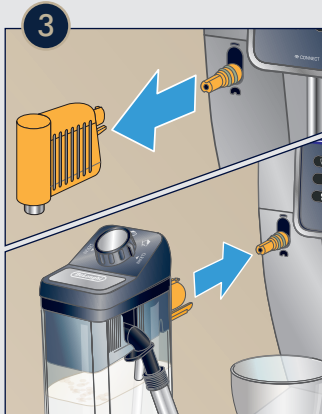

1 Open the lid and make sure the milk intake tube is correctly inserted in the bottom of the milk container lid.

4 Select a milk based recipe.

5 Use the selector to choose between flatter or dryer foam. On the screen, the machine will suggest what to select based on your chosen recipe.



6 Once finished, twist the selector to "clean" position to perform a rinsing of the milk container lid. If you prepare multiple milk recipes, you should do this only after you finished your last recipe. Store the remaning milk in the container in the fridge.

CUSTOMIZE RECIPES

Temporary Personalization:

Temporarily personalize the volume  and strength  of recipes.

Advanced Personalization:

Save and access up to 3 different profiles  and personalize and save recipes with the  function.

Pre-ground:

To use pre-ground coffee, press the strength selector until the icon  shows on the screen and add one measuring scoop of pre-ground coffee in the dedicated funnel.



EXTRACTION GUIDELINES

Depending on your choice of beans, you might need to adjust the grinder setting to a finer or more coarse choice.




- Flow like warm honey
- Nut-brown Crema
- Well balanced and lingering taste



- Flowing fast like water
- Light and pale Crema

To make it perfect:

- Adjust grinding setting to a finer setting
- Select a higher strength

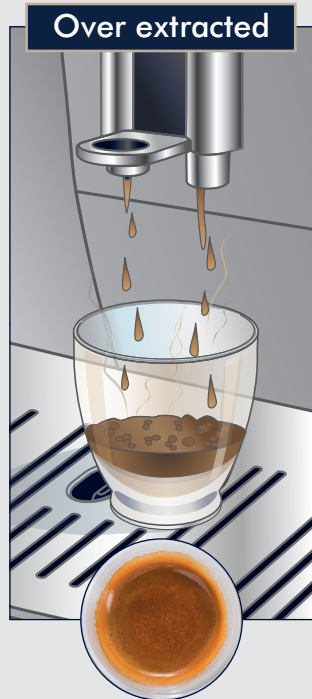

- Flowing in drips or not at all
- Crema very dark and not uniform

To make it perfect:


- Adjust grinding setting to a coarser setting
- Select a lower strength



CLEANING

Keeping your machine clean will improve quality of the beverage and life span of the machine.


1 Empty drip tray daily and empty coffee ground container when lights come up.

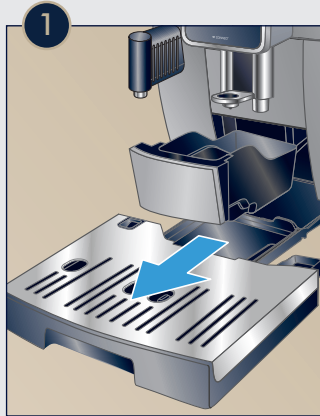

2 Once a month, clean the inside of the machine. Follow User Manual detailed instruction section 14.9.



3 Remove and clean each part of the milk container lid. Follow User Manual section 14.10.



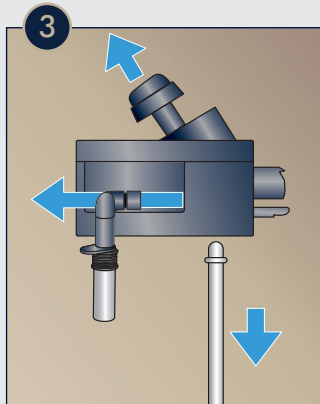


DESCALING

4 Promptly descale when indication light comes on. Follow user Manual section 15.



INSERT WATER FILTER

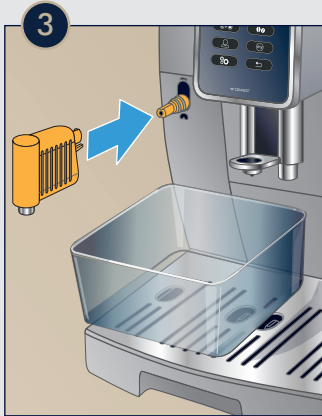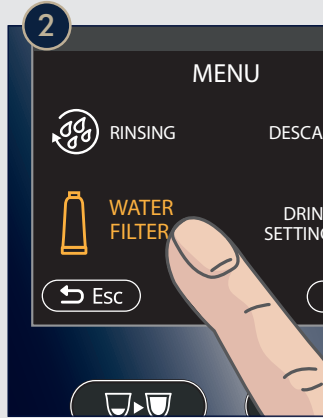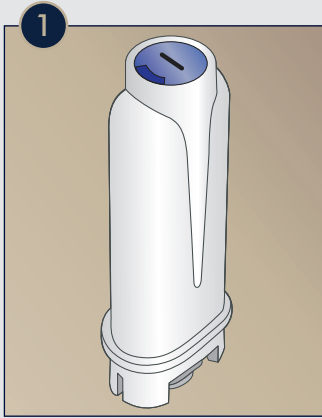

To ensure better quality of the water install the provided water filter. Under normal use, filters last about 3 months. If coffee maker is left unused, the filter will last a maximum of 3 weeks*.


You can purchase extra filters on www.delonghi.com

*The type of filter may vary.

2 From the Settings menu, select Water filter and follow the step by step instructions on the screen.

3 Be ready with a large container (17 fl oz min), to collect the water that will be delivered from the water spout during the installation process.

SET WATER HARDNESS

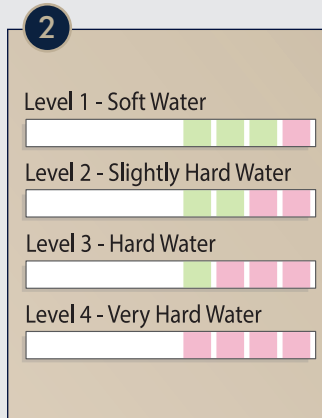


Analyze the hardness of your water to set your machine accordingly.

1 Dip the provided Total Hardness Indicator in a glass of water for one second and shake it.

2 Wait a couple of minutes. Read the Indicator paper colors and compare with this table.

3 Set water hardness on the machine from Setting Menu → Water Hardness. Follow instructions on the screen.

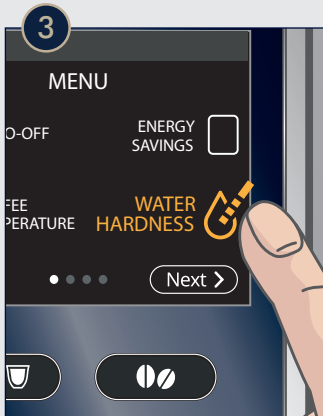

RÉGLER LA DURETÉ DE L'EAU



Il faut analyser la dureté de l'eau pour régler votre machine en conséquence.

1 Plonger la bandelette de test de dureté de l'eau incluse dans un verre d'eau pendant une seconde puis la secouer.

2 Attendre une ou deux minutes.



Lire les couleurs qui apparaissent sur la bandelette et les comparer avec le tableau ci-contre.

3 Régler la dureté de l'eau sur la machine à partir du

Menu des paramètres

de l'eau. Suivre les instructions affichées.

INSÉRER LE FILTRE À EAU

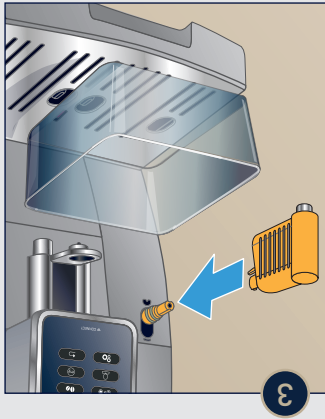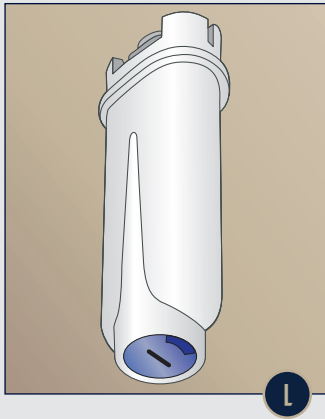

Pour assurer une meilleure qualité de l'eau, installer le filtre à eau inclus. Avec une utilisation normale, les filtres durent environ 3 mois. Si la machine à café n'est pas utilisée, le filtre durera un maximum de 3 semaines.*


Pour acheter des filtres supplémentaires, visitez www.delonghi.com
*Le type de filtre peut varier.

2 À partir du menu des paramètres, sélectionner Filtre à eau et suivre les instructions étape par étape à l'écran.

3 Il faudra un récipient (min 500 ml) pour récupérer l'eau qui s'écoulera de la buse d'eau lors de l'installation.


Garder votre machine propre améliorera la qualité des boissons et la durée de vie de la machine.

1 Vider le plateau d'égouttement à tous les jours et vider le récipient à marc quand le voyant s'allume.

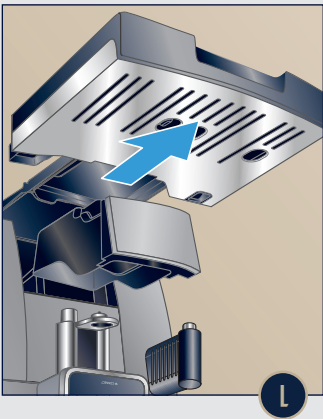


1

2 Nettoyer l'intérieur de la machine une fois par mois. Suivre les instructions détaillées dans la section 14.9 du guide d'utilisation.

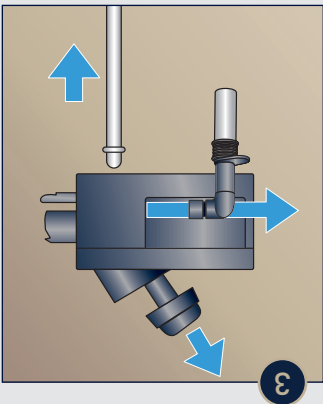

3

3 Retirer et nettoyer chaque pièce du couvercle du réservoir de lait. Suivre les instructions dans la section 14.10 du guide d'utilisation.

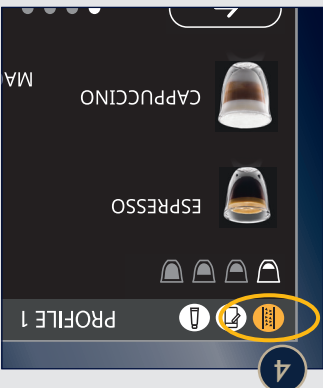


4

4 Détartage dès que le voyant s'allume. Suivre les instructions dans la section 15 du guide d'utilisation.

DÉTARTAGE

NETTOYAGE

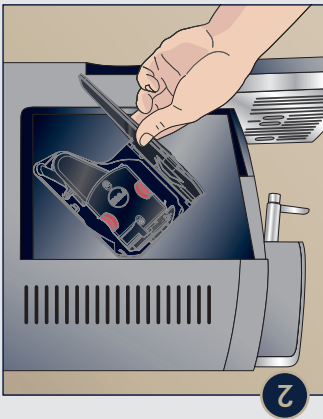

2

DIRECTIVES POUR UNE BONNE EXTRACTION

Selon votre choix de grains de café, il faudra peut-être régler la mouture pour obtenir une mouture plus fine ou plus grossière.



Espresso parfait

- Coule comme du miel chaud
- Crème de couleur noisette
- Goût bien équilibré et persistant



Sous-extraction

- Coule vite comme l'eau
- Crème mince et pâle

Pour corriger le problème :

- Régler le degré de mouture pour obtenir une mouture plus fine
- Sélectionner une intensité plus forte



- Coule goutte à goutte ou pas du tout
- Crème très foncée et pas uniforme

Pour corriger le problème :

- Régler le degré de mouture pour obtenir une mouture plus grossière
- Sélectionner une intensité moins forte

PERSONNALISER LES BOISSONS

Personnalisation temporaire



Personnalisation temporaire :
personnaliser temporairement la quantité ☕ et l'intensité ☕ des boissons.


Personnalisation avancée :
la fonction (my) permet d'enregistrer et d'accéder jusqu'à 3 profils différents et de personnaliser et d'enregistrer les boissons.

Personnalisation avancée











































































































Café prémoulu :
pour utiliser du café moulu, appuyer sur le sélecteur d'intensité jusqu'à ce que l'icône ☕ apparaisse à l'écran, puis ajouter une mesure de café moulu dans l'entonnoir prévu à cet effet.


Café prémoulu

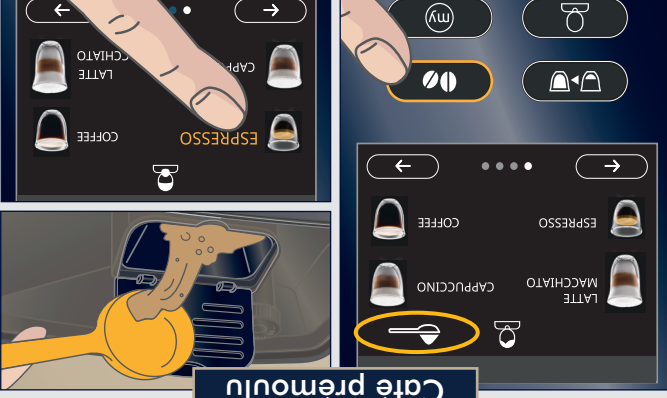

BOISSONS AU LAIT

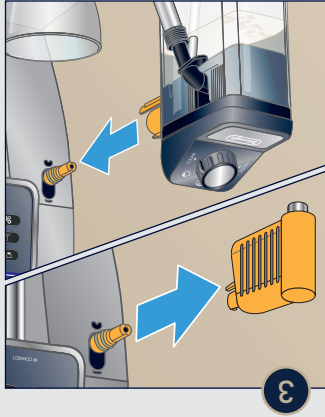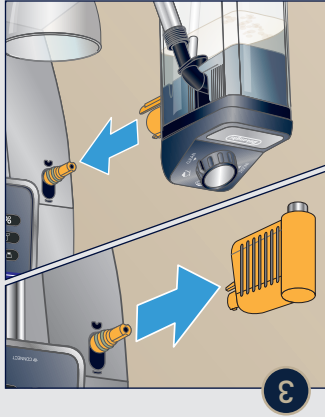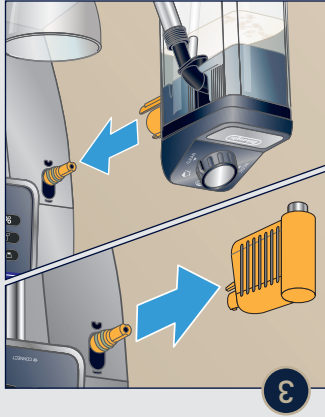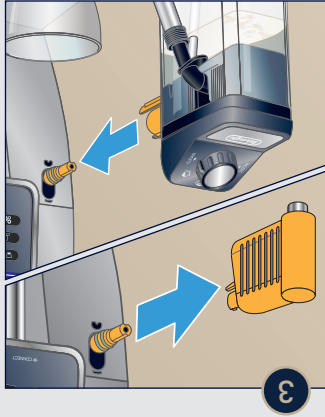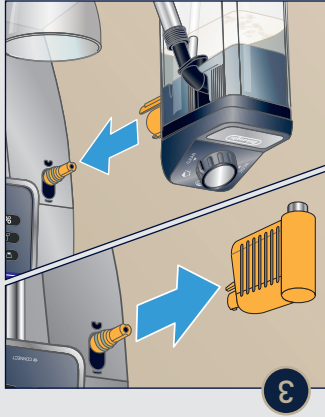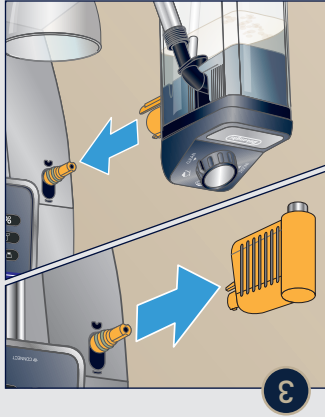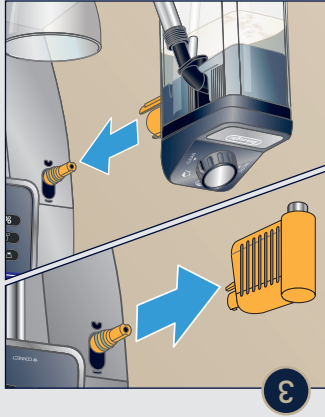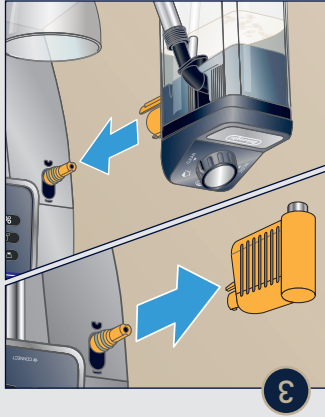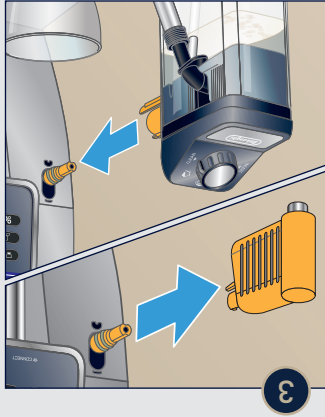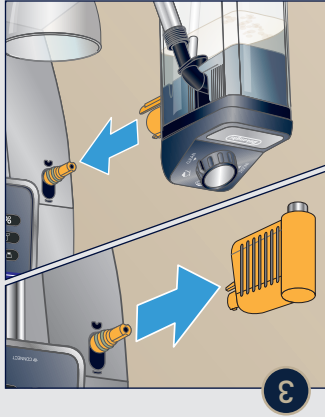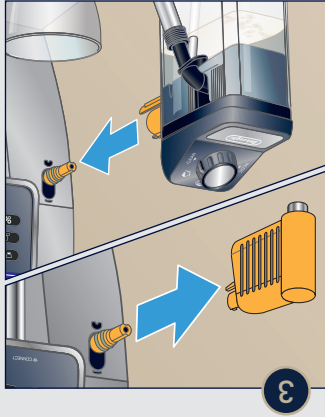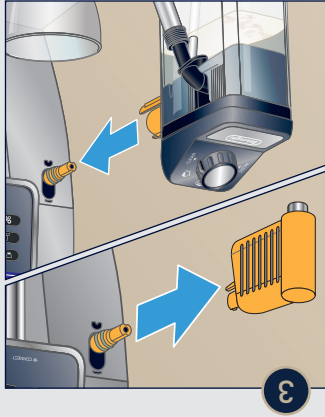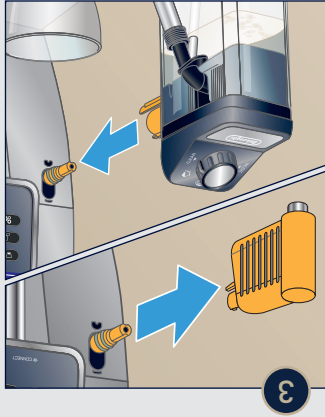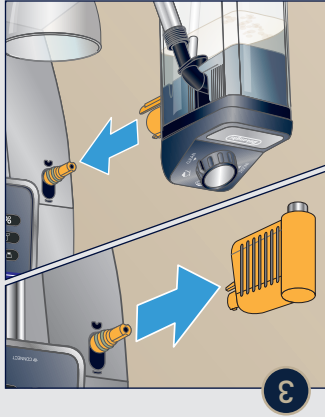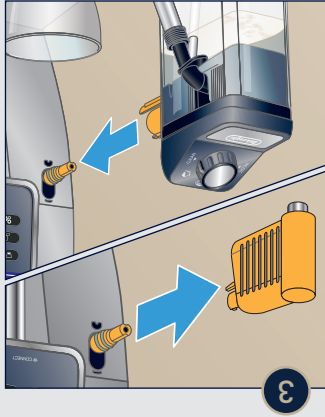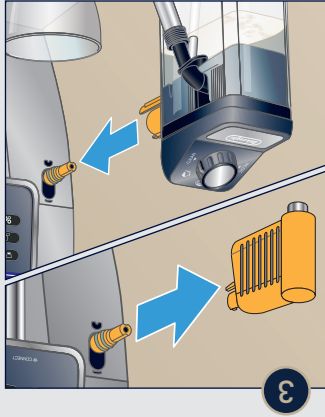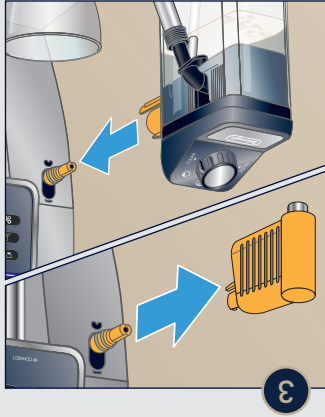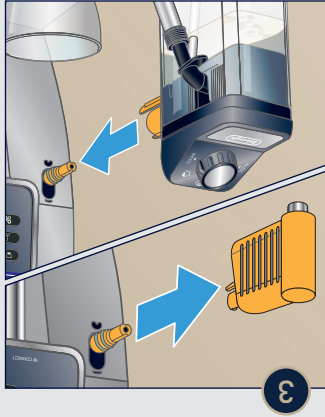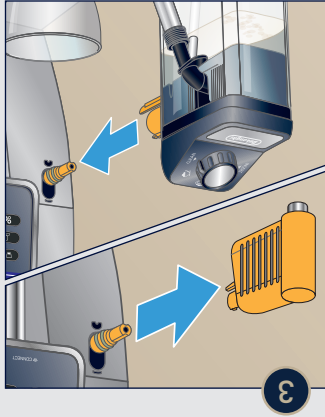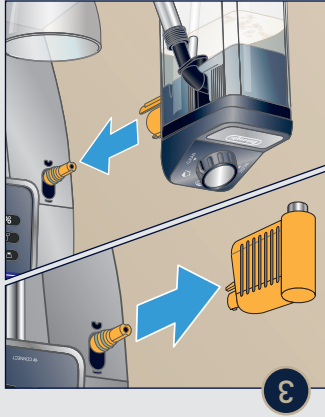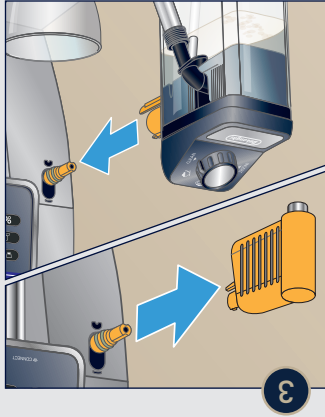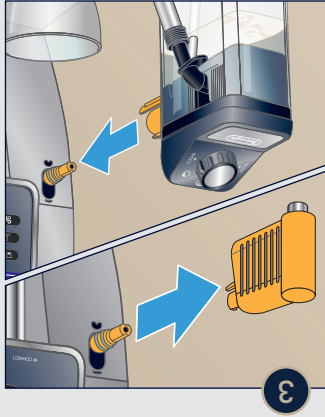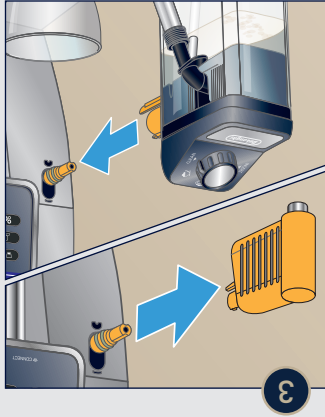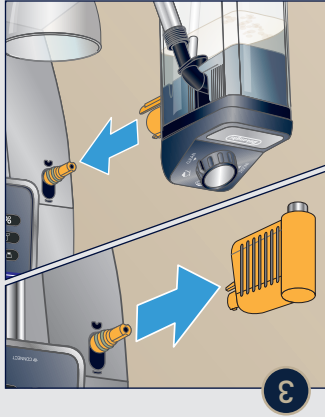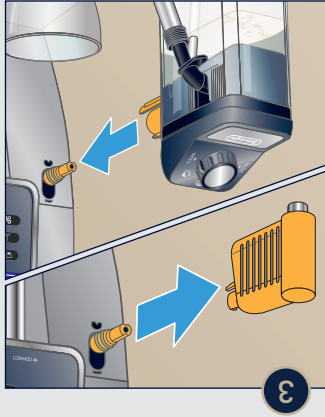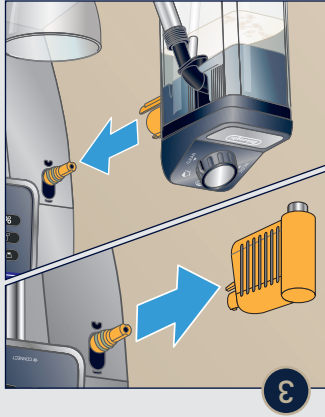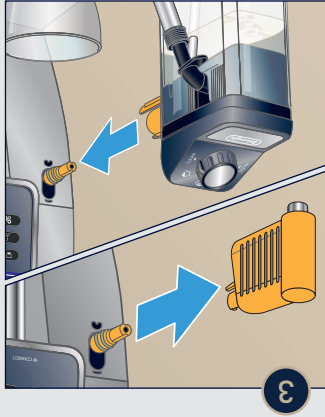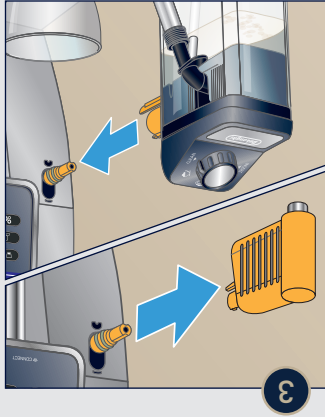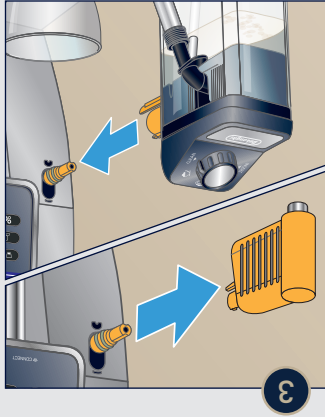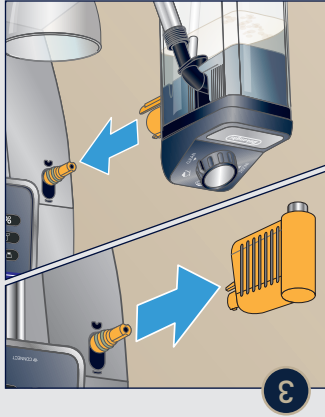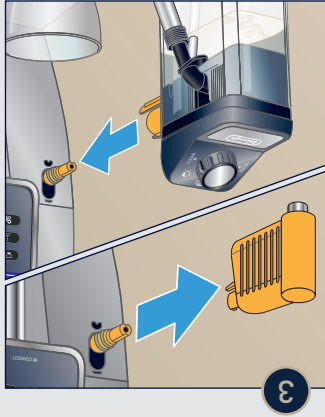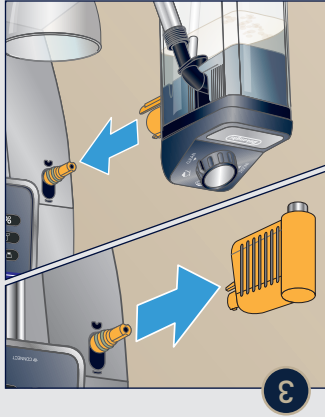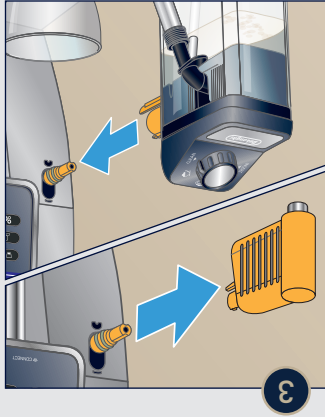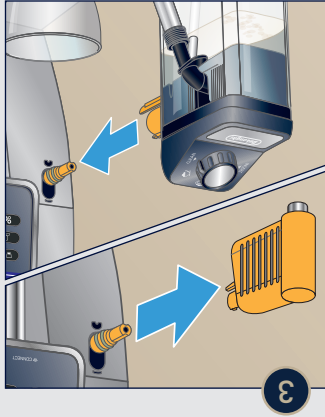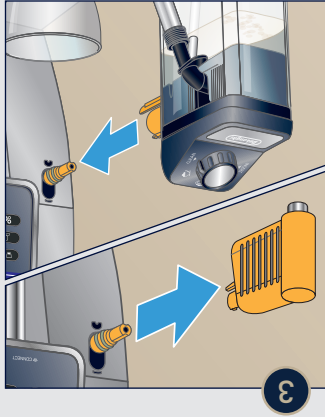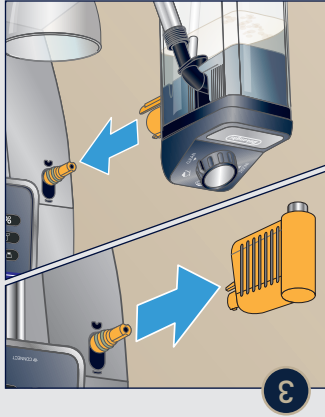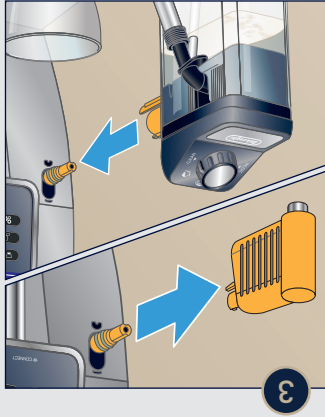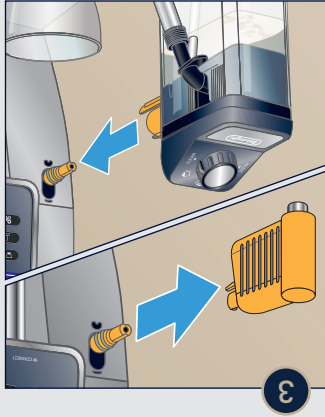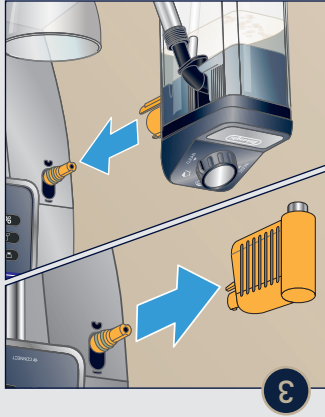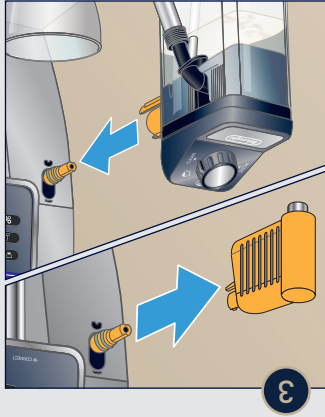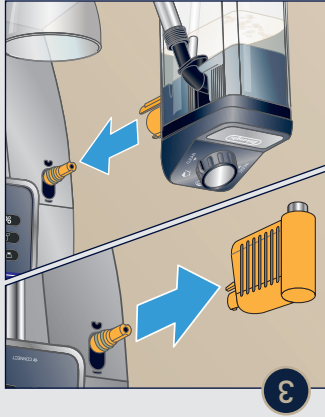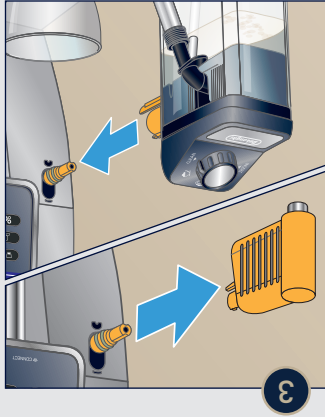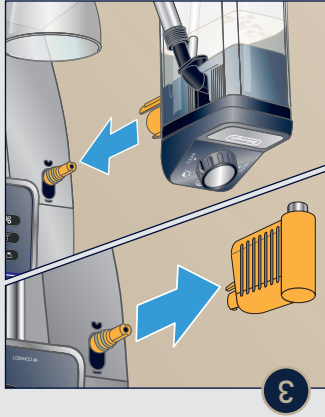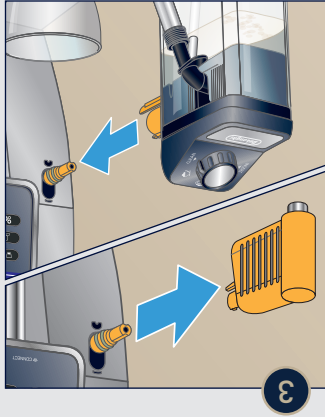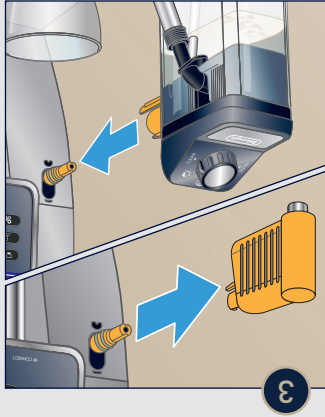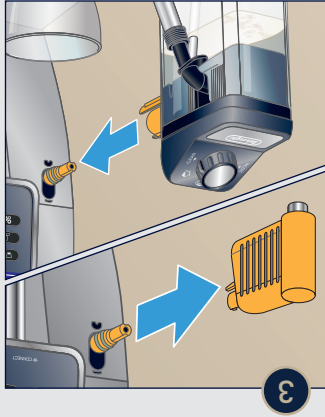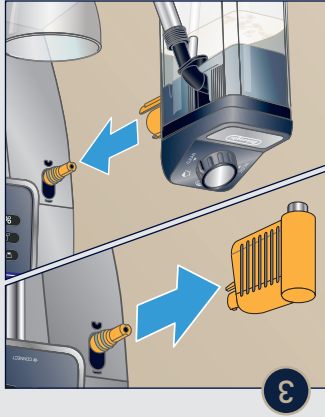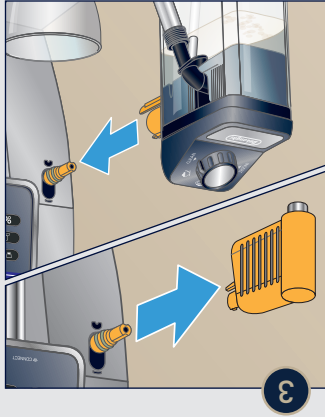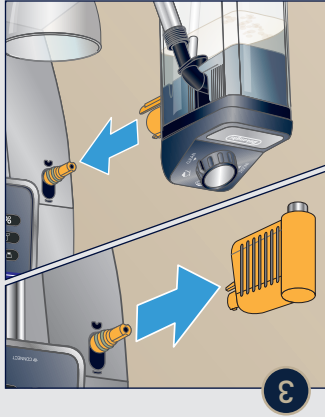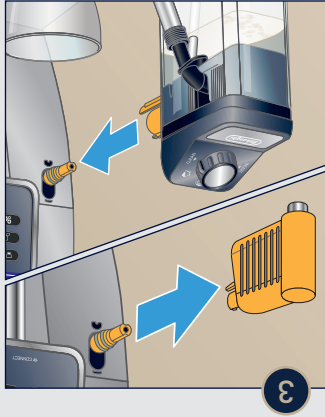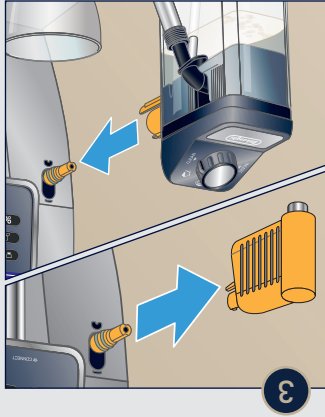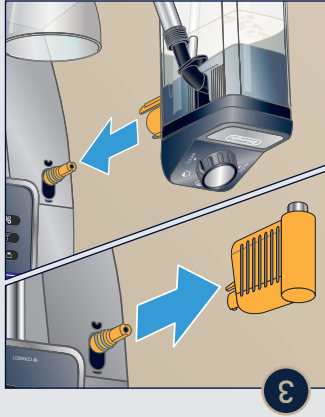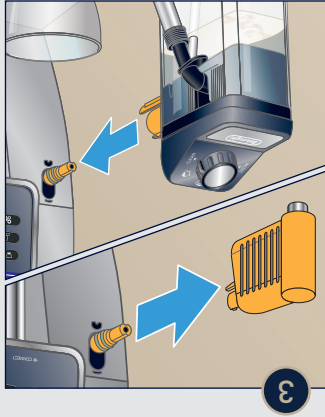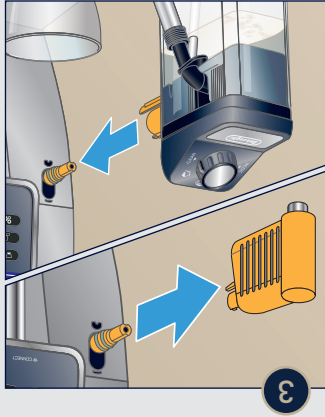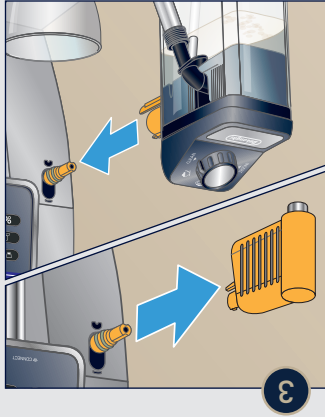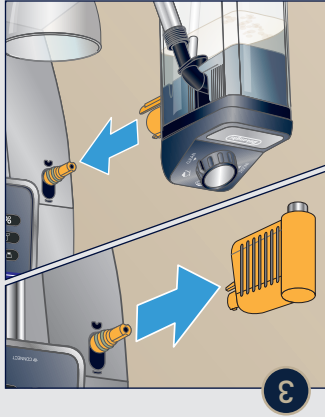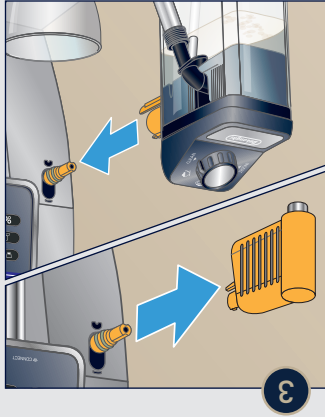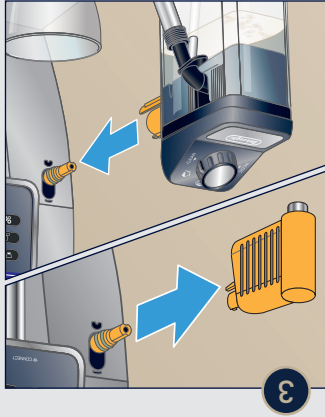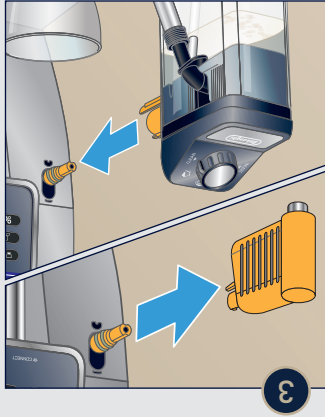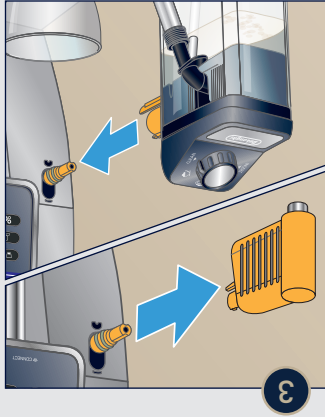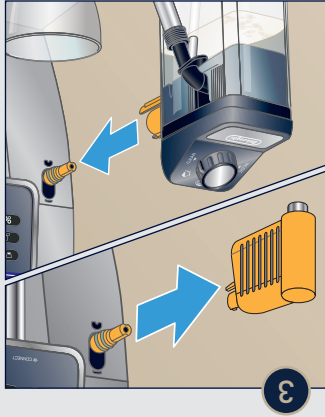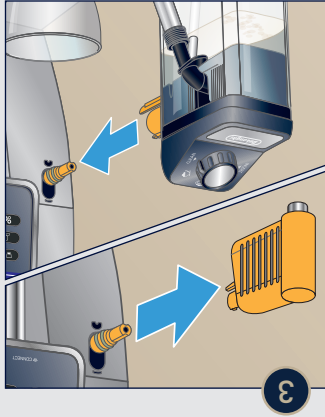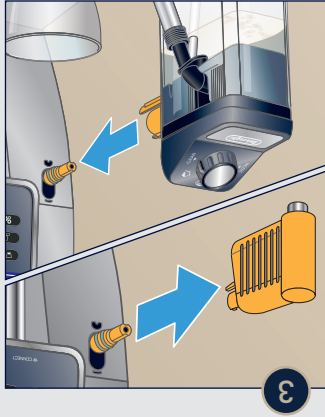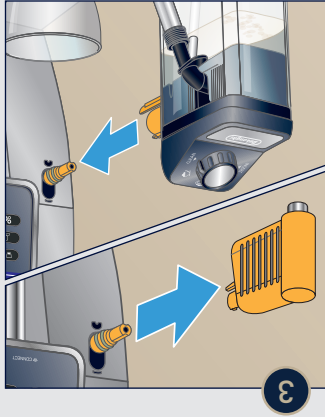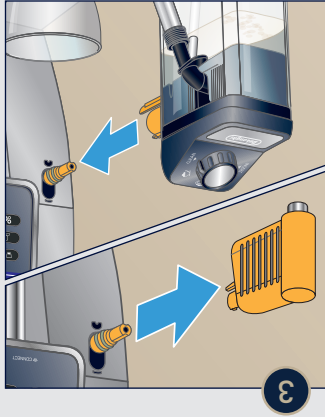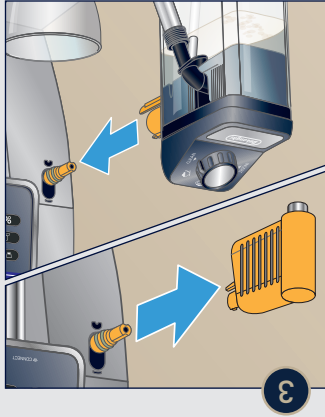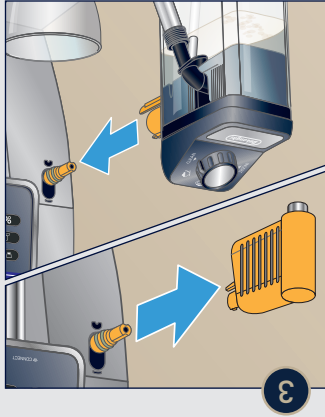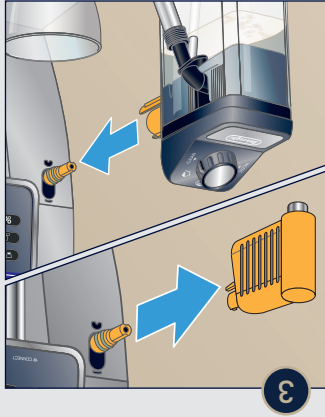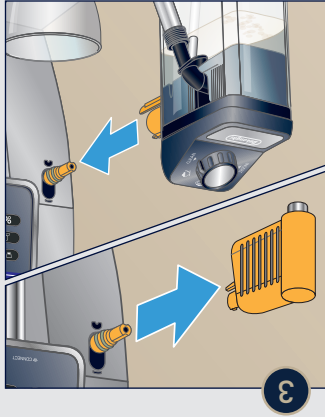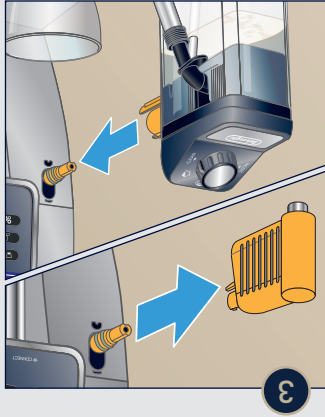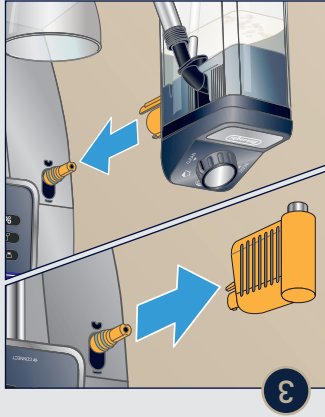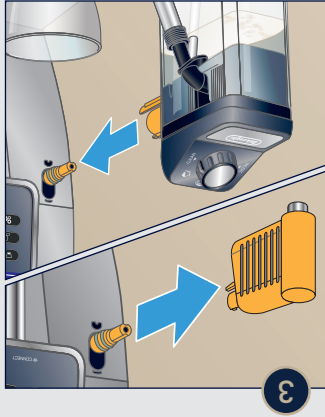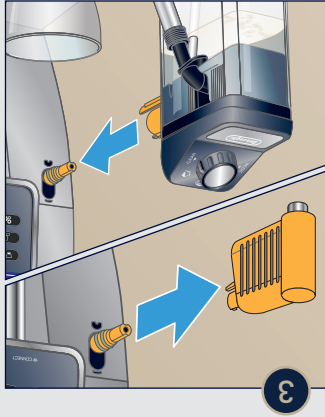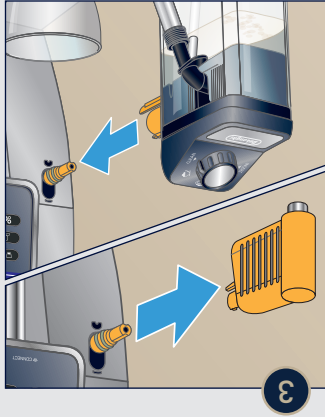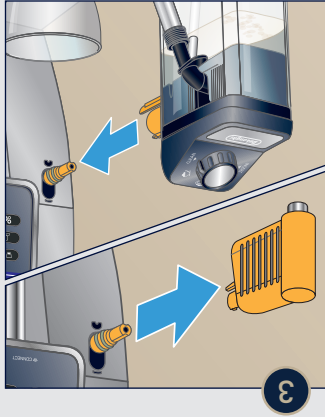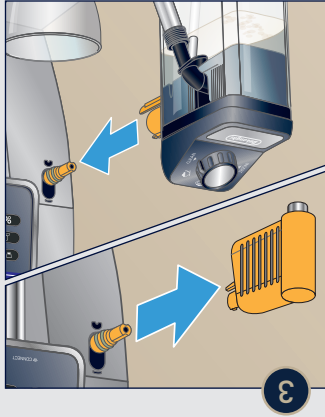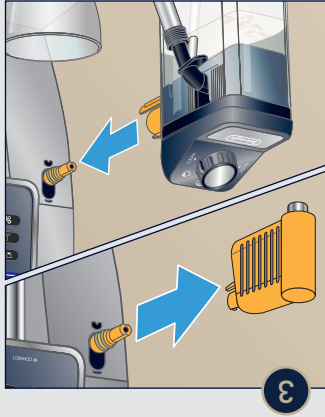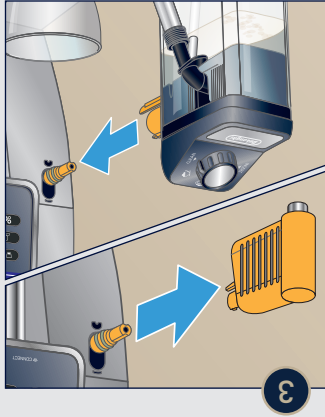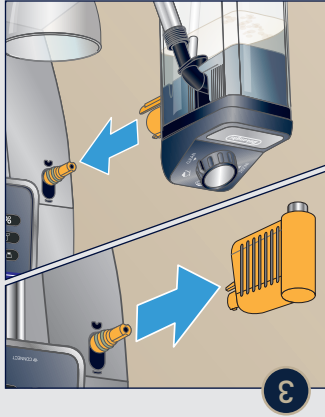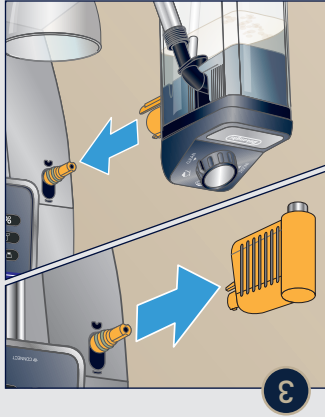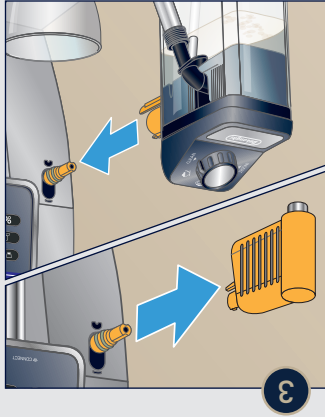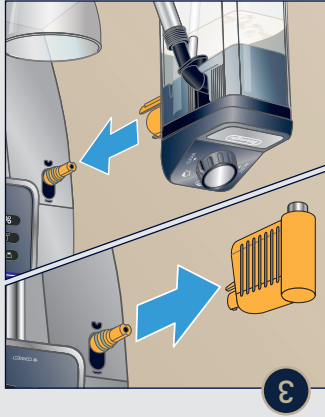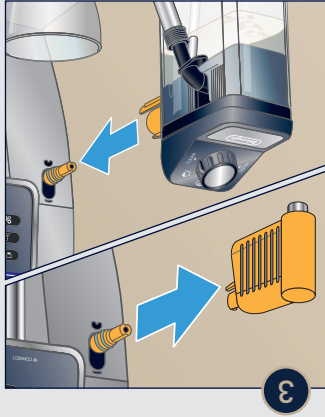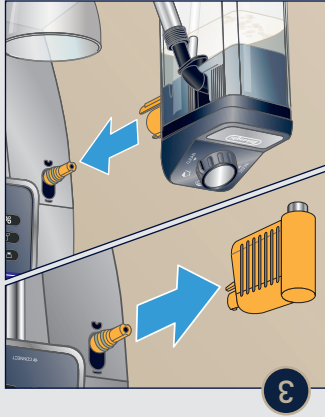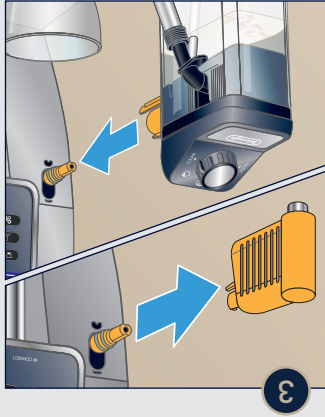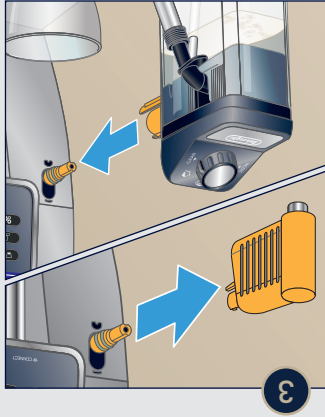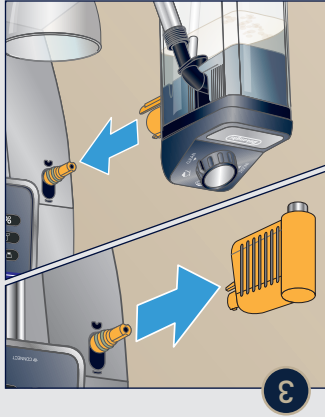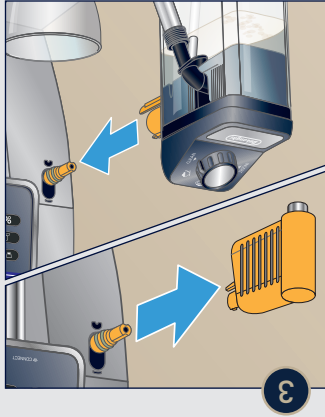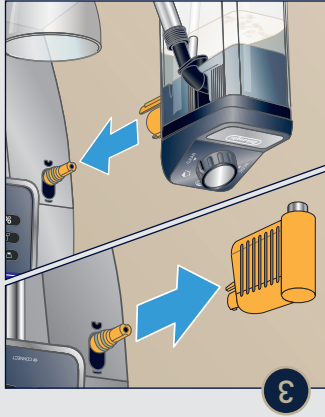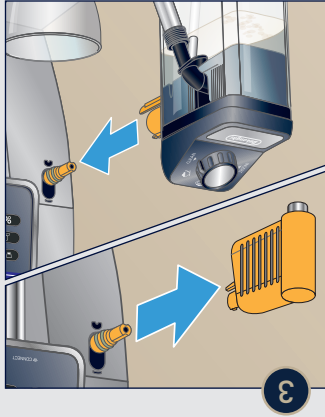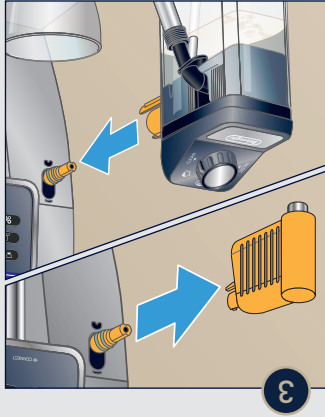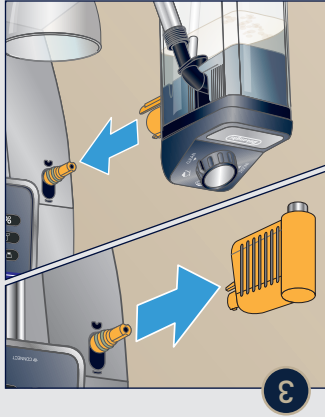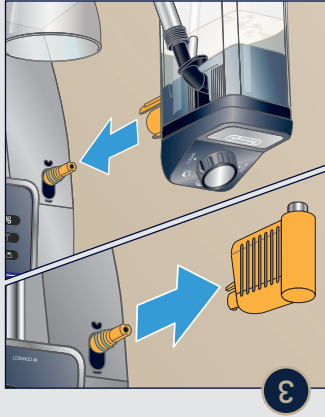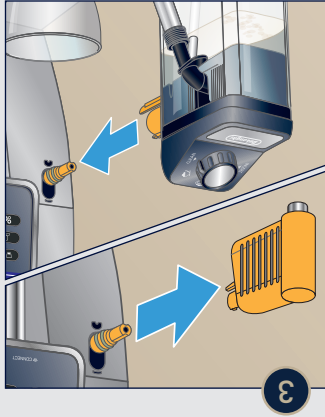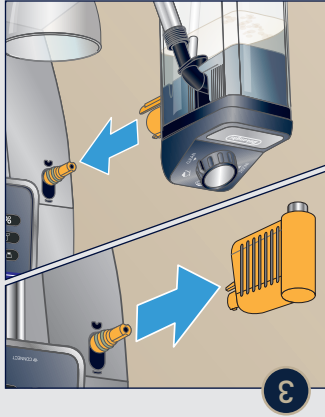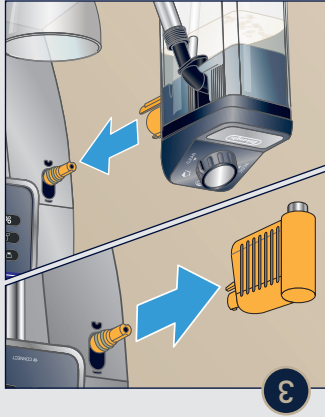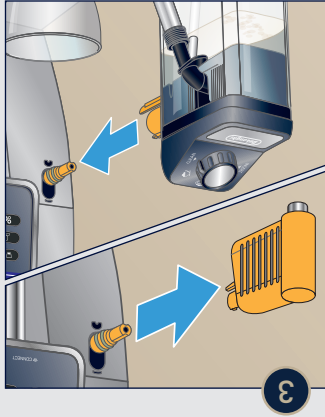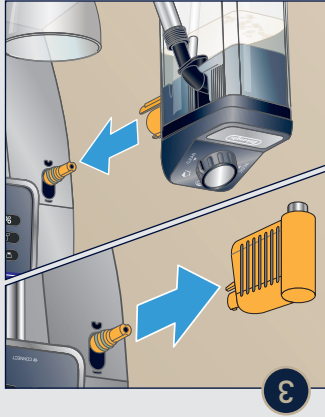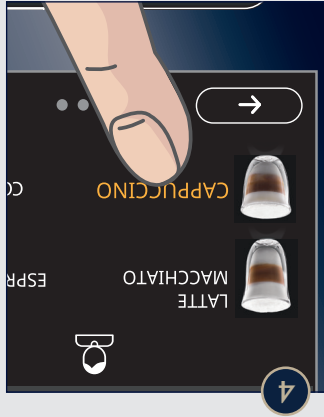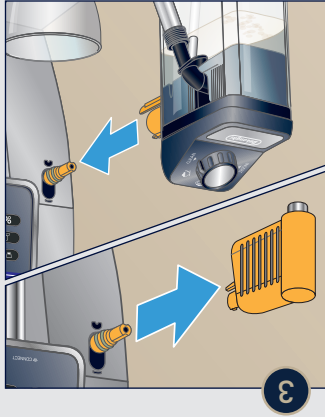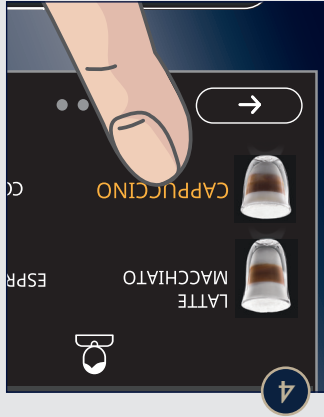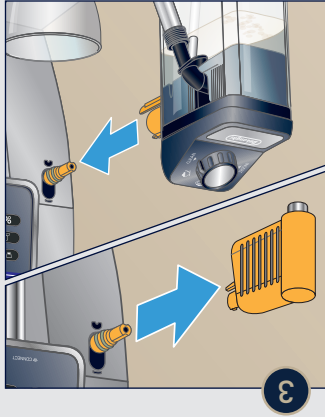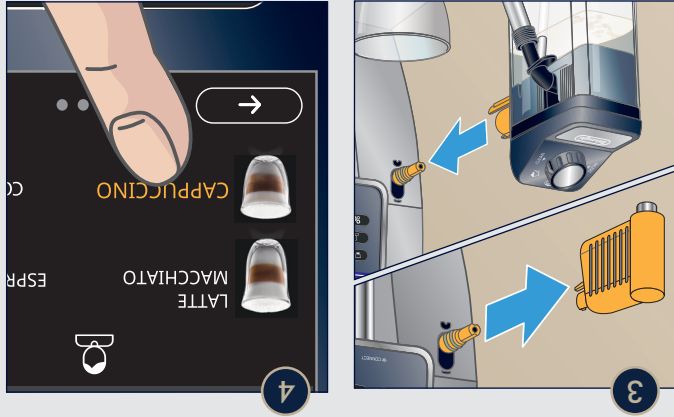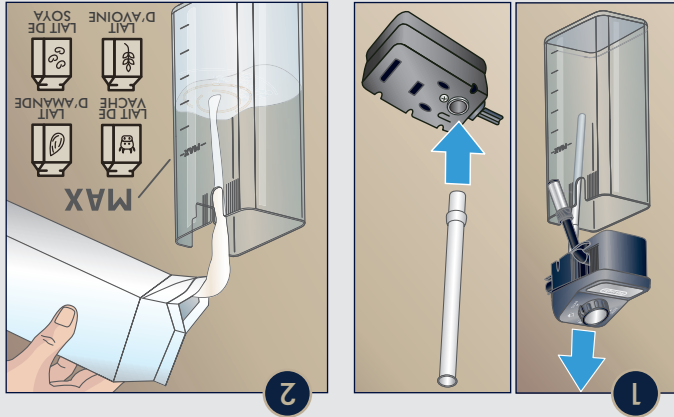


PRÉPARER UN ESPRESSO

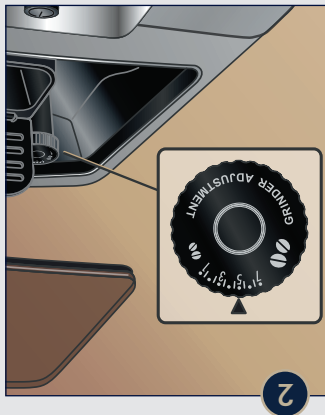

2



 
4

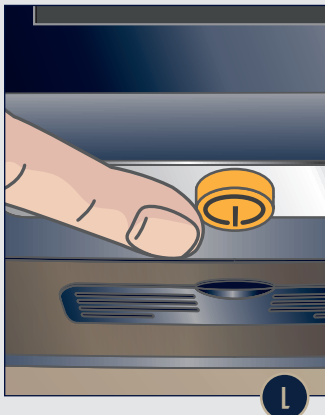

1



3

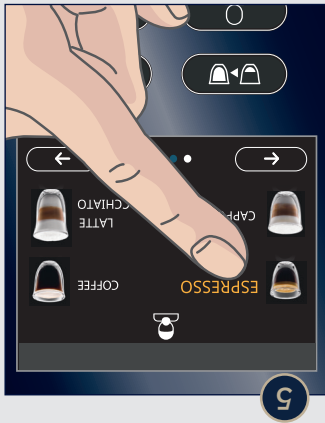






5

La première fois que vous utilisez la machine, préparez puis jetez les premiers 3 ou 4 espressos. Si vous n'avez pas utilisé la machine depuis 3 ou 4 jours, effectuez un cycle de rinçage (⚙️) ringage (⚙️) avant l'infusion.

2 Pour préparer l'espresso parfait, régler le moulin en suivant les « Directives pour une bonne extraction » à la page 9.

5 Sélectionnez une recette à partir de l'écran tactile. La préparation commencera avec l'intensité et la quantité par défaut, qui peuvent être modifiées en personnalisant vos boissons.

PRÉPARER LA MACHINE

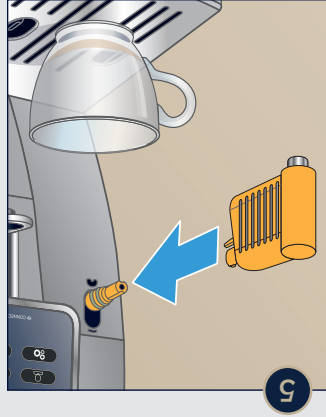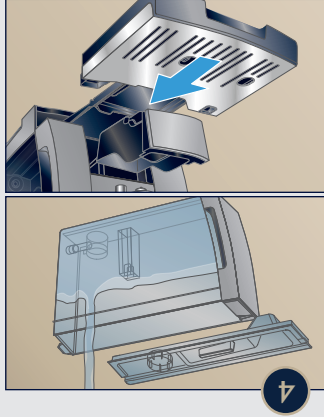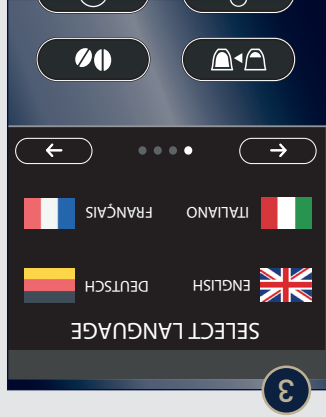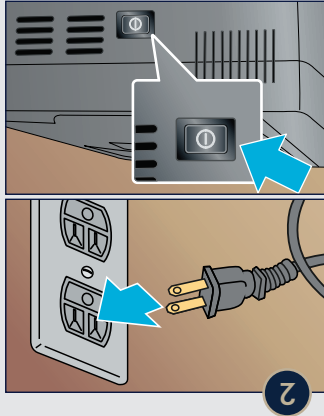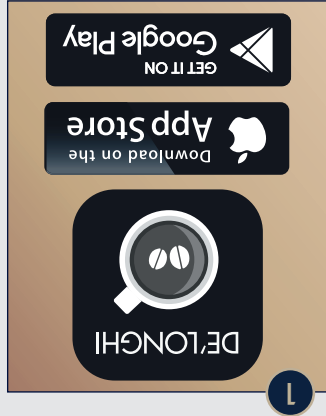


Téléchargez l'appli De'Longhi Coffee Link. Utilisez la fonction Bluetooth pour connecter à votre machine afin d'accéder aux nombreuses fonctions et réglages à distance.

Enlevez tous les autocollants et nettoyez tous les accessoires avec de l'eau chaude et un détergent à vaisselle doux, puis les sèches. Suivez les instructions affichées sur l'écran de la machine. Il faut amorcer la machine uniquement avant la première utilisation.

6 La machine fera couler de l'eau chaude et s'arrêtera automatiquement une fois le rinçage terminé.

- B1. Symbole fonction Bluetooth activée
- B2. Symbole mode économie d'énergie activé
- B3. Intensité sélectionnée
- B4. Boissons directement sélectionnées
- B5. Flèche de défilement
- B6. Quantité sélectionnée
- B7. Alerte démarrage nécessaire
- B8. Alerte nettoyage du réservoir de lait nécessaire
- B9. Alerte filtre doit être remplacé
- C1. Sélection de la quantité de boissons
- C2. Sélection du profil

- C3. Menu des paramètres
- C4. Quitter la fonction sélectionnée et retourner au menu principal
- C5. Menu de sélection « My » pour les boissons personnalisées. La boisson est programmée directement la première fois que vous utilisez la machine, à moins d'avoir été préalablement programmée à partir du menu des paramètres, tel que détaillé dans le chapitre 12 »
- C6. Personnalisation des boissons »

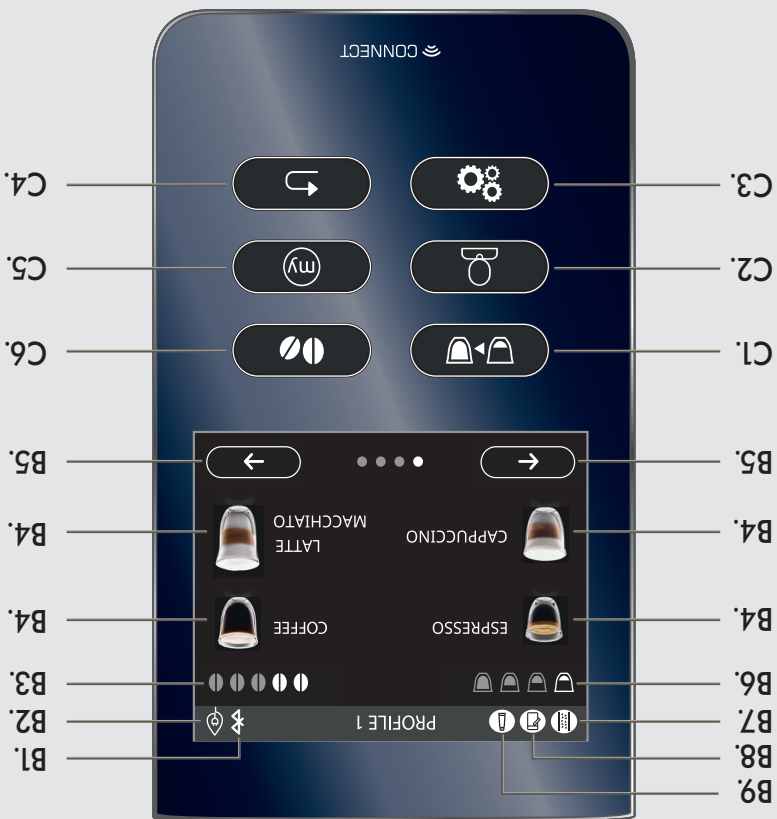

ENREGISTREZ FACILEMENT VOTRE MACHINE ET PROFITEZ D'AVANTAGE DE VOTRE EXPÉRIENCE ESPRESSO.


Enregistrez votre machine à espresso entièrement automatique et devenez membre du Club De'Longhi. Être membre vous permet de profiter davantage de votre expérience café.



Rabais pour les membres du Club De'Longhi : seulement les membres du Club recevront les offres spéciales sur les accessoires espresso.

ÉTAPE 1. PRENEZ UNE PHOTO

- Prenez une photo de l'icône caméra, incluant les points.

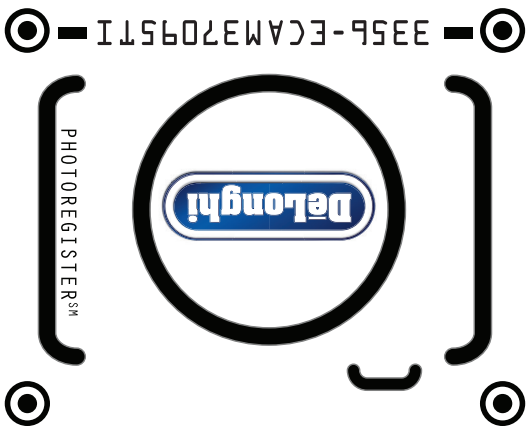

BESOIN D'AIDE?

- Visitez photoregister.com/help ou envoyez le message AIDE à 71403.

CONTACTEZ-NOUS

- Par téléphone : 1 800 945-0929
- En ligne : DeLonghi.com



- Envoyez la photo par SMS, Facebook Messenger ou la télécharger en ligne.

ÉTAPE 2. ENVOYEZ LA PHOTO

DINAMICA
plus



GUIDE DE
DÉMARRAGE
RAPIDE



VISITEZ DELONGHI.COM



ECAM37095TI

