

FinaMill Classic Battery


(please read this if your product is battery operated)



- Hold the base of the FinaMill with one hand and twist the handle counterclockwise to open.
- Insert four AA batteries.
- Replace the handle on the base and twist it clockwise until you hear and feel a click. This will ensure the handle has been fastened.
- After batteries are inserted, for the FinaMill motor to engage and run, a FinaPod must be properly attached to the FinaMill.
- Depending on usage, four AA batteries should last about 4-5 months. If it stops grinding or is not performing well, replace a new set of batteries.


FinaMill Classic Rechargeable

(please read this if your product is rechargeable)

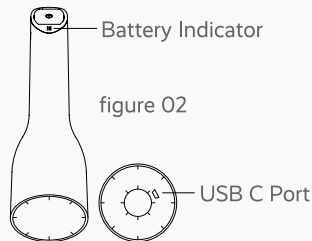

- Plug the USB C cable (included) into the USB C port inside of the FinaMill, see figure 02.
- Connect USB C cable to your USB power adapter and plug the adapter into a power outlet.
- Once all three lights are on, it is fully charged.
- The FinaMill comes to you partially charged. So, when plugged in, you will initially see one or two blinking red lights.
- Depending on usage, one full charge should last about 3-4 months. If it stops grinding or is not performing well, recharge your FinaMill.

FinaPod

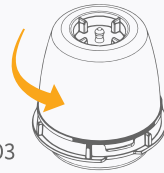

Your FinaPod is designed for immediate use to grind your preferred spices.

TO UNSCREW THE CUP:

- Keep the FinaPod in an upright position with the clear plastic cup facing upwards.
- While holding the base, gently turn the clear plastic cup counterclockwise to unscrew it from the base as shown on figure 03.

TO FILL THE CUP:

- Fill the clear plastic cup to halfway.
- Avoid overfilling as it may hinder the grinding mechanism's effectiveness.

TO SELECT THE GRIND SIZE:

- Twist the knob on the bottom of the pod. Twisting counterclockwise for coarse or clockwise for finer.
- Turn the knob clockwise to the end, this will shut off the grinding. Turning the knob counterclockwise to the end will unscrew and remove the grinding element.

Operations


• INSERTING PODS

Set a pod down on a hard surface such as a kitchen counter, grinding element side down. Take the FinaMill and press the opening onto the pod. Once you feel a click, the pod is engaged and ready for grinding. FinaMill is designed to be safe, that is why without a FinaPod inserted, the motor will not engage.

• REMOVING PODS

Press the FinaMill, pod side down against a hard, flat surface. Once you hear and feel a click, bring the mill up and the pod is released.

3 EASY STEPS, THAT'S IT.

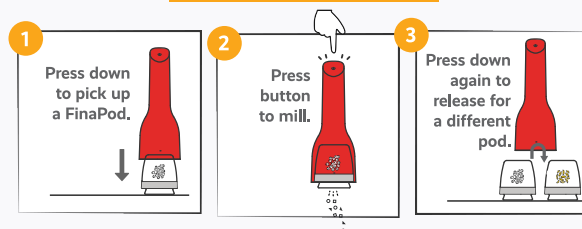

Care and Cleaning

- Grinding elements may be removed by unscrewing and brushed clean.
- The clear container on the FinaPod can be handwashed.
- We do not recommend washing the rotating base in any fashion. Water can get trapped inside & create a health hazard.
- DO NOT wash the FinaMill in water.
- DO NOT wash the FinaPod in the dishwasher.
- DO NOT use water to wash the base of the FinaPod.
- DO NOT use soap or detergent to wash the ceramic grinding elements of the FinaPod.
- DO NOT use the battery operated FinaMill if corrosion on the battery contacts is present.

FAQ

• What else can I grind with the FinaPod?

Included in your packet, there are two FinaPod Pro Plus. FinaPod Pro Plus is designed for everyday use, things like coarse salts, dried minced garlic, toasted onion, cumin seeds and more;

• How do I organize my pods?

We offer stackable trays on our website and are developing more accessories every day. For the latest product offerings, please visit our website.

• How fine can it grind?

It is fairly small, but not a powder like pre-ground spice. Please adjust the grinding knob to your desired coarseness.

• Why isn't it grinding fine enough?

You might have to adjust the grinding adjuster knob to a finer setting.

• How do I adjust the grind size of the FinaPod?

Remove the pod from the mill and twist the adjuster knob. Clockwise for a finer grind, counterclockwise for a coarse grind.

• Why can't I adjust the grinder?

Pepper or other spice might be stuck in the grinding element. The simple fix is to hold the FinaMill, with the pod inserted, upside down and run it for a few seconds. That should clear material from the grinding element and allow it to be adjusted again.

• Can it grind fresh herbs?

No, only chopped or minced dried herbs.

• Why are my spices sticking to the pod?

High humidity or static can cause them to stick. Be sure to keep the grinding element and area clean to minimize sticking.

• What is the warranty? 2 years.