

**COFFEE MACHINE**

# **USER MANUAL**

**MCM151FACDK**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

## THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

# CONTENTS

<b>THANK YOU LETTER</b>	01
<b>SAFETY INSTRUCTIONS</b>	02
<b>SPECIFICATIONS</b>	04
<b>PRODUCT OVERVIEW</b>	05
<b>OPERATING INSTRUCTIONS</b>	13
<b>CLEANING AND MAINTENANCE</b>	19
<b>TROUBLESHOOTING</b>	28
<b>TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT</b>	36
<b>DISPOSAL AND RECYCLING</b>	37
<b>DATA PROTECTION NOTICE</b>	38
<b>WARRANTY CARD</b>	39

# SAFETY INSTRUCTIONS

## Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety. Unintended use may cause hazards and loss of warranty.

## Explanation of Symbols



### **Danger**

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### **Warning of electrical voltage**

This symbol indicates that there is a danger to life and health of persons due to voltage.



### **Warning**

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### **Caution**

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### **Attention**

The signal word indicates important information (e.g. damage to property), but not danger.



### **Observe instructions**

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.



### **Anti-scalding sign**

The surface is liable to get hot during use.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

## CAUTION

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must not be immersed in water.
- **WARNING:** Do not use the appliance if the surface is cracked.
- The heating element surface is subject to residual heat after use.
- Do not use outdoors.
- The appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential environments;
  - bed and breakfast-type environments.
- The coffee-maker shall not be placed in a cabinet when in use
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- **WARNING:** Misuse may cause potential injury.
- **WARNING:** Avoid spillage on the connector.
- Power consumption and time to reach standby mode:  
Standby mode power consumption: 0.5 W.  
Maximum time until appliance enters standby mode: 30 minutes.


# SPECIFICATIONS

<b>Product Model</b>	<b>MCM151FACDK</b>
Voltage	120V-
Frequency	60Hz
Rated Power	1400W
Max. amount of water	1.8L


# PRODUCT OVERVIEW

## Part Names

Overview of the appliance and its components:

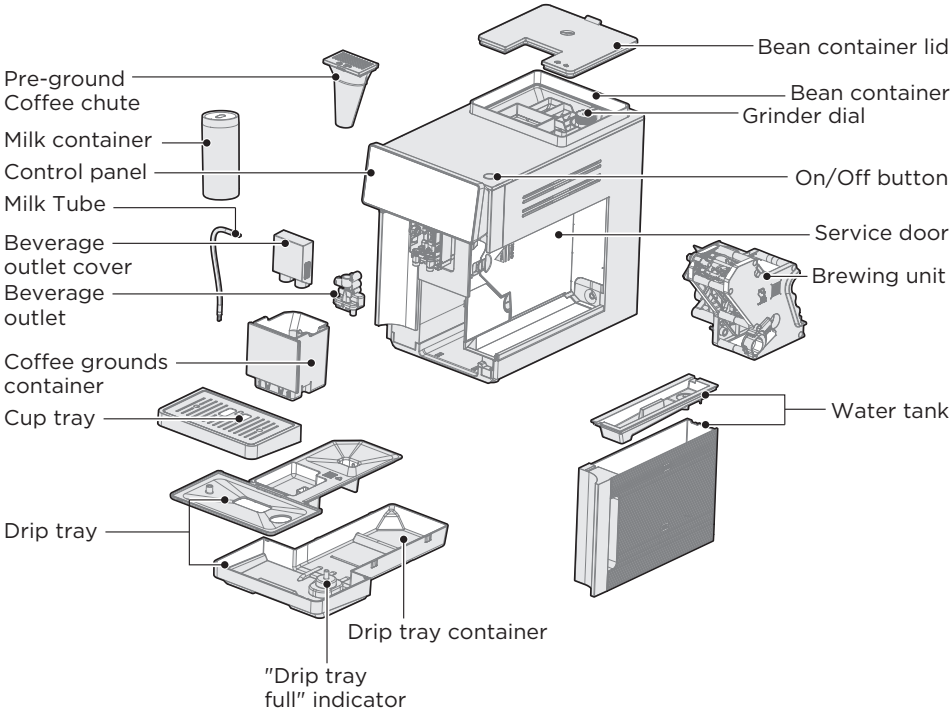

## 2.1 Scope of delivery

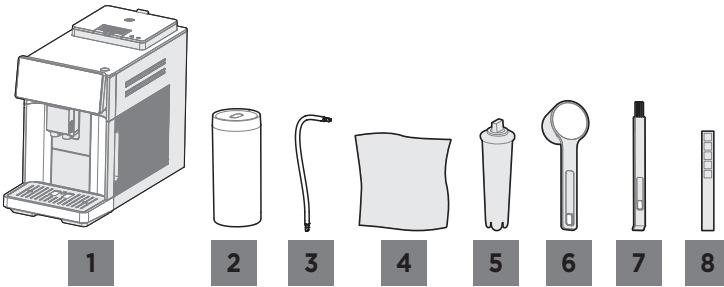

Pos.	Item
1	Appliance
2	Milk container
3	Milk tube
4	Cleaning cloth
5	Water filter

Pos.	Item
6	Measuring scoop
7	Cleaning brush
8	Test strip

## 2.2 Control panel

- i** Make sure the controls are always clean and dry.
- i** Do not cover the control panel with objects.



Symbol	Meaning
*White light	Appliance is cooling down
*Red light	Appliance is heating up
	Water tank is empty
	Coffee grounds container is full
	Appliance has an error
	Change water filter
*White Clean light	Milk system cleaning
*Red Clean light	Coffee cleaning

Symbol	Meaning
Calc	Descalc appliance
	Press to dispense 2 cups
	Press to adjust cup volume
	Press to adjust coffee strength
	Appliance is set to use coffee powder
	Flashes when coffee bean container is empty
	Adjust milk foam quantity

## Before First Use

Clean the appliance and its components. Prepare the appliance for use.

**i** See also the enclosed quick start guide.

### 3.1 Set up the appliance

#### **⚠ ATTENTION**

Improper initial setup can damage the appliance.

▶ Only use the appliance in a frost-free room.

▶ If the appliance has been transported or stored at temperatures below 0°C, wait 3 hours at room temperature before using.

1. Place the appliance on a waterproof, level and sufficiently stable surface.
2. Make sure that the ventilation slots of the appliance are not covered.
3. Remove any protective films and stickers.


### 3.2 Connect the appliance

▶ Insert the main plug of the appliance into a socket near the appliance.

### 3.3 Filling the water tank

**i** If you are using the water tank for the first time, rinse it out first.


1. Pull out the water tank by the handle and remove the lid.

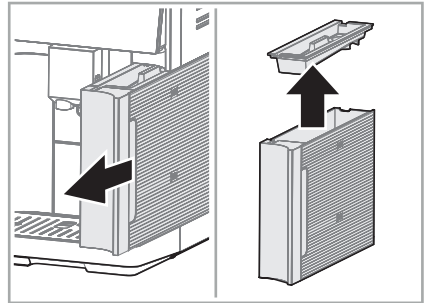

2. Fill the water tank with cold, fresh, non-carbonated drinking water up to the **MAX** mark.



- i** If you pull the water tank half-way out, you can fill the water tank through the inlet.

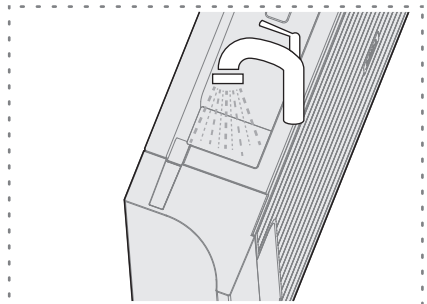


### 3.4 Filling the coffee bean container

#### ⚠ ATTENTION


Improper use can damage the grinder.

- ▶ Only use roasted coffee beans.
- ▶ Do not use coffee beans that have been treated with additives or caramelised.
- ▶ Do not pour coffee powder into the coffee bean container.
- ▶ Do not pour any liquids into the coffee bean container.

1. Open the bean container lid.

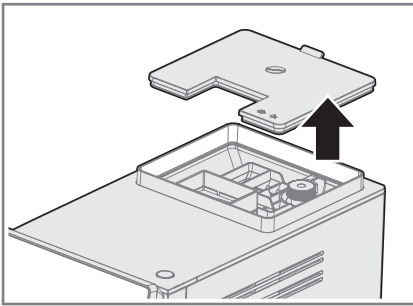

2. Pour the coffee beans into the bean container.

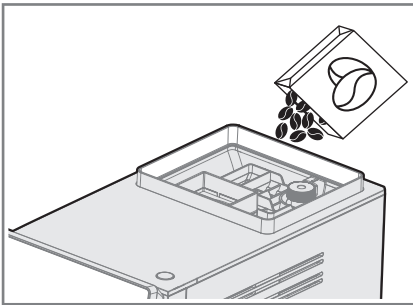

3. Close the bean container lid.

- ⓘ The control panel shows [☞] when the coffee bean container needs to be refilled.

### 3.5 Water filter

A water filter minimizes limescale deposits, reduces impurities in the water and improves the taste of the coffee beverage.

#### ⚠ ATTENTION

Limescale deposits can damage the appliance.


- ▶ Change the water filter after 2 months at the latest.
- ▶ Observe the symbols on the control panel.
- ⓘ Replace the water filter to maintain appliance hygiene.

#### 3.5.1 Preparing and inserting the water filter


- ⓘ You can also operate the appliance without a water filter.
- ⓘ Before activating the water filter, it has to be prepared first.

1. Shake the water filter for about 5 seconds.
2. Remove the water filter from the packaging and turn the date indicator on top of the filter to the next 2 months.
3. Immerse the water filter in a container of water.

- Shake the water filter for 10 seconds until no more water bubbles escape.

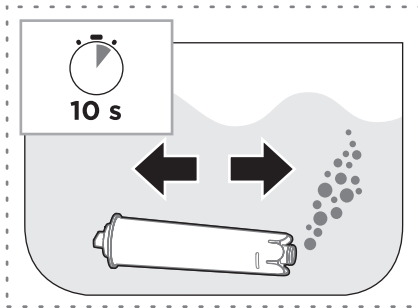

- Firmly press the water filter straight down into the water tank connection.

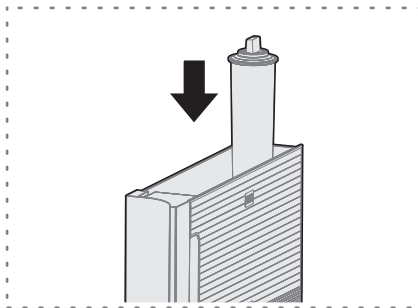


- Insert the water tank back into the appliance.

### 3.6 Checking the water hardness


- i** It is important to set the water hardness correctly to enable the appliance to accurately indicate when the descaling programme should be run.
- i** Use cold, fresh, non-carbonated drinking water.
- i** You can ask your local water supplier for the local water

hardness or check it with the enclosed test strip.

- Dip the test strip briefly into a glass of your local water for 2 seconds.

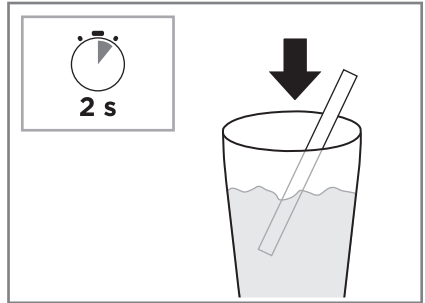


- Allow the test strip to dry for 10 seconds.
- Check the degree of water hardness from the discoloration of the test strip.

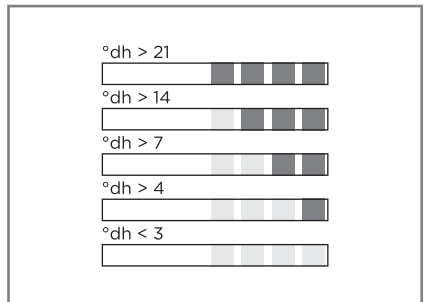

### 3.7 Initial settings

- Press the On/Off button.
  - ✓** [Espresso], [Americano], [Cup], [Coffee], [Milk], [Milk] light up and [Baby] light up in 50% brightness.
- To change a setting, press the corresponding symbol repeatedly until the control

panel shows the required settings.

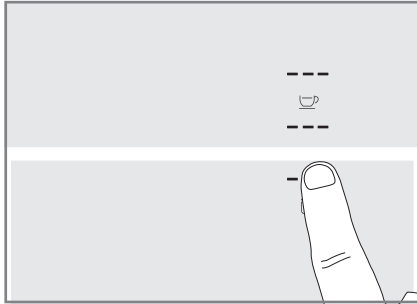

3. To save the settings, press the [Espresso] and [Americano] symbols simultaneously for 3 seconds.

✔ The appliance saves the setting and runs a rinsing cycle.

### 3.7.1 Setting the coffee temperature

▶ While in Settings Mode, press [☕] repeatedly until the control panel shows the desired coffee temperature.

ⓘ Available coffee temperatures:

LED	Temperature
—	
☕	normal
---	
☕	high
----	
☕	max

### 3.7.2 Setting the water hardness

1. Check the degree of water hardness from the discoloration of the test strip. *See the Checking the Water Hardness section.*
2. While in Settings Mode, press [☕] repeatedly until the control panel shows the required water hardness degree.

ⓘ The table shows the allocation of levels 1 (soft) to 5 (very hard) to the different degrees of water hardness:

Symbol	Level	°dh
☕	1	< 3
---		
☕	2	> 4
----		
☕	3	> 7
-----		
☕	4	> 14
----- ☕		
☕	5*	> 21

\* Factory setting

### 3.7.3 Setting the hot water temperature




▶ While in Settings Mode, press [☕] repeatedly until the control panel shows the desired hot water temperature.

ⓘ Available water temperatures:

LED	Temperature
—	
☕	normal
---	
☕	high
----	
☕	max

### 3.7.4 Setting the filter reminder

- ⓘ Every new water filter must be activated first.
- ⓘ If you are not using a water filter, you do not need to activate the filter reminder.
- ⓘ [☕] lights up in 50% brightness.

- To activate the filter reminder, press [].
- ✓ [] lights up in 100% brightness.
- To save the setting, press the [Espresso] and [Americano] symbols simultaneously for 3 seconds.
  - ✓ The appliance saves the settings.
  - ✓ When the activation process is finished, [] turns off.
  - ✓ The filter reminder will light up when it is time to change the water filter.
  - ✓ The appliance will heat up and run a rinse cycle.
  - ✓ The appliance is ready to use.



### 3.7.5 General operating instructions







- i** For technical reasons, steam may escape from the appliance during operation.
- i** During operation, water droplets may form at the ventilation slits and on the lid of the pre-ground coffee chute.
- i** When the appliance is used for the first time after running a cleaning or descaling programme, or if it has not been operated for a long time, the first beverage will not have the full aroma and should not be consumed.

### 3.7.6 Setting the standby time

The standby time is the time before the appliance enters standby mode. In standby mode, the control panel

display screen will remain dark to save power.

- Press the [Ristretto] and [Lungo] symbols simultaneously for 3 seconds.
    - ✓ [Ristretto], [Lungo] and [] will light up.
  - Press [] repeatedly until the control panel shows the symbol for your selected standby time.
- i** Available standby settings:

Symbol	Standby time
	15 min
-	
	30 min*
- -	
	1 h
- - -	
	2 h
- - - 	
	3 h

\* Factory Setting

- To save your settings, press the [Ristretto] and [Lungo] symbols simultaneously for 3 seconds.
  - ✓ The appliance saves your settings and returns to the main menu.
- i** After 30 seconds without user interaction, the appliance will save the current settings and automatically return to the main menu.
- i** The power consumption increases if the standby time is set to over 30 minutes.

# OPERATION INSTRUCTIONS


 
## 4.1 Switch the appliance on

- ▶ To switch the appliance on, press the [On/Off] button.
- ✔ The appliance starts to heat up and rinses.
- ✔ When all beverage symbols light up, the appliance is ready for operation.

## 4.2 Switch the appliance off

- ▶ To switch the appliance off, press the [On/Off] button.
- ✔ The appliance rinses and shuts down.
- ❗ The appliance rinses and switches off automatically 30 minutes after the last beverage has been prepared.


## 4.3 Setting the grinding degree

- ❗ You can set the grinding degree in half steps from 1  (coarse) to 7  (fine).
- ▶ For a finer grind, turn the grinder dial to the left.
- ▶ For a coarser grind, turn the grinder dial to the right.



## 4.4 Beverage customisation

Before preparation, you can customise your drink to your taste.


### 4.4.1 Setting the beverage quantity




- ▶ Press [] repeatedly until the control panel shows the desired quantity.

- ❗ Available beverage quantities:


LED	Quantity
—	
	Small
— —	
	Medium
— — —	
	Large


### 4.4.2 Setting the coffee strength



- ▶ Press [] repeatedly until the control panel shows the desired coffee strength.
- ❗ Available coffee strengths:

LED	Strengths
—	
	Mild
— —	
	Medium
— — —	
	Strong

### 4.4.3 Setting the amount of milk foam

- ▶ Press [] repeatedly until the control panel shows the desired amount of milk foam.
- Available milk foam quantities:

LED	Quantity
—	
	Small

LED	Quantity
— —	
	Medium
— — —	
	Large

## 4.5 Preparing beverages

### **Warning - Risk of scalding**

Hot liquids and steam can cause scalding.

- ▶ Do not hold any parts of your body under the outlet.

### **Warning - Risk of burns**

Some parts of the appliance become hot during operation.

- ▶ Do not touch any parts of the appliance before allowing them to cool down.
- ❗ Some beverages are prepared in 2 steps.
- ❗ If you want to cancel beverage dispensing prematurely, press the selected beverage symbol again.
- ❗ The beverage outlet is height-adjustable.

### 4.5.1 Preparing a coffee beverage from coffee beans

1. Place a glass or cup under the outlet.
2. Set the beverage quantity.  
*Please see the **Setting the beverage quantity** section.*
3. Set the coffee strength.  
*See the **Setting the coffee strength** section.*

4. To start preparing the beverage, press the symbol of a coffee beverage of your choice.
- ✔ The coffee beverage is prepared and dispensed.

### 4.5.2 Preparing a coffee beverage from coffee powder


#### **ATTENTION**

Improper use of coffee powder can damage the appliance.


- ▶ Only add coffee powder when the appliance is switched on.
- ▶ Never fill in more than one measuring scoop of coffee powder.

- ❗ The function for preparing 2 cups is not available for drinks made from coffee powder.

1. To switch the appliance on, press the [On/Off] button.  
*See the **Switch the appliance on** section.*
2. Place a glass or cup under the outlet.
3. Open the lid of the pre-ground coffee chute.

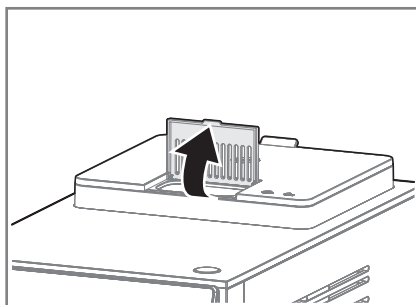

4. Fill a maximum of 1 measuring scoop of coffee powder into the pre-ground coffee chute.

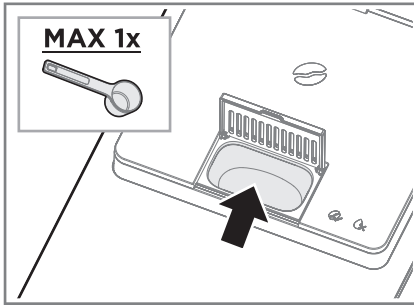

5. Close the lid of the pre-ground coffee chute.
6. Press [☉] repeatedly until [☕] lights up.
7. Set the beverage quantity.

*See the **Setting the beverage quantity** section.*

- ❗ If a coffee beverage with milk has been selected, you can set the amount of milk foam. *See the **Setting the amount of milk foam** section.*
8. To start preparation, press the symbol for the coffee beverage of your choice.
- ✔ Your appliance will use the ground coffee to prepare and dispense the selected coffee beverage.

#### 4.6 Beverage preparation with milk

Your appliance has an integrated beverage dispenser. It can be used to prepare coffee beverages with milk and milk foam.


#### ⚠ Warning - Risk of burns

The beverage dispenser can become very hot.


- ❗ Never touch the beverage dispenser while it is hot.
- ❗ Allow the hot beverage dispenser to cool down before touching it.
- ❗ Use cold milk directly from the fridge for optimal results.
- ❗ Do not fill the milk container beyond the **MAX** mark.
- ❗ Clean the beverage dispenser every time after you have prepared a coffee beverage with milk or milk foam. Dried milk residue is difficult to remove.

#### 4.6.1 Preparing a coffee beverage with milk


1. Connect the milk tube to the beverage dispenser.

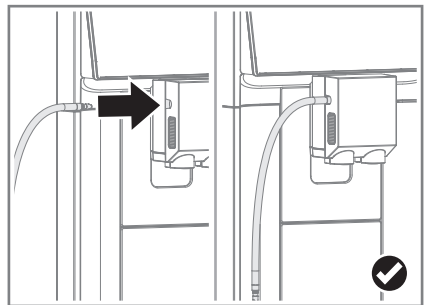

2. Insert the other end of the milk tube into the filled milk container or a milk carton.

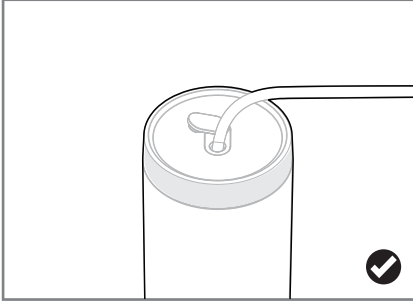


3. Place a glass or cup under the outlet.
4. Set the beverage quantity. *See the **Setting the beverage quantity** section.*
5. Set the coffee strength. *See the **Setting the coffee strength** section.*
6. Set the amount of milk foam. *See the **Setting the amount of milk foam** section.*
7. To start preparation, press the symbol of a coffee beverage with milk of your choice.

- ✔ The coffee beverage with milk is prepared and dispensed.
- ✔ The cleaning reminder [  ] is flashing in white. *See the **Cleaning the milk system** section.*

#### 4.6.2 Preparing milk foam


1. Connect the milk tube to the beverage dispenser.

2. Insert the other end of the milk tube into the filled milk container or milk carton.
  3. Place a glass or cup under the outlet.
  4. Set the amount of milk foam. *See the **Setting the amount of milk foam** section.*
  5. To start preparation, press [Milk Foam].
- ✔ Milk foam is prepared and dispensed.
  - ✔ The cleaning reminder [  ] is flashing in white. *See the **Cleaning the milk system** section.*

#### 4.7 Preparing hot water

1. Place a glass or cup under the outlet.
  2. Set the beverage quantity. *See the **Setting the beverage quantity** section.*
  3. To start preparation, press [Hot Water].
- ✔ Hot water is prepared and dispensed.

#### 4.8 Preparing 2 cups

- ❗ This function is not available for [Hot Water], [Americano] and for beverages made of coffee powder.
1. Place 2 glasses or cups under the outlet.
  2. Press [  ].

3. Set the filling quantity. *See the **Setting the beverage quantity** section.*
4. Set the coffee strength. *See the **Setting the coffee strength** section.*
5. To start preparation, press the symbol for the beverage of your choice.

The preparation of the

- i** beverages takes place in 2 steps. Wait until it is complete.
- ✓** 2 cups are prepared and dispensed.

#### 4.9 Preparing a Cold Brew Americano

##### **ATTENTION**


Cold brew technology is different from traditional espresso brewing. You will need to wait for some time for the beverage to be prepared.

1. Place a glass or cup under the outlet. Add your desired quantity of ice cubes in the glass.


2. Set the beverage quantity. *See the **Setting the beverage quantity** section.*

3. Set the coffee strength. *See the **Setting the coffee strength** section.*

4. To start preparing the beverage, press the [Cold Brew Americano] symbol.

**i** The appliance will recommend a cold rinse to optimize the temperature of the beverage after preparing hot beverages. [  ] will light up in white during the cold rinse.

**✓** The coffee beverage is prepared and dispensed.

**i** When making hot drinks after cold preparations, the machine will heat up to a higher temperature to reach a suitable temperature for hot drinks. [  ] lights up in red during the heating process.

## Settings

You can adjust various settings according to your requirements.

### 5.1 Readjusting the settings

- i** The appliance must be ready to use.
- 1. Press the [Espresso] and [Americano] simultaneously for 3 seconds.
- ✓** The appliance will enter settings mode.
- 2. Adjust the desired settings. Please see **Adjusting Initial**

**Initial settings** in the **Setup** section for more information.

3. To save your settings, press the symbols [Espresso] and [Americano] simultaneously for 3 seconds.
- ✓** The appliance saves the setting and goes back to the main menu.

## Settings

### 5.2 Turning off the filter reminder

1. Remove the water tank.
2. Remove the water filter.
3. Insert the water tank back into the appliance.
4. Press the [Espresso] and [Americano] symbols simultaneously for three seconds. [☕] lights up.
5. Press [☕<sup>x2</sup>] to turn off the filter reminder.
  - ☑ [☕] lights up in 50 % brightness.
6. To save your settings, press the [Espresso] and [Americano] symbols simultaneously for 3 seconds.
  - ❗ See *Replacing the water filter* for more information on using a new water filter.

### Adjustable Settings

Beverage Quantity	Press ☕ to adjust the beverage quantity.
Coffee Strength	Press ☕ to adjust the coffee strength.
Milk Foam Quantity	Press ☕ to adjust the amount of milk foam.
Pre-Ground Coffee Powder Usage	Press ☕ repeatedly until ☕ lights up to activate the pre-ground coffee powder setting.
Coffee Temperature	Press [Espresso] and [Americano] simultaneously, then press ☕ to adjust the coffee temperature.
Water Hardness	Press [Espresso] and [Americano] simultaneously, then press ☕ to adjust the water hardness.
Water Temperature	Press [Espresso] and [Americano] simultaneously, then press ☕ to adjust the hot water temperature.
Filter Reminder	Press [Espresso] and [Americano] simultaneously, then press ☕ <sup>x2</sup> to activate the filter reminder.
Standby Time	Press and hold [Ristretto] and [Lungo] for three seconds, then press ☕ to adjust the time before entering standby mode.

# CLEANING AND MAINTENANCE

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

## 6.1 Cleaning advice

### ⚠ ATTENTION

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use abrasive sponges.
- ▶ Do not use harsh or abrasive cleaning agents.
- ▶ Do not use cleaning agents that contain alcohol.
- ▶ Always read the label to check whether your cleaner or scouring pad is suitable.

### ⚠ ATTENTION

Unsuitable cleaning and descaling agents may damage the appliance.

- ▶ Do not use pure citric acid, vinegar or any vinegar-based agents to descale the appliance.
- ▶ Always read the label to check whether your cleaning or descaling agent is suitable.

## 6.2 Dishwasher cleaning

### ⚠ ATTENTION

Improper cleaning in the dishwasher can damage the components.

- ▶ Follow the user manual for the dishwasher.
- ▶ Only use dishwasher cycles below 60 °C/140 °F.
- ▶ Only clean suitable components in the dishwasher.

Component	Dishwasher
Appliance	✗
Drip tray	✓
Drip container	✓
Beverage dispenser	✓
Milk container	✗
Bean container lid	✗
Water tank	✗
Brewing unit	✗
Coffee grounds container	✓
Component	Dishwasher
"Drip tray full" indicator	✓
Beverage outlet cover	✗

## 6.3 Cleaning the appliance

### **Warning - Risk of electric shock**

Moisture in the appliance can lead to electric shock.

- ▶ Protect the appliance from extreme heat, moisture and splashing water.
- ▶ Never use a steam cleaner for cleaning.
- ▶ Never immerse the appliance, the main plug or the main cable in water.
- ▶ Disconnect the appliance from the power supply before carrying out any cleaning or maintenance work.

### **Warning - Risk of burns**

Some parts of the appliance become hot during operation.


- ▶ Do not touch any parts of the appliance before allowing them to cool down.

1. Clean the surfaces with a microfiber cloth.
2. Clean the coffee bean container compartment with a damp cloth.


### 6.3.1 Cleaning the drip tray and the coffee grounds container

Empty the drip tray daily or as soon as the floater is visible.


1. Remove the drip tray.

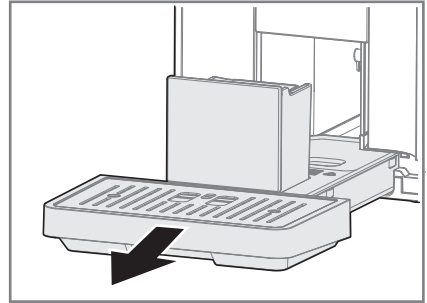

2. Empty the drip tray and the coffee grounds container.
3. Clean the inside of the appliance with a soft cloth.

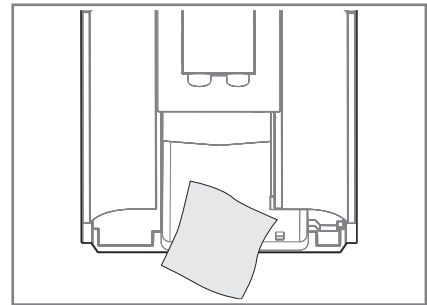

4. Clean all components.

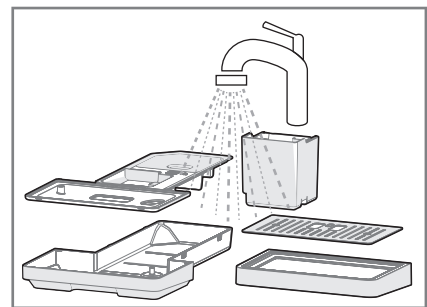


5. Insert the components into the appliance.

**i** You can clean the drip tray and the coffee grounds container in the dishwasher.


### 6.3.2 Cleaning the brewing unit

In addition to automatic rinsing, the brewing unit should be removed weekly for cleaning.


1. Disconnect the appliance from the power supply.
2. Pull out the water tank by the handle.
3. Open the service door.

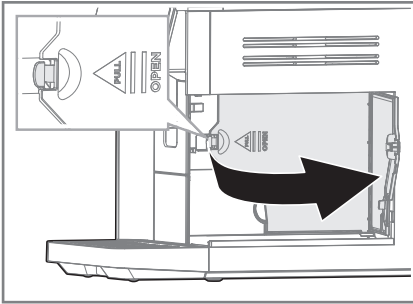


4. Press the orange locking mechanism to the right to unlock the brewing unit.

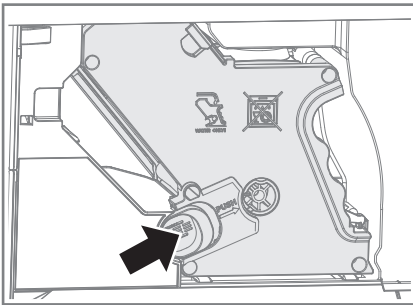


5. Remove the brewing unit.

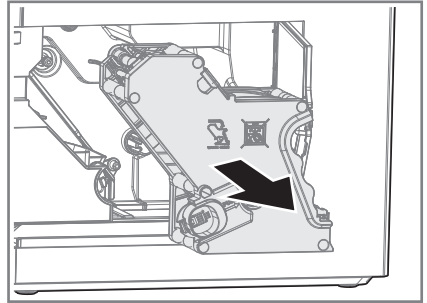

6. Clean the brewing unit under running water.

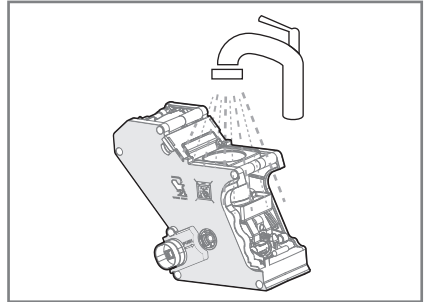


7. Clean the inside of the brewing chamber with a damp cloth.

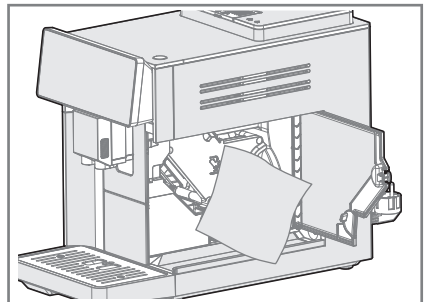


8. Allow the brewing unit and the inside of the appliance to dry.
9. Insert the brewing unit into the brewing chamber.
10. Close the service door.
11. Insert the water tank into the appliance.

### 6.3.3 Cleaning the milk container

1. Unplug the milk tube from the beverage dispenser.
2. Remove the milk tube from the milk container.
3. Unscrew the lid.

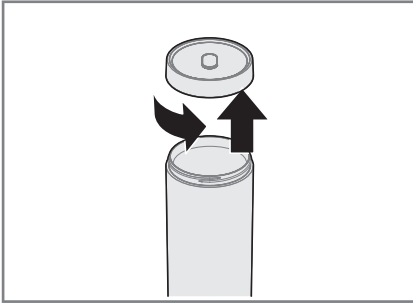

4. Clean the components under running water.

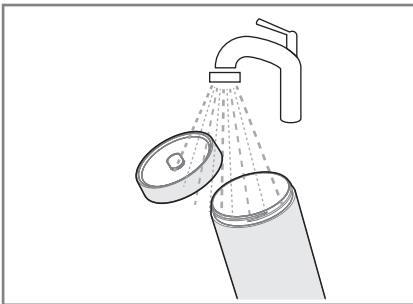

5. Dry all components thoroughly.

### 6.3.4 Cleaning the beverage dispenser


Clean the beverage dispenser every 3-5 days.

#### **Warning - Risk of burns**


The beverage dispenser becomes very hot during operation.

- ⓘ Do not touch any parts of the appliance before allowing them to cool down.


1. Unplug the milk tube from the beverage dispenser.
2. Remove the beverage outlet cover.

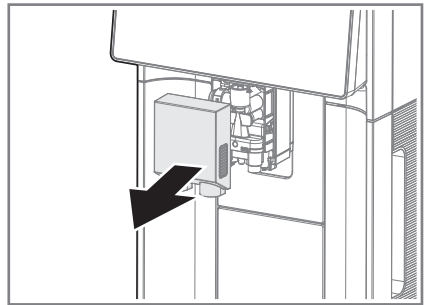


3. Open the metal bracket and remove the beverage dispenser.

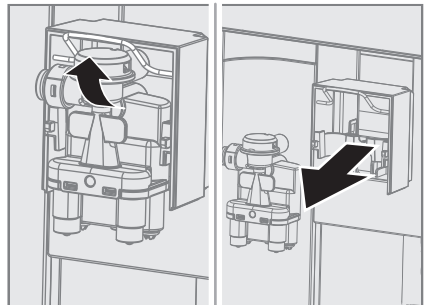

4. Dismantle the beverage dispenser.

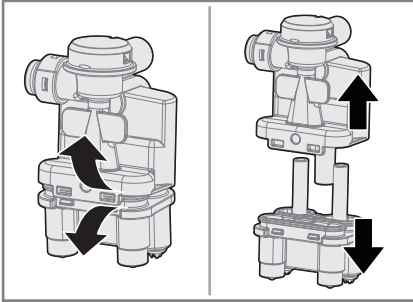

5. Clean the beverage dispenser under running water.

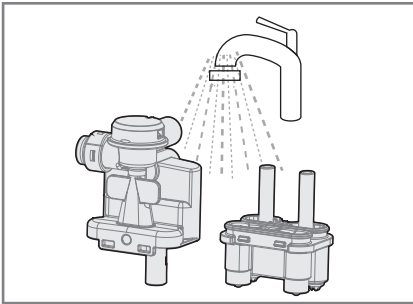


6. Dry the beverage dispenser thoroughly.
7. Reassemble the individual parts.
8. Insert the beverage dispenser into the beverage dispenser holder.
9. Close the metal bracket.
10. Place the beverage outlet cover on the beverage outlet.
11. Connect the milk tube to the beverage dispenser.
- i** You can clean the beverage dispenser in the dishwasher.


### 6.3.5 Cleaning the pre-ground coffee chute

The pre-ground coffee chute must be cleaned every 3-5 days.

1. Remove the pre-ground coffee chute.
2. Clean the pre-ground coffee chute under running water.

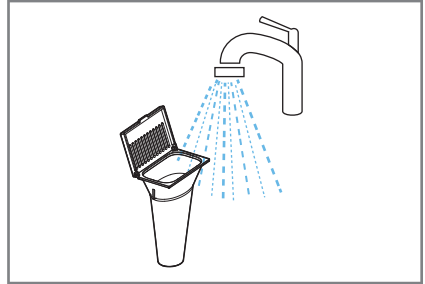


3. Pull out the water tank and remove the brewing unit.
4. Use the cleaning brush to dislodge the pre-ground coffee powder remaining in the chamber.

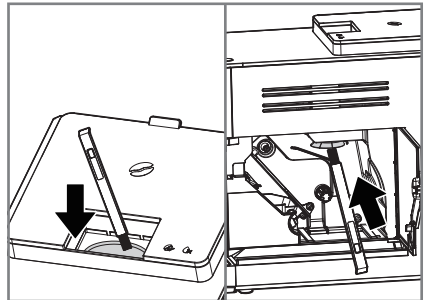

5. Clean the inside of the brewing chamber with a damp cloth.
6. Insert the brewing unit into the brewing chamber.
7. Close the service door.
8. Insert the water tank into the appliance.
9. Dry the pre-ground coffee chute thoroughly.
10. Insert the pre-ground coffee chute into the pre-ground coffee chute chamber.

### 6.3.5 Replacing the water filter

- i** [] will flash every two months as a reminder to clean the water filter.
- 1. Pull out the water tank and remove the old water filter.
- 2. Prepare and insert the new water filter. *See **Prepare and insert the water filter** in the **Setup** section.*
- 3. Press the [Espresso] and [Americano] symbols simultaneously for 3 seconds.
- ✔** Press the [Espresso] and [Americano] symbols to enter Settings Mode.

#### Recommended Cleaning Schedule


Drip Tray	Daily, or as soon as the floater is visible.
Coffee Grounds Container	Daily
average Dispenser	Every 3-5 days
Pre-Ground Coffee Chute	Every 3-5 days
Brewing Unit	Weekly
Milk Container	After every use
Milk System Cleaning Program	After using the milk system
Coffee System Cleaning Program	As needed
Descaling Program	When the descaling indicator lights up

## 6.4 Service programs

Your device has various service programs that assist with cleaning the device.

### ⚠ ATTENTION


Improper or delayed descaling can damage the appliance.


- ▶ Immediately perform the descaling program in accordance with the instructions. If the
- ❗ appliance is not descaled in good time, it will be locked and [  ] will light up.
- ❗ If your appliance has been locked, you can only operate it again once the descaling program has been carried out.



### Program Usage

Milk system cleaning	Cleaning the milk system
Coffee cleaning	Cleaning the appliance with a cleaning tablet
Descaling	Descaling the appliance with descaling agent

### 6.4.1 Using the milk system cleaning program

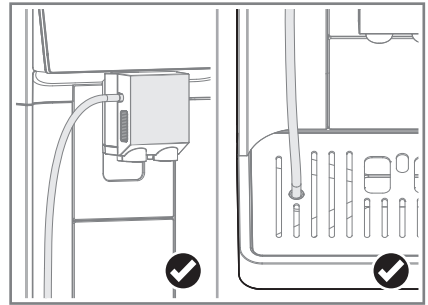- ❗ [  ] is flashing in white.
- 1. Remove the milk tube and clean it.
- 2. Insert one end of the milk tube into the beverage dispenser and the other end into the opening for the milk tube.



3. Remove and fill the water tank with lukewarm water up to the **MAX** mark.
4. Insert the water tank.
5. To start the milk system cleaning program, press [  ].
- ❗ To cancel the milk system cleaning program, press [  ] again.
- ✔ The milk system cleaning program starts.
- ✔ When the milk system cleaning program is finished, the appliance returns to the main menu.


## 6.4.2 Using the coffee cleaning program

The program runs for about 20 minutes.


**i** [Clean] lights up.

1. Remove the milk tube and clean it.
  2. To start the coffee cleaning program, press [Clean] for 3 seconds.
- i** To cancel the coffee cleaning program, press [Clean] again within 3 seconds.
- ✓** [Clean] lights up in red.
- ✓** The coffee cleaning program starts.
- ✓** [Coff] will flash.
3. Remove and empty the drip tray and the coffee grounds container.
  4. Reinsert the emptied drip tray and coffee grounds container.
- ✓** [Water] will flash.

5. Remove and fill the water tank with lukewarm water up to the **MAX** mark.
6. Insert the water tank.
7. Place a container with a capacity of at least 51 oz (1.5 liters) under the beverage outlet.

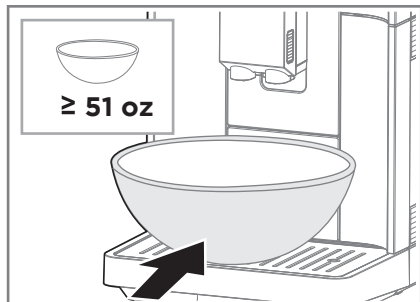

8. Put a cleaning tablet into the pre-ground coffee chute.

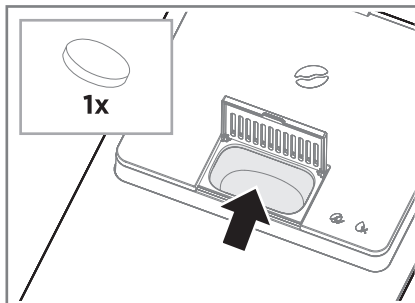

9. Press [Clean] to start the coffee cleaning program. The program will run for 20 minutes.
- ✓** When the coffee cleaning program is finished, the appliance returns to the main menu.
11. Remove and fill the water tank with cold, fresh, non-carbonated drinking water, then reinsert it.


## 6.4.3 Using the descaling program

The program runs for about 40 minutes.


**i** [Calc] lights up.

1. Remove the milk tube and clean it.
  2. To start the descaling program press [Calc] for 3 seconds
- ✓** The descaling program starts.
- ✓** [Coff] is flashing.

3. Remove and empty the drip tray and the coffee grounds container.
4. Insert the drip tray and the coffee grounds container.
- ✓ [⚠] is flashing.
5. Remove the water tank and empty it.
6. Remove the water filter (if you are using one).
7. Fill the water tank with lukewarm water up to the **1 L** mark.
8. Fill the descaler into the water tank according to the instructions on the packaging.
9. Insert the water tank.
10. Place a container with a capacity of at least 51 oz (1.5 liters) under the beverage outlet.

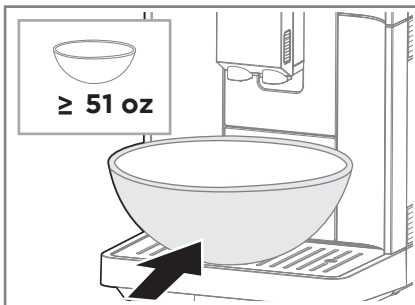

11. Insert one end of the milk tube into the beverage dispenser and the other end into the container.

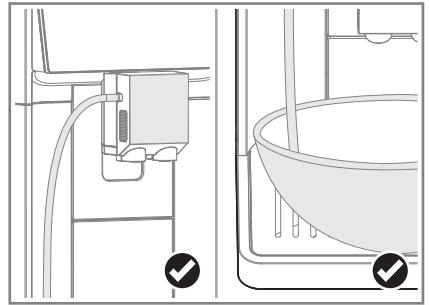



 

 








12. To resume the descaling program, press [Calc].
13. When [⚠] is flashing, empty and rinse the water tank thoroughly.
14. Insert the water filter into the water tank (if you are using a filter).
15. Fill the water tank with cold, fresh, non-carbonated drinking water up to the **MAX** mark and reinsert it.
16. To resume the descaling program, press [Calc].
- ✓ [☺] will flash.
17. Remove and empty the container.
18. Remove and empty the drip tray.
19. Insert the drip tray and the coffee grounds container.
- ✓ When the descaling program is finished, the appliance returns to the main menu.
- ⓘ Do not remove the container under the dispenser during the descaling process.

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. To save your time and money, read the table below before calling the service center.

Please check the following points before arranging for service.

Problem	Possible causes	Solution
[  ] is flashing.	The water tank is almost empty.	▶ Fill the water tank with fresh, non-carbonated drinking water up to the <b>MAX</b> mark. <i>See the <b>Checking the water hardness</b> section.</i>
[  ] lights up.	The water tank is not inserted correctly.	▶ Insert the water tank correctly.
[  ] is flashing.	The coffee grounds container is full.	1. Empty the coffee grounds container. 2. Wait at least 5 seconds. 3. Reinsert the coffee grounds container.
[  ] lights up.	The coffee grounds container is not inserted correctly.	▶ Insert the coffee grounds container correctly.
[  ] is flashing in white.	Too much or too little coffee was used.	▶ Clean the brewing unit. <i>See the <b>Cleaning the brewing unit</b> section.</i>
[  ] lights up in white.	The brewing unit is not inserted correctly.	▶ Insert the brewing unit correctly. <i>See the <b>Cleaning the brewing unit</b> section.</i>
[  ] lights up in white.	The beverage dispenser needs to be cleaned.	▶ Use the milk system cleaning program. <i>See the <b>Using the milk system cleaning program</b> section.</i>

Problem	Possible causes	Solution
[  ] is flashing.	The appliance needs to be descaled.	▶ Use the descaling program. See the <i>Using the descaling program</i> section.
[  ] is flashing.	The water filter needs to be replaced.	▶ Replace the water filter. See the <i>Replacing the water filter</i> section.
[  ] is flashing.	The coffee bean container is almost empty.	▶ Refill the coffee bean container. See the <i>Filling the coffee bean container</i> section.
[  ] is flashing in red and the beverage symbol lights up.	The appliance has an error.	▶ Unplug the appliance from the main socket and contact customer service.
[  ] continues to flash even though the water level is above the minimum quantity.	The floater is stuck in the water tank.	▶ Remove the water tank and clean it thoroughly.
	Air is in the water filter.	▶ Dip the water filter in water until no more air bubbles escape, then replace the water filter. See the <i>Replacing the water filter</i> section.
The appliance no longer responds.	The appliance has a fault.	<ol style="list-style-type: none"> <li>1. Pull out the main plug and wait 1 minute.</li> <li>2. Re-insert the main plug.</li> <li>3. Press the [On/Off] button.</li> </ol>
[  ] continues to flash even though the coffee grounds container is empty.	If the appliance is switched off, it will not register that the coffee grounds container was emptied.	<p>❗ Always empty the coffee grounds container while the appliance is switched on.</p> <ol style="list-style-type: none"> <li>1. Remove the empty coffee grounds container and wait for 5 seconds.</li> <li>2. Re-insert the coffee grounds container.</li> </ol>

Problem	Possible causes	Solution
<p>The coffee grounds container is full, but [☺] does not flash.</p>	<p>The drip tray was removed for more than 5 seconds without the coffee grounds container being emptied.</p>	<p>1. Empty the coffee grounds container when you remove the drip tray, even if it only contains a few coffee pucks.</p> <p>☑ The coffee grounds counter will reset to 0 and start counting the coffee pucks correctly again.</p>
<p>Coffee is not dispensed or only dispenses in drips.</p>	<p>The beverage dispenser or the beverage dispenser holder is blocked.</p>	<p>▶ Clean the beverage dispenser manually. <i>See the <b>Cleaning the beverage dispenser</b> chapter.</i></p>
	<p>Grinding level is set too fine.</p>	<p>▶ Adjust the grinder to a coarser grinding level. <i>See the <b>Setting the grinding degree</b> section.</i></p>
	<p>The brewing unit is dirty.</p>	<p>▶ Clean the brewing unit. <i>See the <b>Cleaning the brewing unit</b> section.</i></p>
	<p>Air is in the water filter.</p>	<p>▶ Dip the water filter in water until no more air bubbles escape, then replace the water filter. <i>See the <b>Replacing the water filter</b> section.</i></p>
	<p>Build-up of lime scale in the appliance.</p>	<p>▶ Use the descaling program. <i>See the <b>Using the descaling program</b> section.</i></p>

<b>Problem</b>	<b>Possible causes</b>	<b>Solution</b>
No coffee runs out of one or both spouts.	The beverage dispenser is blocked.	▶ Clean the beverage dispenser manually. See <i>the Cleaning the beverage dispenser section</i> .
When dispensing the beverage, liquid escapes from the beverage dispenser and sprays all over the beverage dispenser.	The lower part of beverage dispenser is not properly assembled.	▶ Assemble the beverage dispenser correctly. See <i>the Cleaning the beverage dispenser section</i> .
The coffee quality varies widely. Set quantity is not reached.	Build-up of lime scale in the appliance.	▶ Use the descaling program. See <i>the Using the descaling program section</i> .
The milk foam quality varies widely. Set quantity is not reached or no milk is taken in at all.	Build-up of lime scale in the appliance.	▶ Use the descaling program. See <i>the Using the descaling program section</i> .
	The beverage dispenser or the beverage dispenser holder is dirty.	▶ Clean the beverage dispenser manually. See <i>the Cleaning the beverage dispenser section</i> .
	The type of milk used is not suitable for preparing milk foam.	▶ Do not use milk that has already been boiled. ▶ Use cold milk with a fat content of at least 1.5 %.
	The beverage dispenser or the milk tube is not properly assembled.	▶ Check the assembly of the beverage dispenser and the milk tube. See <i>the Cleaning the beverage dispenser section</i> .
	The milk tube is blocked.	▶ Clean the milk tube.


<b>Problem</b>	<b>Possible causes</b>	<b>Solution</b>
The coffee has no „foam” or is too weak.	The coffee beans are unsuitable.	<ul style="list-style-type: none"> <li>▶ Use coffee beans suitable for espresso machines.</li> <li>▶ Use a type of coffee with a higher proportion of robusta beans.</li> </ul>
	The coffee beans are no longer fresh.	▶ Use fresh coffee beans.
	The grinding level is set too coarse.	▶ Adjust the grinder to a finer grinding level. <i>See the <b>Setting the grinding degree</b> section.</i>
	The coffee strength is set too low.	▶ Set the coffee strength to a higher value. <i>See the <b>Setting the coffee strength</b> section.</i>
The coffee is not hot enough.	The coffee temperature is set too low.	▶ Set the coffee temperature to a higher value. <i>See the <b>Adjusting the coffee temperature</b> section.</i>
	The cup is cold.	▶ To preheat the cups, rinse them with hot water.
	Milk reduces the temperature of the beverage.	▶ To preheat the cups, rinse them with hot water.
	A cold brew drink was prepared.	▶ Prepare a second cup of hot drink.
The ground coffee blocks the coffee powder chute.	The coffee powder chute is damp.	▶ Remove the coffee powder chute, then clean and dry it thoroughly.
	The ground coffee is compressed too much.	▶ Do not press the ground coffee too firmly into the measuring spoon.

<b>Problem</b>	<b>Possible causes</b>	<b>Solution</b>
The coffee grounds are not compact and are too wet.	The grinding setting is too fine or too coarse, or not enough ground coffee has been used.	<ul style="list-style-type: none"> <li>▶ Adjust the grinding degree to a finer or coarser setting. <i>See the <b>Setting the grinding degree</b> chapter.</i></li> <li>▶ Use a full measuring scoop of ground coffee.</li> </ul>
The water filter does not stay in position in the water tank.	The wrong water filter is being used.	▶ Use original spare parts only. <i>See the <b>Accessories</b> section.</i>
	The rubber ring on the water filter is not in place.	▶ Place the rubber ring back on the water filter.
The service door does not close properly.	The brewing unit is not inserted correctly.	▶ Insert the brewing unit correctly. <i>See the <b>Cleaning the brewing unit</b> section.</i>
	There is too much ground coffee in the brewing chamber.	▶ Clean the brewing unit. <i>See the <b>Cleaning the brewing unit</b> section.</i>
The grind setting is difficult to adjust.	There are too many beans in the grinder.	<ul style="list-style-type: none"> <li>▶ Dispense a beverage made from coffee beans.</li> <li>ⓘ Only adjust the grinding degree slightly.</li> </ul>
The appliance seems to be leaking.	The drip tray is too full and overflows.	▶ Empty the drip tray daily or as soon as the floater is visible.
	The water tank is not inserted correctly.	▶ Make sure the water tank is inserted correctly.
	The appliance is not placed on a level surface.	▶ Place the appliance on a waterproof, level and sufficiently stable surface. <i>See the <b>Set up the appliance</b> section.</i>

Problem	Possible causes	Solution
The appliance suddenly goes back to the main menu.	The appliance is too hot.	<ul style="list-style-type: none"> <li>▶ Switch off the appliance for 30 minutes.</li> </ul>
The beverage symbols light up suddenly and go out slowly one after another while the beverage is being prepared.	The drip tray or water tank was removed during preparation.	<ul style="list-style-type: none"> <li>❗ Do not remove the drip tray or the water tank while the beverage is being prepared.</li> </ul> <ol style="list-style-type: none"> <li>1. Put the drip tray and the water tank back into the appliance.</li> <li>2. Wait until the appliance returns to the main menu.</li> </ol>
Very frequent display that descaling is necessary.	The water hardness setting is too hard.	<ul style="list-style-type: none"> <li>▶ Insert the water filter and adjust the water hardness setting as described. <i>See the <b>Checking the water hardness</b> section.</i></li> </ul>
The appliance makes unusually loud noises.	Air is in the water filter.	<ul style="list-style-type: none"> <li>▶ Dip the water filter in water until no more air bubbles escape, then replace the water filter. <i>See the <b>Replacing the water filter</b> section.</i></li> </ul>
	The water tank is not inserted correctly.	<ul style="list-style-type: none"> <li>▶ Make sure the water tank is inserted correctly.</li> </ul>
	There is not enough milk in the milk container.	<ul style="list-style-type: none"> <li>▶ Pour more milk into the milk container.</li> </ul>
The coffee bean container is empty but [☉] did not flash.	The oil from the coffee beans has soiled the detection window in the coffee bean container.	<ul style="list-style-type: none"> <li>▶ Use the cleaning brush to clean the coffee bean container detection window regularly.</li> </ul>

Problem	Possible causes	Solution
The coffee bean container still contains beans but [☉] is flashing.	The coffee beans are not falling into the grinder.	▶ Use the cleaning brush to drop the coffee beans into the grinder.
The appliance dispensed coffee liquid during the automatic rinsing cycle.	Ground coffee was added before the appliance was switched on.	▶ Only add ground coffee when the appliance is switched on.
	Ground coffee fell into the brewing unit.	▶ Clean the brewing unit. <i>See the <b>Cleaning the brewing unit</b> section.</i>

# TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

The  Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of the Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

# DISPOSAL AND RECYCLING

## Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:  
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used devices must be returned to an official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



## Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



# DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**

# WARRANTY CARD

## IF YOU NEED SERVICE

1. Before contacting us to arrange service, please determine whether your product requires repair. Some questions can be addressed without service. Please take a few minutes to review the Troubleshooting section of the User Manual or visit <https://www.midea.com/us/support>.

2. All warranty service is provided exclusively by our authorized Midea Service Providers in the U.S. and Canada.

Midea Customer Service  
300 Kimball Drive, Suite 201, Parsippany, NJ 07054

In the U.S.A. or Canada, call 1-866-646-4332.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province. If outside the 50 States of the United States or Canada, contact your authorized Midea dealer to determine whether another warranty applies.

### LIMITED WARRANTY

#### WHAT IS COVERED

##### FIRST YEAR LIMITED WARRANTY (PARTS AND LABOR)

For one year from the date of delivery, if this appliance is installed, operated and maintained according to instructions attached to or furnished with the product, Midea America Corporation (hereafter "Midea") will pay for factory-specified replacement parts and repair labor to correct defects in materials or workmanship that existed when this major appliance was purchased, or at its sole discretion replace the product; however, you are responsible for all costs associated with returning the product to Midea. In the event of product replacement, your appliance will be warranted for the remaining term of the original unit's warranty period.

##### YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN.

Service must be provided by a Midea-designated service company. This limited warranty is valid only in the 50 States of the United States or Canada and applies only when the major appliance is used in the country in which it was purchased. This limited warranty is effective from the date of original consumer delivery. Proof of purchase is required to obtain service under this limited warranty. Should service be required, the date of delivery establishes the warranty period.

### LIMITED WARRANTY

#### WHAT IS NOT COVERED

1. Commercial, non-residential or multiple-family use, or use inconsistent with published user, operator or installation instructions.
2. In-home instruction on how to use your product.
3. Service to correct improper product maintenance or installation, such as installation not in accordance with electrical codes or correction of household electrical system (i.e. house wiring, fuses, etc.).

4. Consumable parts (i.e. light bulbs, batteries, air or water filters, etc.).
  5. Defects or damage caused by the use of non-genuine Midea parts or accessories.
  6. Damage from accident, misuse, abuse, fire, floods, electrical issues, acts of God or use with products not approved by Midea.
  7. Repairs to parts or systems to correct product damage or defects caused by unauthorized service, alteration or modification of the appliance.
  8. Cosmetic damage, including scratches, dents, chips, and other damage to appliance finishes, unless such damage results from defects in materials and workmanship and is reported to Midea within 30 days.
  9. Routine maintenance of the product.
  10. Products that were purchased "as is" or as refurbished products.
  11. Products that have been transferred from its original owner.
  12. Discoloration, rust or oxidation of surfaces resulting from caustic or corrosive environments including but not limited to high salt concentrations, high moisture or humidity or exposure to chemicals.
  13. Service or parts for appliances with original model/serial numbers removed, altered or not easily identified.
- The cost of repair or replacement under these excluded circumstances shall be borne by the customer.

#### DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states and provinces do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

#### DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

Midea makes no representations about the quality, durability, or need for service or repair of this appliance other than the representations contained in this warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this appliance, ask Midea or your retailer about buying an extended warranty.

#### LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. MIDEA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

**Midea**

*make yourself at home*



[www.midea.com](http://www.midea.com)

© Midea 2022 all rights reserved