

Read Important Safety Instructions before use and save for future reference.

Shark.
chillpill™

Owner's Guide

LET'S GET STARTED.

Colors may vary.



**GET TO
KNOW
YOUR
CHILLPILL™**

Fully charge before first use.

Misting Pod

(With select units only)



InstaChill™ Cooling Plate

(With select units only)



Fan Cap



Display

Dial

Battery
Barrel

Power
Lock

Air Outlet
(Keep dry)

Motor
Barrel

Hinge

Inlet Mesh Filter



Charging Port



Air Inlet

(Do not block)

SWAP ATTACHMENTS

Line up the open circle icon, then rotate the cap until it clicks into place.



Fan Cap



Misting Pod*



InstaChill™
Cooling Plate*



*With select
units only



LOCKED



UNLOCKED

- 1 UNLOCK TO USE**
Slide the power lock to the unlocked position.



- 2 POWER ON**
After unlocking, push down on the display to activate your ChillPill.




- 3 SET YOUR SPEED**
Turn the dial to increase or decrease airflow.
POWER OFF
Press down and hold the display, or slide the lock to the locked position.

ADJUST THE HINGE TO DIRECT AIRFLOW




Twist the barrels to adjust the airflow angle. You can use the battery barrel as a handle or as a tabletop stand.

HANDHELD

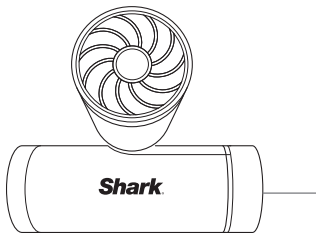

TABLETOP

In tabletop mode,
angle the barrels
to find the ideal
airflow height.

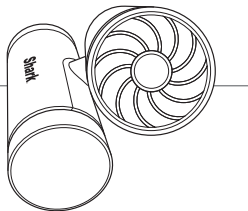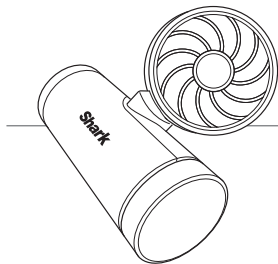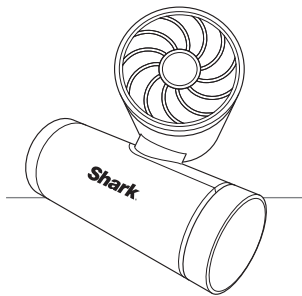

USING THE FAN

The Fan Cap comes pre-installed and ready to use.





Rotate the dial to adjust fan speed.
Try speeds 1-5 indoors, 5-10 outdoors.

MORE SPEEDS. ENDLESS

Recommended speeds	1	2	3	4
At home relaxing	●	●	●	
Focused work sessions	●	●	●	●
Running errands	●	●	●	●
Daily commutes or travel	●	●	●	●
Crowds, festivals & sidelines		●	●	●
Parks & picnics				●
Time spent outdoors				
Hot day cooldown				

WAYS TO CHILL.

5	6	7	8	9	10
●					
●	●				
●	●	●	●		
●	●	●	●	●	●
●	●	●	●	●	●
	●	●	●	●	●


USING THE MISTING POD*

1

ADD WATER

Open the tank and fill with water to the top. Thoroughly dry the exterior before use.


NOTE: Make sure the moisture wick is inside the misting pod. Replace the wick monthly.

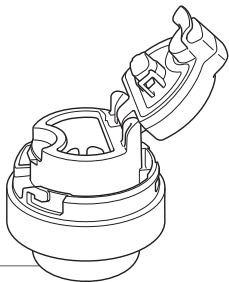

2

INSTALL THE POD


Align the open circle icon with the icon on the barrel, then rotate until the pod clicks into place.

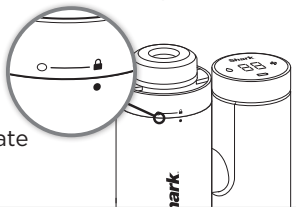

3

RELEASE THE MIST

Rotate the cap to open the protective cover. Pod must be in the open position to mist.

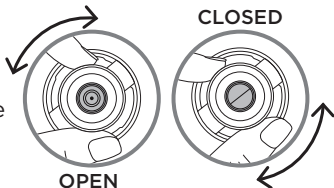

*With select units only

MIST MODES

Push down on the display to cycle through mist modes and to power off. Rotate the dial to adjust airflow speeds.



CONSTANT MODE


For a steady stream of mist. Icon is solid blue.

(Up to 5 minutes runtime)

INTERVAL MODE

For pulses of mist. Icon blinks blue.

(Up to 10 minutes runtime)

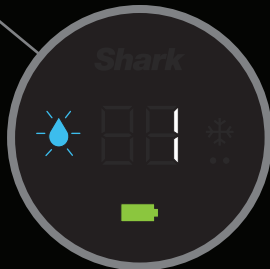

USING THE INSTACHILL™ COOLING PLATE*

Align the open circle icon with the icon on the barrel, then rotate until the pod clicks into place.

Push down on the display to activate. Place the cooling plate against areas like wrist, neck, and forehead for instant cooling on contact.



*With select units only

COOLING LEVELS

Push down the display once to activate Level 1 cooling. Push down again to increase to Level 2. Push down a third time to turn off.

Automatically turns off after 8 min. to conserve battery.



LEVEL 1

One dot indicates milder setting.
Great for indoor use.



LEVEL 2

Two dots indicate colder setting.
Great for indoor/outdoor use.

NOTE: ChillPill™ cannot operate as a fan while the cooling plate is attached.

For best results, use the cooling plate in temperatures under 90°F, and keep away from moisture.

CHARGING + BATTERY LIFE

Always use your Shark®-branded cable.
For best results, use with a 5V=3A power adapter.

BATTERY LIFE



100-70%



70-30%



30-5%



Less than 5%

RUNTIME

Fan Speed	Fan Only	Fan + Mist	Cooling Plate
1	11 hours	4 hours	Level 1 2 hours
5	4.5 hours	2 hours	Level 2 1 hour
10	1.5 hours	1 hour	

CHARGE TIME (0-100%): UP TO 3.5 HOURS

WEAR IT. ATTACH IT. KEEP IT CLOSE.

**ChillPill accessories
unlock all-new ways
to hack the heat.**

- Travel Case
- Element Case
- Clip
- Clamp
- Crossbody Strap
- Wristlet
- Sleeve

Shop all at **sharkclean.com/accessories**



SOMETHING STUCK IN YOUR BLADES?

Always keep hair and loose items securely away from the fan's air inlets and outlets. **To keep your ChillPill safe, clean the inlet mesh filter when needed, and replace it when worn.**

**Order replacement mesh filters at sharkninja.com.
Make sure to have one on hand before servicing the blades.**

To service the blades:

1

LOCK FOR SAFETY

The power lock must be in the locked position before performing any blade maintenance.



LOCKED

2

REMOVE THE INLET MESH FILTER

Insert a flat-head screwdriver into the slot under the filter rim and gently pry off the filter.



3**CLEAN THE BLADES**

Use a cotton swab or tweezers to gently wipe away any hair or debris on the blades.

4**REPLACE THE FILTER**

Align the tabs on the rim of the filter with the slots, then gently press until the filter snaps into place.

**5****UNLOCK TO USE**

Slide the power lock to the unlocked position.

**UNLOCKED**



SCAN TO EXPLORE
qr.sharkclean.com/fa020series