

PERFORMANCE WEIGHT VEST SIZE GUIDE



A - CIRCUMFERENCE

88 - 118 cm / 34.6 - 46.5"

Measure around your waist and chest to ensure you fall within the above range

B - LENGTH

Measure the length from the base of your neck to the top of your hips and ensure the length is no less than 48 cm / 18.9"

