

Roland FRP-NUVOLA EX Digital Piano Bundle

 
PLEASE LOCATE EACH ITEM BEFORE DISCARDING BOXES

* At least two people must always be on hand to remove the product from the packaging.

Bench: The piano bench (BNC-11) is on top in the center.
Locate all the hardware for the bench inside this box.



Stand: The stand box is labeled "KSC-70" and contains all the hardware for assembly.
Please locate the owner's manual and all the following parts in this box:

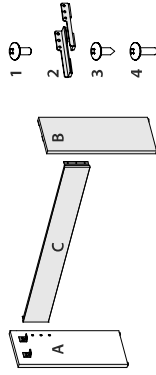

A	Side board (left)	1 pc.
B	Side board (right)	1 pc.
C	Center board	1 pc.
1	Screw "a" (M5 x 12 mm)	6 pcs.
2	Stabilizers (left/right)	6 pcs.
3	Screw "b" (4 x 14 mm)	6 pcs.
4	Screw "c" (M5 x 20 mm)	4 pcs.

 
Headphones: The headphones (RH-5) are located in a box next to the bench box.



Headphones Connector: The headphones include an adaptor for 1/4" jack.




Pedal Board: The pedal board box is labeled "KPD-70" and contains all the hardware for assembly.
Please locate the owner's manual and all the following parts in this box:

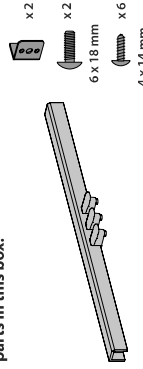

Piano: The piano box is printed with an illustration of a piano and contains all the items below.
Please locate the owner's manual and these five items which are packaged individually:

 
1) Music Rest

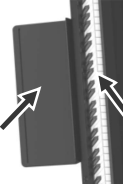

2) Digital Piano



 3) AC Adaptor

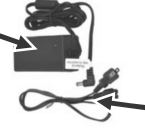

4) Power Cord



* As necessary, affix cord clamps to fasten the pedal cord.

Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (leaflet "Read Me First," "FRP-NUVOLA EX Owner's Manual," "KSC-70 Owner's Manual," "KPD-70 Owner's Manual," "BNC-11 Owner's Manual" and "RH-5 Owner's Manual"). After reading, keep the document(s) including those sections where it will be available for immediate reference.

For video instructions on how to assemble your piano, access lesson contents, begin your Roland Cloud membership, and more, scan this two-dimensional code.



Using the Roland Piano App to access Roland Cloud

This product includes a 12-month trial of Roland Cloud membership contents (normally available for a fee) in the "Roland Piano App" developed by Roland. It includes additional tones and songs exclusive for this product.

MEMO

You can find more detailed instructions in the Knowledge Base on the Roland website.


https://roland.cm/frp-nuvola_kb



1. Install "Roland Piano App" from the App Store or Google Play onto your smartphone, tablet or other mobile device.


2. Launch "Roland Piano App" and create a new Roland account.

* If you already have a Roland account, go to step 3.

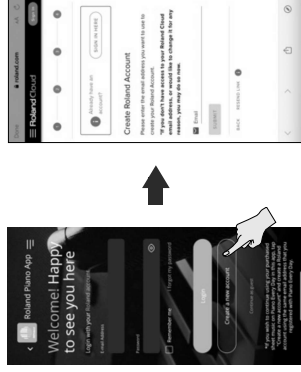


MEMO

If the following screen appears, tap "Guest" → "Login."

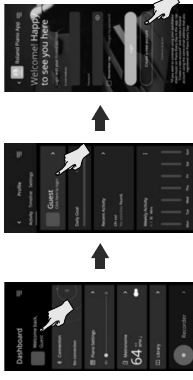

3. Check the serial number on the information cover on the top of the piano or on the bottom of the piano.

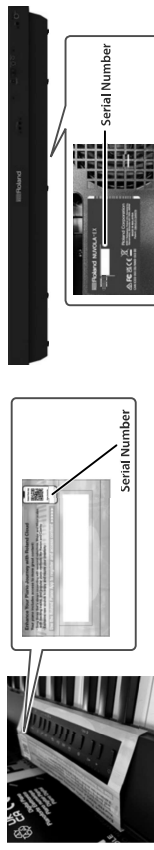

4. Access the following website and log in using the Roland account you created in step 2.
https://roland.cm/frp-nuvola_serial



5. On the serial number registration page, select "FRP-NUVOLA EX", and input the serial number you found in step 3.
This activates your 12-month Roland Cloud membership.
* The trial will be automatically canceled after 12 months.

6. Launch "Roland Piano App".

Check whether the songs can be selected from [Library] and additional tones can be selected from [Piano Settings>Tones] before use.

* It may take some time before your information is registered and you can select songs or tones. If you can't select songs or tones yet, wait for a little while and try again.

* Please be aware that in some countries or regions, it might not be possible to use Roland Cloud at this time.