

# OVENTE

DOUBLE - WALL

# GLASS KETTLE

360 DEGREE ROTATION  
AUTOMATIC CORDLESS KETTLE

## KD96B



*Before using, please read this instruction manual and keep it for future use.*

[ovente.com](http://ovente.com)

# DIGITAL ELECTRIC GLASS KETTLE

## KD96B

### TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	.....	3
GET TO KNOW YOUR ELECTRIC KETTLE	.....	4
USING YOUR ELECTRIC KETTLE	.....	5
IMPORTANT NOTES FOR PLUG AND CORD	.....	7



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- ❗ 1. Read all instructions carefully before using the kettle.
- ❗ 2. Supervise children around the appliance.
3. Ensure the kettle's voltage matches your home's mains voltage before use. If not, contact your dealer.
- ❗ 4. Unplug before filling, emptying, cleaning, or when not in use.
- ❗ 5. Do not overfill; only use cold water and observe the maximum level indicator.
- ❗ 6. Avoid using near flammable fumes, gas, or electric burners.
- ❗ 7. Keep the cord from hanging off the edge of surfaces.
- ❗ 8. Never yank the cord; it may cause damage or electric shock.
- ❗ 9. If the cord or plug is damaged, or if the appliance malfunctions, return it to an authorized service agent.
- ❗ 10. Use the handle and knobs, not the hot surface.
- ❗ 11. Avoid facing the spout to prevent steam burns.
- ❗ 12. Use a protective pad on wood surfaces to avoid damage.
- ❗ 13. Ensure the lid is correctly positioned before use to avoid scalding.
- ❗ 14. Do not remove the lid while heating to prevent scalding.
- ❗ 15. Remove and replace the lid carefully when hot.
- ❗ 16. Use the handle, not the lid, when moving a hot kettle.
- ❗ 17. Do not operate the kettle if empty.
- ❗ 18. Do not immerse the kettle, power base, or cord in water.
- ❗ 19. Use only the supplied base unit with the kettle.
- ❗ 20. Only boil water in the kettle; do not use for other liquids or food.
- ❗ 21. Avoid opening the lid while water is boiling to prevent steam burns.
- ❗ 22. Keep water away from the LCD board and controls.
- ❗ 23. Do not overfill to prevent damage and malfunction.
- ❗ 24. Regularly clean and descale the kettle to maintain performance.



# GET TO KNOW YOUR ELECTRIC KETTLE

VOLTAGE: 110-120V 50/60HZ

POWER: 900-1100W

1. COVER
2. FILTER
3. GLASS
4. BODY
5. PCB PANEL
6. COVER STARTER
7. HANDLE COVER
8. HANDLE RACK
9. BASE



 
 
 
 
1. Temperature Icon
2. 100 °F (Milk)
3. 165°F (Tea)
4. 185°F (Noodles)
5. 205°F (Coffee)
6. Temperature Increase/Decrease button
7. Keep warm
8. Power (On/Off)



# USING YOUR ELECTRIC KETTLE

Please check whether your socket and power is suitable for this product before use. Do not exceed the maximum line of the mark(1700ml). It is suggested to boil twice to clean the inner pot when first use. Do not touch the up part of glass body of the kettle when and after heating to avoid burns.

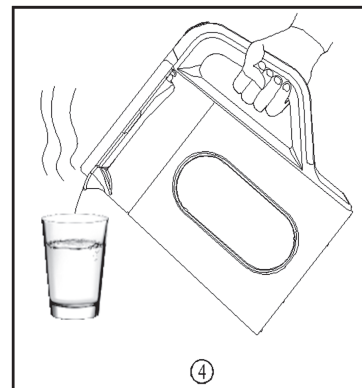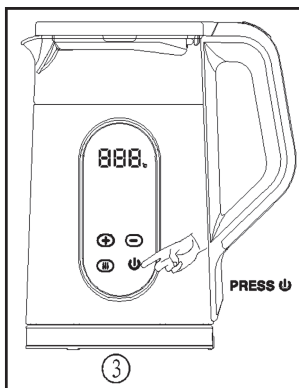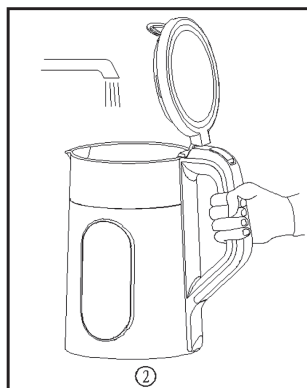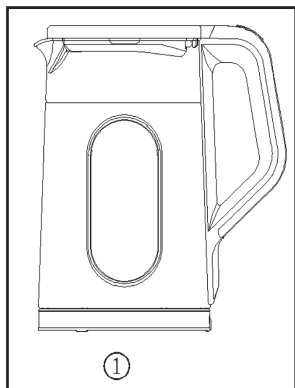

- 1 . Place the the kettle on a horizontal surface for use.
- 2 . Open the lid and pour water into the kettle.
- 3 . Connect with power, enter the setting interface, and press the button for boiling water (you can select the setting temperature you need under the setting interface).
- 4 . Take off the kettle for brewing.



 



“SIMPLE STEPS IN OPERATING THE KETTLE”



# BASIC OPERATION IN USING THE KETTLE

1. Temperature Icon: Displays real-time and set temperature.
2. 100°F (Baby bottle): Press 100°F to enter baby bottle mode.
3. 165°F (Tea): Press 165°F to enter tea mode.
4. 185°F (Noodles): Press 185°F to enter noodles mode.
5. 205°F (Coffee): Press 205°F to enter coffee mode.
6. Temperature Adjust: Press  to set temperature selection from 100-212°F in 10°F increments.
7. Keep-Warm Key: Press  once to activate keep-warm mode at the set temperature (100°F, 165°F, 185°F, 205°F, 212°F).

The buzzer sounds and blinks. It maintains warmth for 2 or 5 hours, reheating if the temperature drops 9°F below the set value.

8. Power Button: Press  to start boiling. The buzzer sounds "DI," displays 212°F, and lights up all buttons.    After boiling, the buzzer sounds "DI DI", lights turn off, and the display fades after 30 seconds. The power button then shows a breathing light.

9. Automatic "Keep-Warm" Memory button:

- Press "Keep-Warm" button to turn ON automatic memory "Keep-Warm"
- "Keep-Warm" icon flashes on / off when Automatic "Keep-Warm" memory is pressed ON.
- When temperature drops 9°F, it automatically reboils then cut off at your temperature select.

10. Automatic "Keep-Warm" Memory Preset Time Durations:

- **100°F** (5 hours Automatic "Keep-Warm")
  - **165°F, 185°F, 205°F, & 212°F** (2 hours Automatic "Keep-Warm")
- Automatic "Keep-Warm" function will stay ON until you Press "Keep-Warm" button OFF. Light stays permanently on to indicate "Keep-Warm" function is turned OFF The memory will only remember the last state "Keep-Warm" or "Not-Keep-Warm" that you set.



# CARE AND DESCALING

How to care for your kettle:

- Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent.
- Do not use abrasive scouring pads or powers.
- Never immerse the kettle in water or other liquids.  
From time to time, depended on the nature of your water supply, a boiled scale deposit is naturally formed and can be found mostly adhered to the heating element, thus
- reducing the heating efficiency.  
The amount of boiled scale deposited (and subsequently the need to clean or re-scale) largely depends on the water hardness in
- your area the frequency with which the kettle is used.  
Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling: Under normal use, it is generally necessary to clean and descale at least twice a year, the specific method is as follows:

1. Mix daily vinegar with water in a ratio of 1:2, fill the kettle (the highest water level) to start boiling water, and wait for the kettle to boil
2. Leave the mixture for 12 hours.
3. Pour off the mixture.
4. Fill clean water to the highest water level and restart the boil function.
5. Pour off the boiling water, The scale and mixture has been removed and the cleaning of the kettle is completed.



# OVENTE WARRANTY

## LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our slow cookers with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email [support@ovente.com](mailto:support@ovente.com) or call 1-855-926-2626.  
Visit us at [ovente.com](http://ovente.com)

 [Facebook.com/ovente](https://www.facebook.com/ovente)

 [@oventeTweets](https://twitter.com/oventeTweets)

 [@Ovente](https://www.instagram.com/Ovente)

 [youtube.com/ovente](https://www.youtube.com/ovente)

.....