

SPECIAL ATTENTION

If the unit detects an electrical shock hazard, it will immediately shut off. To restore power, press the Reset button on the ALCI safety device to reactivate the circuit. Test the ALCI plug before each use as noted:

1. Press Test button.
2. Reset button will pop up. If it doesn't, do not use the appliance.
3. Press Reset button to test for power. If the ALCI plug is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

WARRANTY RETURN PROCEDURE

For all warranty issues, please call 1-888-670-3756 or email us at customerservice@chazdean.com for further instructions and return address.

WARRANTY GUIDE IMPORTANT WARRANTY NOTICE

A purchase receipt is required for all warranty claims. (Please read details below)

IMPORTANT:

Warranty valid only when appliance is purchased from chazdean.com, Chaz Dean Salons or an authorized Wen® by Chaz Dean retailer. Warranty valid only for the WEN® by Chaz Dean Brush Dryer Styling Tool. Terms and conditions may vary depending on the salon/authorized retailer's individual exchange or return policy.

LIMITED 12-MONTH WARRANTY

Our 12-month warranty covers tools within the U.S. (Alaska, Hawaii, Puerto Rico, and Continental U.S.) and Canada only, and only when purchased from chazdean.com, Chaz Dean Salons or an authorized Wen® by Chaz Dean retailer. The WEN® by Chaz Dean warranty covers the appliance against defects in material or workmanship for 12 months from the date of purchase. Sorry, no refunds will be given.

THIS WARRANTY DOES NOT COVER

- Damage due to any modifications to the appliance
- Normal wear and tear, which includes but is not limited to, housing or barrel scratches, and shorts or cuts in the power supply cord or plug
- Damage due to misuse and abuse such as:
 - Dropping
 - Wrong voltage supply
 - Neglecting safety precautions
 - Damage due to tampering, such as repair or attempted repair by an unauthorized party
 - Neglect or lack of proper maintenance
 - Damage to the cord. Please do not wrap the cord around the tool, as it can result in the cord breaking.

PLEASE BE ADVISED THAT IMPROPER USE OR MAINTENANCE OF YOUR APPLIANCE CAN RESULT IN DAMAGE TO PROPERTY OR PERSONAL INJURY, INCLUDING GREAT BODILY HARM. IT IS IMPORTANT TO FOLLOW THE INSTRUCTIONS. FAILURE TO DO SO CAN VOID THIS WARRANTY. WITH PROOF OF PURCHASE AND WITHIN 12 MONTHS Exchange of defective appliance is at WEN® by Chaz Dean discretion. If your WEN® by Chaz Dean appliance fails to operate properly within the first 12 months of purchase, consumers can return the tool by contacting Wen® by Chaz Dean Customer Service Department, 1-888-670-3756 or email us at customerservice@chazdean.com for further instructions. For replacement of appliance under warranty, there is a \$10.00 (USD) fee payable to WEN® by Chaz Dean to cover shipping, handling, and insurance to send your replacement appliance to you. Repair or servicing of defective appliances is not offered.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE 12-MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY. IN NO EVENT SHALL WEN® BY CHAZ DEAN BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state both in the U.S. and Canada.

Guaranteed ONLY when purchased at chazdean.com, Chaz Dean Salons, or an authorized WEN® by Chaz Dean retailer. NOT from a drugstore, supermarket, or other unauthorized source.

Wen® by Chaz Dean
6444 Fountain Ave.
Hollywood, CA 90028
1-888-670-3756
chazdean.com

Printed in China
Rev 24K INS-DRYER-BOOKLET

wen®
BY CHAZ DEAN

INSTRUCTIONS, SAFETY AND WARRANTY GUIDE

Congratulations on the purchase of the WEN® by Chaz Dean Brush Dryer Styling Tool. Please read this guide thoroughly before use and keep this guide available for quick reference.

The WEN® by Chaz Dean Brush Dryer Styling Tool gives you the benefits of a hair dryer and a brush all in one. The 51mm and 38mm round brushes help to create smooth, voluminous, and bouncy blowouts. Additional attachments include Air Flow.

FEATURES

- 51mm round brush ideal for medium to long-length hair
- 38mm round brush ideal for chin length to medium length hair
- Air Flow attachment
- Customizable temperature and speed settings
- 9-foot professional-length swivel cord

OPERATING INSTRUCTIONS

This dryer is intended for professional and consumer use. This dryer has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

There are two buttons on the front of the tool; one controls the airflow speed: off, medium, high, and the other controls the heat: cool, medium, and hot.



GENERAL SPECIFICATIONS

Model: W960-HAB-MLKIT, **Rated Voltage:** 125V

Frequency (Hz): 60Hz, **Rated Wattage:** 1000W

Length of A.C. Cord: 9 ft./2.7 m

Handle less Cord: 58 lbs. / 265g

Handle with Cord: 1 lbs. / 455g

38mm Round Brush: .34 lbs. / 152g

51mm Round Brush: .45 lbs. / 206g

Air Flow: Large 125mm: .34 lbs./155g

MAINTENANCE

Unplug the dryer from the power source prior to any maintenance. Keep all vents and openings clear of dirt and dust. The exterior of the dryer should be wiped clean with a damp cloth only. The air filter cover, at the rear of the handle, should be removed and the area cleaned of any hair or dust at least every 30 days.



OVERHEATING

If overheating occurs, an automatic safety device will trip off and cool air will come out of the dryer for a period of time. Then hot air will come out again after the automatic safety device resets itself. If this occurs, unplug the cord and allow the dryer to cool for 10 to 15 minutes. Make sure the air vents are fully cleaned before starting again. For easy cleaning, simply twist the filter cap open and remove any dust, hair, or debris then twist the filter cap to the lock position.

Defects and Malfunction

- Read all contents of the warranty completely and carefully before contacting our WEN® by Chaz Dean Customer Service.
- The dryer is covered under warranty for 12 months from the date of purchase.
- WEN® by Chaz Dean is not responsible for damage caused by misuse or due to operator accidents, such as dropping the appliance on the floor.

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER. DANGER

- As with most electric appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING

To reduce the risk of burns, electrocution, fire or injury to persons:

- Use the dryer only for the purpose described in this guide to prevent accidents, misuse, damage, or malfunction.
- Use this appliance only for its intended use as described in this manual.
- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly or it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Plug the dryer into an electrical outlet of AC 125V/60Hz.
- KEEP AWAY FROM WATER to prevent fire, electric shock, damage, or malfunction.
- KEEP AWAY FROM CHILDREN.
- Do not handle the dryer or cord with wet hands, as this may cause electric shock, personal injury and/or property damage.
- Keep the cord away from heated surfaces.
- DO NOT WRAP THE CORD AROUND THE DRYER. Allow the cord to hang loose and straight at the point of entry into the dryer.
- Never drop or insert objects into any of the dryer openings.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT USE WHEN THE CORD HAS BEEN DAMAGED OR IF PLUG IS LOOSE.
- DO NOT REPAIR, TAMPER WITH, OR TRY TO RECONSTRUCT the dryer or electric shock, personal injury, property damage, malfunction, or accidents may result.
- When inserting or pulling out the plug, hold the plug firmly to prevent the cord from peeling and to prevent accidents, misuse, personal injury, property damage, or malfunction.

- Stop using immediately if you smell an offensive odor. If ignored, it could cause a fire or other accidents.
- Do not keep the dryer in a damp place, such as a bathroom, or it may malfunction.
- Stop using the dryer and remove from the power source when there is an earthquake or thunder.
- Unplug the dryer from the power source when cleaning or wiping to prevent fire or electric shock.
- Never block the air openings of the dryer or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Keep the air openings free of lint, hair, etc.
- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use an extension cord with this appliance.
- Avoid multiple cables to a plug.

SAVE THESE INSTRUCTIONS

- Do not direct hot air towards eyes or other heat-sensitive areas. Avoid direct contact with eyes, scalp, and skin.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place the dryer on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not operate with a voltage converter.

THE ALCI PLUG: This appliance is equipped with ALCI (appliance leakage current interrupter) safety device specifically engineered for safety. ALCI plug is intended to interrupt its load circuit when there is an electrical fault to the appliance. It is for household use and may be plugged into a standard AC electrical outlet (ordinary household current). The ALCI safety device in this unit is built into the plug. This device will make it inoperable under some abnormal conditions, such as accidental immersion in water. If the appliance is immersed in water, do not attempt to reset the ALCI safety device. The ALCI safety device is equipped with a test button so that its operation can be checked.

TO TEST

1. Press the Reset button on the ALCI safety device.
2. Plug your blow-dryer into an AC outlet then press the Test button.
3. The Reset button will pop out. This verifies the safety device is operating properly. If the Reset button does not pop out, do not use the unit. Return it immediately for service.
4. Press the Reset button to reactivate the ALCI safety device. Your blow-dryer is ready for use. Repeat this procedure every time you use the blow-dryer to confirm that the safety device is operating properly.