

**cosori**

CFD-P102-SUSR

# 10-Tray Stainless Steel Dehydrator



User Manual



# Thank you for your purchase!



**Elevate** your menu with our recipe gallery  
at [cosori.com](https://www.cosori.com)



**Enjoy** weekly, featured recipes handcrafted  
by our chefs in the Cosori kitchen



## Contact Our Chefs

For recipes that need a touch of magic, reach  
out to our chefs at:

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-free:** 1-888-402-1684

Mon-Fri, 9:00 am-5:00 pm PST/PDT

## Table of Contents

Package Contents	3
Specifications	3
Important Safeguards & Warnings	4
Getting To Know Your Dehydrator	6
Before First Use	8
Using Your Dehydrator	8
Care & Maintenance	10
Troubleshooting	11
Limited Warranty Information	13
Customer Support	15

## Package Contents

1 x Stainless Steel Food Dehydrator
10 x Tray
3 x Fruit Roll Sheet
3 x Mesh Screen
1 x Recipe Book
1 x User Manual

## Specifications

Model	CFD-P102-SUSR
Power Supply	120V, 60Hz
Rated Power	640W
Capacity	7.28 ft <sup>2</sup> drying area
Temperature Range	95°-167°F / 35°-75°C
Time Range	30 min-48 hr
Dimensions	12.2 x 14.7 x 13.0 in / 31.0 x 37.4 x 32.9 cm
Weight	19.0 lb / 8.9 kg

On behalf of all of us at Cosori, enjoy!

# READ AND SAVE THESE INSTRUCTIONS

## Important Safeguards & Warnings

Follow basic safety precautions when using your dehydrator. Read all instructions.

### GENERAL SAFETY

- **Do not** touch hot surfaces. Use handles.
- Be cautious when handling the back of the dehydrator. This area will be hotter than the rest of the dehydrator.
- **Do not** immerse cord, plug, or housing in water or other liquids.
- Closely supervise children near the dehydrator.
- Unplug when not in use, and before cleaning. Allow to cool completely before putting on or taking off parts.
- **Do not** use the dehydrator if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 15). Using third-party parts or accessories may cause injuries.
- **Do not** use outdoors.
- **Do not** place on a stove, near gas or electric burners, or in a heated oven.
- Be extremely cautious when moving the dehydrator or removing trays if they contain hot liquid.
- To disconnect, turn off the dehydrator, then remove the plug from the wall outlet.
- Keep the dehydrator away from flammable materials (curtains, tablecloths, etc). Use on a flat, stable, heat-resistant surface

away from heat sources and liquids.


- **Do not** store anything on top of the dehydrator while in use.
- **Do not** clean housing with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- **Do not** use where aerosol (spray) products are being used.
- **Do not** run the dehydrator for more than 48 hours at a time. After 48 hours, unplug and allow to cool for 2 hours before using again.
- Avoid contact with moving parts. **Never** place any object into the openings in the screen protecting the dehydrator fan.
- **Only** use the dehydrator as directed in this manual.
- Not for commercial use.
- Household use **only**.

### POWER & CORD

- **Do not** let cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- This dehydrator has a 3-prong grounding plug, and should **only** be used with 120V, 60Hz electrical systems in North America. **Always** plug in to a grounded electrical

outlet. **Do not** modify the plug in any way.

- **Do not** use with a 220–240V outlet.

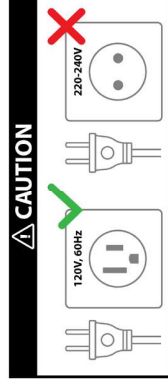

- Any extension cord must also be a grounding-type 3-wire cord.
- This dehydrator uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care.
- The marked electrical rating of an extension cord should be at least as high as the rating of the dehydrator (see page 3).

**WARNING:** Items marked with the following symbol may reach high temperatures and should be handled carefully.




**CAUTION:**  
Hot surface.

## SAVE THESE INSTRUCTIONS

## Getting to Know Your Dehydrator


Your dehydrator features an automatic fan, which circulates warm air horizontally to evenly and quickly dry food. Dried foods are a great treat to snack on because they preserve most of their nutritional value and flavor. Dehydrating is the perfect way to preserve snacks, fruit, vegetables, bread, and even flowers.

### DEHYDRATOR DIAGRAM

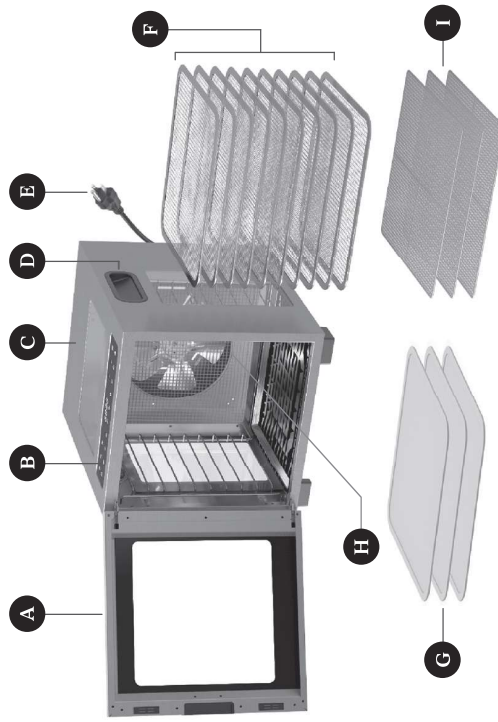

- A. Door
- B. Control Panel
- C. Housing
- D. Handles
- E. Power Cord
- F. Stainless Steel Tray
- G. Fruit Roll Sheet
- H. Fan
- I. Mesh Tray

### CONTROL PANEL

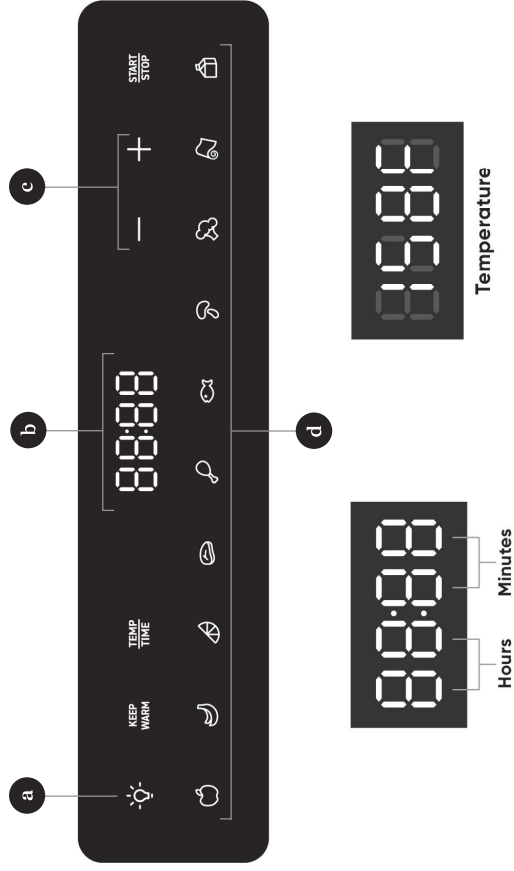

- a. Light
- b. Display
- c. Increase/Decrease Time and Temperature
- d. Dehydrating Functions

### CONTROLS

#### START/STOP

- Press to wake up the dehydrator when in standby mode.
- Press to start/stop the dehydrator.

#### TEMP/TIME

- Press to adjust the temperature and/or time. Use the + or - buttons to make adjustments.

#### KEEP WARM

- Press to hold the temperature at 95°F for 24 hours when dehydration finishes.
- Press again to turn Keep Warm off.

#### +/-

- Press to adjust the temperature or time.
- Press and hold to rapidly increase or decrease.

## Before First Use

### SETTING UP

1. Remove all packaging from the dehydrator and its accessories. Make sure all package contents are included (see page 3).
2. Clean the housing, trays, and accessories with a moistened cloth.

**Note:** The trays are dishwasher-safe. Do not wash the mesh screen or fruit roll sheet in a dishwasher.

3. Place the dehydrator on a solid, level surface, then plug in. Place the trays inside the dehydrator.
4. Run the dehydrator for 30 minutes at any temperature without adding any food. Make sure that the room has sufficient ventilation in case the dehydrator produces any smoke or smells. This is normal.
5. Rinse the trays with water. Dry all parts.

**Note:** You **only** need to do this the first time you use the dehydrator.

## Using Your Dehydrator

### DEHYDRATING FUNCTIONS

Your dehydrator includes 10 convenient dehydrating functions: Apple, Banana, Lemon, Beef/Pork, Chicken, Fish, Mushroom, Vegetables, Fruit Roll, and Yogurt. Functions are programmed with an ideal time and temperature for dehydrating those foods (see **Dehydrating Chart**, page 9).

- Select the button of the function you want to use. The dehydrator will automatically change to the function's default settings.
- You can adjust any function's time (00:30–48:00) and temperature (95°–167°F).

#### Notes:

- Press and hold the **+** or **-** buttons to rapidly increase or decrease the time or temperature.
- If you do not press **TEMP/TIME**, tapping **+** or **-** will default to changing time.

### TO RESET ALL FUNCTIONS:

- Press and hold both **START/STOP**, and the **+** and **-** buttons for 3 seconds until you hear a beep.

### DEHYDRATING CHART

**Note:** Results may vary. For recipes and inspiration, check out the Recipe Book.

Function	Default Temperature	Default Time
Apple	149°F / 65°C	8 hr
Banana	131°F / 55°C	10 hr
Lemon	149°F / 65°C	10 hr
Beef/Pork	165°F / 74°C	8 hr
Chicken	149°F / 65°C	8 hr
Fish	149°F / 65°C	8 hr
Mushroom	140°F / 60°C	8 hr
Vegetable	149°F / 65°C	12 hr
Fruit Roll	165°F / 74°C	8 hr
Yogurt	104°F / 40°C	8 hr

**Note:** Actual dehydrating results may vary depending on portion size.

### OPERATION

#### Notes:

- Use the dehydrator in a warm, dry room, and place on a stable, level, heat-resistant surface.
- Depending on humidity in the air and moisture in the food, dehydration times may vary.

1. Plug in. The dehydrator will beep once, and the display will show "88:88". The dehydrator will switch to standby mode after 3 seconds, and the display will show "--:--".
2. Place food on trays. Rearrange the trays to fit thicker food items. The trays can safely hold 3.3 lb / 1.5 kg of food. Avoid overloading the trays or overlapping food. Close the dehydrator door.

**Note:** To avoid scratching the inside of your dehydrator, insert the mesh screen with the smooth side of the frame facing down [Figure 1.1].

3. Press **START/STOP** to wake up the dehydrator.

Select a dehydrating function.

The display will show "00:00".

5. Optionally, you can manually set dehydrating settings or adjust a function's settings by pressing **TEMP/TIME** and use the **+** or **-** buttons to adjust the time (0:30–48:00) and temperature (95°–165°F / 35°–73°C).


#### Notes:

- Time changes in 30-minute increments. Press and hold **+** or **-** to change the time rapidly
- Temperature changes in 1°F increments. Press and hold **+** or **-** to change the temperature rapidly.

6. Press **START/STOP** to start dehydrating. The dehydrator will start heating. **START/STOP** will stay lit, and the other buttons will turn off. Temperature and time will cycle on the display every 3 seconds.

#### Notes:

- If **START/STOP** is not pressed within 5 seconds, the button will flash to remind you to start dehydration.
- If you press **START/STOP** again to stop dehydration, the timer countdown will reset and the dehydrator will go into standby mode.

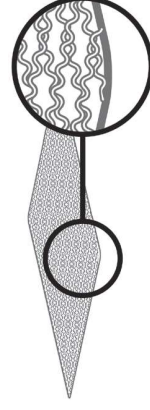

[Figure 1.1]

Continued On Next Page

## Using Your Dehydrator (cont.)

- Optionally, you can change the time and temperature at any time by pressing **TEMP/TIME** and using the **+** or **-** buttons.
- When the timer finishes, the display will show **"End"** and heat will turn off. The dehydrator will beep 5 times, and the fan will stop after 10 seconds. Use a kitchen towel, heat-resistant glove, or oven mitt to handle the trays.

**Note:** The dehydrator will **always** remember your previous temperature and time settings, **except** when using a preprogrammed dehydrating function.

- Press **KEEP WARM** to turn on after dehydration is complete. The food will be kept at 95°F for 24 hours. Press **KEEP WARM** again to turn off.

## ACCESSORIES

### Fruit Roll Sheet

- Use for making fruit rolls and strips from fresh, frozen, or canned fruit. You can also use this sheet for pouring purée onto a tray.

**Note:** This sheet can also be placed on the bottom of the dehydrator to catch any dripping liquids to make cleaning easier.

### Mesh Screen

- Use for foods that shrink when dried. This screen will prevent them from falling through tray grates.

## How to Use Accessories

- Place the accessory on a dehydrator tray. Place food on the accessory.
- Once the food is dehydrated, remove the tray and lift the accessory out of the tray.
- Remove food. Bending the screen is helpful for removing sticky foods.

## SOUNDS

To turn sounds on/off, press and hold the **+** and **-** buttons for 3 seconds.

## OVERHEAT PROTECTION

- Overheating is rare. If the dehydrator overheats, it will automatically shut down as a safety feature, and the dehydrator can no longer be used. Contact **Customer Support** (see page 15).

## AUTOMATIC STANDBY

- After selecting a dehydrating function or time and temperature, if there is no operation for 60 seconds, the dehydrator will beep and go into standby mode.

## TIPS

- Fruit and vegetables dried in the food dehydrator will look different from those sold in stores. This is because homemade dried foods do not use preservatives, artificial coloring, or artificial additives. Check out the Recipe Book for more tips on dehydrating foods.

## Care & Maintenance

**Note:** Do not clean any part of the dehydrator with abrasive chemicals, as this will damage the surface.

- Unplug the dehydrator and allow it to cool before cleaning.
- Soak trays in hot, soapy water for easy removal of food residue.
- If needed, use a soft brush to clean.
- Clean the dehydrator housing with a damp cloth.

**Note:** The trays are dishwasher-safe. Do not wash the mesh screen or fruit roll sheet in a dishwasher.

- Dry all parts before storing or using the dehydrator.

## Troubleshooting

Problem	Possible Solution
The dehydrator will not turn on, or the fan is not working.	Unplug the dehydrator and plug it in again. The dehydrator may be damaged or malfunctioning. Contact <b>Customer Support</b> (see page 15).
"E1", "E2", or "E3" appears on the display.	The dehydrator may be damaged or malfunctioning. Contact <b>Customer Support</b> (see page 15).
Foods are dried unevenly.	Cut foods evenly to ensure that they all finish drying at the same time. Avoid overlapping the food. Follow the recipes and tips in the Recipe Book.

If your problem is not listed, please contact **Customer Support** (see page 15).

# Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## FCC Supplier's Declaration of Conformity (SDOC)

Arovast Corporation hereby declares that this equipment is in compliance with the FCC requirements. The declaration of conformity may be consulted in the support section of our website, accessible from [www.vesync.com/legal/compliance/fcc](http://www.vesync.com/legal/compliance/fcc)

# Limited Warranty Information

<b>Product Name</b>	10-Tray Stainless Steel Dehydrator
<b>Model</b>	CFD-PT02-SUSR
	<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>
<b>Order ID</b>	
<b>Date of Purchase</b>	

### Cosori Limited Product Warranty

Register your products at <https://warranty.cosori.com/warranty> to stay up to date with important product information, such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

### Two (2) Year Limited Consumer Product Warranty

Arovast Corporation ("Arovast") warrants that the product shall be free from defects in material and workmanship for a period of **2 years from the date of original purchase** ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (eg. in the intended environment and under normal circumstances).

### California Residents Only

The Warranty Period begins on the original date of delivery or pick-up.

### Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this Limited Warranty Policy, Arovast will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Cosori store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

### Who Is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

### Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Arovast's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Arovast or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support via [support@cosori.com](mailto:support@cosori.com).

### What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (eg. batteries, filters, cleaning brush, essential oil pads, etc).
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed, or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

### Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.
4. Contact our Customer Support team via [support@csort.com](mailto:support@csort.com).
5. Once our Customer Support team has approved your request, please return the product with a copy of the invoice and order ID.

### Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES AROVAST CORPORATION'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES, NO EMPLOYEE OF AROVAST CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

### Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, AROVAST CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM AROVAST CORPORATION "AS IS" AND AROVAST CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

### Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL AROVAST CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:  
  
(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM AROVAST CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR  
  
(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF AROVAST CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN

## Customer Support

If you have any questions or concerns about your new product, please contact our Customer Support Team.

**Vesync (US) Corporation**  
1775 Flight Way, Suite 150  
Tustin, CA 92782, USA

**Email:** [support@levoit.com](mailto:support@levoit.com)  
**Toll-Free:** 1-888-402-1684

## SUPPORT HOURS

Mon–Fri, 9:00 am–5:00 pm PST/PDT

*\*Please have your order invoice and order ID ready before contacting Customer Support.*

ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES, AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT, EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. AROVAST CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

### OTHER RIGHTS YOU MAY HAVE

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

### CHANGES TO THIS POLICY

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

**Vesync (US) Corporation**  
1775 Flight Way, Suite 150  
Tustin, CA 92782, USA



**Questions or Concerns?**

[support@cosori.com](mailto:support@cosori.com)

AC110525TF-Q4C\_PDV11\_MANTFCL