

快速使用指南（正反印二折页）

Step 1
Plug the appliance into a power source and toggle the speed switch up to turn it on.

Step 2
Toggle the airspeed switch up or down to select the desired airspeed setting.

Step 3
Press the button to cycle between temperature settings.

Step 4
Attach a magnetic nozzle if necessary for quicker drying or styling.

Step 5
Place the appliance on the Magnetic Wall Mount for easy storage.

For more information on product usage, please read the User Manual or visit the official Laifen website: www.laifentech.com

Laifen SE High-Speed Hair Dryer

Quick Start Guide

laifen

产品说明书（正反印六折页）

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER
As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of burns, electrocution, fire, or injury:

- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or trip into water or other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING
The machine, filter, and attachments contain magnets:

- This appliance and some official accessories contain magnetic elements that should be kept away from devices and objects that could be affected or damaged by magnetic fields. This includes pacemakers, artificial hearts, cards with a magnetic stripe, and electronic storage media.

WARNING
To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, or near, children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or stepped into with water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Do not wrap the cord around the appliance.

*Magnetic nozzles and Magnetic Wall Mount are accessories that come with certain Laifen hair dryer models. If they were not included with your model, then they are available as a separate purchase.

Appliance Maintenance

- Regularly remove deposits from the air inlet using a dry towel, cotton swab, or toothbrush. When cleaning the air inlet, ensure that the power is turned off and the power cord is unplugged.
- Avoid pressing or rubbing the air inlet and outlet with your fingernails or sharp objects to prevent damage to the product.
- Do not use alcohol, nail polish remover, or detergents to clean this product, as they may cause malfunctions, cracks, or fading.
- Do not attempt to repair, disassemble, or modify the product yourself. Consult our User Manual or contact our Customer Support at cs@lifenotech.com if a repair is required.
- If any part of the product shows signs of malfunctioning or damage, immediately discontinue use and consult the User Manual or contact Customer Support at cs@lifenotech.com.

Disposal and Recycling Information

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other countries with separate collection systems): This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment and human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact their retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Specifications

Product Name: Hair Dryer
Product Model: SE
Rated Power: 1400W
Rated Voltage: 110-120V
Rated Frequency: 60Hz
Product Weight: 407g (with cord)
Product Dimensions: 277 x 70 x 89mm (with cord)
Cord Length: 2.5m (with plug)

Product Features

High-Speed Brushless Motor

Laifen Technology's independently developed 305,000 rpm high-speed brushless motor can generate powerful airflow to quickly dry hair.

Smart Temperature Control

This appliance has a built-in temperature control system that precisely regulates the air temperature to prevent overheating and hair damage.

Temperature Cycling Mode

Automatically alternates between cold and hot air flows every 2 seconds. This prevents concentrated heat and protects hair from heat damage. Activation: While the appliance is on, long press the temperature setting button. Deactivation: Press the temperature setting button or turn off the appliance.

Negative Ion Hair Care Technology

The built-in negative ion generator produces negative ions that neutralize the positive charges in the hair, reducing static buildup and preventing hair from becoming frizzy.

Noise Reduction Design

Through motor optimizations, high-frequency noises are modulated to frequencies imperceptible to the human ear. Additional noise reduction techniques, such as dynamic motor balance processing and sound-absorbing materials, further reduce noise, resulting in an even better user experience.

Function Description

Power On/Off and Speed Setting

Push up or down to quickly switch between two speed settings.

Off Low Speed High Speed

*Before connecting to the power, ensure that the power switch is in the Off position.

Temperature Setting

Press to switch between:

Cold Air Warm Air Hot Air

Long press to switch to:

Temperature Cycling Mode

Activating Temperature Cycling Mode

When the appliance is in use, long press the temperature setting button for 1 second to activate the function.

Deactivating Temperature Cycling Mode

Press the temperature setting button once or turn off the appliance to deactivate the function.

*The illustrations of products, accessories, user interfaces, etc., in this manual are for reference purposes only and are schematic diagrams. Due to product updates and upgrades, there may be slight differences between the actual product and the schematic diagrams. Please refer to the actual product for accuracy.

Nozzle Usage

Gently place the nozzle on the head of the appliance. When you hear a "click" sound, it indicates that the nozzle has been securely attached.

Direct the appliance to a specific section of your hair and adjust the nozzle's position to achieve your desired drying or styling.

Attaching a magnetic nozzle to the appliance adjusts the airflow for more precise drying and styling. It can also be rotated to conveniently reach specific hair sections.

For more information on product usage, please visit the official Laifen website: www.laifentech.com

Manufacturer: Shenzhen Shive Technology Co., Ltd.
Address: Room 1301, Building T1, Qianwan 1st Road No. 599, Qianhai Kerry Business Center, Nanshan, Shenzhen, Guangdong, China

laifen

保修卡（正反印）

Laifen Warranty Card

Model Name: _____
Serial No.: _____
Purchase Date: _____
Warranty Period: _____

Buyer Info:
Name: _____
Address: _____
Contact Info: _____

Retailer Info:
Name: _____
Address: _____
Contact Info: _____

Laifen SE High-Speed Hair Dryer

Warranty Card

laifen

*Magnetic nozzles are accessories that comes with certain Laifen hair dryer products. If the one that you want did not come with your product, it can be purchased separately.

*There are three magnetic nozzles available: Concentrator Nozzle, Smooth Nozzle, and Diffuser Nozzle.

Concentrator Nozzle

Focuses the airflow for more targeted drying and styling.

Smooth Nozzle

Concentrates a gentle airflow for smoothing and reducing frizz.

Diffuser Nozzle

Spreads the airflow over a wider area in a controlled fashion. Perfect for curly hair.

Drying Instructions

Put your hair dry with a towel to remove excess moisture.

Maintain an appropriate distance between the appliance and your hair.

Start drying from the roots and gradually move towards the ends of the hair to ensure even heating and airflow distribution.

You can use your hands or a comb to assist in drying or styling the hair.

Cleaning and Maintenance

Before cleaning the filter, please ensure that the appliance is off and the power cord has been unplugged. *The filter needs regular cleaning and maintenance to prevent blockage and ensure smooth airflow.

The intake filter is attached using magnets. Grasp the handle and pull the intake filter down to remove it from the handle.

Use a dry lint-free cloth, soft brush, toothbrush, or similar tool to remove any residue from the intake filter and the surface of the stainless steel filter. *Do not use water to clean the stainless steel filter, as it may cause malfunctions.

After cleaning, align the intake filter with the handle slot and insert it. When you hear a "click" sound, it indicates that the magnet has been securely attached, and the installation is complete.

Common Faults and Troubleshooting

Malfunction	Possible Cause of Failure	Solution
Appliance doesn't turn on, no air/light	Power not properly connected	1. Check if the power is properly connected. 2. Check the circuit breaker, ensure the reset button is in the normal (pressed) state. 3. If the line is empty, contact support (see below).
Motor doesn't start, blinking blue light	Overheating protection activated	1. Power off, shut down, and wait 10-15 minutes before restarting. 2. If the issue still cannot be resolved, contact support (see below).
Motor doesn't start, blinking yellow light	Protection mode activated due to external component issues	1. Power off, shut down, and wait 1-2 minutes before restarting. 2. If the issue still cannot be resolved, contact support (see below).
Motor doesn't start, blinking red light	Filter or outlet blocked	1. Please clean the intake filter and exhaust vent, ensuring there are no blockages, then restart. 2. If the issue still cannot be resolved, contact support (see below).
Pluglight not working, but the motor starts normally	Faulty plug light circuit board	Contact support for assistance (see below).
Starts normally, but air speed and temperature cannot be changed	Damaged button switch	Contact support for assistance (see below).
Heating element turns red	Main control board malfunction or sensitive damage	1. Please clean the intake filter and exhaust vent, ensuring there are no blockages, then restart. 2. If the issue still cannot be resolved, contact support (see below).
Power cord or plug overheating	Damaged power cord or loose plug	1. Try using a different outlet, ensuring the plugs are correctly connected. 2. If any abnormalities are found, please contact support (see below).
Burnt smell during use	Internal components damaged	Contact support for assistance (see below).
Inefficient heat in hot air mode	Filter blocked	1. Please clean the intake filter and exhaust vent, ensuring there are no blockages, then restart. 2. If the issue still cannot be resolved, contact support (see below).

Laifen Customer Support: cs@lifenotech.com

Return Policy

30-Day Return Service

Laifen offers a 30-day return service. Within 30 days from the date of purchase, you can contact one of our Customer Service representatives by email at cs@lifenotech.com to begin the return process.

To be eligible for a refund, you must:

- Return the appliance with all included accessories and gifts.
- Return them in their original packaging.
- Provide a valid proof of purchase.

Ensure the appliance and accessories are resalable.

Return shipping costs:

Returns caused by appliance quality issues will have shipping costs covered by Laifen. Returns for any reason other than appliance quality are the responsibility of the customer and all costs associated with returning the appliance, including shipping costs, will be handled by the customer.

Warranty & Support

Laifen 2-year limited guarantee*

Laifen offers a 2-year limited warranty on the hair dryers. Within two years from the date of purchase, if your appliance fails to function properly due to material or workmanship defects, we will provide repair or replacement services. Please note that depending on the availability of stock, the replacement unit may come in a different color or be an equivalent model. Warranty is only valid in the country or region of purchase.

What is not covered under warranty:

- Purchases from unauthorized resellers.
- Warranty period has expired.
- Appliances without a valid proof of purchase.
- Appliances that have been modified, altered or repaired through unofficial channels.
- Appliances that were used for any purpose other than drying hair.
- Appliances used for professional or commercial purposes or exceeding "normal household operator" (more than two hours per day).
- Damage caused by operators that are not in accordance with the Laifen user manual.
- Damage caused by any misuse or accident.
- Damage caused by excessive usage that is not normal wear and tear.

Get Professional Assistance from Laifen

If you have any further inquiries regarding our warranty policy or product usage, please feel free to contact us via email at cs@lifenotech.com. We greatly appreciate your feedback and look forward to assisting you.

laifen

For more information on product usage, please read the User Manual or visit the official Laifen website: www.laifentech.com

Laifen SE High-Speed Hair Dryer

laifen

For more information on product usage, please read the User Manual or visit the official Laifen website: www.laifentech.com

Laifen SE High-Speed Hair Dryer

User Manual

laifen