



5-PIECE ELECTRIC WINE SET

ITM. / ART. 6163384
Model #: 5335444

DIRECTIONS

Before first use:

Insert the USB-C charging cable into the Charging Base port to charge the Electric Corkscrew.

To remove cork:

Remove foil before opening wine. Set the Electric Corkscrew on top of bottle, and apply gentle downward pressure. Holding bottle securely, continuously press the downward button. The Corkscrew will automatically stop once the cork is fully removed from the bottle. Lift the corkscrew off the bottle and press and hold the upward arrow to automatically eject the cork.

Care instructions:

Wipe clean.

DANGER

To reduce the risk of electric shock, burns, fire, or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop, or submerge in water or other liquid while charging.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.
6. When using or charging the Electric Corkscrew, keep your work surface clean and free from potential hazards.
7. For indoor use only. Do not expose the Electric Corkscrew or charger to rain or other extreme conditions.
8. Never force the corkscrew onto a bottle or attempt to speed up the mechanism.
9. The Electric Corkscrew will work best when it's operated at its intended speed.

WARNING

1. Keep away from children. This is not a toy.
2. Use this unit only for its intended use as described in this manual.
3. Disconnect the charger during lightning storms or when not intended to use for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles, and the point where it exits the unit.
6. Do not allow wires of charger to touch hot surfaces.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never operate this unit if it is not working properly, or if it has been dropped, damaged, or dropped into water. If there are no serviceable parts in the unit, do not attempt to repair it yourself.
9. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury when unit is used.
10. Do not operate in the presence of explosive and/or flammable fumes.
11. Do not touch or adjust the Electric Corkscrew's mechanism or the corkscrew spiral. Only hold the unit by plastic housing.
12. Only charge the Electric Corkscrew using the charger provided.
13. After fully re-charging the battery, please unplug the power adapter. To preserve the battery life longer, do NOT keep charging the unit for more than 24 hours.

This product operates on an internal Lithium Ion rechargeable battery 3.7 V

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC INFORMATION

Party Issuing Supplier's Declaration of Conformity & Responsible party – U.S. Contact information:

Lifetime Brands, Inc.
1000 Stewart Ave
Garden City, NY 11530

Equipment:

Product Name: 5-Piece Electric Wine Set

Model No.: 5335444

Trade Name: RBT

We declare under our sole responsibility that the above referenced product has been tested according to FCC requirements and this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Customer Service Info: **Lifetime Brands, Inc.**
1000 Stewart Avenue,
Garden City, NY 11530

1-800-681-0959
membershelp@lifetimebrands.com