

Cuisinart®

Brew Central® Plus 14-Cup Programmable Coffee Maker

CBC-8500PC SERIES



Instruction
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Always unplug from outlet when either the appliance or display clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.**
3. Do not touch hot surfaces. Use handles and knobs.
4. To protect against electric shock, do not place cord, plug, or base unit in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Cuisinart Repair Center for examination, repair, and electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, push the BREW/OFF button, then remove plug from wall outlet.
12. Do not use appliance for other than its intended use.
13. Snap lid securely onto carafe before serving any beverages.
14. Scalding may occur if the lid is removed during the brewing cycle.
15. The glass carafe is designed for use with this coffee maker only. It must never be used on the range top.
16. Do not set a hot carafe on a wet or cold surface.
17. Do not use a cracked carafe or a carafe having a loose or weakened handle.
18. Do not clean carafe or heating plate with cleansers, steel wool pads, or other abrasive materials.
19. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER-SERVICEABLE PARTS ARE INSIDE. REPAIRS SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**
20. Do not place cloth beneath coffee maker or otherwise restrict airflow.
21. Use only the Cuisinart® Gold-Tone Commercial-Style Filter or standard cone-shaped paper filter with this unit. OTHER GOLD-TONE PERMANENT FILTERS MAY CAUSE THE COFFEE MAKER TO OVERFLOW.
22. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Close supervision is necessary when any appliance is used by or near children.
25. The heating element is subject to residual heat after use.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

WARNING: RISK OF FIRE OR ELECTRIC SHOCK



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated, dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: The use of too finely ground coffee, using two or more paper filters, using the gold-tone filter in conjunction with a paper filter or not properly cleaning coffee grounds from the gold-tone filter, or allowing coffee grounds to spill over the filter.

Caution: Never open the filter basket during the brewing cycle, even if no water is draining from the filter basket, because extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket.



WARNING
RISK OF FIRE OR ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE

REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY

CONTENTS

Important Safeguards. 2-3

Important Unpacking Instructions 4

The Quest for the Perfect Cup of Coffee. 4

Features and Benefits 5

Getting to Know Your Control Panel 6

Before Brewing Your First Pot 7

Programming Your Coffee Maker. 7-8

Making Coffee 8

Brewing Over Ice 9

Brew Pause™ Feature. 9

Cleaning and Maintenance 9

Decalcification 10

Warranty 11

IMPORTANT UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Remove literature.
3. Turn the box so that the back side of the coffee maker is down and slide the coffee maker from the box.
4. After the coffee maker has been removed, place the box out of the way and lift off the left and right inserts.
5. Grasp the carafe by its handle, remove it from the heating plate, and remove the polybag.
6. Remove the polybag covering the coffee maker.

Save all packing materials in case you have to ship the machine in the future.

KEEP ALL PLASTIC BAGS AWAY FROM CHILDREN.

THE QUEST FOR THE PERFECT CUP OF COFFEE

ELEMENT 1: WATER

Coffee is 98% water. The quality of that water is as important as the quality of your coffee. If water doesn't taste good from the tap, it won't taste good in your coffee. Cuisinart includes a charcoal water filter to remove chlorine, bad tastes, and odors for the purest coffee flavor, every time you brew.

ELEMENT 2: COFFEE

While coffee is 98% water, all of the flavor comes from the beans. To achieve the same great taste you enjoy at a coffee bar, you need to use the same quality of coffee. If you choose to grind your own beans, buy them fresh and whole. Buy only about a two-week supply at a time, because once the bean is broken, its flavor degrades quickly.

ELEMENT 3: GRIND

The grind is critical for proper flavor extraction. If the grind is too fine, overextraction and bitterness will result. Too fine a grind may also clog the filter. If grind is too coarse, the water will pass through too quickly and the maximum flavor will not be extracted. When grinding your own beans, we recommend a medium-fine grind.



ELEMENT 4: PROPORTION

Coffee that is too strong or too weak is always a disappointment. Follow the recommended portions of ground coffee in the instructions under MAKING COFFEE, and later adjust the amount to suit your taste.

NOTE: A cup of coffee = 5 oz.

FEATURES AND BENEFITS

- 1. Coffee Maker Lid**
Opens to access filter basket, water filter, and water reservoir.
- 2. Water Reservoir**
Includes extra-large front fill channel that improves access for easier filling and side view water level window.
- 3. Integrated Coffee Scoop**
- 4. Shower Head**
Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.
- 5. Charcoal Water Filter Holder**
Holds water filter firmly in place.
- 6. Charcoal Water Filter**
Eliminates chlorine, bad tastes, and odors from tap water.
- 7. Filter Basket**
Holds a #4 paper filter OR a gold-tone filter.
- 8. Filter Basket Holder**

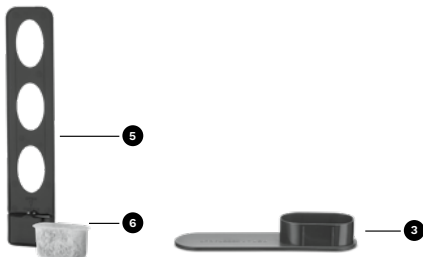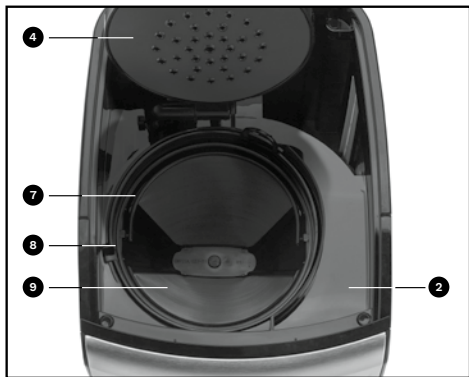


- 9. Cuisinart® Permanent Gold-Tone Commercial-Style Filter**
Eliminates the need for paper filters.
NOTE: Some fine grounds may flow through the filter and appear as sediment in the carafe.
- 10. Control Panel**
See detailed illustration, page 6.
- 11. Brew Pause™**
Stops flow of coffee from basket when carafe is removed (20 seconds max) from the heater plate, so a cup can be poured mid-brew.
- 12. 14-Cup Glass Carafe**
The easy-pour carafe has an ergonomic handle and brewed coffee markings for 4 to 14 cups.
- 13. Warming Plate**
Keeps coffee warm until the end of the AUTO OFF time. Adjustable temperature.
- 14. 60-Second Reset (not shown)**
One-minute protection in case a breaker trips, the unit is unplugged, or the power fails. It holds all programmed information, including time of day, Auto On time, and Auto Off time.



GETTING TO KNOW YOUR CONTROL PANEL

Detailed programming and use instructions are on pages 7-9.

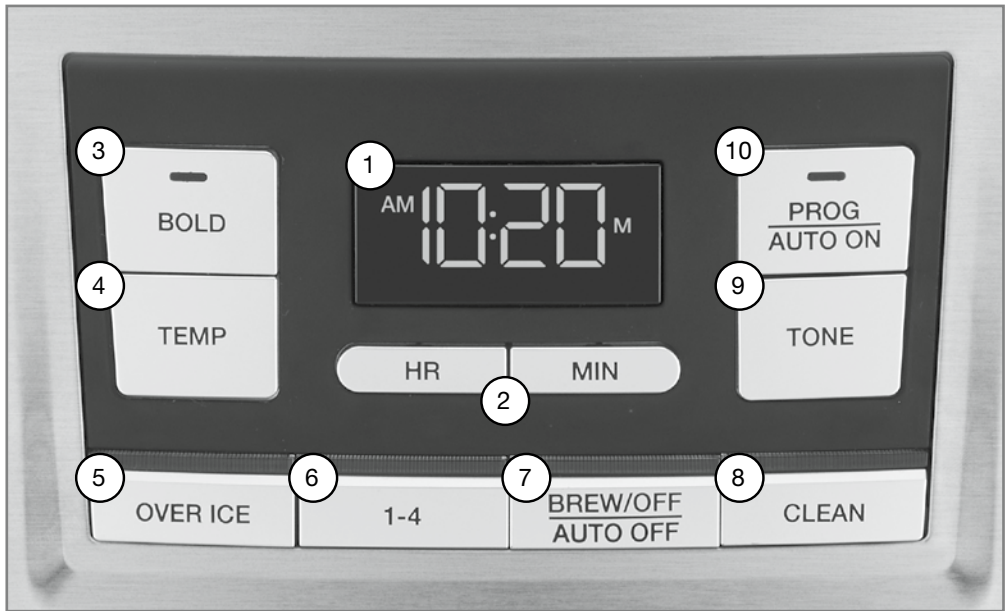

1. Clock Display

Displays time of day, Auto On, and Auto Off times.

- A.** Low, Medium, and High (L, M, H) warming plate indicators.
- B.** Ready Tone OFF icon appears when audible alert for brew cycle completion is off.

2. Hour and Minute Buttons

Use to set hours and minutes for time of day, Auto On, and Auto Off times.

3. BOLD Flavor Strength Button

Use to select bolder coffee flavor strength; white indicator appears when bold is selected.

4. TEMP Button

Adjusts heating plate temperature to Low, Medium, or High to keep freshly brewed coffee at the temperature you prefer.

5. OVER ICE Button

Adjusts the brew process to maximize coffee flavor ideal for iced coffee. The light bar will illuminate white when function is selected.

6. 1-4 Cup Button

Adjusts brew process to maximize coffee flavor when brewing fewer than 5 cups. The light bar will illuminate white when function is selected.

7. BREW/OFF & AUTO OFF Button

Turns coffee maker on and off. Use the Auto Off feature to program the time you want the coffee maker to shut off – from 0 to 4 hours after brew cycle is finished.

8. CLEAN Button

Red light bar indicator appears when it is time to decalcify your coffee maker. See page 10 for decalcification instructions.

9. TONE Button

Lets you turn an audible “Brew Cycle Finished” alert on or off.

10. PROG/AUTO ON Button

Lets you program coffee maker to automatically begin brewing up to 24 hours in advance.

CHARCOAL WATER FILTER

Your coffee maker comes with a charcoal water filter that eliminates chlorine, bad tastes, and odors from tap water.

Inserting the Water Filter

- Remove the filter from polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir.
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

NOTE: We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water.

Replacement filters can be purchased in stores, by calling Cuisinart Customer Service (1-800-726-0190), or at www.cuisinart.com.



BEFORE BREWING YOUR FIRST POT OF COFFEE

Rinsing your coffee maker: During the manufacturing process, dust can get trapped in the unit. We recommend flushing out the system before brewing your first pot of coffee. Simply fill the reservoir, power on the unit, and follow steps 1, 3, and 5 on page 8 under MAKING COFFEE.

Do not add coffee.

PROGRAMMING YOUR COFFEE MAKER

SETTING THE CLOCK

When the coffee maker is plugged in, 12:00 will flash in the display for 10 seconds, indicating the unit is in Clock Set mode. If 12:00 stops flashing, simply press and hold Hour or Minute button to return to flashing Clock Set mode.

SETTING HOURS AND MINUTES

Press either Hours or Minutes button to select the desired time. Hold buttons down to scroll through the digits quickly, or press and release to advance one digit at a time. Be sure the PM indicator is on if setting a PM time.

SETTING THE AUTO ON TIME

1. Press and hold the PROG/AUTO ON button for 2 seconds.

The digital display will flash the default (12:00) or previously selected time. Follow directions under SETTING HOURS AND MINUTES (above) to program your start brew time. Five seconds after finishing, the unit will automatically exit Auto On setup mode and the indicator light will illuminate, letting you know Auto On is activated.

NOTE: To exit Auto On setup mode, you can also just press PROG/AUTO ON button again.

2. To activate Auto On using previously selected time:

Press the PROG/AUTO ON button. Previously set time will appear and indicator will light up. Display will return to clock setting.

3. To deactivate Auto On:

Press illuminated PROG/AUTO ON button; light will go off, indicating mode is turned off.

SETTING THE AUTO OFF TIME

1. Press and hold the AUTO OFF button for 2 seconds.

The digital display will flash the programmed Auto Off default (2:00) or previously selected time. Follow directions under SETTING HOURS AND MINUTES to program coffee maker to shut off from 0 to 4 hours after brew cycle is finished.

2. To exit/confirm Auto Off time setting:

Do not touch any buttons. Auto Off setup mode will be exited automatically after 5 seconds.

TURNING OFF READY TONE

Your coffee maker features a Ready Tone that beeps 5 times when coffee is finished brewing. To turn this alert off, press TONE button; an icon will appear in display to indicate tone is off. To turn tone back on, press TONE button again; icon will disappear.

MAKING COFFEE

Follow instructions in BEFORE BREWING YOUR FIRST POT OF COFFEE (page 7).

This only needs to be performed once.

1. Fill the water reservoir

Lift the coffee maker lid to open. Pour the desired amount of water into the water reservoir using the water level indicator located at the side of the coffee maker.



2. Add the ground coffee

Insert a #4 paper filter OR the gold-tone filter. Be sure that the paper filter is completely open and fully inserted in the basket. It may help to fold and flatten the seams of a paper filter beforehand. Add 1 level scoop of ground coffee per cup. Adjust the amount according to taste.



NOTE: The maximum capacity for ground coffee is 15 tablespoons for this coffee maker. Exceeding this amount may cause overflow if the coffee is too finely ground.

3. Position carafe and plug in unit

Place carafe on heating plate and be sure coffee maker lid is closed. Plug coffee maker into an electrical outlet.

4. Set preferences

- Press the 1–4 cup button if you are brewing 4 cups or less. The light bar above the button will illuminate.
- Press the BOLD button to select stronger coffee flavor, if desired. The button's indicator light will illuminate. Press again to turn off light and brew at regular strength.
- Press the OVER ICE button to prepare iced coffee. The light bar will illuminate. See page 9 for detailed instructions.
NOTE: Bold, temp, and 1–4 cup functions will be inactive in OVER ICE brew mode.
- Choose Low (L), Medium (M), or High (H) carafe temperature by pressing TEMP button. Selection will appear in display.

5. Start brewing

Press the BREW/OFF button to begin brewing.

6. After brewing

When the brewing cycle has been completed, five beeps will sound. Coffee will continue to stream from the filter basket for several seconds.

NOTE: Reservoir cover may be hot during and directly after brewing. Wait at least 10 minutes before opening.

BREWING OVER ICE

The OVER ICE feature adjusts the brew process to maximize coffee flavor ideal for making iced coffee. Either brew coffee directly over ice or add ice to coffee after it is brewed.

1. Fill the water reservoir

Open the coffee maker reservoir cover by lifting it up. Using the water level indicator on the side of the coffee maker, pour in the desired amount of water, ensuring it does not exceed the 10 cup marking.

NOTE: Do not fill the reservoir past the 10 cup marking when brewing over ice to prevent overflow.

2. Add ice

Fill the glass carafe with ice up to the 10 cup marking. Make sure the glass carafe is in position on the heater plate and the top cover is closed.



NOTE: Adjust amount of ice based on personal preference. Adding too much ice could impact the overall flavor of the coffee. Do not fill past 10 cup marking with ice.

3. Choose preferences

Press OVER ICE button. The light bar will illuminate, indicating the function is active.

NOTE: Bold, temp, and 1-4 cup functions will be inactive in OVER ICE brew mode.

4. Brewing

Follow steps 5 and 6 in Making Coffee on page 8 to complete OVER ICE brewing.

5. After brewing

The coffee maker will automatically shut off after brewing is complete.

BREW PAUSE™ FEATURE

This feature interrupts the flow of coffee from the basket to let you pour that first cup mid-brew. Because the flavor profile of coffee brewed at the start of a cycle differs from that brewed toward the end, be aware that using this feature will weaken the flavor strength of the finished pot.

NOTE: Removing carafe for more than 20 seconds during brew cycle may cause filter basket to overflow.

CLEANING AND MAINTENANCE

Always turn coffee maker off and remove the plug from the electrical outlet before cleaning.

Lift up the coffee maker lid. Remove and discard the paper filter and ground coffee. The filter basket and Gold-Tone filter can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after cleaning.

Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.

Remove the carafe from the heating plate.

Discard any remaining coffee. The carafe and lid can be washed in warm, soapy water and rinsed thoroughly, or placed in a dishwasher. The carafe and carafe lid should be placed on the upper rack only.

Do not use any scouring agents or harsh cleansers on any part of the coffee maker.

Never immerse base unit in water or other liquids. To clean base, simply wipe with a clean, damp cloth and dry before storing. Fingerprints and other blemishes on the housing can be washed off with soap and water or a nonabrasive cleaning solution. Wipe heating plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the heating plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

MAINTENANCE

Any other servicing should be performed by an authorized service representative.

DECALCIFICATION

Decalcification refers to the removal of calcium deposits that form over time on the metal parts of your coffee maker. The mineral content of the tap water in your area and the frequency of use affect the rate of the calcium buildup, which can affect the functioning of your coffee maker and the flavor of your coffee.

For best performance from your Brew Central® Plus coffee maker, we recommend cleaning it whenever the red CLEAN indicator light bar illuminates.

NOTE: Before decalcifying your unit, remove the charcoal water filter from the water reservoir.

To clean:

1. Fill the water reservoir to capacity with a mixture of $\frac{1}{3}$ white vinegar and $\frac{2}{3}$ water.
2. Press and hold the CLEAN button. When the CLEAN indicator light bar flashes, the coffee maker is in Clean mode. Release the button.
3. When the cycle is completed, 5 beeps will sound and the coffee maker will shut off.
4. If the CLEAN indicator illuminates once more, repeat the cleaning procedure with a fresh solution of vinegar and water. **NOTE:** One cleaning cycle is usually sufficient.
5. When the CLEAN indicator remains off, run one cycle with a full reservoir of fresh, cold water to rinse the unit.
6. Return the charcoal water filter to the holder inside the water reservoir and your coffee maker is ready to brew!

Limited Warranty

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Brew Central® Plus 14-Cup Programmable Coffee Maker ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of three (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or nonhousehold uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void this Limited Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart may void this Limited Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

It is recommended that you visit our website, <https://www.cuisinart.com/register-your-product.html>, for a fast, efficient way to complete your product registration. However, product registration does not

eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

Hassle-free warranty

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

California residents only

The three (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL
LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190.

[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

Cuisinart®



Food
Processors



Blenders



Juicers



Cookware



Tools and
Gadgets

Cuisinart offers an extensive assortment of top-quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools, and gadgets.

www.cuisinart.com

©2025 Cuisinart
Glendale, AZ 85307
Printed in China
25CE200669

IB-18897