


BSDH0040

OPERATING INSTRUCTIONS


TRAILER VALET

REV.3.4.2024

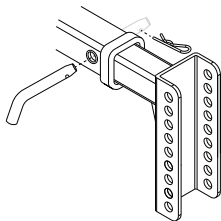


STEP 1:

Mount the Drop Hitch to your tow vehicle and secure with clevis pin. Insert the R-shaped cotter pin into the clevis.

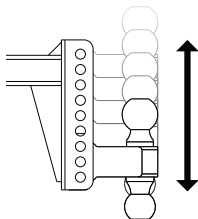


STEP 2:

Place the Drop Hitch at the desired drop on the drawbar in order to ensure that your vehicle and trailer are properly positioned.

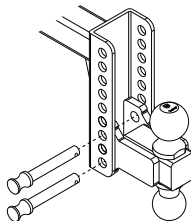

STEP 3:

Insert the hitch pins into the hitch when you have achieved the desired position along the drawbar.

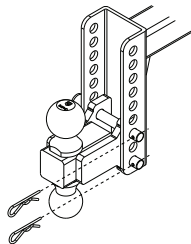

STEP 4:

Insert the R-shaped cotter pins into the hitch pins to secure.

IMPORTANT SAFETY INFORMATION

For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344.

Scan the QR code to the right for detailed safety and usage information specific to drop hitch products.



BALL MOUNTS & DROP HITCHES

SPECIFICATIONS



				
SKU	BSDH0010	BSDH0011	BSDH0020	BSDH0040
BALL SIZE	2"	2"	2" and 2-5/16"	2" and 2-5/16"
DROP	2"	4"	2"	0-6"
TYPE	Standard	Standard	Reversible	Adjustable
CAPACITY	5,000 LBS	6,000 LBS	6,000/7,500 LBS	14,000 LBS
MATERIAL	Steel	Steel	Steel	Steel
CLASS	Class III	Class III	Class III	Class V

				
SKU	BSDH0030	BSDH0031	BSDH0032	BSDH0033
BALL SIZE	2" and 2-5/16"	2" and 2-5/16"	2" and 2-5/16"	2" and 2-5/16"
DROP	0-4"	0-6"	0-8"	0-10"
TYPE	Adjustable	Adjustable	Adjustable	Adjustable
CAPACITY	8,000/10,000 LBS	8,000/10,000 LBS	8,000/10,000 LBS	8,000/10,000 LBS
MATERIAL	Aluminum	Aluminum	Aluminum	Aluminum
CLASS	Class IV	Class IV	Class IV	Class IV