 


PHILIPS

NORELCO

OneBlade

QP6542

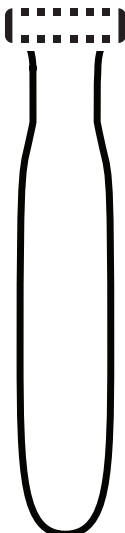

www.philips.com/support/ifu

Manufactured for: Philips Personal Health, A division of Philips North America LLC, P.O. Box 10313, Stamford, CT 06904

 


This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.


PHILIPS and Philips shield are registered trademarks of Koninklijke Philips N.V. Norelco is a registered trademark of Philips North America LLC 3000.155.2260.1 (04/23/2025)




2

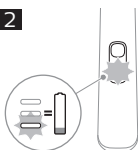

3

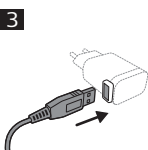 


4

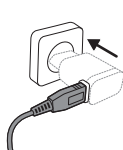 


5



 
6

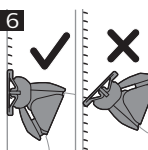

7

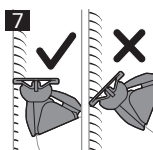 


8

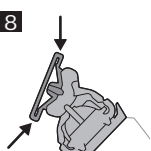 


9



 
10

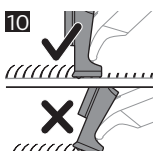

11

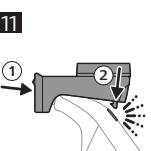 

12

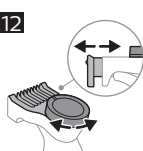 

13



14



15



16



 
17



18




19

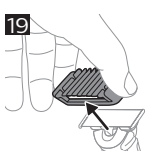

20



 21

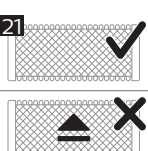

22

 


23



24



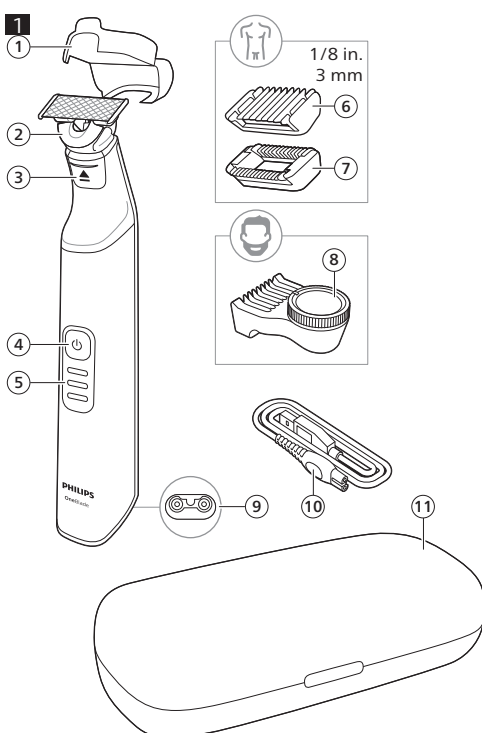

English

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:

Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) power source. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-800-243-3050. Using a non-certified USB power source may cause hazards or serious injuries.
- Keep the USB cable, the USB power source and the charging stand (if provided) dry.
- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.
- Remove USB power source from power outlet and product before cleaning the product with water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-800-243-3050.
- Keep the USB cable and the USB power source away from heated surfaces.

- Never drop or insert any object into any opening.
- Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source.
- Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutting units and other attachments and accessories before you use the product. Never use the product with a damaged cutting unit, attachment or accessory, as injury may occur.
- Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet.
- Plug USB power source directly into power outlet. Do not use an extension cord.
- Unplug USB power source before plugging in or unplugging the product.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 40 °F / 4.5 °C and 95 °F / 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

Introduction

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at **www.philips.com/register**.

You can find the model number on the back of your product.

The full model number (e.g. XX0000/00) is located on the bottom of the packaging, your receipt or order confirmation.

General description (Fig. 1)

- 1 Protection cap
- 2 Blade
- 3 Blade release slide switch
- 4 On/off button
- 5 Battery charge indicator
- 6 Skin guard
- 7 Body comb
- 8 Precision trimming comb
- 9 Socket for small plug
- 10 USB charging cable
- 11 Travel case

Note: A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.



This symbol indicates that the product can be used in the bath or shower.

The display

Battery low

- When the battery is almost empty, the bottom light of the battery charge indicator starts flashing orange (Fig. 2).

Charging

- When the product is charging, the bottom charging light starts flashing white, then the next one and so on.

Battery full

- When the product is fully charged, all battery charge indicators light up white.

Remaining battery charge

- The remaining battery charge is indicated by the lights of the battery charge indicator that light up continuously.

Charging

Charging takes approx. 1 hour.

- Charge the product before first use and when the display indicates that the battery is almost empty.
- Charging or using the product at temperatures below 40 °F (4.5 °C) or higher than 95 °F (35 °C) adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before using.

Quick charge: During quick charge, all three lights of the battery charge indicator light up. After approx. 5 minutes of charging, the product contains enough energy for 5 minutes of use. When quick charge is finished, the bottom light of the battery charge indicator starts to flash.

Warning: Keep the USB cable and the USB power source dry.

- 1 Insert the small plug of the USB cable into the socket in the bottom of the product.
- 2 Insert the USB plug into the USB power source (not included) (Fig. 3).
- 3 Insert the USB power source into the power outlet (Fig. 4). The charging indicator will remain illuminated when the product is connected to the power outlet.
- 4 Unplug the adapter from the power source, then remove the USB cable from the handle.

Notes: for safety reasons, the product can only be used when the USB cable is not attached. Approx. 30 minutes after the battery is fully charged or when you disconnect the appliance from the wall socket, the battery charge indicator switches off automatically.

Running time

When the product is fully charged, it has a cordless running time up to 90 minutes.

Using the product

Note: This product is for cordless use only.

- This product is only intended for household use.
- For hygienic reasons, the product should only be used by one person.

Switching the product on and off

- 1 Press the on/off button once to switch the product on or off.

Face

Shaving

- Shave off any length of hair. The product does not shave as close as a traditional blade so your skin will stay comfortable.
 - Make sure that the blade is in full contact with the skin by placing it flat on the skin.
 - For the best result, move the product against the grain.
 - Make long strokes while pressing lightly.
 - Use the product dry or wet with gel or foam, even in the shower.
 - Shaving a clean beard and face gives the best results.
- 1 Switch on the product.

- 2 Place the blade on the skin and move the product against the grain in long strokes while pressing lightly (Fig. 5).

Note: Make sure you hold the surface of the blade flat against your skin (Fig. 6).

- 3 Switch off and clean the product after each use (see 'Cleaning').

Edging

- Use both edges of the blade to create sharp lines and perfect edges.
 - Hold the product in such a way that the blade is perpendicular to the skin and one of its edges touches the skin. This allows more precise detailing of sideburns and the area around the mouth and nose.
- 1 To create sharp edges and lines, you can use either edge of the blade (Fig. 8).
 - 2 Switch on the product.
 - 3 Place the edge of the blade perpendicular onto the skin (Fig. 7).
 - 4 Make straight strokes while applying gentle pressure (Fig. 9).
 - 5 Switch off and clean the product after each use (see 'Cleaning').

Using the precision trimming comb

- The precision trimming comb allows you to trim hair to different lengths. When you trim for the first time, start at the highest length setting to familiarize yourself with the product.
 - The settings on the wheel correspond to the remaining hair length after trimming in millimeters.
 - Always trim in the direction of the teeth of the precision trimming comb, making sure that the flat part of the comb is in full contact with the skin for an even trimming result (Fig. 10).
 - Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
 - Trimming is easier when the skin and hair are dry.
- 1 Place the front part of the comb onto the blade and push the projection at the back of the comb into the appliance ('click') (Fig. 11).
 - 2 Turn the hair length setting wheel to select the desired hair length setting (Fig. 12). The settings on the wheel correspond to the remaining hair length after trimming.
 - 3 Switch on the product.
 - 4 Place the comb onto the skin and move the product upwards slowly, against the grain.
 - 5 Switch off and clean the product after each use (see 'Cleaning').
 - 6 To remove the comb, pull the back part off the product and then slide the comb off the blade. (Fig. 13)

Body

- For body trimming and shaving, make sure the hair is clean and dry as wet hair tends to stick to the body.
- When shaving sensitive areas, always use the skin guard.
- Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- For the best result, move the product against the grain.
- Make long strokes while pressing lightly.
- Use the product dry or wet with gel or foam, even in the shower.
- Shaving a clean body gives the best results.

Shaving with skin guard

For optimal performance, use the skin guard only on sensitive areas (for example the groin and armpits).

- 1 Hold the skin guard on both sides and press it onto the blade (Fig. 14) ('click').
- 2 Switch on the product.
- 3 Place the skin guard onto the skin and stretch the skin with your free hand. Move the product upwards slowly, against the grain.
 - When using the product on your armpits, raise your arm and put your hand on the back of your head to stretch the skin (Fig. 15).
 - Regularly remove cut hair from the guard. If a lot of hair has accumulated in the guard, remove it from the product and blow and/or shake out the hairs.

- 4 Switch off and clean the product after each use.

Tip: press your thumb on the front of the blade and pull the skin guard with your fingers to remove it.

Shaving without skin guard

The body blade without the skin guard allows you to shave hair on your body below the neckline (for example the chest).

- 1 Switch on the product.
- 2 Place the blade on the skin and move the product against the grain in long strokes while pressing lightly. Stretch the skin with your free hand.

Note: Make sure you hold the surface of the blade flat against your skin (Fig. 6).

- 3 Switch off and clean the product after each use (see 'Cleaning').

Trimming with body comb

The 1/8 inch (3 mm) body comb allows you to trim hair on your body below the neckline (for example chest, armpits, groin).

- 1 Hold the body comb on both sides and press onto the blade (Fig. 17) ('click').
- 2 Switch the product on.
- 3 Place the comb onto the skin and stretch the skin with your free hand. Move the product upwards slowly, against the grain (Fig. 18).
 - Make sure that the flat part of the comb is always in full contact with the skin to obtain an even trimming result.
 - When you use the product on your armpits, raise your arm and put your hand on the back of your head to stretch the skin.
 - Regularly remove cut hair from the guard. If a lot of hair has accumulated in the guard, remove it from the product and blow and/or shake out the hairs.
- 4 Switch off and clean the product after each use (see 'Cleaning').
- 5 To remove the comb, hold it on both sides and pull it off the blade (Fig. 19).

Cleaning

Clean the product after every use.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Do not tap the product or blade against a surface to remove hairs and water as this may cause damage to the product and blade. If the blade is damaged, replace immediately.

Never dry the blade with a towel or tissue, as this may cause damage.

Cleaning the product

- 1 Switch off the product.
- 2 Remove any comb or skin guard from the blade (Fig. 19).
- 3 Blow off any hairs that have accumulated on the blade, skin guard and/or comb.
- 4 Switch on the product for approx. 15 seconds and rinse the blade with lukewarm water.
- 5 Rinse the skin guard and/or comb for approx. 15 seconds with lukewarm water.
- 6 Carefully shake off excess water and let all parts air dry completely.

Note: The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

Always put the protection cap on the blade to protect the blade from damage during travel or storage.

We advise you to let the product and its attachments dry completely before you store them for the next use.

- 1 Place the protection cap onto the edge of the blade.
- 2 Close the protection cap.

Note: You can also store the product in the pouch (Fig. 20). Make sure the product and attachments are completely dry before you store them in the pouch.

- Charge the battery before storing the product for an extended period.

- Be sure the product is switched off. Remove the power cord from power outlet and the product before storing it in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Replacement

Blade wear indicator

For optimal cutting and gliding performance, replace the blade every 4 months or when it no longer provides the shaving or trimming results you expect. This advice is based on two full shaves a week and actual results may vary.

Depending on your usage behavior, the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.

A replacement symbol will gradually appear on the blade as you use it (Fig. 21). When the replacement symbol is fully visible, it's time to replace your blade.

Note that accessories such as guards can prevent the replacement symbol from becoming visible.

Tip: the replacement symbol resembles the icon on the blade release button of your OneBlade. For older blades, a green rectangle may appear in place of the replacement symbol.

Replacing the blade

- 1 Make sure that the product is switched off.
- 2 Carefully push the blade release slide switch upwards while holding the blade on both sides (Fig. 22). This prevents the blade from being ejected from the handle.
- 3 Hold the new blade on both sides and press it onto the handle ('click') (Fig. 23).

Note: Be careful, the edges of the blade are sharp. When you hear a click, the new blade is placed correctly and ready for use.

Accessories

Replacement parts and accessories may be purchased at a store near you or on our website **www.philips.com/store**.

The following accessories are available:

- Model QP420/80 Philips Norelco Replacement Blade, 2-Pack
- Model QP430/80 Philips Norelco Replacement Blade, 3-Pack

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-3050.

Disposal

- This product contains a rechargeable battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit **www.call2recycle.org** for battery drop-off locations (Fig. 24).
- For assistance, visit our website **www.philips.com/support** or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit: **www.recycle.philips.com**.

Full Two-Year Warranty

Philips North America LLC warrants this new product (except blade) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage or batteries.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to **www.philips.com/support**. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.

The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase.

We cannot be responsible for lost mail.

The product must be postmarked no later than 45 days after the date of purchase.

Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain the money-back guarantee service, please go to www.PhilipsMoneyBack.com and follow the simple 3-step process.

Delivery of refund check will occur 6–8 weeks after receipt of returned product.