

Line Screen: 200

Printpack (M) Sdn Bhd - Senai

Proofreader Approval:

Print Method:

Printer PO #: Special Print Processes:

Printer:

Buyer Approval:

Description: K-Crema QSG-QSG

KGM Approval:

CC:

Operator:

Project:

Designer Approval:

Date

187.45

# **IMPORTANT SAFEGUARDS**



including the following:

- 1. READ ALL INSTRUCTIONS.
- 2. For household use only.

140.97

- 3. Do not use distilled water.
- 4. Scalding may occur if the handle is opened during the brewing process.
- 5. Do not touch hot surfaces. Use handles or knobs.
- 6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
- 7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 8. Close supervision is necessary when any appliance is used by or near children.
- 9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- 10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment or contact Keuria customer service.
- 11. The use of accessory attachments not recommended by the appliance manufacturer may

result in fire, electric shock, or injury to persons.

- 12. Do not use outdoors.
- 13. Do not let cord hang over edge of table or counter or touch hot surfaces.
- 14. Do not place on or near a hot gas or electric burner or in a heated oven.
- 15. Never add to container while appliance is operating.
- 16. Container must be properly in place before
- operating appliance. 17. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- 18. Do not use appliance for other than intended use.
- 19. Use brewer in upright position only.
- 20. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
- 21. Avoid spilling any liquid substances on powered connectors.
- 22. Do not remove the water reservoir or lift the handle once the **BREW** button has been pressed until the brew has completed.
- 23. PRESSURE LOCK: Lower the handle completely to close the lid. Once PRESSURE mode is selected, the brew chamber lock will automatically engage. The **BREW** button will no longer illuminate and the lock will disengage once the brew has completed.

For detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide, visit support.keurig.com.

- 1. WARNING: Keep all plastic bags away from
- 2. CAUTION: Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keuria® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keuria® pods or accessories may cause brewer malfunction or injury.
- 3. WARNING: Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
- 4. WARNING: There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
- **5. CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- **6. WARNING:** The appliance has a polarized plug (one blade is wider than the other); to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

#### 7. POWER CORD INSTRUCTIONS:

a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c. If a long detachable power-supply cord or extension cord is used:

- i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
- iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
- 8. CAUTION: HOT COCOA/OTHER NON-COFFEE **PODS:** Immediately after using a hot cocoa/ other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.



# WARNING

RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

**SAVE THESE** INSTRUCTIONS

(₹SGK

Please check carefully before using. Although every effort is made to produce the finest possible product, errors do occur. We do not assume any liability beyond the replacement of our product.

Client Name: Keurig Green Mountain Sales Order: 121435670 Service Order: 404050473 03-12-2025 Description: K-Crema QSG-QSG

25-5743 KGM Joh #: Item Part #: LingZhang **Buyer:** Vendor:

**Designer**: CC:

Operator:

Project:

AW0000001183 REV A

Mag: Bar Width Adi. Dieline #: Line Screen: **Print Method:** Printer:

Barcode:


Printpack (M) Sdn Bhd - Senai Printer PO #:

Special Print Processes Buyer Approval: Proofreader Approval:

KGM Approval:

Designer Approval: Date Date

Date

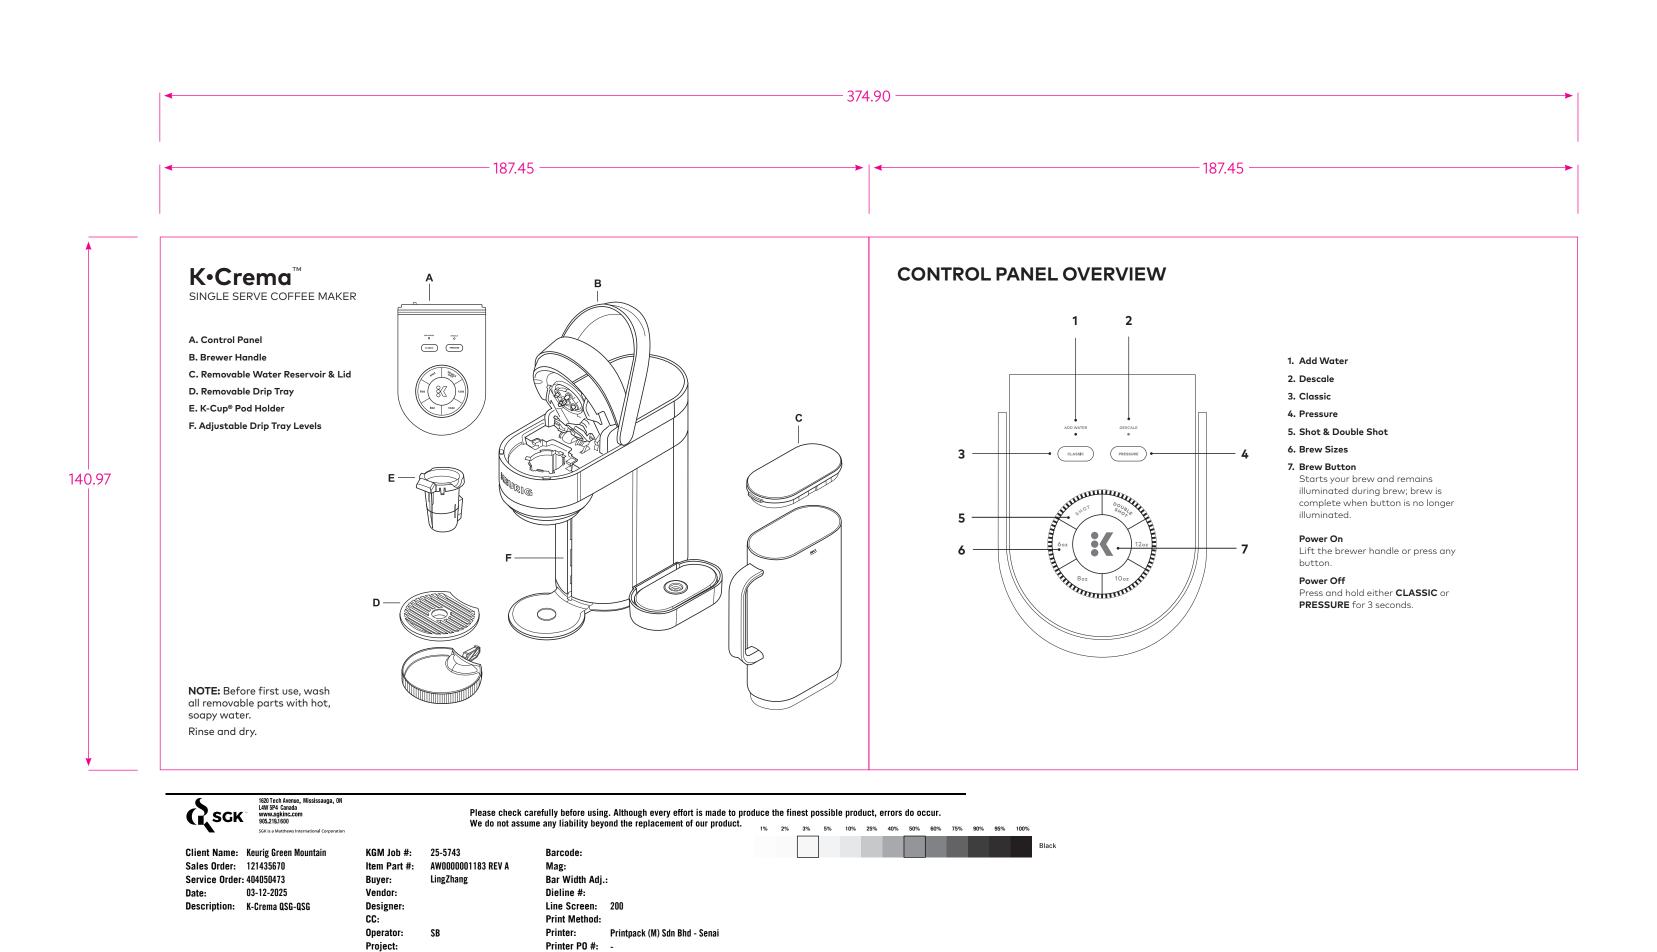

Special Print -Processes:

Proofreader Approval:

Buyer Approval:

KGM Approval:

Designer Approval:

Date

187.45

187.45

# **BEFORE YOU BREW**





# CONTROL CONTROL OF CON

140.97

1 Plug & Place Remove packing tape from brewer and plug into an outlet. Place a 12 oz mug on the drip tray.

#### 2 Rinse & Fill

If you have a Keurig® Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions. Rinse water reservoir before filling with fresh water to the **MAX FILL** line. Replace water reservoir, making sure it is secure on the brewer. NOTE: Do not use distilled water.

## 3 Cleansing Brew

Lift and lower the handle. Do not insert a K-Cup® pod. Press the **CLASSIC** button, select **8 oz**, and press the blinking **BREW** button to begin the cycle. The cycle is complete when the **BREW** button is no longer illuminated. Empty the mug and place it back on the drip tray.


# **BREW YOUR FIRST CUP**



4 Place Mug & Pod

Adjust the drip tray to best fit your mug size or remove drip tray to accommodate travel mugs. Place your mug. Lift the handle and place a

K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid. Do not remove the foil lid on the K-Cup® pod.

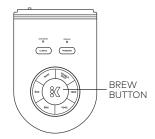

**5** Brew & Enjoy!

Select your brew pressure, CLASSIC or PRESSURE. Choose your brew size and press the **BREW** button to start the brew.

**Do not open the handle** until the brew is complete and the **BREW** button is no longer illuminated.



1620 Tech Avenue, M L4W 5P4 Canada www.sgkinc.com 905,219,1600

Please check carefully before using. Although every effort is made to produce the finest possible product, errors do occur. We do not assume any liability beyond the replacement of our product.

Client Name: Keurig Green Mountain Sales Order: 121435670 Service Order: 404050473 03-12-2025 Description: K-Crema QSG-QSG

KGM Job #: 25-5743 Item Part #: AW0000001183 REV A Buyer: LingZhang Vendor:

Designer: CC:

Barcode: Mag: Bar Width Adj.: Dieline #:

Line Screen: 200 Print Method:

Printpack (M) Sdn Bhd - Senai Operator: Printer: Project: Printer P0 #: -

Special Print -Processes:

Buyer Approval: Proofreader Approval: Changes:

KGM Approval: Designer Approval: Date

- 374.90 187.45 187.45

## **BREWER FEATURES**

PRESSUREINFUSION TECHNOLOGY™\*: Extracts coffee flavor with over 5X more pressure for crema-topped coffee and espresso-style shots.

PRESSURE LOCK: Automatically engages during a pressure brew. When the brew is complete and the **BREW** button is no longer illuminated, the lock will disengage.

CLASSIC BREW: Provides the same great Keurig® experience you know and love. Use for coffee, cocoa, one-step latte, tea, and refresher K-Cup® pods.

MULTISTREAM TECHNOLOGY™: Saturates the grounds more evenly to extract full flavor



140.97

**ADJUSTABLE DRIP TRAY:** 4 height options for various mug sizes. Remove tray for travel mugs.

(l)

**POWER ON:** Lift the handle or press any button to power on.



POWER OFF: Your brewer will automatically turn off after 5 minutes. You can also press and hold **PRESSURE** or **CLASSIC** for 3 seconds to turn off your brewer.



**DESCALE:** The descale light will illuminate to indicate descaling is required (see Caring For Your Brewer section for more instructions).

\*Designed for use with coffee and espresso beverages. Not compatible with fiber and mesh pods. <sup>†</sup>Compared to a standard Keurig® brewer.

#### **CARING FOR YOUR BREWER**

**DESCALING YOUR BREWER:** Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. In order for the descale light to turn off, you must enter Descale Mode by pressing the **12 oz** and **8 oz** buttons. For more information on the descaling procedure, go to keurig.com/descale.


HIGH ALTITUDE MODE: To ensure your brewer works properly at higher altitudes (5,000 feet), enable the High Altitude Brewing Mode on your coffee maker by pressing and holding the **BREW** button and **8 oz** button for 3 seconds. The 12 oz button will flash twice to confirm that the High Altitude Mode has been enabled. To disable High Altitude Brewing Mode, repeat. The 8 oz button will flash twice to confirm that the High Altitude Mode has

HIGH ALTITUDE BREWING: When brewing in High Altitude Mode, with the handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle. Then close the handle.

ALL REMOVABLE PARTS: Periodically hand-wash removable parts with warm, soapy water and rinse clean. For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule.

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

\*Follow the full descaling procedure in the Use & Care guide at support.keurig.com. For detailed brewer cleaning and descaling instructions, videos, and the full Use & Care Guide, visit support.keurig.com.

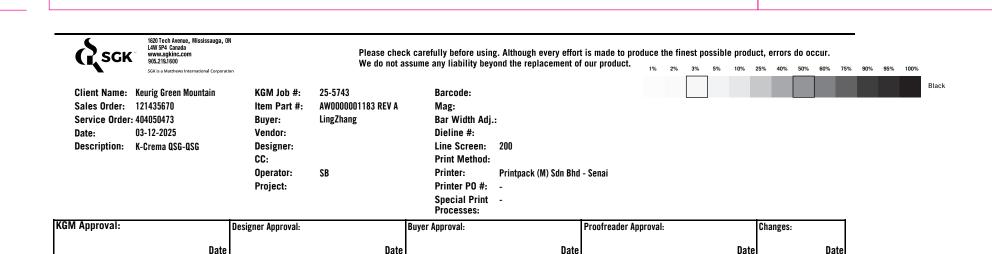

187.45

187.45

# **CARING FOR YOUR BREWER**

If you experience changes in your coffee quality or crema, and if you frequently use flavored K-Cup® pods, cocoas, or one-step lattes, it might be time to clean your K-Cup® pod holder.



#### K-Cup® Pod Holder

To remove the K-Cup® pod holder, lift the handle and grasp the top of the K-Cup® pod holder with one hand while pushing up on the bottom of the K-Cup® pod holder from underneath with the other hand.

To remove the bottom funnel, pinch the textured ridges together while pulling in the direction of the arrows.

#### Rinse

Rinse the two pieces of the pod holder under a faucet.

#### Reassemble Pod Holder

After cleaning, align the bottom funnel with the K-Cup® pod holder, using the snaps as a guide, and push into place.

For more detailed pod holder cleaning instructions, see the Use & Care Guide at support.keurig.com.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder NOTE: Always remove and dispose of the used K-Cup® pod after brewing or as part of the daily cleaning routine.

# **KEURIG® COFFEE MAKER MAINTENANCE**

For great-tasting coffee, keep your coffee maker running at peak performance.



### 3-Month Brewer Care Kit

THIS THREE-MONTH **BUNDLE** has all the essentials needed to keep your Keurig® coffee maker running at peak performance.

# Descaling Solution

KEURIG

Descaling Solution

#### **USE EVERY THREE MONTHS**,

or when descale indicator turns on\*, to eliminate mineral buildup and preserve the long-term health of your Keurig® coffee maker.

\*See Use & Care Guide or visit instructions, including the use of Descale Mode to reset the indicator.



KGM Approval:

Please check carefully before using. Although every effort is made to produce the finest possible product, errors do occur. We do not assume any liability beyond the replacement of our product.

Client Name: Keurig Green Mountain Sales Order: 121435670 Service Order: 404050473 03-12-2025 Description: K-Crema QSG-QSG

KGM Job #: 25-5743 Item Part #: Buyer: Vendor:

Designer:

Operator:

Project:

Designer Approval:

Date

CC:

AW0000001183 REV A LingZhang

Date

Barcode: Mag:

Proofreader Approval:

Bar Width Adj.: Dieline #: Line Screen: 200 Print Method: Printer: Printpack (M) Sdn Bhd - Senai Printer P0 #: -**Special Print** Processes: Buyer Approval: Changes:

140.97