

Cuisinart®

SimpliTouch™ XL 2-Slice Toaster RBT-2200PC SERIES



Instruction Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.

ITM./ART. 3333018

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

- 1. Read all instructions.
- 2. **Always unplug appliance from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
- 3. Do not touch hot surfaces. Use buttons or levers.
- 4. To protect against electric shock, do not immerse cord or plug or place any part of the toaster in water or other liquids. See instructions for cleaning.
- 5. This appliance should not be used by or near children or individuals with certain disabilities. Close supervision is necessary when any appliance is used by or near children.
- 6. Do not operate any appliance with a damaged cord or plug, after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination or repair.
- 7. The use of accessory attachments not recommended by Cuisinart may cause injury.
- 8. Do not use outdoors.
- 9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
- 10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
- 11. Do not use this toaster for anything other than its intended use.
- 12. Oversize foods, metal foil packages, or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
- 13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies, or walls, when in operation. Do not operate under wall cabinets.
- 14. Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
- 15. To avoid possibility of fire, do not leave toaster unattended during use.
- 16. To disconnect, push the Cancel button, then remove the plug from the wall. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
- 18. When heating toaster pastries, always use the lightest toast color setting.

- 19. Toaster is not intended to be operated by means of an external timer or separate remote-control system.
- 20. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- 21. Children should be supervised to ensure that they do not play with the appliance.
- 22. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CONTENTS

Important Safeguards	2
Features and Benefits	3
Use and Care	4
Functions	4
Tips and Hints	5
Cleaning and Maintenance	5
Warranty	6

FEATURES AND BENEFITS

1. Power

Press to turn touchscreen controls on or off.

2. High-Lift Lever with QuickView™ Feature

Press the lever down to begin toasting. Lift lever at any time to observe the browning shade status without interrupting the toasting cycle.

3. XL Toasting Slots

Extra-large toaster slots accommodate a wider variety of breads.

4. Browning Control

Touch a shade icon (1-6) to select your desired browning level.

5. Bread-Type Buttons

Customized settings for Bread, Bagel, Waffle, Pastry, and English Muffin.

6. Defrost Button

Defrosts and toasts frozen items.

7. +15 Seconds

Can be used to extend your selected browning shade setting for an additional 15 seconds.

8. Single-Slice Button

Evenly toasts single slices, side to side.

9. Cancel Button

Interrupts toasting process.

10. Slide-Out Front Crumb Tray

Pulls out to remove crumbs that collect in bottom of toaster.

11. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.



USE AND CARE

Plug the power cord into wall outlet. Press Power button.

1. Insert slice(s) of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Select browning control.

Touch the desired shade level:

Setting	Color
1–2	light
3–4	medium
5–6	dark

4. Begin toasting.

Press the carriage lever until it locks into the down position.

Stop cycle.

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply touch the Cancel button. After use, unplug the toaster from the electrical outlet.

NOTE: After 3 minutes of no operation, toaster will go into idle mode and the display will turn off. To wake toaster, press the power button or push the start lever down, and the display will turn on.

Functions

QuickView™

The QuickView™ feature allows you to check on the toasting progress without interrupting the cycle. Simply lift the high-lift lever to temporarily raise and view your bread, and then release lever to automatically lower and continue toasting.

Power

Power control can be used to:

- Turn on the touchscreen controls.
- Power off the toaster.

+15 Seconds

The +15 Secs function allows you to extend the toasting time by 15 seconds.

If selected during toasting cycle:

- The +15 Secs icon will go from semi-lit to fully lit and start flashing. Current shade countdown will be paused. Upon completion of the 15-second cycle, the originally selected browning shade cycle will resume.

If selected after toasting cycle has completed:

- The +15 Secs icon will illuminate. Once the lever is pushed down, the +15 Secs icon will flash until time has elapsed.

Bagel

This toaster reduces heat on one side of the toasting slot for bagels. This toasts the cut side of the bagel slightly more than the other side.



An icon located on the top of the toaster shows you the right way to insert your bagel. (The cut side should always face away from the center of the pair of toasting slots.)

Single-Slice Button

The single-slice function generates balanced heat for even toasting of just one slice of bread. While both slots heat up, the heaters automatically adjust time and intensity to ensure great results with even side-to-side browning.

1. Insert slice of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Set browning control.

4. Select the single-slice button. White LED indicates the feature is active.

5. Press the high-lift lever until it locks into position.

To stop cycle

When the single-slice cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

Defrost Button

The Defrost button is designed to first defrost and then toast the bread to your desired browning shade.

1. Insert slice(s) of bread.

Be sure that the carriage is in the up position.

2. Select bread type.

3. Set browning control.

4. Select the Defrost button. White LED indicates the feature is activated.

5. Press the high-lift lever until it locks into position.

To stop cycle

When the Defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

Cancel Button

The Cancel button lets you stop the toasting cycle at anytime.

NOTE: Cancel button will only function during active toasting cycle.

TIPS AND HINTS

Notes on browning

Toasting is a combination of cooking and drying bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) require a higher toast setting.
- Thickly cut pieces of bread take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- Before toasting bagels, slice each bagel into two equal halves.

Frozen waffles, pancakes, French toast, and bagels

These items should be warmed before toasting, using the Defrost function. Select the bread type and then your preferred browning shade. Press high-lift lever and then press Defrost. For example, to toast a frozen bagel, select Bagel and then the browning level. Press the high-lift lever down, and then press Defrost.

Toaster pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

For best results

- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet before cleaning.
2. Do not use abrasive cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® SimpliTouch XL 2-Slice Toaster ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of THREE (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond Cuisinart's control;
- Damage caused by you or any nonauthorized third party, even though necessary repairs and maintenance might be performed by any company;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated.

It is recommended that you visit the website <https://www.cuisinart.com/register-your-product.html> for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the Product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The THREE (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190

©2025 Cuisinart
Glendale, AZ 85307

Printed in China

25CE200924

IB-18970A

Version No: RBT2200PC IB-18970A

Open Size: 420x140MM Fold Size:210mmWx140mm H

Number of Page: 8PP saddle stitching

Material: 105gsm gloss artpaper

binding: saddle stitching

Coating: Gloss varnishing in cover

Front Cover: 5C(CMYK+3435C)+1C(Black)

Front Inside: 1C(Black)+1C(Black)

Date: 09-July-2025

Co-ordinator: _____

JQ Description

PDF version: RBT2200PC IB-18970A

JQ Code: RRBT2200PC IB-18970A Operator:ZHZ

JQ Diecut: _____ IRP:LYJ

Hot Stamping: _____ Spot UV: _____ Embossing: _____

Remark: Paper White(1)Quality Request(1)

