

LOCATION FOR MOUNTING LIMIT SWITCH — SEE ELEVATION VIEW

LOCATION OF STRIKE PLATE ON OVERTRAVEL STOP OF GANGWAY BODY. FIT LOCATED AFTER MOUNTING LIMIT SWITCH.

NOTE: GANGWAY SETUPS VARY, LIMIT SWITCH MOUNTING SHOWN HERE IS APPROXIMATE. MOUNTING OF SWITCH IS ADJUSTABLE AND MUST BE FITTED TO ACCOMMODATE YOUR GANGWAY.

BASE TREAD

GANGWAY BODY

FOOTLOCK

PLAN VIEW

LOCATE SWITCH HERE. MATCH DRILL UPRIGHT AND FASTEN WITH SELF TAPPING SCREWS.

FOOTLOCK

(REAR VIEW)

LOCATE LIMIT SWITCH ON BASETREAD UPRIGHT UNDER SPRING BRACKET EAR. NOTE: MOUNT ON OPPOSITE SIDE OF BASETREAD FROM FOOTLOCK SIDE.

ELEVATION VIEW - LIMIT SWITCH LOCATION

AFTER LIMIT SWITCH IS MOUNTED AND GANGWAY IS IN STORED POSITION, LOCATE STRIKE PLATE ON OVERTRAVEL STOP STUD APPROXIMATELY AS SHOWN USING ADDITIONAL NUT ON ASSEMBLY.

ARM ON LIMIT SWITCH IS ADJUSTABLE AND CAN BE ADJUSTED AS NECESSARY IN CONJUNCTION WITH ANGLE CLIP TO ENSURE PROPER WORKING OF SWITCH.

ELEVATION VIEW - ANGLE CLIP LOCATION