EN

## ЖHESTAN


# SUPPLEMENTAL INSTRUCTIONS -

# PARTIAL FLUSH-MOUNTING OF WALL OVEN & DRAWER MICROWAVE

### APPLIES TO MODELS: WALL OVEN - KSO30

DRAWER MICROWAVE - KMWR30

This supplement shows the appropriate cutouts and dimensions to partially inset your Hestan wall oven KSO30 so when viewed from the side the lower face of the oven door will align with the face of the Drawer Microwave KMWR30 (see image here). You must still follow the installation manuals that came with your appliances. All appliances shown in this supplement are mounted on 3/4" [2 cm] thick plywood platforms.

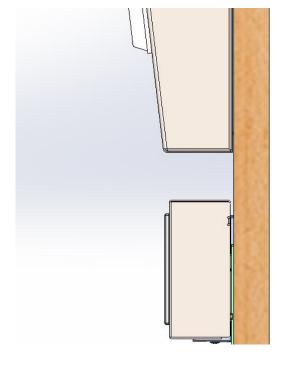

#### IMPORTANT - READ ALL INSTRUCTIONS BEFORE YOU BEGIN

THE INSTRUCTIONS HEREIN ARE A GUIDE FOR THE CABINET-MAKER AND/OR INSTALLER OF THE APPLIANCES. INSTALLATION OF THE APPLIANCES SHOULD BE PERFORMED BY A QUALIFIED SERVICE TECHNICIAN.

**AWARNING** 

ELECTRICAL PARTS & COMPONENTS – DISCONNECT ALL POWER SUPPLIES BEFORE SERVICING. UNITS MUST BE UNPLUGGED FROM THE POWER OUTLET, OR THE ELECTRICAL BREAKER SHUT OFF. YOU

WILL NEED TO MOVE THE APPLIANCES AWAY FROM THE WALL FOR ACCESS.

IN ALL CIRCUMSTANCES, FOLLOW THE INSTRUCTIONS PROVIDED WITH THE APPLIANCES. THIS DOCUMENT IS ONLY A SUPPLEMENT.

### INSTRUCTIONS

This mounting style has the Wall Oven partially inset so when viewed from the side the lower face of the oven door will align with the face of the Drawer Microwave (see image on previous page).

The images on the following pages feature an optional storage drawer below the drawer microwave. This is shown for illustrative purposes only. Your cabinet-maker can make adjustments to the overall cabinet design to vertically position both appliances at a comfortable height.



**NOTICE** STANDARD CABINETS ARE BUILT TO A DEPTH OF 24" (not including the face-frame, which is typically 3/4" thick). Follow the installation instructions for each appliance for location of electrical supply / outlets.

The arrangement shown features the following products:

Single Wall Oven KSO30

Drawer Microwave KMWR30

Please note side mounting strips are used to achieve the partial inset of the wall oven. The strips are essentially flush to the BACK side of faceframe making the oven inset 3/4". These strips are only needed for the oven.

