


NXT24 NXT30 NXT40 NXT52 NXT68 Hooklift Owner's Manual

Safety • Operation • Maintenance • Troubleshooting

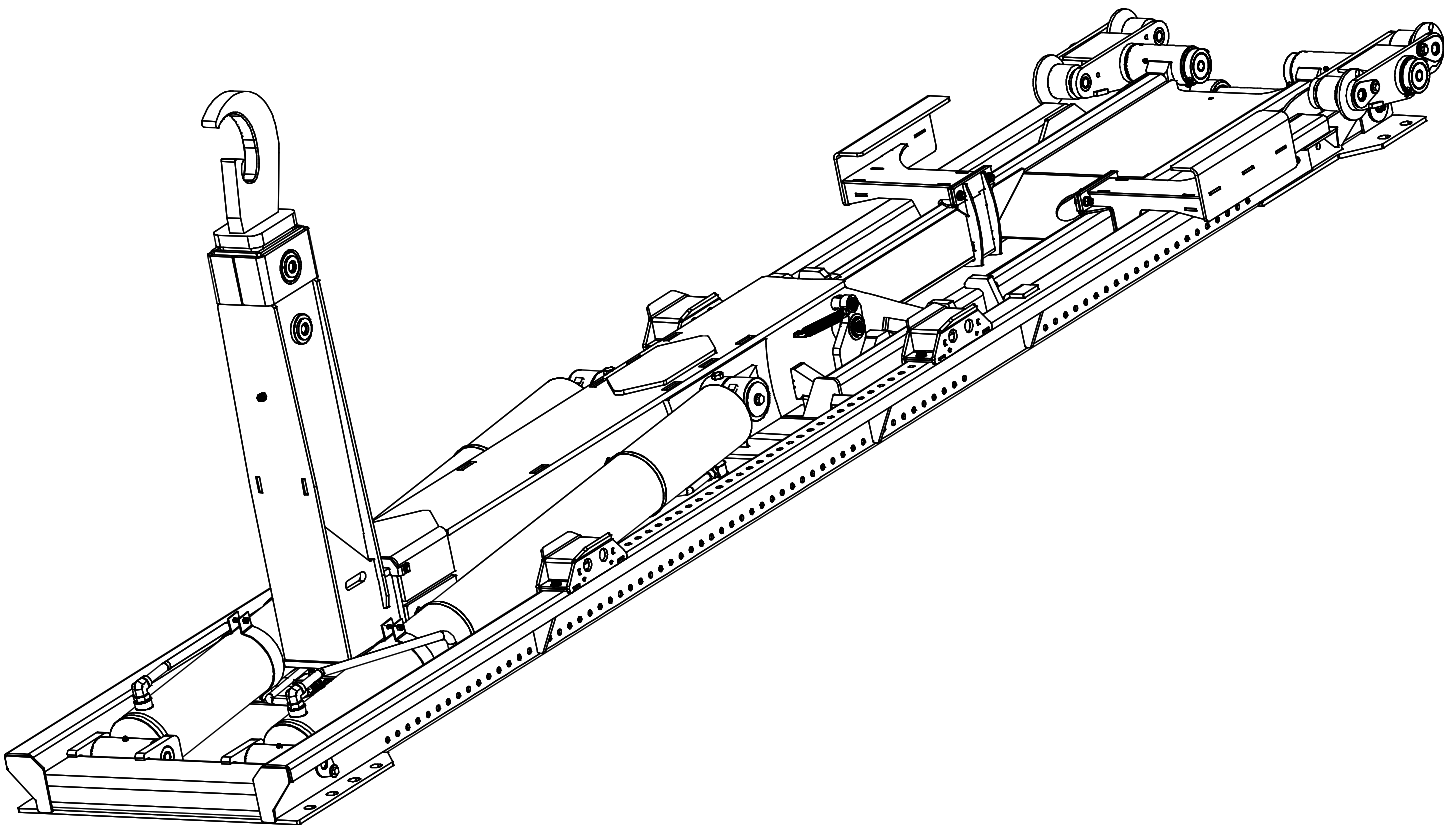

Stellar Industries, Inc.

190 State Street

PO Box 169

Garner, IA 50438

800-321-3741


Fax: 641-923-2811

www.stellarindustries.com

Subject to Change without Notification.
© 2025 Stellar Industries, Inc.

REV1.3
PN 132905

The serial tag should be located on the right side (passenger side) of the base assembly:

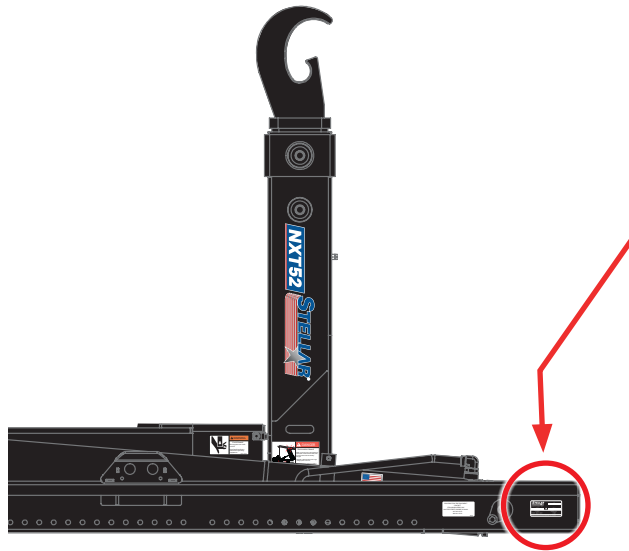

STELLAR®		DATE
PATENT INFORMATION http://www.stellarindustries.com/ip		
MODEL NO.	SERIAL NO.	
MADE IN THE U.S.A. BY STELLAR INDUSTRIES, INC. PN C5942		


NOTICE

Although clear data on cold weather performance from every steel manufacturer is not available for all types and thicknesses of steel, Stellar Industries is confident that the weldments on our products will operate to 100% of their intended purpose to temperatures down to -40° F / C.

It is recommended if Stellar manufactured equipment needs to be used in temperatures below -40° F / C, the operator should pull the unit into a climate-controlled area and allow the weldments to warm up to and then maintain a temperature above this level.

⚠ WARNING

Operating, maintaining, and servicing a Stellar product may expose you to chemicals including, but not limited to, engine exhaust, carbon monoxide, phthalates, and lead. These chemicals are known to the State of California to cause cancer and birth defects (or other reproductive harm). To keep your exposure to a minimum, be sure to avoid breathing exhaust and service your Stellar product in a well-ventilated area while wearing gloves or washing your hands frequently. For more information, go to www.P65Warnings.ca.gov/passenger-vehicle.

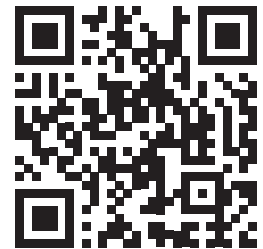

www.p65/warning.ca.gov

For Technical Questions, Information, Parts, or Warranty, Call Toll-Free at

800-321-3741

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

Technical Questions, and Information service@stellarindustries.com

Order Parts..... parts@stellarindustries.com

Warranty Information..... warranty@stellarindustries.com

Table of Contents

Introduction	iv
Hooklift Sections	v
Hooklift System Components and Terms	vi
Chapter 1 - Operations	1
General Operation.....	2
Operator Requirements.....	2
Pre-Operation Inspection	3
Operating Stellar® NXT Hooklift	4
Understand the Area and Plan the Lift or Drop	5
Manual Hook Height Adjustment	6
Hydraulic Hook Height Adjustment (Cable Controls)	10-11
Hydraulic Hook Height Adjustment (Air Controls)	12-13
Hydraulic Hook Height Adjustment (Joystick Control).....	14-15
Body Manipulation Overview.....	16
Hooklift Operation (Cable Controls)	17-27
Hooklift Operation (Air Controls)	28-38
Hooklift Operation (Joystick Control).....	39-49
Safety Decals of Note	50-51
Chapter 2 - Maintenance	53
General Maintenance Guidelines.....	54
Basic Hooklift Inspection Schedule	55
Maintenance Procedures	56
Chapter 3 - Troubleshooting.....	59
General Troubleshooting.....	60
General Troubleshooting continued...	61

Introduction

Stellar® Hooklifts are designed to provide safe and dependable service for a variety of operations. With proper use and maintenance, these cranes will operate at peak performance for many years.

To promote this longevity, carefully study the information contained in this manual before putting the equipment into service. Though it is not intended to be a training manual for beginners, this manual should provide solid guidelines for the safe and proper usage of the hooklift.

Once you feel comfortable with the material contained in this manual, strive to exercise your knowledge as you safely operate and maintain the hooklift. This process is vital to the proper use of the unit.

A few notes on this manual:

A copy of this manual is provided with every hooklift and can be found in the hard plastic manual case that is installed on the chassis. A copy of this manual shall remain with the hooklift at all times.

Throughout the manual, three signal words will be used to bring attention to important items: Information contained within this manual does not cover all maintenance, operating, or repair instructions

NOTICE

A NOTICE signal word indicates a practice not related to physical injury.

⚠ WARNING

A WARNING signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ DANGER

A DANGER signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

pertinent to all possible situations. Please be aware that some sections of this manual contain information pertaining to Stellar® manufactured hooklifts in general and may or may not apply to your specific model.


This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

If more information is required or technical assistance is needed, or if you feel that any part of this manual is unclear or incorrect, please contact the Stellar Customer Service Department by phone at 800-321-3741 or email at service@stellarindustries.com.


Hooklift Sections

The Stellar® NXT Hooklift is a hydraulic, body-loading device when mounted on a truck chassis. It can handle a multitude of bodies.


The NXT Hooklift consists of four basic parts: the base, dump, secondary, and jib sections. Please take the time to familiarize yourself with the various components. Knowing the proper terminology is necessary to get the full benefit of this manual.

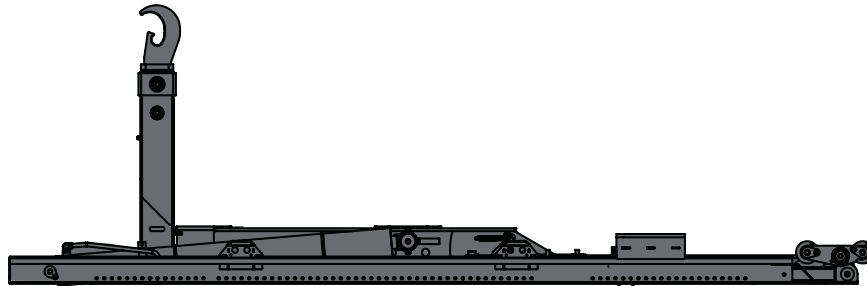


HOOKLIFT

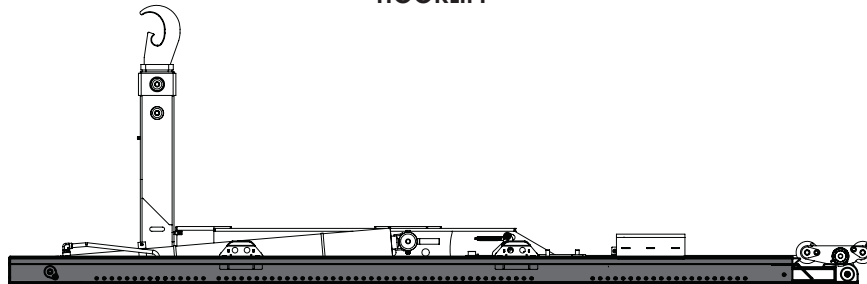


BASE

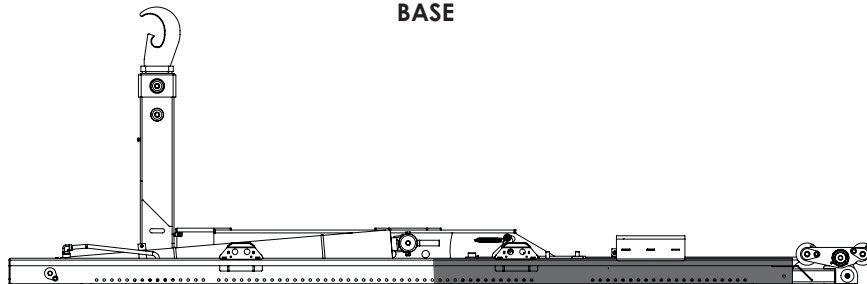

DUMP

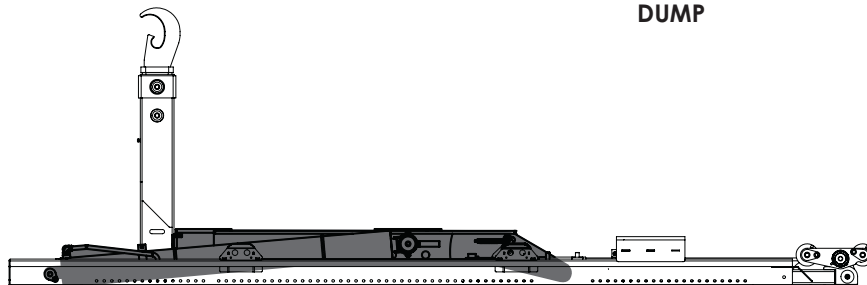


SECONDARY

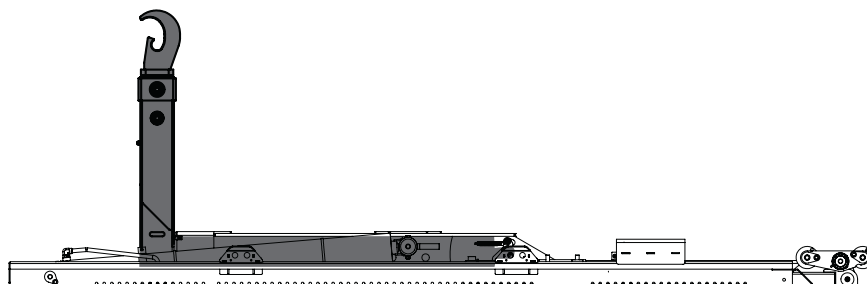

JIB

Hooklift System Components and Terms

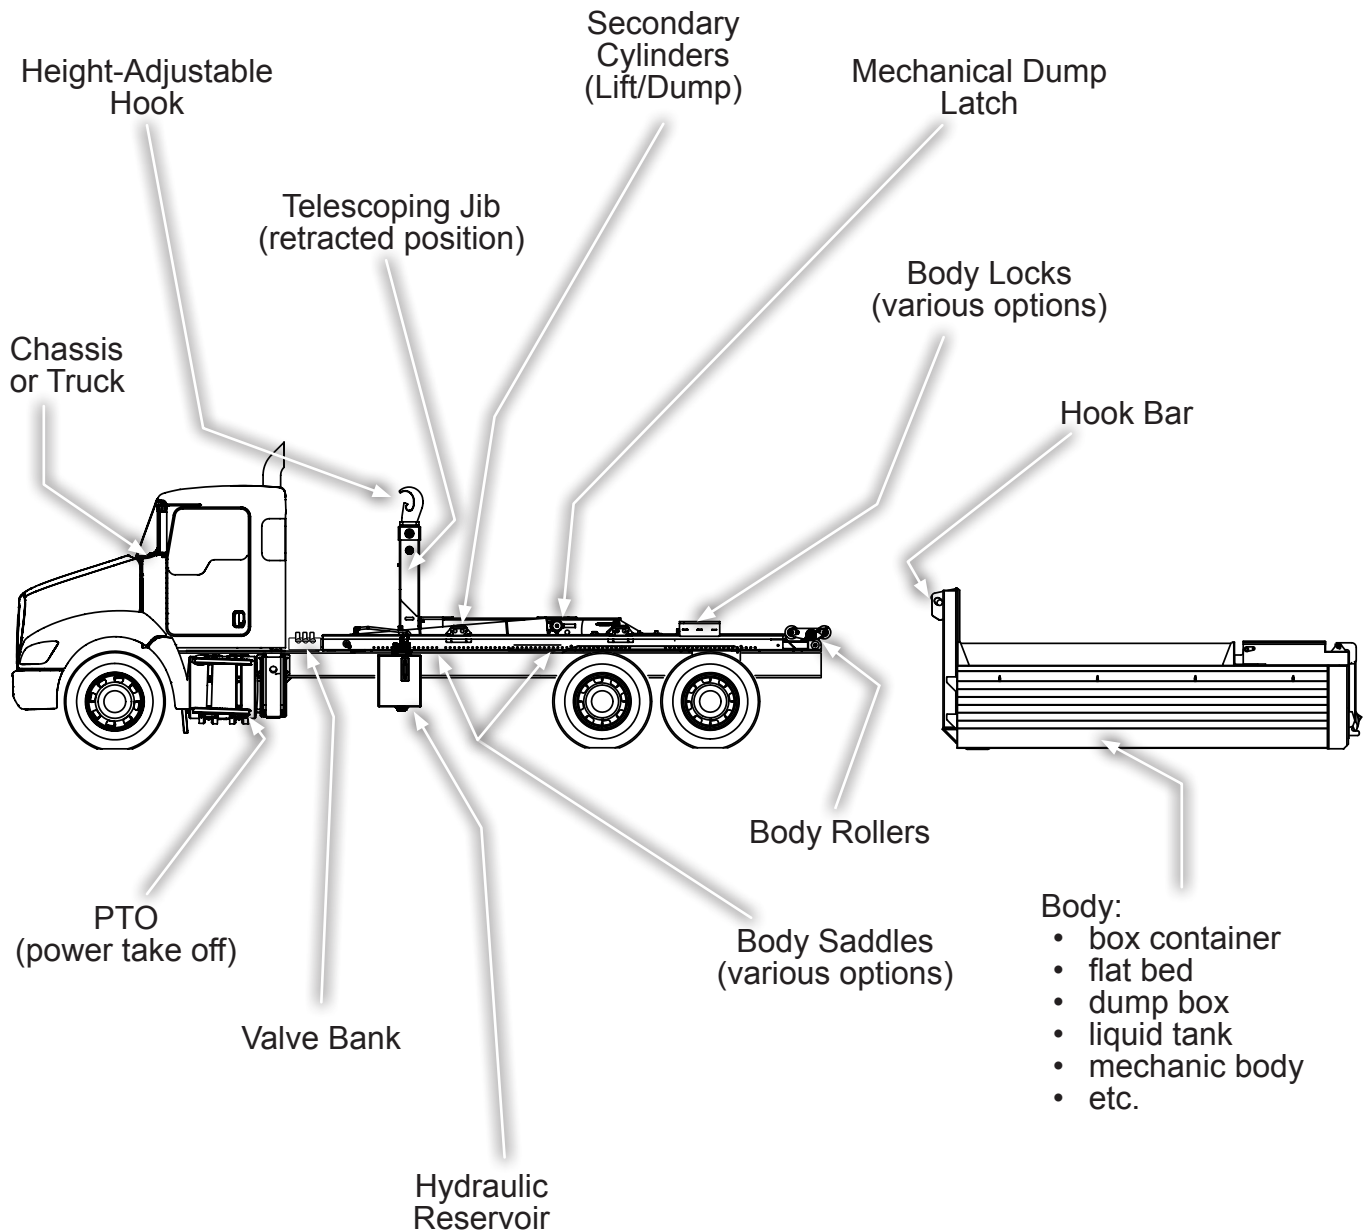

Chapter 1 - Operations

CHAPTER CONTENTS

General Operation.....	2
Operator Requirements.....	2
Pre-Operation Inspection	3
Operating Stellar® NXT Hooklift Controls	
Cable Control System	4
Air Control system.....	5
Joystick Control System.....	6
Understand the Area and Plan the Lift or Drop	7
Manual Hook Height Adjustment	8
Hydraulic Hook Height Adjustment	
Cable Control System	10-11
Air Control system.....	12-13
Joystick Control System.....	14-15
Body Manipulation Overview.....	16
Cable Control Hooklift Procedures	
Loading Body	17-20
Unloading Body.....	21-24
Dumping Body Load	25-27
Air Control Hooklift Procedures	
Loading Body	28-31
Unloading Body.....	32-35
Dumping Body Load	36-38
4-Way Joystick Control Hooklift Procedures	
Loading Body	39-42
Unloading Body.....	43-46
Dumping Body Load	47-49
Safety Decals of Note	50-51

General Operation

Safety should be the number one thought on every operator's mind. Three factors should exist for safe operation: a qualified operator, well-maintained equipment, and the proper use of this equipment.

This chapter contains information regarding the safety and operation of Stellar® manufactured Hooklifts and should be read and understood completely by everyone working with or near the hooklift before putting the unit into operation.



WARNING Failure to follow operating, maintenance, or safety instructions can result in death or serious injury.

It is the responsibility of the owner to instruct the operator in the safe operation of the equipment and to provide the operator with properly maintained equipment.



WARNING Stellar® Hooklift operators must conform to the qualifications specified in this manual. Trainees or untrained persons shall be under the direct supervision of qualified persons.

Operators shall consult with the owner of the equipment regarding current safety regulations and required personal protective equipment.

Operators should never operate the hooklift while under the adverse influence of alcohol, drugs, or medication.

Please take note that Stellar Industries, Inc. is not liable for accidents incurred by the hooklift because of non-fulfillment from the operator's side of current rules, laws, and regulations.

Operator Requirements

Operation is limited to the following people:

1. Qualified individual.
2. Trainees under direct supervision of the qualified individual.
3. Test or maintenance individual.
4. Hooklift Inspector.

Qualified individuals must:


1. Demonstrate the ability to understand all decals, the owner's manual, and any other information required for safe operation of the hooklift.
2. Be able to demonstrate the ability to safely control the hooklift.
3. Know all pertinent safety regulations.
4. Be responsible for maintenance requirements.
5. Understand and be fully capable of implementing all emergency procedures.
6. Understand all operating procedures as outlined by this manual.

Pre-Operation Inspection

Before operating the equipment, make sure all regular maintenance has been performed. Each day, inspect the hooklift for all of the following:

- Hydraulic reservoir oil level.
- Hydraulic hoses and tubing for evidence of damage such as blistering, crushing, or abrasion.
- All safety covers for proper installation.
- Equipment for missing, illegible, or defaced operating decals and safety signs.
- Structural weldments for bends, cracks, or breaks
- All pins and keepers for proper installation
- Presence of this owner's manual
- All pins, bushings, shafts, and gears for wear, cracks, or distortion to include all pivot points, and bushings
- Replace/repair as necessary prior to operation.

Suggested PPE While Operating Hooklift

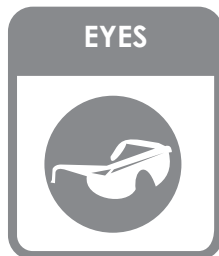

Operating Stellar® NXT Hooklift

NXT Hooklift Control Functions (Cable - 2 section & 3 section)

SECONDARY LEVER (RETRACT)

If the jib is in the extended position and dump latches are engaged, the secondary retract lever will lower the body after finishing a dump cycle. If the jib is retracted and dump latches disengaged, it will load the body the hook is hooked to or return the empty hook/secondary after unloading a body.

SAFETY BUTTON

Each control lever is held in the neutral position by a locking button - press in to release, then push or pull.

HOOK LEVER (EXTEND/RAISE)

(Optional on 3 section control tower only.) If the hook height is in the low position and you need to pick up a container with a hook bar that is a higher position, push the hook lever forward to hydraulically raise the hook height. Keep the lever forward until hook is fully raised.

JIB LEVER (EXTEND)

Position jib forward to finish loading a body for travel or as a position check before beginning a dumping procedure.

JIB LEVER (RETRACT)

Position jib completely rearward by pushing the jib lever forward before extending secondary for deploying hook to drop off or pick up a body.

DUMP SECTION UP ALERT (▲)

To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

SECONDARY LEVER (EXTEND)

If the jib is in the extended position and dump latches are engaged, the secondary extend lever will operate as a dump function. If the jib is retracted and dump latches disengaged, it will position the hook to grab a body.

PTO LED


Depending on your chassis model and its upfit switches, this may or may not be an indicator light to notify you the PTO is active.

HOOK LEVER (RETRACT/LOWER)

(Optional on 3 section control tower only.) If the hook height is in the raised position and you need to pick up a container with a hook bar that is a lower position, pull the hook lever back to hydraulically raise the hook height. Keep the lever forward until hook is fully lowered.

TAB ALARM LED

This a broken tab bolt alarm on non-NXT model Stellar hooklifts. This will not be an active LED on your NXT model hooklift.

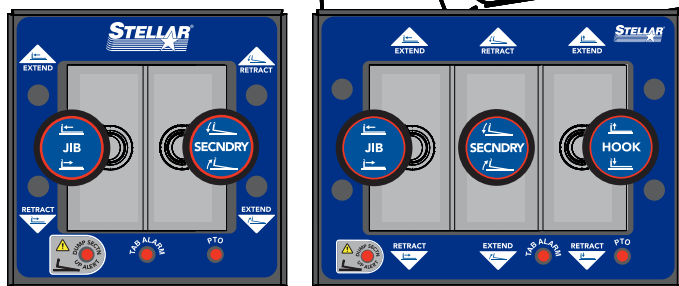

- Be familiar with the sequence and operation of the hooklift controls.
- Be constantly aware of the hooklift position when operating the controls.
- Keep hands, feet and control levers free from mud, grease and oil.
- Be familiar with the control levers and how they operate before attempting to operate the hooklift.
- Move the control lever slowly and smoothly for steady oil flow. Avoid jerky or sudden movement of the controls.
- Be constantly aware of the hooklift position when operating the controls.
- In extreme cold, allow hydraulic system to warm up completely before use to avoid jumpy cylinder movement from viscosity changes in oil.

Operating Stellar® NXT Hooklift

NXT Hooklift Control Functions (Air - 2 section & 3 section)

SECONDARY LEVER (↙ RETRACT)

If the jib is in the extended position and dump latches are engaged, the secondary retract lever will lower the body after finishing a dump cycle. If the jib is retracted and dump latches disengaged, it will load the body the hook is hooked to or return the empty hook/secondary after unloading a body.

HOOK LEVER (↗ EXTEND/RAISE)

(Optional on 3 section control tower only.)
If the hook height is in the low position and you need to pick up a container with a hook bar that is a higher position, push the hook lever forward to hydraulically raise the hook height. Keep the lever forward until hook is fully raised.

SAFETY COLLAR

The secondary control lever is held in the neutral position by a locking collar - pull up to release, then push or pull.

HOOK LEVER (↖ RETRACT/LOWER)

(Optional on 3 section control tower only.)
If the hook height is in the raised position and you need to pick up a container with a hook bar that is a lower position, pull the hook lever back to hydraulically raise the hook height. Keep the lever forward until hook is fully lowered.

JIB LEVER (↔ EXTEND)

Position jib forward to finish loading a body for travel or as a position check before beginning a dumping procedure.

SECONDARY LEVER (↗ EXTEND)


If the jib is in the extended position and dump latches are engaged, the secondary extend lever will operate as a dump function. If the jib is retracted and dump latches disengaged, it will position the hook to grab a body.

DUMP SECTION UP ALERT (▲)

To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

JIB LEVER (↔ RETRACT)

Position jib completely rearward by pushing the jib lever forward before extending secondary for deploying hook to drop off or pick up a body.

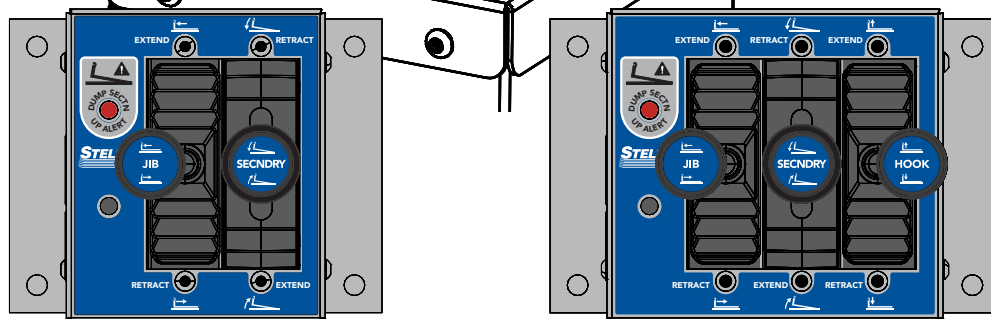

- Be familiar with the sequence and operation of the hooklift controls.
- Be constantly aware of the hooklift position when operating the controls.
- Keep hands, feet and control levers free from mud, grease and oil.
- Be familiar with the control levers and how they operate before attempting to operate the hooklift.
- Move the control lever slowly and smoothly for steady oil flow. Avoid jerky or sudden movement of the controls.
- Be constantly aware of the hooklift position when operating the controls.
- In extreme cold, allow hydraulic system to warm up completely before use to avoid jumpy cylinder movement from viscosity changes in oil.

Operating Stellar® NXT Hooklift

NXT Hooklift Control Functions (4 way Joystick)

HOOK HEIGHT (⬅️ RETRACT/LOWER)

(Hydraulic hook height option only.)

If the hook height is in the raised position and you need to pick up a container with a hook bar that is a lower position, pull the hook lever back to hydraulically raise the hook height. Keep the lever forward until hook is fully raised.

HOOK HEIGHT (⬆️ EXTEND/RAISE)

(Hydraulic hook height option only.)

If the hook height is in the low position and you need to pick up a container with a hook bar that is a higher position, press in the upper part of the rocker switch to hydraulically raise the hook height. Keep the switch pressed in until hook is fully raised.

ACC 1 & ACC 2 BUTTONS

Use the accessory buttons to operate additional owner-added options like work lights or horn, work lights, remote body locks, etc.

SECONDARY (⬅️ RETRACT)

If the jib is in the extended position and dump latches are engaged, pushing the joystick forward will lower the body after finishing a dump cycle. If the jib is retracted and dump latches disengaged, it will load the body the hook is hooked to or return the empty hook/secondary after unloading a body.

JIB (⬆️ RETRACT)

Move the joystick to the right to position jib completely rearward before extending secondary for deploying hook to drop off or pick up a body.

JIB (⬅️ EXTEND)


Move the joystick to the left to position the jib forward to finish loading a body for travel or as a position check before beginning a dumping procedure.

SECONDARY (⬆️ EXTEND)

If the jib is in the extended position and dump latches are engaged, pulling the joystick rearward will operate as a dump function. If the jib is retracted and dump latches disengaged, it will position the hook to grab a body.

DUMP SECTION UP ALERT (⚠️)

To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

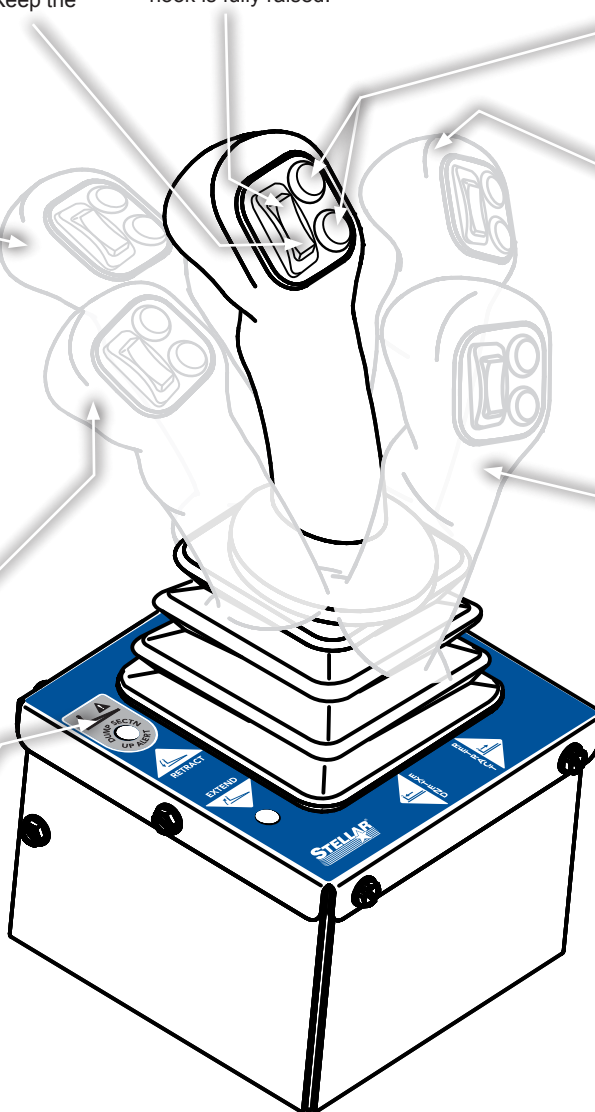

- Be familiar with the sequence and operation of the hooklift controls.
- Be constantly aware of the hooklift position when operating the controls.
- Keep hands, feet and control levers free from mud, grease and oil.
- Be familiar with the joystick and how it operates before attempting to operate the hooklift.
- Move the joystick slowly and smoothly for steady oil flow. Avoid jerky or sudden movement of the controls.
- Be constantly aware of the hooklift position when operating the controls.
- In extreme cold, allow hydraulic system to warm up completely before use to avoid jumpy cylinder movement from viscosity changes in oil.

Understand the Area and Plan the Lift or Drop


Thoroughly plan the lift by understanding the work site area and your loads before positioning the vehicle. Consider the following:

- Know the weight of your load to avoid overloading the equipment. Deduct the weight of the body from the maximum load rating to determine how much weight can be lifted.
- Only use the hooklift to lift Stellar approved skids, bodies, or containers.
- **⚠ WARNING** Do not overload the hooklift. Never exceed manufacturer's load ratings. These ratings are based on the machine's hydraulic, mechanical, and structural design rather than stability. Know the hooklift components and their capabilities and limitations. Overloading the hooklift may result in serious damage of self, others, equipment or the surroundings.
- **⚠ WARNING** Do not allow unauthorized personnel or equipment to enter within 10 feet of hooklift operating area. The vehicle should be positioned in an area free from bystanders and overhead obstructions. Use a signal person if necessary.
- **⚠ DANGER** Always maintain safe clearance from high voltage power lines. Death or serious injury will result from inadequate clearance if hooklift, load, or vehicle becomes electrically charged.
- Make certain that the vehicle is parked on stable, flat ground as close to the job as possible. The surface under the service truck must be able to support the weight of the machine and its load. Take care when operating in areas supported by vehicle tires, because of the cushioning effect of springs and tires.
- **⚠ WARNING** Do not operate the hooklift during electrical storms.
- In dusty work areas, every effort must be taken to keep dust and sand out of the moving parts of the machinery.
- In high humidity work areas, keep parts as dry as possible and well lubricated.
- **NOTICE** Hooklift hook and hook bar heights must match. See the following page for hook height adjustment.
- **⚠ WARNING** Do not use the hooklift to move personnel.
- **NOTICE** Do not push on fixed objects or bodies without rollers with the hooklift.

This page left intentionally blank.


Manual Hook Height Adjustment

Raising Hook Height

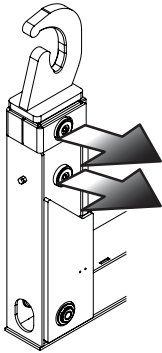

Step 1


Attach overhead hoist or lifting device to the hook.

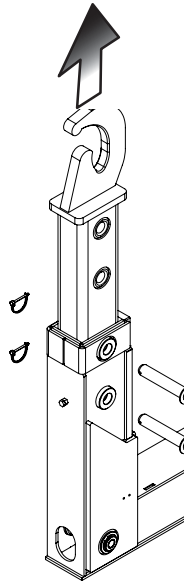

Step 2

Remove small keeper pins and large pins. Raise hook.


NOTE: Inspect pins for wear or damage. Replace if necessary.

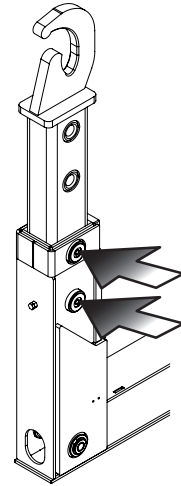

Step 3


Reinstall large pins and small keeper pins. Remove overhead hoist or lifting device.

Lowering Hook Height

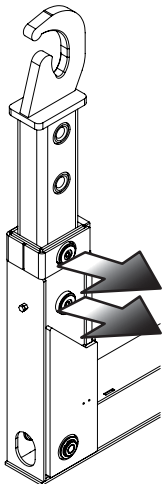

Step 1


Attach overhead hoist or lifting device to the hook.

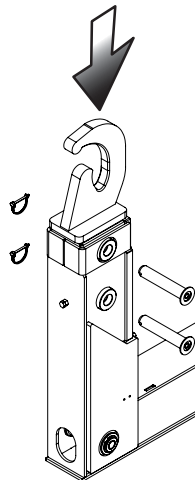

Step 2

Remove small keeper pins and large pins. Lower hook.

NOTE: Inspect pins for wear or damage. Replace if necessary.

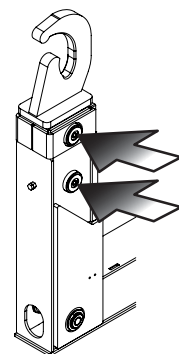


Step 3

Reinstall large pins and small keeper pins. Remove overhead hoist or lifting device.


Hyd Hook Height Adj (Cable Controls) - Raise

Step 1: Start the Truck and Engage PTO



A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

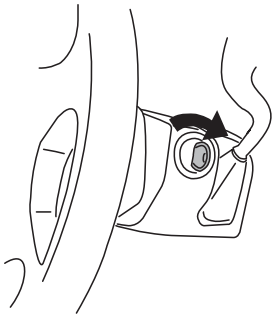

B) Put the truck in NEUTRAL.



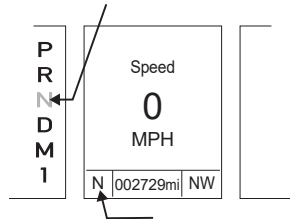


C) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

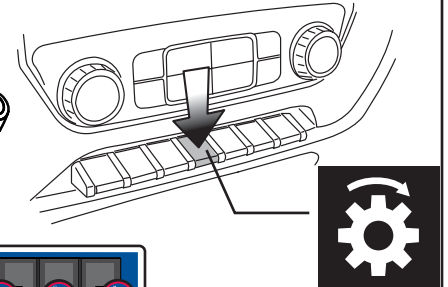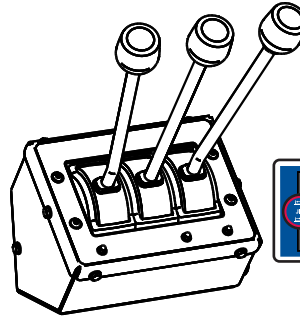


Step 2: Raise the Hook.

A) Push the HOOK lever (↑ EXTEND) to raise the hook height.

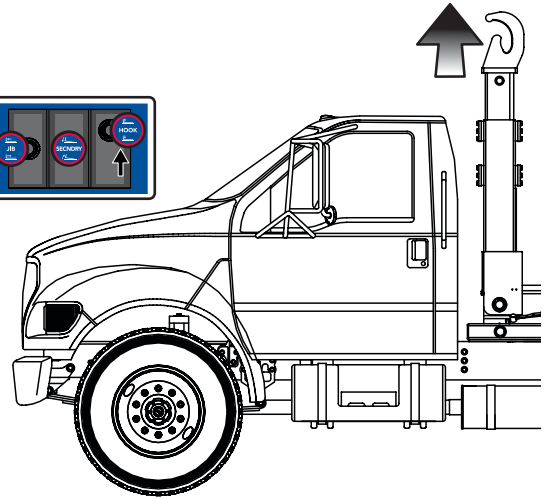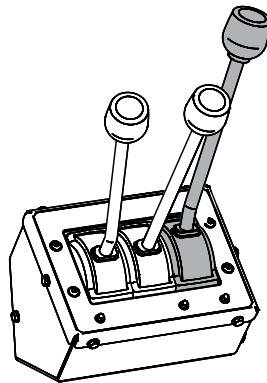
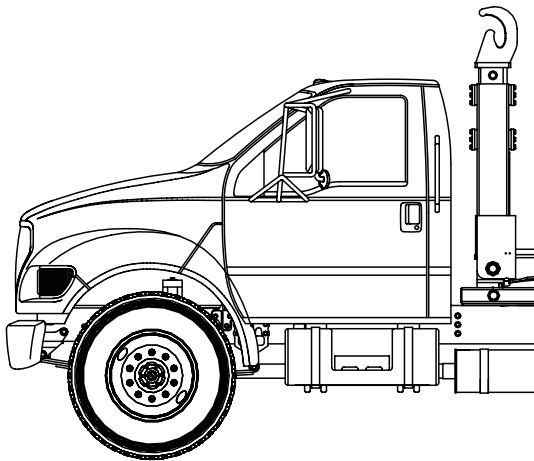


Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.

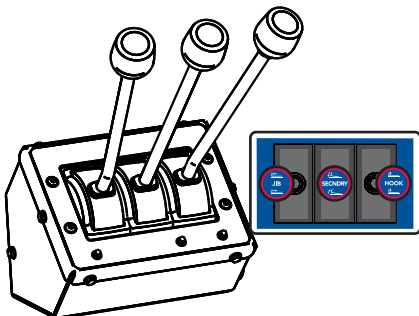

B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

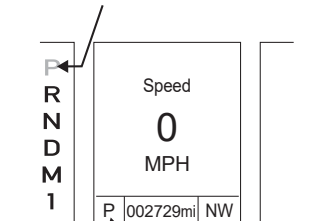
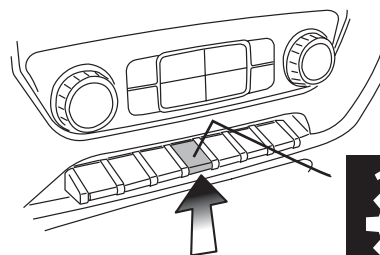


Hyd Hook Height Adj (Cable Controls) - Lower

Step 1: Start the Truck and Engage PTO


A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

C) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

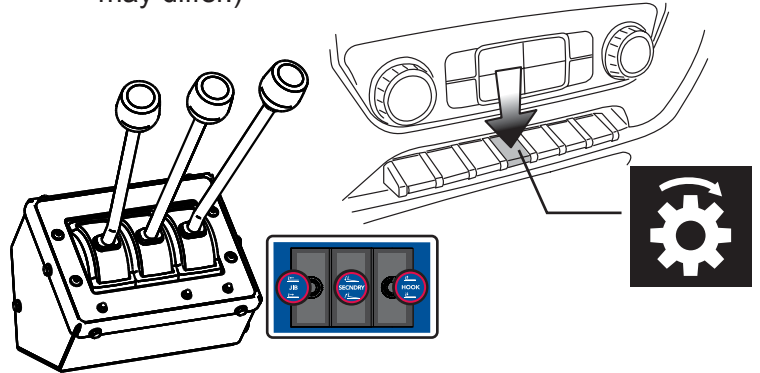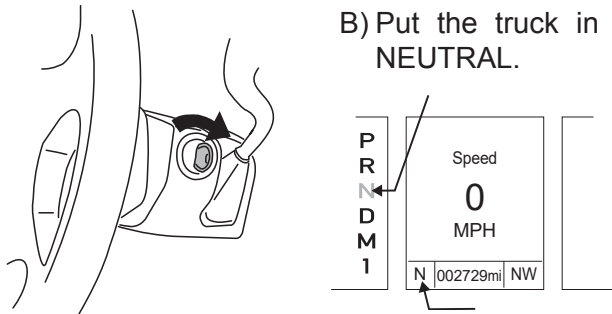

Step 2: Lower the Hook




A) Pull the HOOK lever (↓ RETRACT) to lower the hook height.

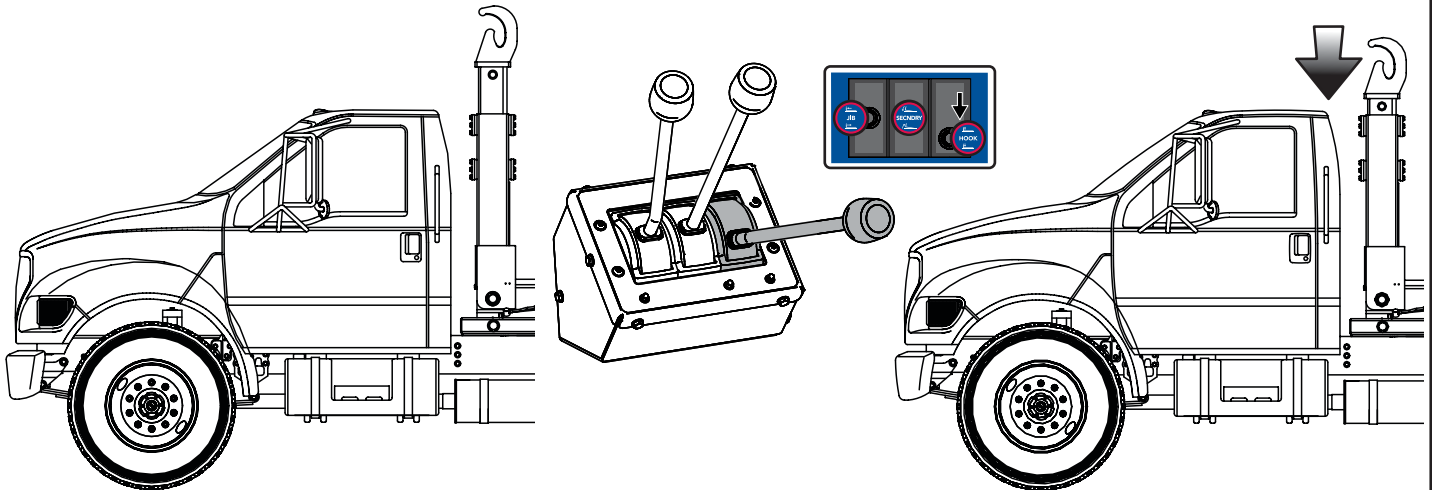

Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.


B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

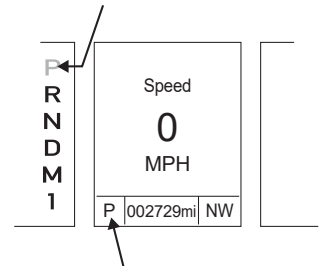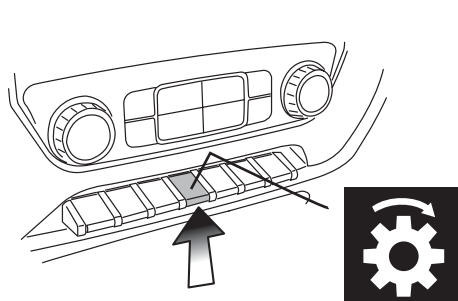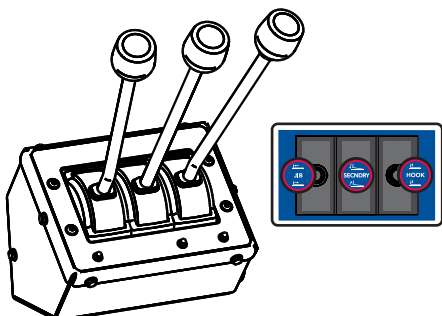


Hydraulic Hook Height Adj (Air Controls) - Raise

Step 1: Start the Truck and Engage PTO



A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

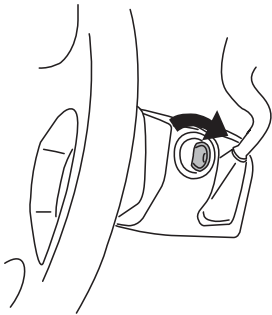

B) Put the truck in NEUTRAL.



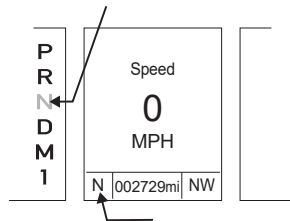


C) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

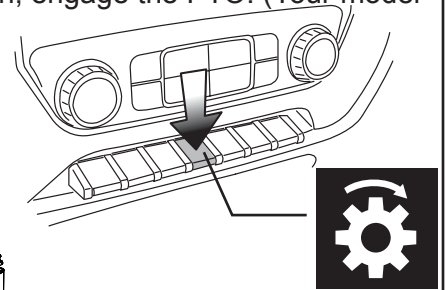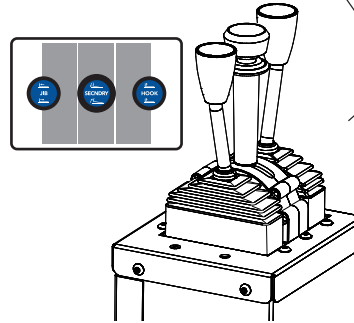


Step 2: Raise the Hook.

A) Push the HOOK lever (↑ EXTEND) to raise the hook height.

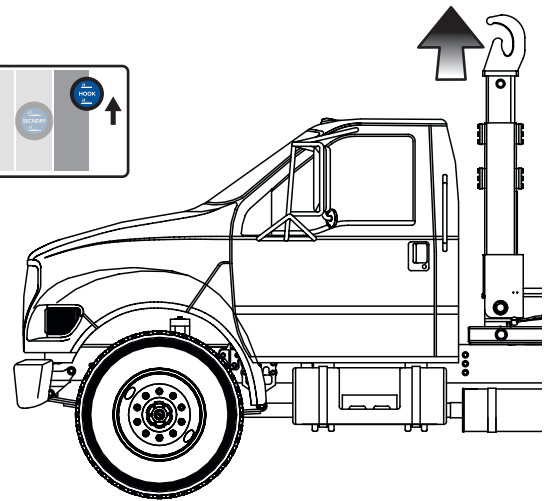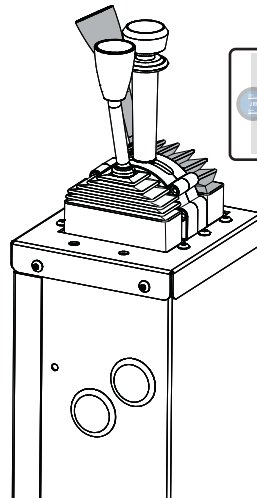
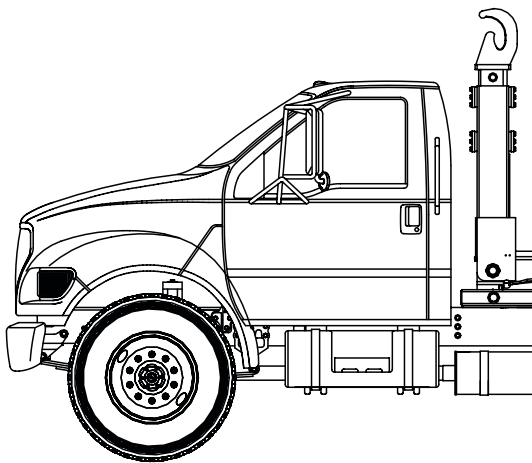


Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.

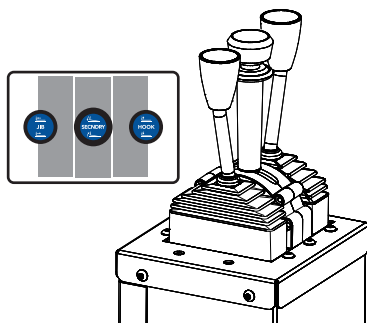

B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

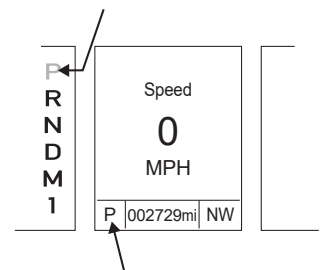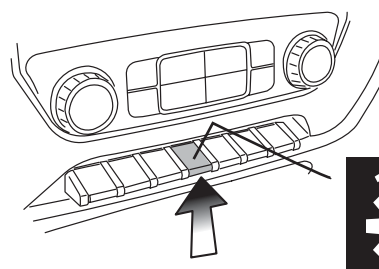


Hyd Hook Height Adj (Air Controls) - Lower

Step 1: Start the Truck and Engage PTO



A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

B) Put the truck in NEUTRAL.

hooklift controls in the neutral position, engage the PTO. (Your model may differ.)



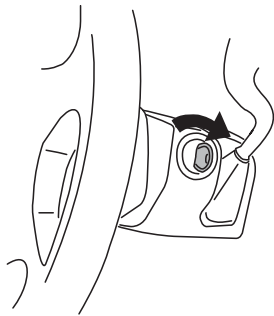


C) With engine running and the

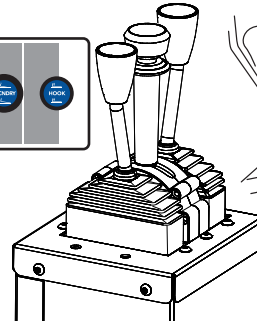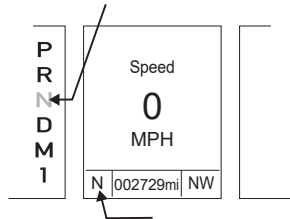

Step 2: Lower the Hook




A) Pull the HOOK lever (↓ RETRACT) to lower the hook height.

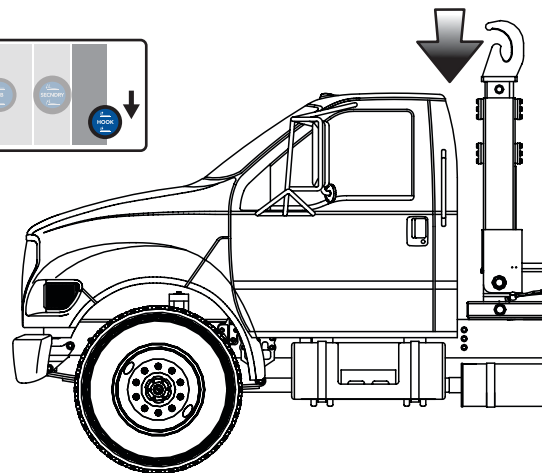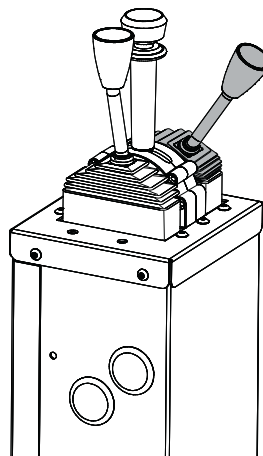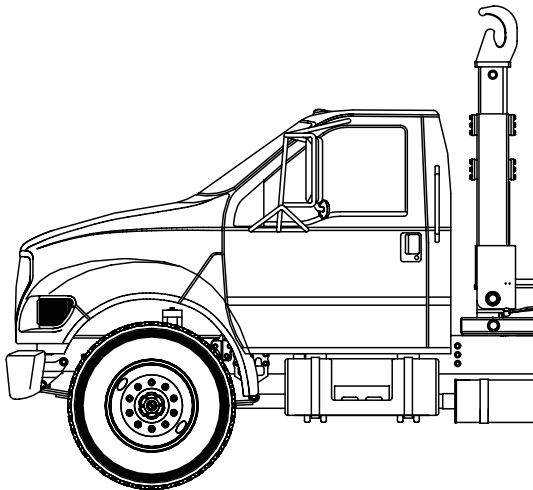

Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.


B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

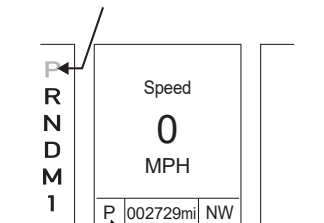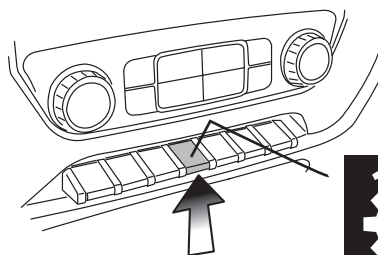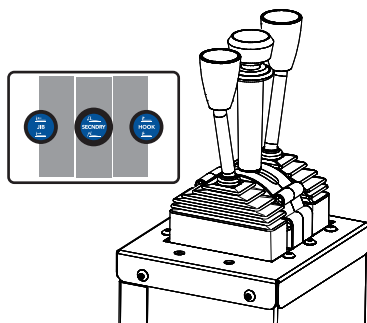


Hyd Hook Height Adj (Joystick Control) - Raise

Step 1: Start the Truck and Engage PTO



A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

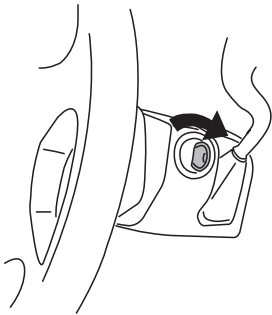

B) Put the truck in NEUTRAL.



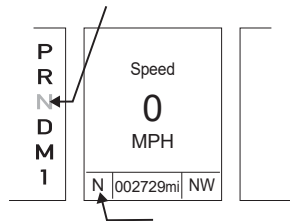


C) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

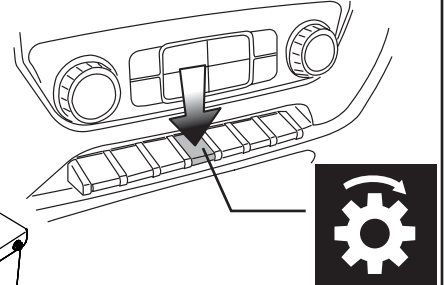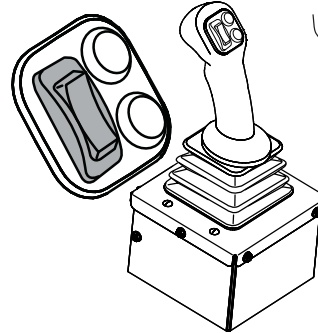


Step 2: Raise the Hook.

A) Push joystick rocker switch UP to raise the hook height.

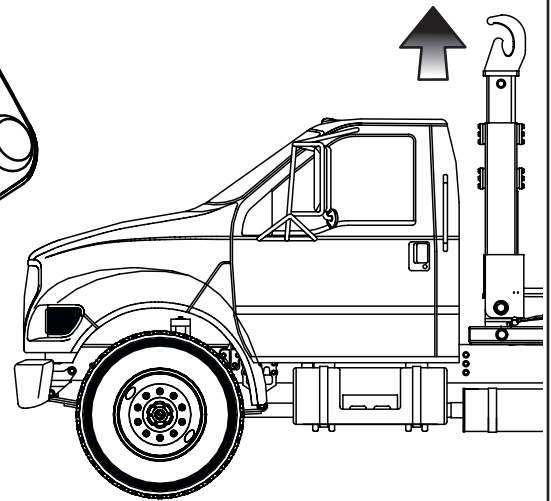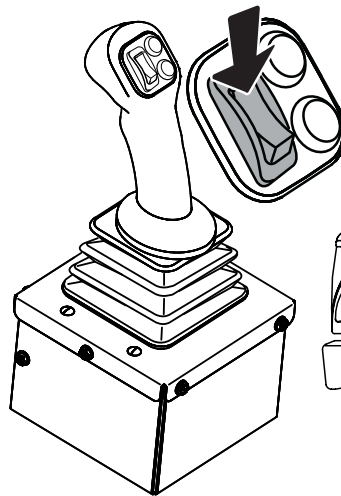
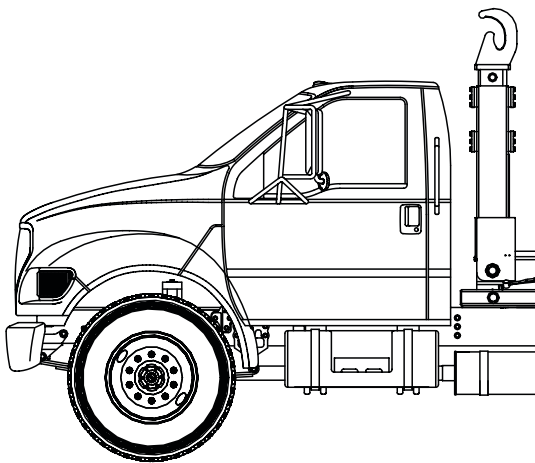


Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.

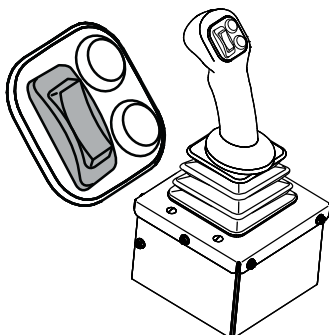

B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

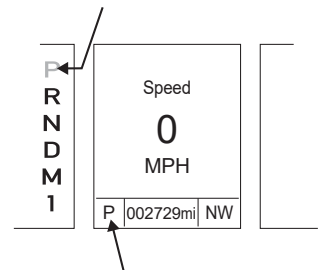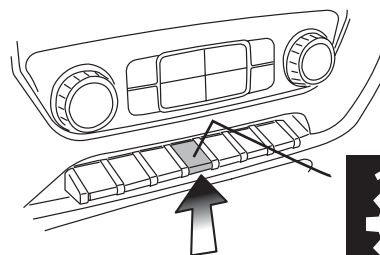


Hyd Hook Height Adj (Joystick Control) - Lower




Step 1: Start the Truck and Engage PTO

A) Verify the hooklift is in stowed position with no body mounted on the hook. Start the truck engine.

C) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)



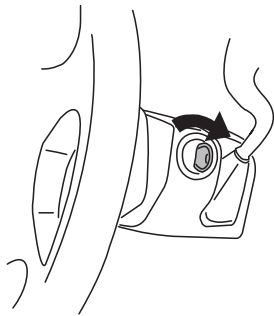


B) Put the truck in NEUTRAL.

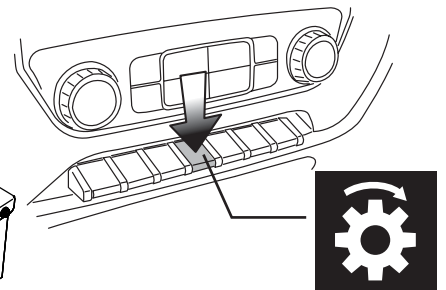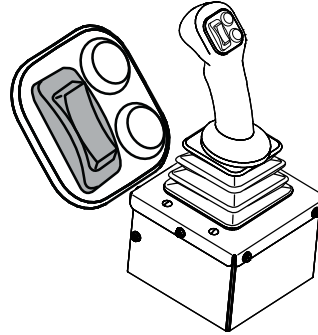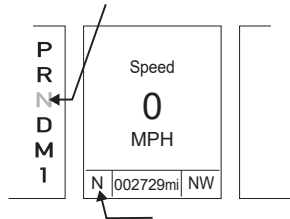

Step 2: Lower the Hook




A) Push joystick rocker switch DOWN to lower the hook height.

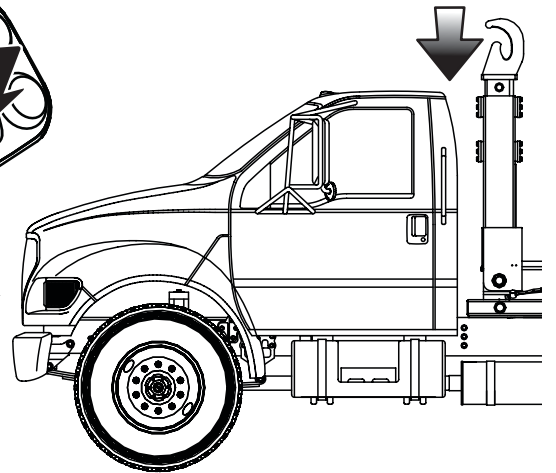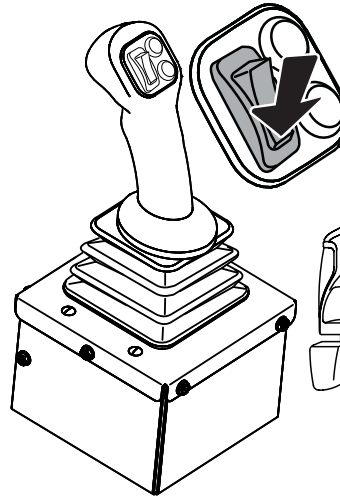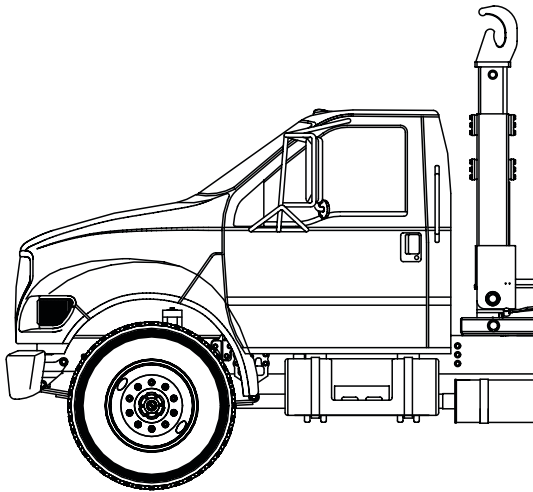

Step 3: Release Lever & Disengage PTO

A) When the hook is at the raised position, return all control to the neutral position.


B) Disengage the PTO and return transmission to PARK. (Your model may differ.)

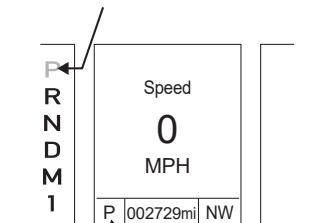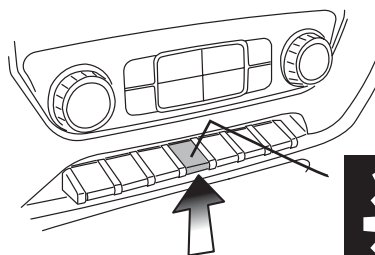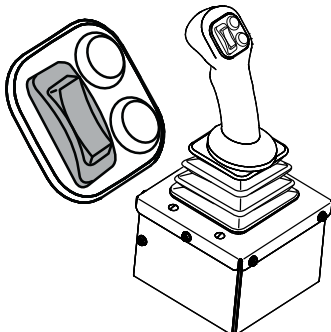

Body Manipulation


Determine your hooklift's operational controls below and proceed to the appropriate section in this manual for detailed instructions for correctly manipulating a body with your Stellar NXT Hooklift.

2 Section and 3 Section Cable Control (17-27)

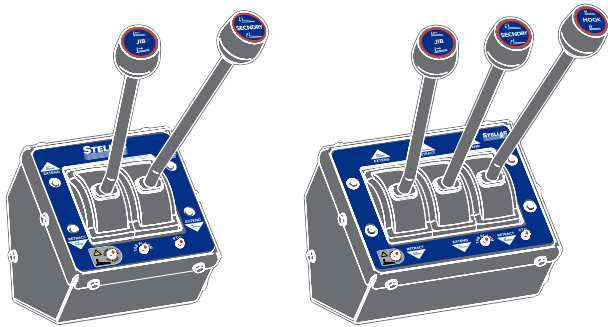


For loading, unloading, and dumping a body from your Stellar NXT Hooklift fitted with cable control system, proceed to pages 19-29.

2 Section and 3 Section Air Control (28-38)

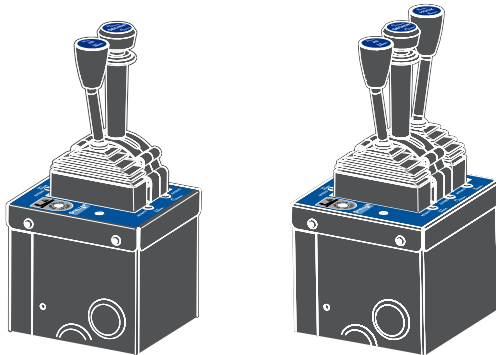

For loading, unloading, and dumping a body from your Stellar NXT Hooklift fitted with air control system, proceed to pages 30-40.

4 Way Joystick Control (39-49)

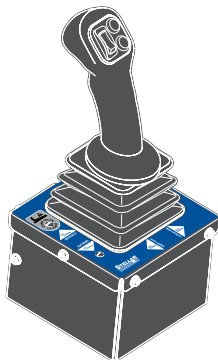


For loading, unloading, and dumping a body from your Stellar NXT Hooklift fitted with 4 way electronic joystick control system, proceed to pages 41-51.


Loading Body (Cable Controls)

Step 1: Align the Truck and Activate Hooklift System

A) Start the truck engine.


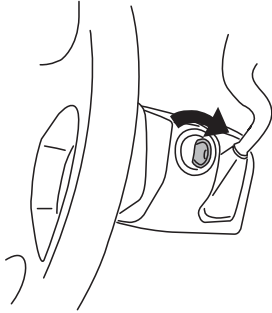


B) Maneuver the truck into a position to load the body.

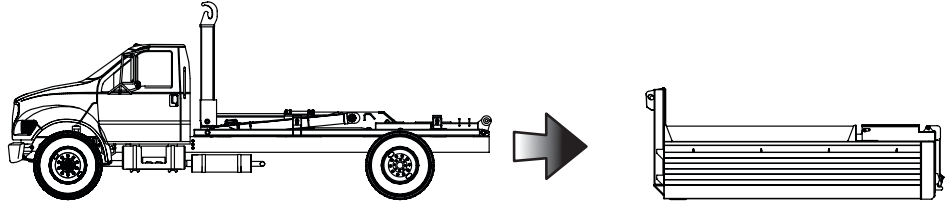


D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)


C) Put the truck in NEUTRAL.

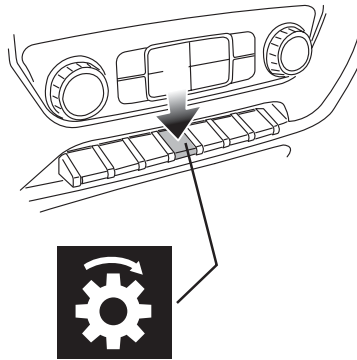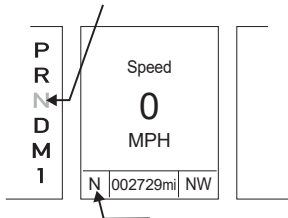

2 SECTION



3 SECTION

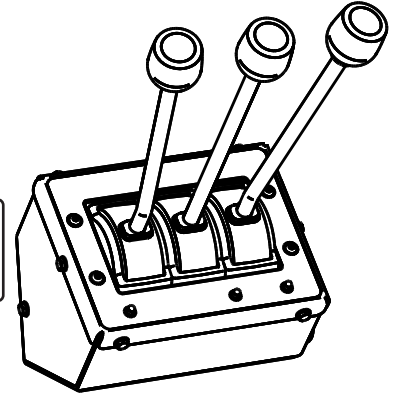


Step 2: Fully Retract Jib and Release Dump Latches




2 SECTION



3 SECTION



Pull the JIB lever (→ RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.

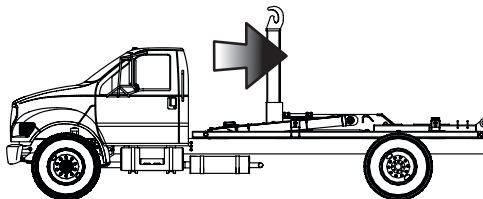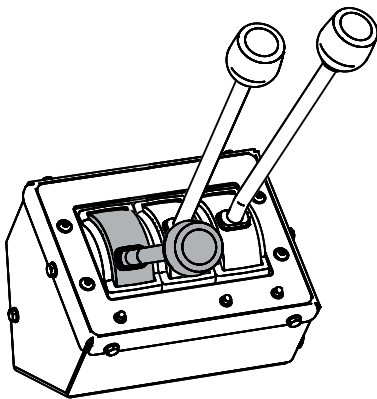


Loading Body (Cable Controls) continued...

Step 3: Extend Secondary







2 SECTION



3 SECTION



With the jib in the fully rearward position, press in the safety button and pull the SECONDARY lever (↖ EXTEND) until the hook is in a position to attach to the body. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

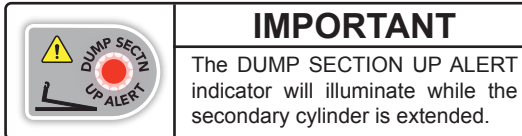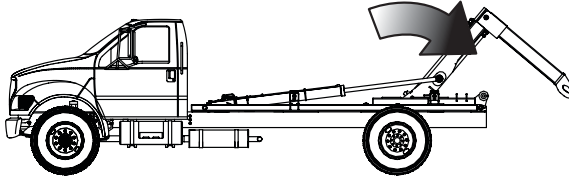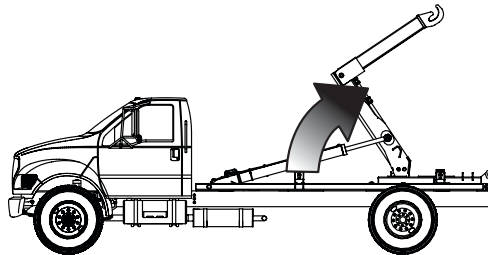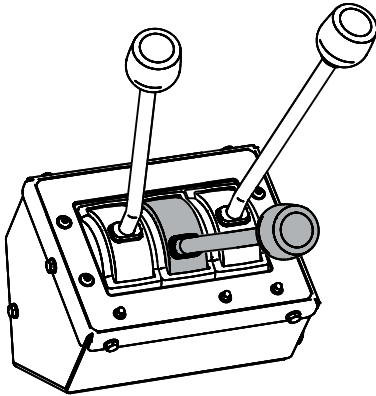


IMPORTANT


The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.

Step 4: Approach the Body and Attach the Hook

2 SECTION





3 SECTION




Put the truck in REVERSE and slowly back up and attach hook to the hook bar on the body by pressing in the safety button and pushing or pulling the SECONDARY lever as necessary (↖ RETRACT and ↗ EXTEND).

⚠ WARNING Make certain that the hook is engaged around the hook bar before loading.

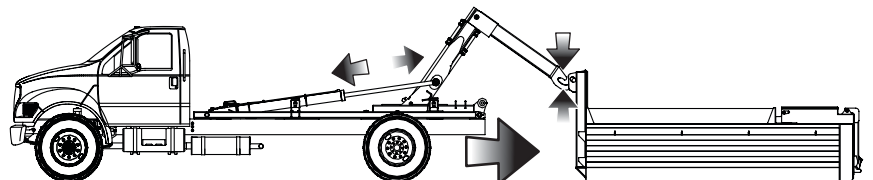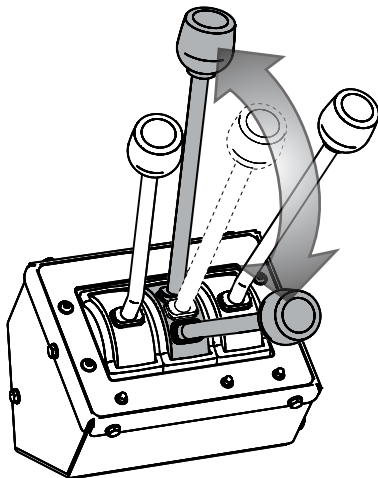


Step 5: Load the Body

Put the truck in NEUTRAL.

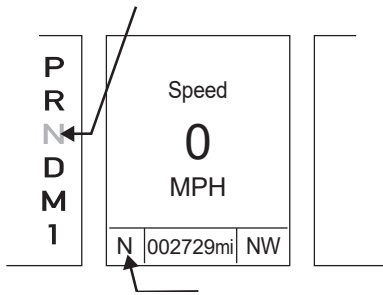


Once the hook is fully attached to the hook bar, put the transmission in NEUTRAL, press in the safety button and push the SECONDARY lever (↙ RETRACT) to load the body. With the transmission in neutral the chassis will roll toward the body as it is lifted.


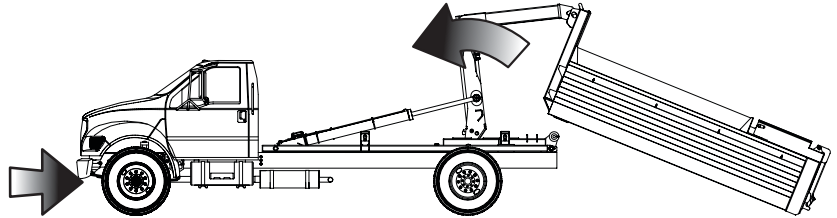


Truck will roll toward the body.

2 SECTION





3 SECTION

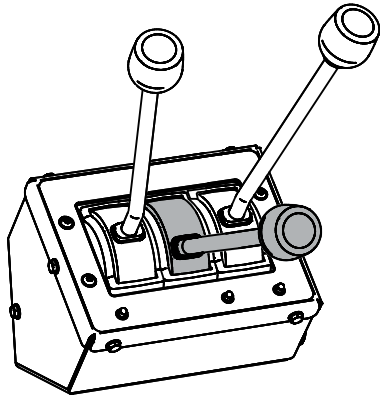


Make sure the body is lining up with the rear rollers while loading. Refrain from using the brake during initial loading of a body. Likewise, do not engage the transmission to use the drivetrain to assist the hydraulics during the loading process.

Once the body comes in contact with the rollers and comes off the ground, you can put the transmission in PARK or apply brake to keep the truck from rolling.

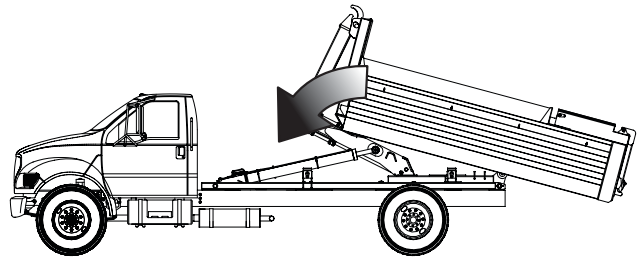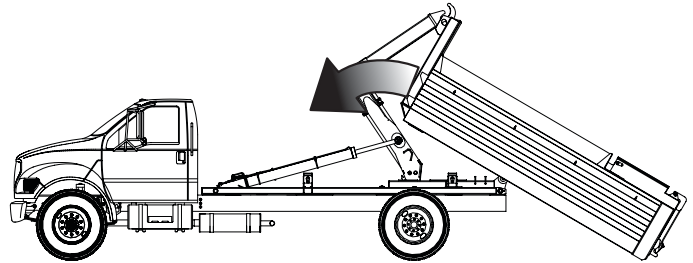

Do not apply brake until body is off the ground.

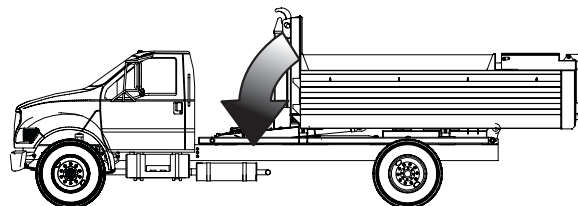


WARNING Do not stop mid-lift and leave hooklift unattended with suspended load.


Loading Body (Cable Controls) continued...

Step 6: Extend Jib and Engage Body Latches




2 SECTION



3 SECTION



With the secondary in the retracted position, push the JIB lever forward (EXTEND) until the body latches fully engage.

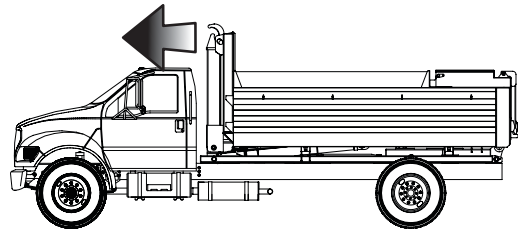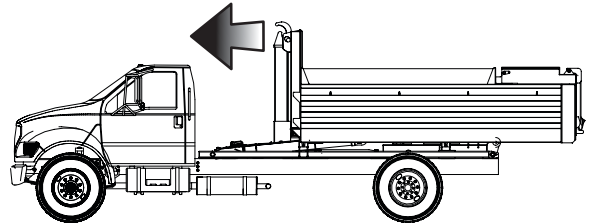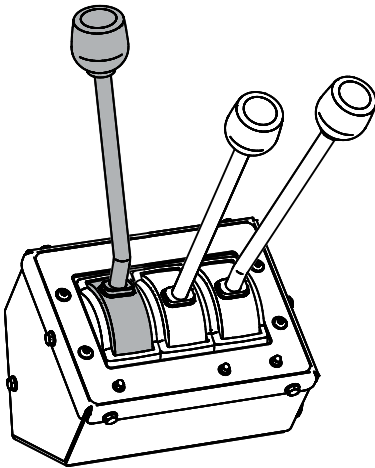


Step 7: Release Lever & Disengage PTO

2 SECTION






3 SECTION



When the body is completely loaded, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

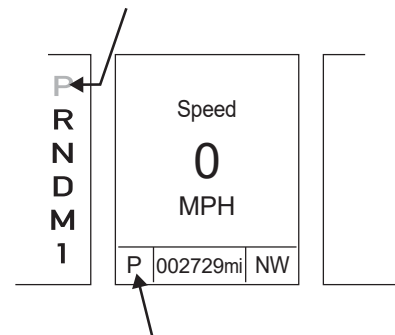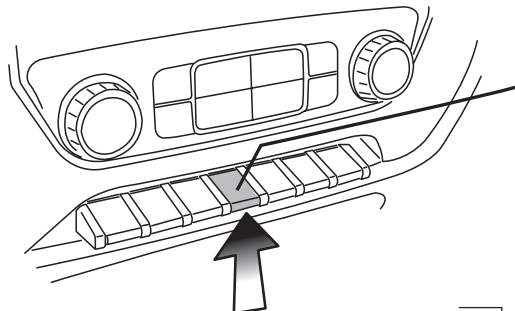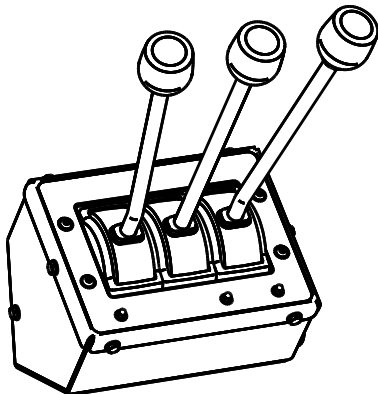


Unloading Body (Cable Controls)

Step 1: Verify Safe Unloading Zone and Activate Hooklift System


A) Start the truck engine.

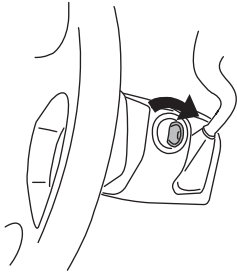

B) Maneuver the truck into unloading zone. Make sure there is adequate room for the body to unload and also for the truck to roll forward.

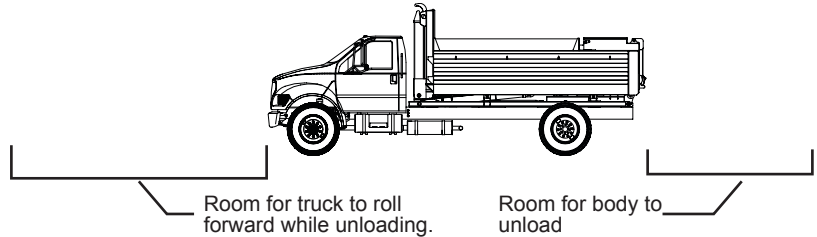


C) Put the truck in NEUTRAL.

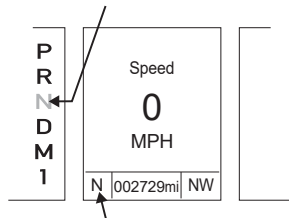



2 SECTION



3 SECTION




D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

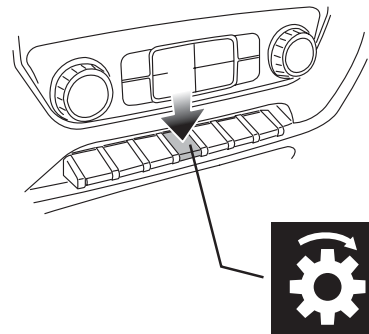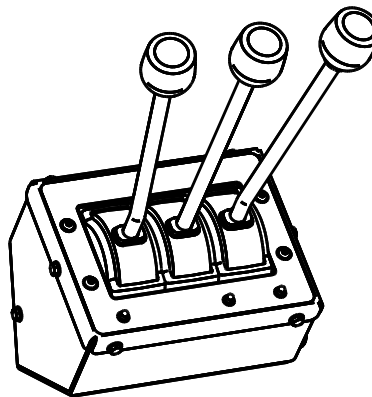


Step 2: Fully Retract Jib and Release Dump Latches



2 SECTION



3 SECTION




Pull the JIB lever (→ RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.

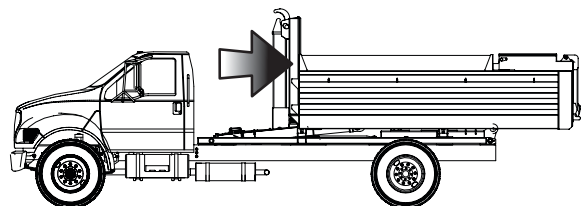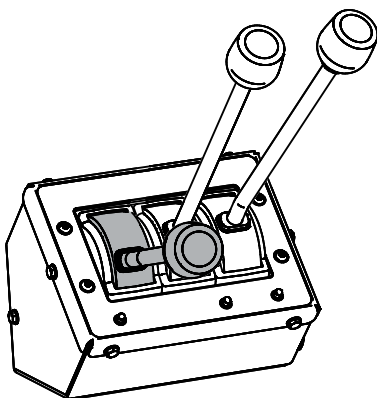



Unloading Body (Cable Controls) continued...

Step 3: Extend Secondary Section

2 SECTION



3 SECTION

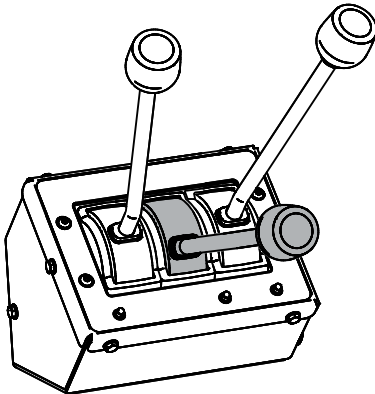




IMPORTANT

The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.


With the jib in the fully rearward position, press in the safety button and pull the SECONDARY lever (↗ EXTEND) as the chassis rolls forward. Continue holding the SECONDARY lever rearward until the body is completely on the ground. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

NOTICE

The JIB lever (↖ RETRACT and ↗ EXTEND) functions will be disabled during secondary operation.

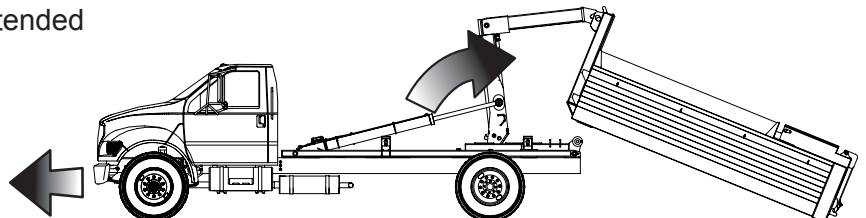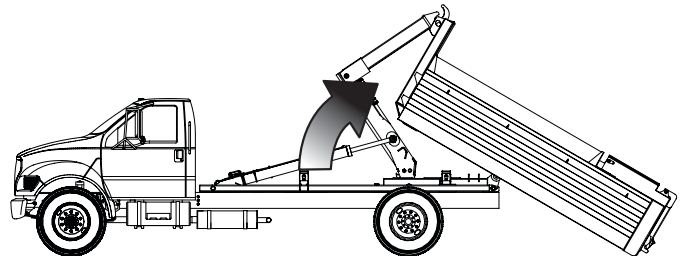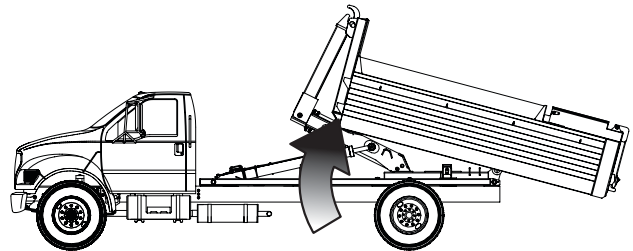

Do not apply brake. Truck will roll away from body.

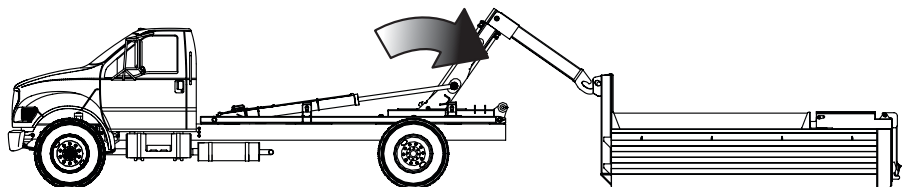


WARNING

Do not stop mid-lift and leave hooklift unattended with suspended load.




Step 4: Release the Hook from the Hook Bar

2 SECTION





3 SECTION




Release the hook from the hook bar on the body by pressing in the safety button and pushing or pulling the SECONDARY lever as necessary (⏏ RETRACT and ⏏ EXTEND).

Engage transmission and pull truck forward away from body so hook is clear from hook bar on body.

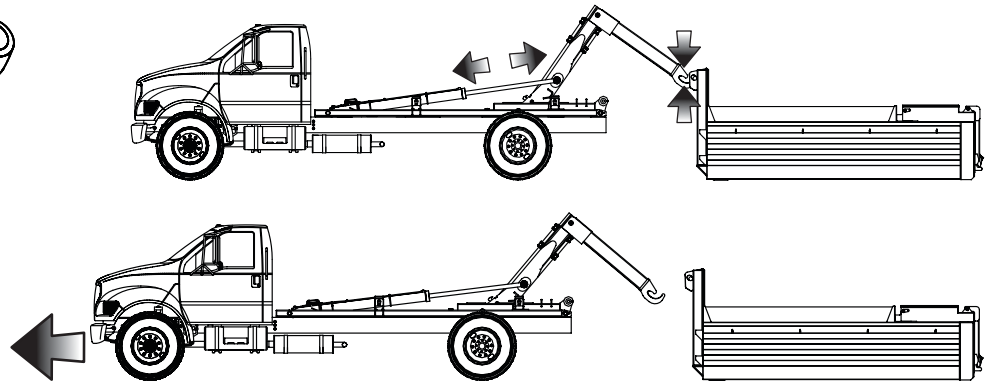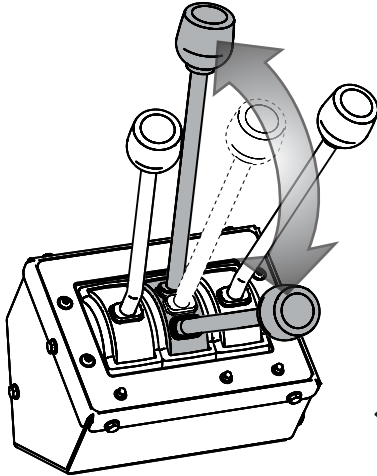


Step 5: Fully Retract Secondary Section



2 SECTION



3 SECTION




Press in the safety button and push the SECONDARY lever forward (⏏ RETRACT) until the secondary section is completely in the retracted position.

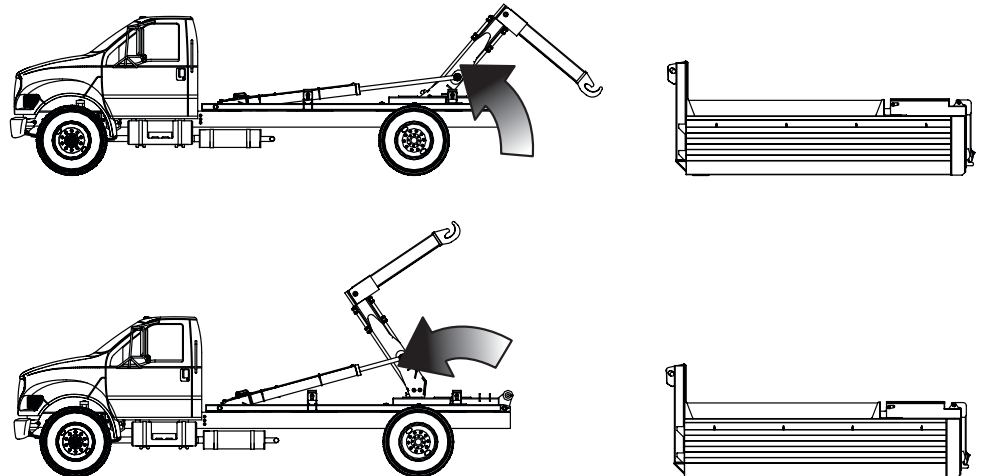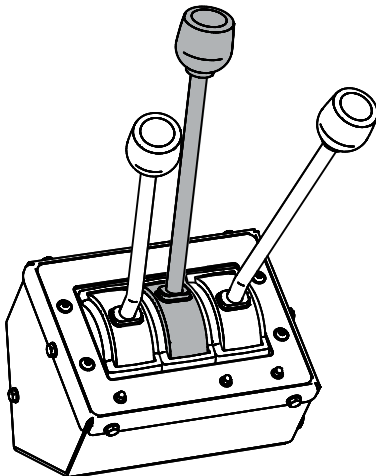


Unloading Body (Cable Controls) continued...

Step 6: Extend Jib into Stowed Position






2 SECTION



3 SECTION




With the secondary in the retracted position, push the JIB lever forward (← EXTEND) until the jib slides forward into the stowed position.

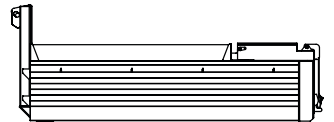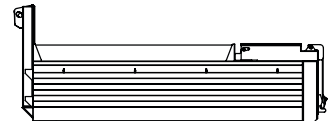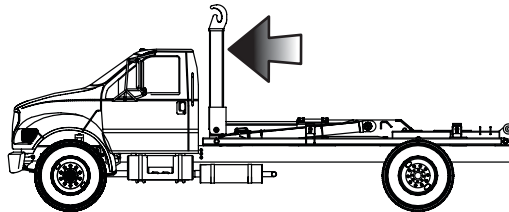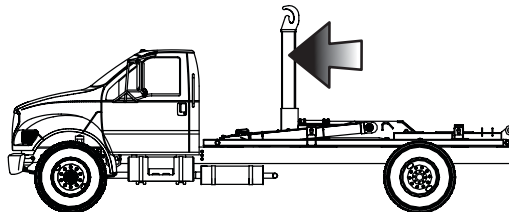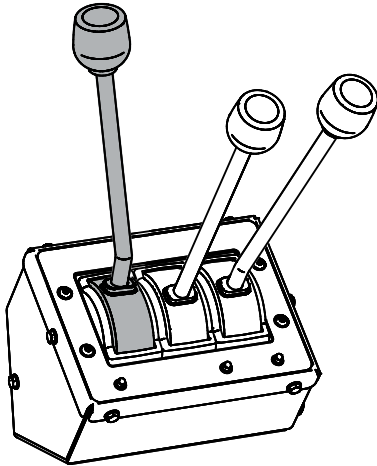


Step 7: Deactivate Remote and Disengage PTO

2 SECTION






3 SECTION



When the jib is completely extended forward, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

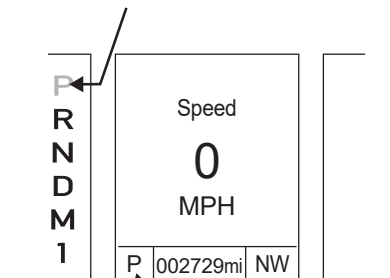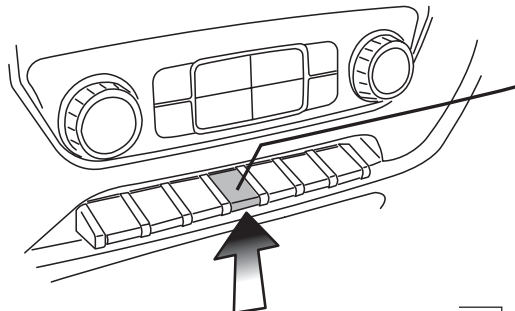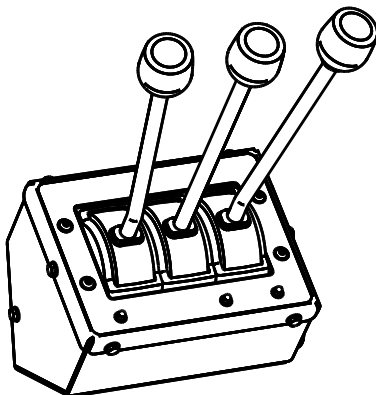


Dumping Body Load (Cable Controls)

Step 1: Verify Safe Dumping Zone and Activate Hooklift System

A) Start the truck engine.

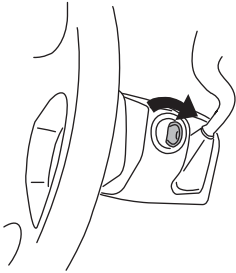


B) Maneuver the truck into dumping zone. Be aware of and avoid any overhead obstructions. Make sure there is adequate room for the load to dump and for the truck to maneuver forward if needed.

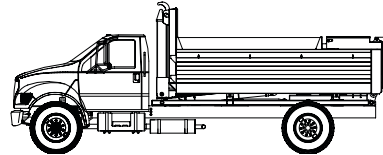

Room for load to dump


C) Put the truck in NEUTRAL.

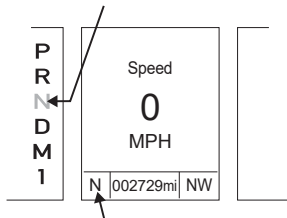



2 SECTION



3 SECTION




D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

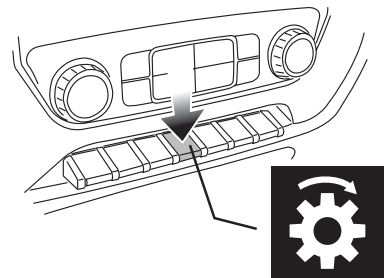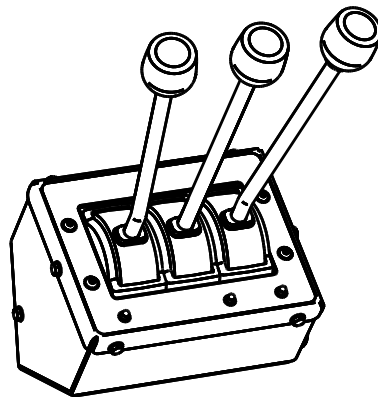


Step 2: Ensure Dump Latches are Engaged



2 SECTION



3 SECTION




Push the JIB lever (EXTEND) until the jib slides forward enough to engage the mechanical dump latches.

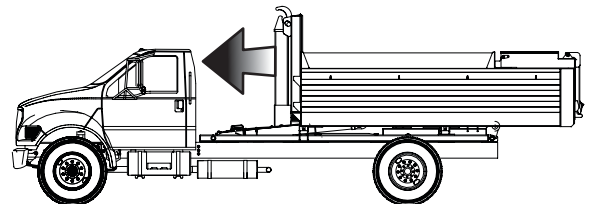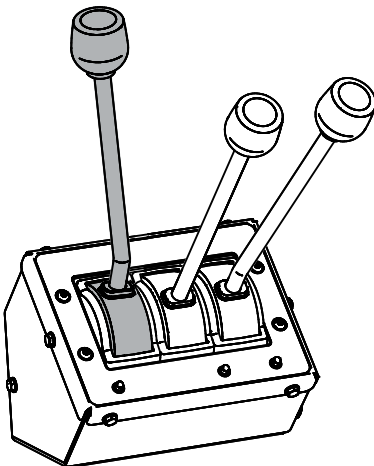



Dumping Body Load (Cable Controls) continued...

Step 3: Extend Secondary and Begin Dumping

2 SECTION




3 SECTION

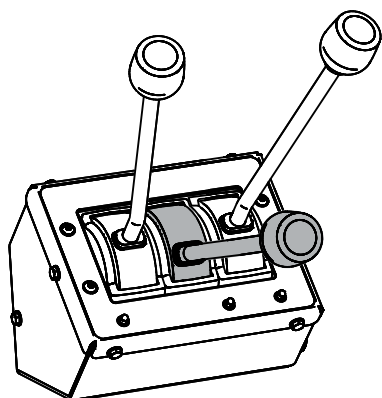

IMPORTANT

The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.


Press in the safety button and pull the SECONDARY lever (EXTEND) to dump the load. Be aware and avoid any overhead obstructions during the entire dump procedure. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

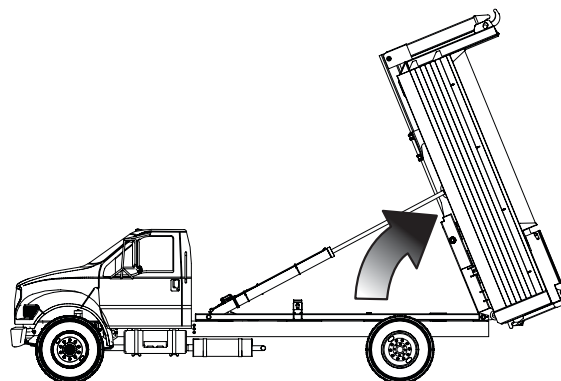

If necessary to finish dumping the load, place the truck in gear and creep forward slowly as the load has new space to unload.


WARNING Do not stop mid-dump and leave hooklift unattended with suspended load.

WARNING Do not take full rated capacity to full dump angle without some unloading of weight. Full rated dump capacity assumes load will decrease as dump angle increases.

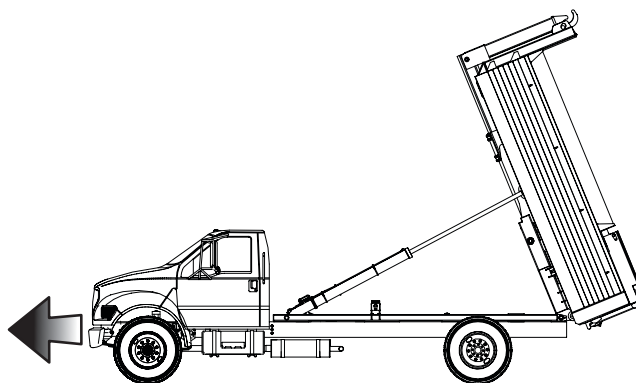


Step 4: Retract Secondary Section



2 SECTION



3 SECTION




After the load is completely dumped, press in the safety button and push the SECONDARY lever (L RETRACT) until the secondary section is completely in the retracted position.

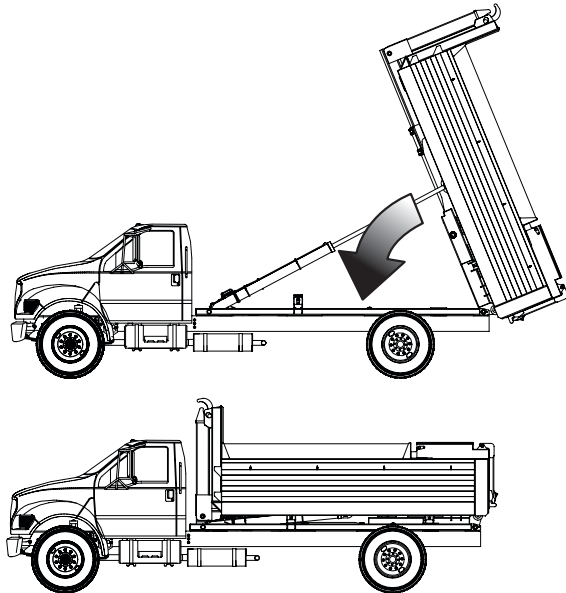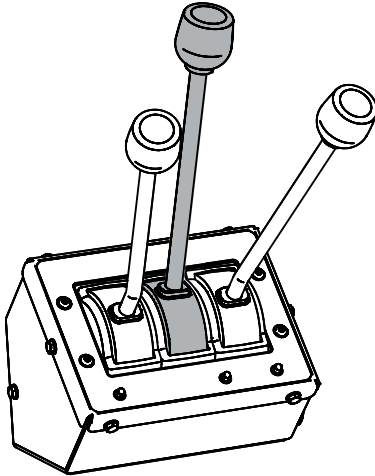


Step 5: Release Lever & Disengage PTO

2 SECTION






3 SECTION



When the secondary section is fully lowered, return all controls to the Neutral position.


Disengage the PTO and return transmission to PARK.

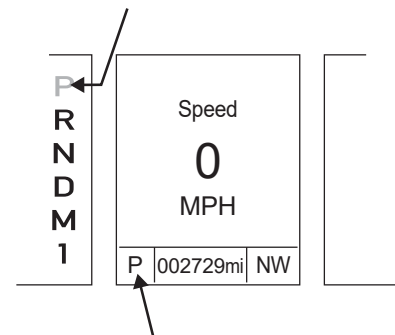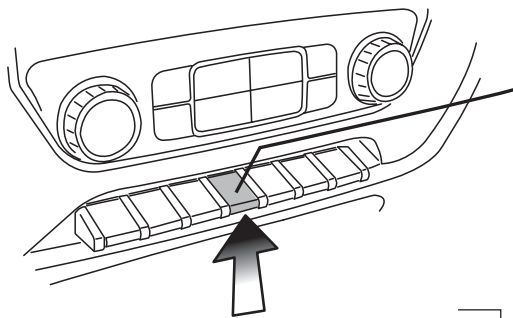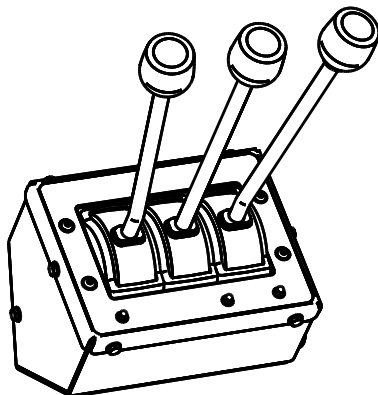


Loading Body (Air Controls)

Step 1: Align the Truck and Activate Hooklift System

A) Start the truck engine.


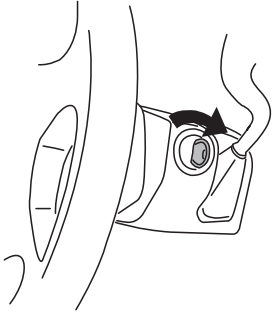


B) Maneuver the truck into a position to load the body.

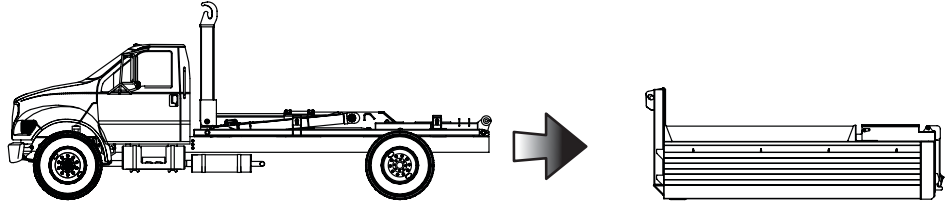

D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)


C) Put the truck in NEUTRAL.

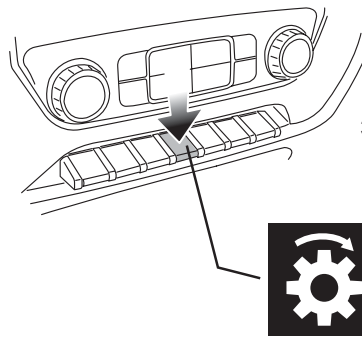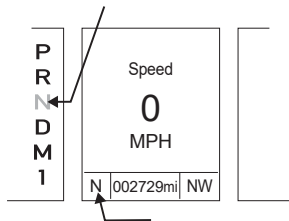

2 SECTION




3 SECTION

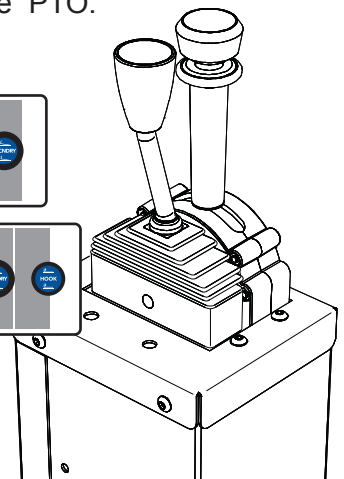

Step 2: Fully Retract Jib and Release Dump Latches




2 SECTION



3 SECTION



Pull the JIB lever (→ RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.

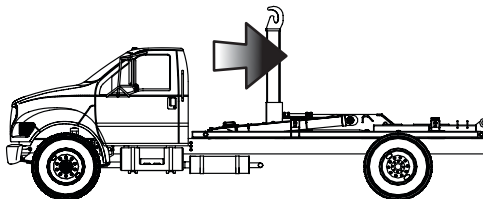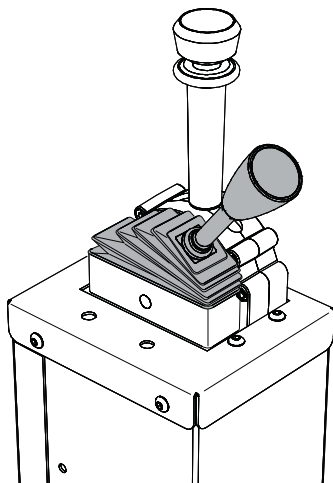


Step 3: Extend Secondary




2 SECTION



3 SECTION

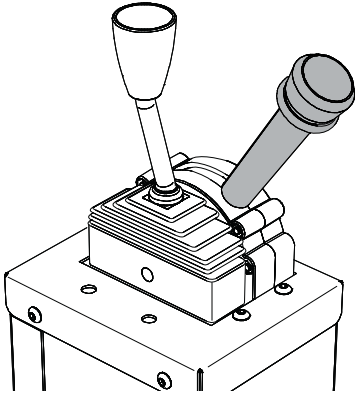

With the jib in the fully rearward position, lift the safety collar and pull the **SECONDARY** lever (↙ **EXTEND**) until the hook is in a position to attach to the body. To make you aware that the dump section has been activated, an LED will light up **RED** on the control panel. Be aware of overhead surrounding while the dump section is raised.

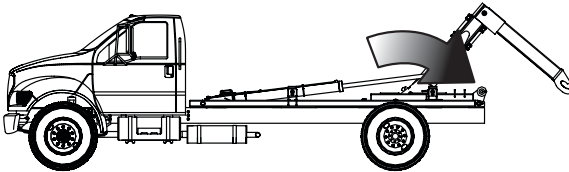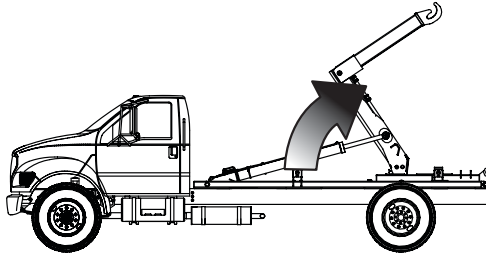

IMPORTANT


The **DUMP SECTION UP ALERT** indicator will illuminate while the secondary cylinder is extended.

Step 4: Approach the Body and Attach the Hook

2 SECTION




3 SECTION

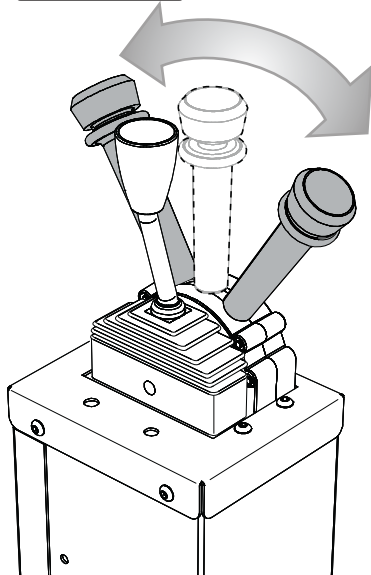

Put the truck in **REVERSE** and slowly back up and attach hook to the hook bar on the body by lifting the safety collar and pushing or pulling the **SECONDARY** lever as necessary (↙ **RETRACT** and ↗ **EXTEND**).

⚠ WARNING


Make certain that the hook is engaged around the hook bar before loading.

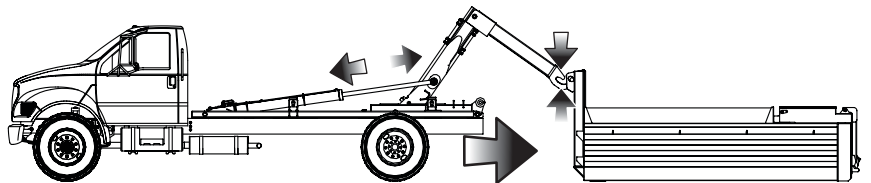


Loading Body (Air Controls) continued...

Step 5: Load the Body

Put the truck in NEUTRAL.

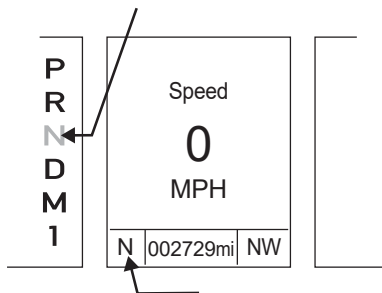

Once the hook is fully attached to the hook bar, put the transmission in NEUTRAL, lift the safety collar and push the SECONDARY lever (RETRACT) to load the body. With the transmission in neutral the chassis will roll toward the body as it is lifted.


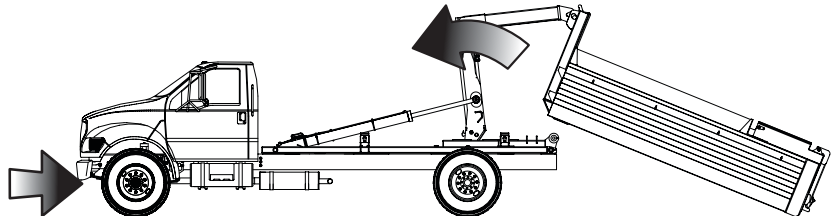


Truck will roll toward the body.

2 SECTION





3 SECTION

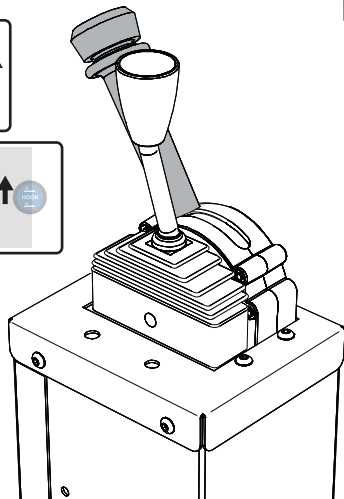


Make sure the body is lining up with the rear rollers while loading. Refrain from using the brake during initial loading of a body. Likewise, do not engage the transmission to use the drivetrain to assist the hydraulics during the loading process.

Once the body comes in contact with the rollers and comes off the ground, you can put the transmission in PARK or apply brake to keep the truck from rolling.

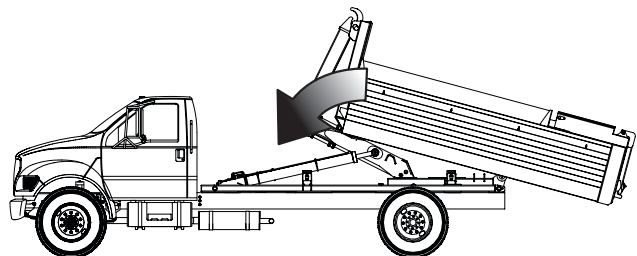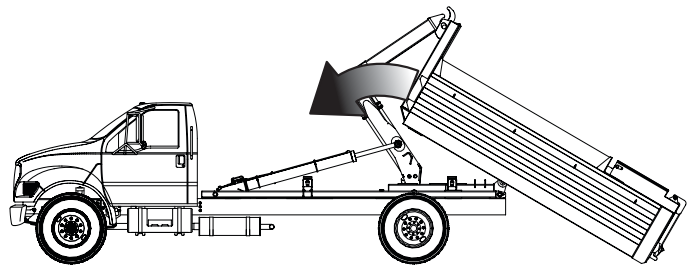

Do not apply brake until body is off the ground.

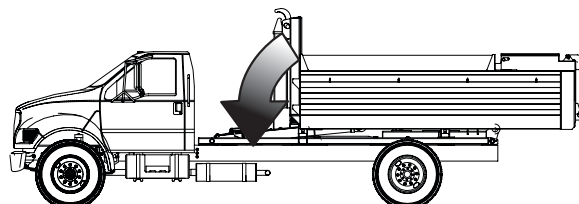

⚠ WARNING Do not stop mid-lift and leave hooklift unattended with suspended load.

Step 6: Extend Jib and Engage Body Latches




2 SECTION



3 SECTION



With the secondary in the retracted position, push the JIB lever forward (← EXTEND) until the body latches fully engage.

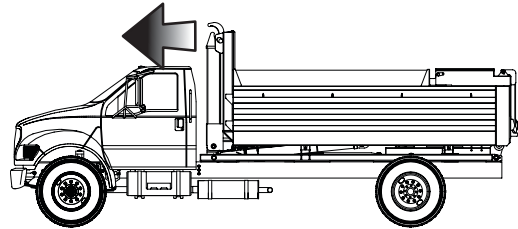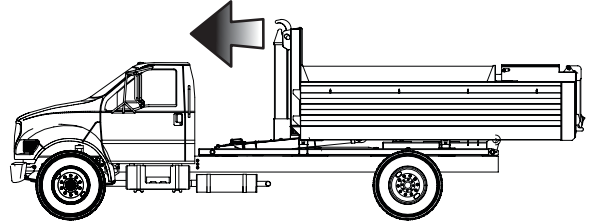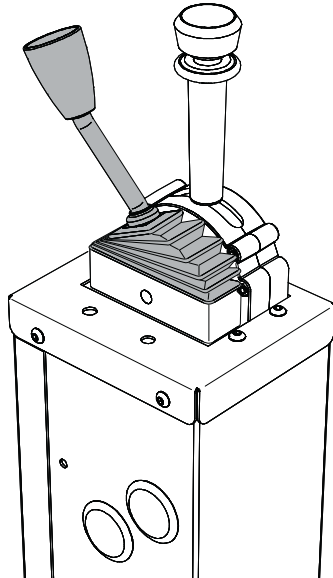

Step 7: Release Lever & Disengage PTO

2 SECTION






3 SECTION



When the body is completely loaded, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

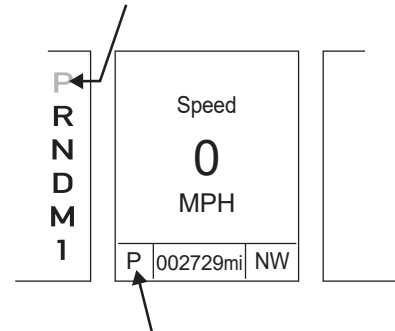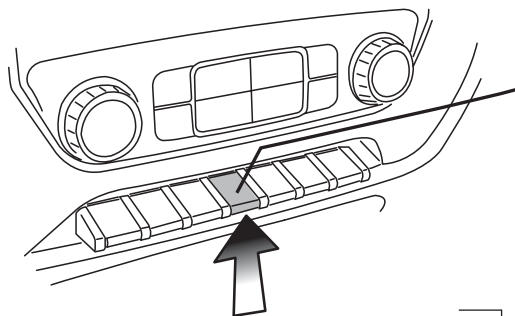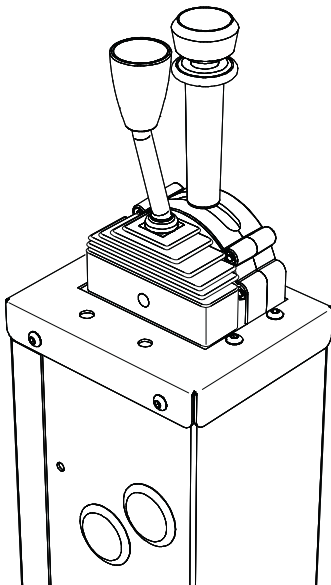


Unloading Body (Air Controls)

Step 1: Verify Safe Unloading Zone and Activate Hooklift System


A) Start the truck engine.

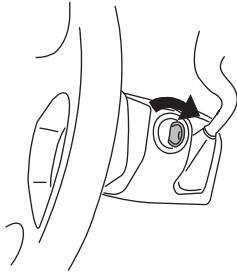

B) Maneuver the truck into unloading zone. Make sure there is adequate room for the body to unload and also for the truck to roll forward.

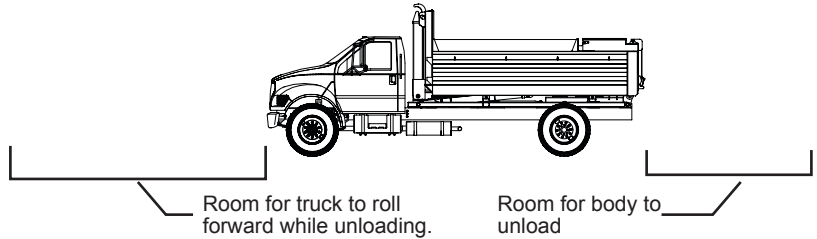

C) Put the truck in NEUTRAL.

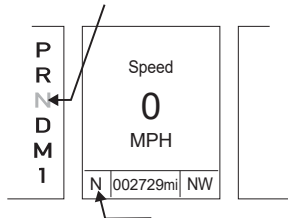



2 SECTION



3 SECTION




D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

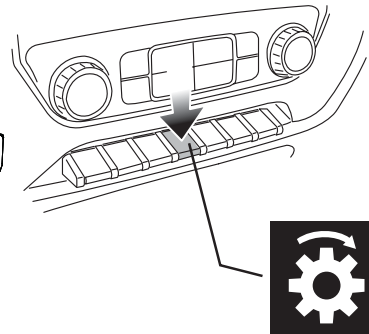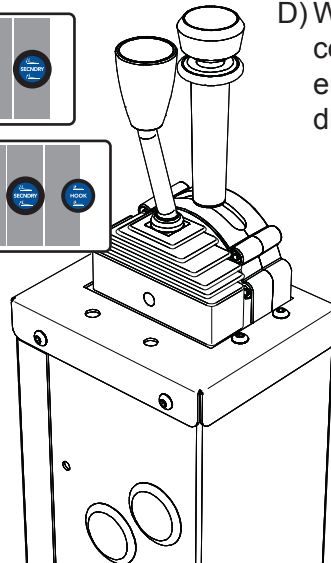

Step 2: Fully Retract Jib and Release Dump Latches



2 SECTION



3 SECTION



Pull the JIB lever (i.e. RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.

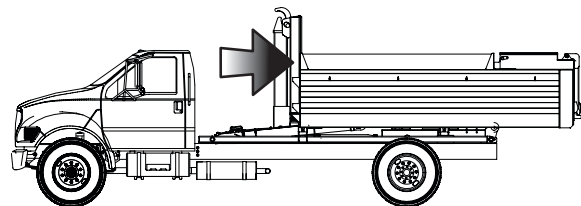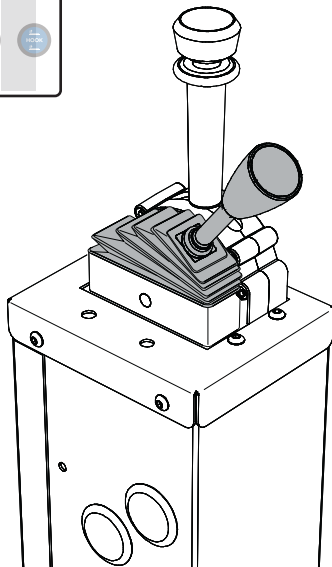


Step 3: Extend Secondary Section

2 SECTION



3 SECTION

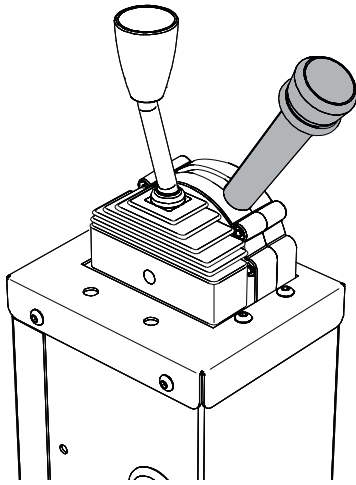




IMPORTANT

The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.


With the jib in the fully rearward position, lift the safety collar and pull the SECONDARY lever (↖ EXTEND) as the chassis rolls forward. Continue holding the SECONDARY lever rearward until the body is completely on the ground. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

NOTICE

The JIB lever (↗ RETRACT and ↖ EXTEND) functions will be disabled during secondary operation.

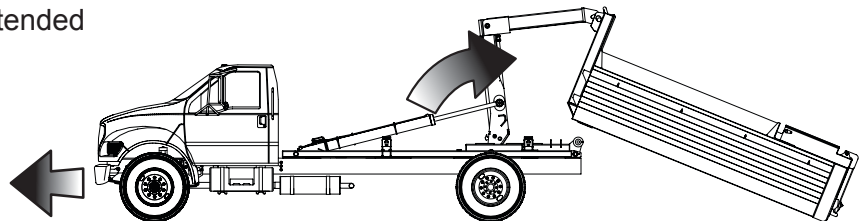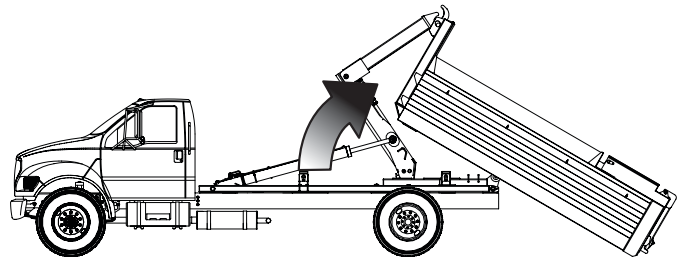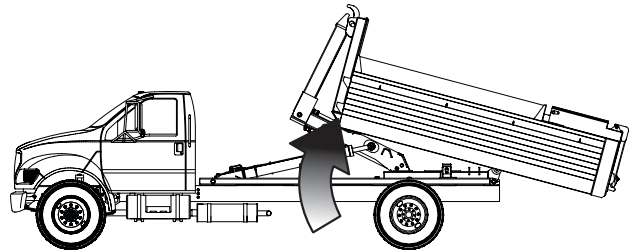

Do not apply brake. Truck will roll away from body.

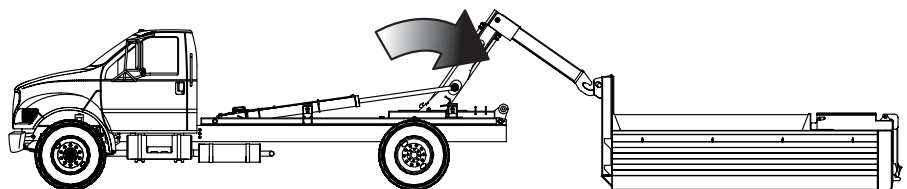

WARNING


Do not stop mid-lift and leave hooklift unattended with suspended load.




Unloading Body (Air Controls) continued...

Step 4: Release the Hook from the Hook Bar

2 SECTION





3 SECTION



Release the hook from the hook bar on the body by lifting the safety collar and pushing or pulling the SECONDARY lever as necessary (↙ RETRACT and ↗ EXTEND).

Engage transmission and pull truck forward away from body so hook is clear from hook bar on body.

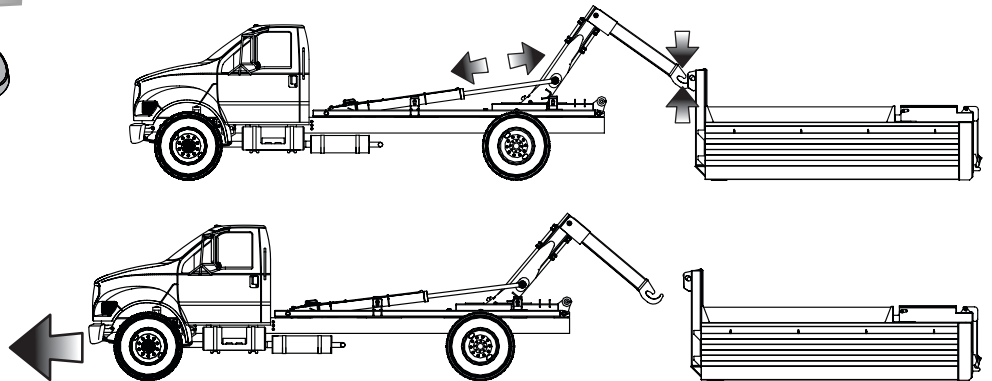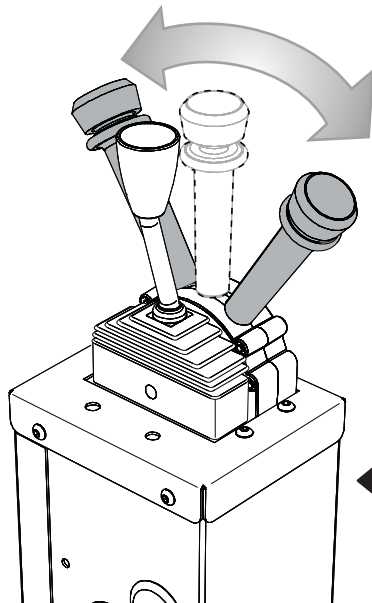

Step 5: Fully Retract Secondary Section



2 SECTION



3 SECTION



Lift the safety collar and push the SECONDARY lever forward (↙ RETRACT) until the secondary section is completely in the retracted position.

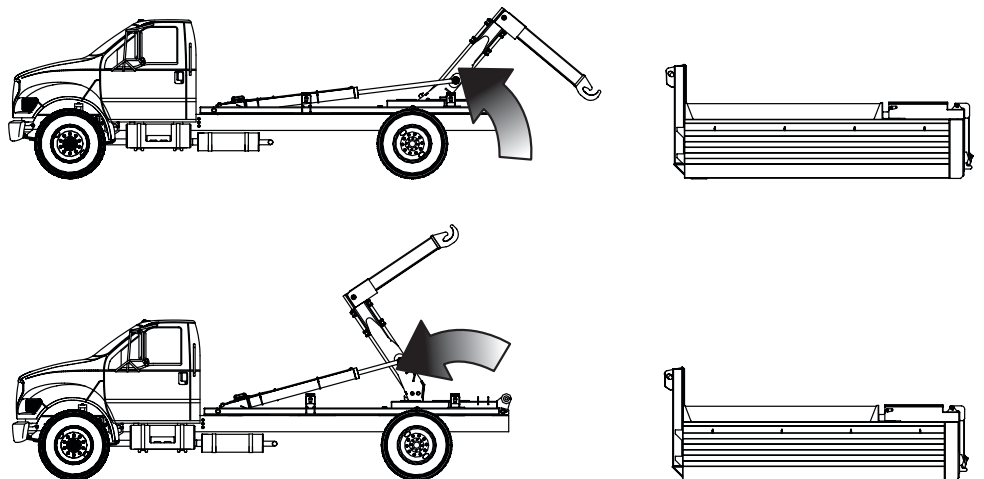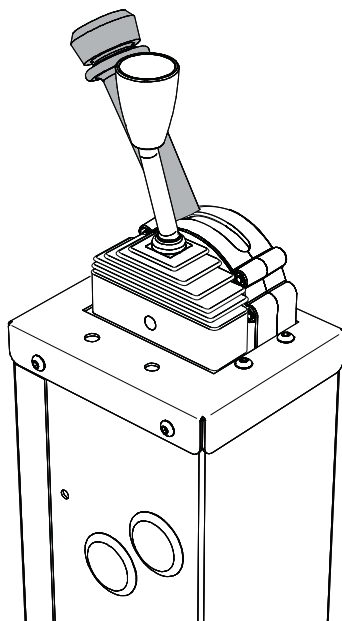

Step 6: Extend Jib into Stowed Position






2 SECTION



3 SECTION



With the secondary in the retracted position, push the JIB lever forward (EXTEND) until the jib slides forward into the stowed position.

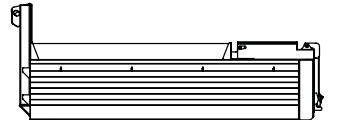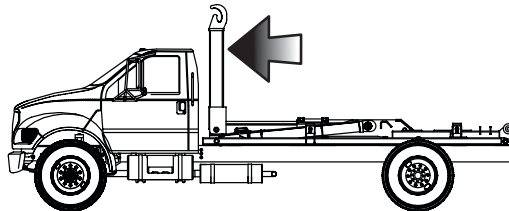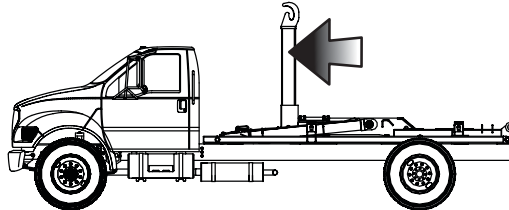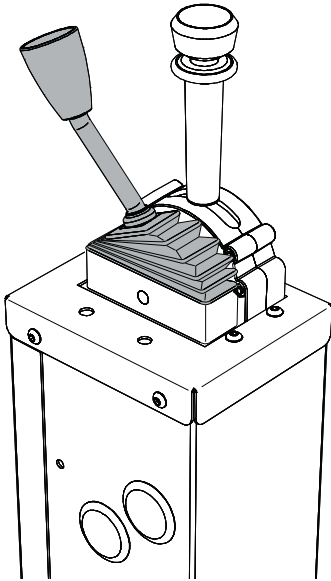

Step 7: Release Lever & Disengage PTO

2 SECTION






3 SECTION



When the jib is completely extended forward, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

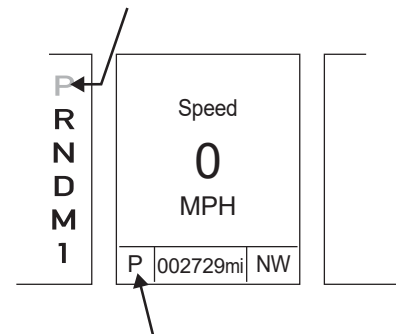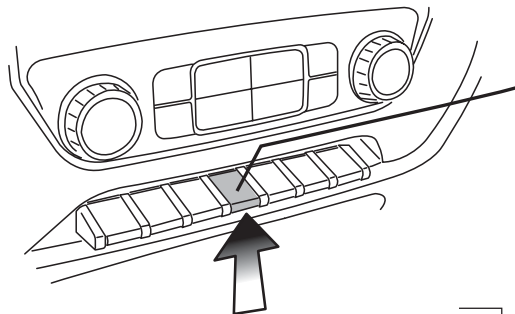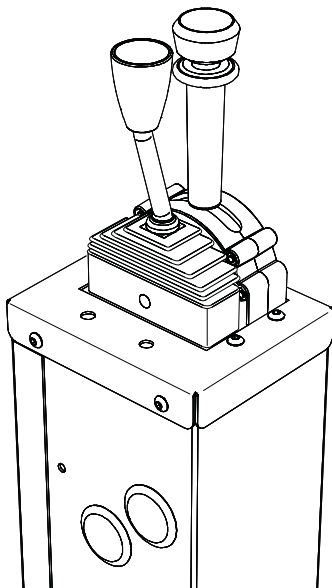


Dumping Body Load (Air Controls)

Step 1: Verify Safe Dumping Zone and Activate Hooklift System

A) Start the truck engine.


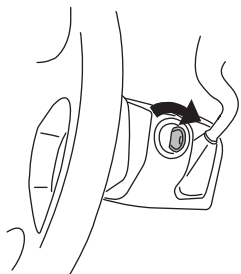


B) Maneuver the truck into dumping zone. Be aware of and avoid any overhead obstructions. Make sure there is adequate room for the load to dump and for the truck to maneuver forward if needed.

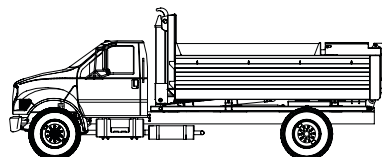

Room for load to dump

C) Put the truck in NEUTRAL.

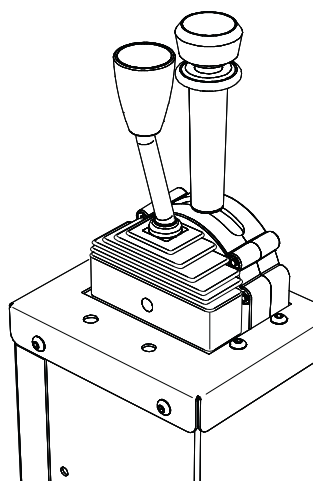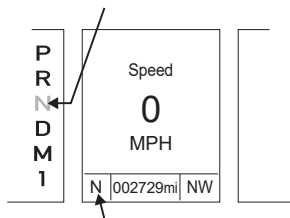


D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

2 SECTION



3 SECTION

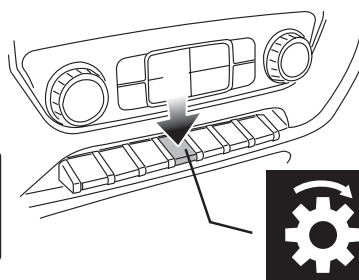


Step 2: Ensure Dump Latches are Engaged


2 SECTION



3 SECTION

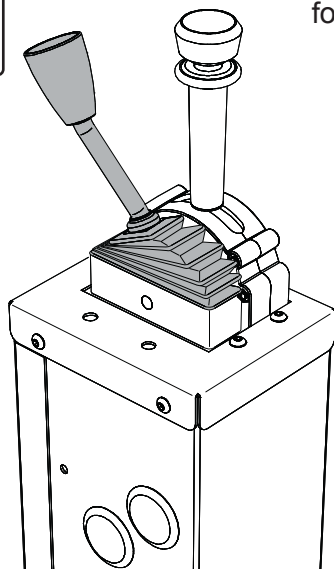


Push the JIB lever (EXTEND) until the jib slides forward enough to engage the mechanical dump latches.

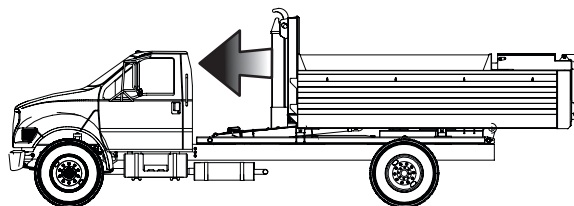


Step 3: Extend Secondary and Begin Dumping

2 SECTION




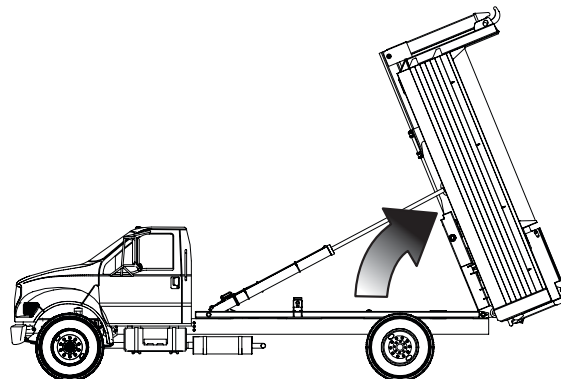
3 SECTION

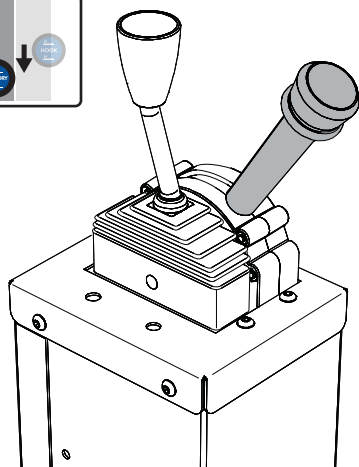

IMPORTANT

The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.

Lift the safety collar and pull the SECONDARY lever ( EXTEND) to dump the load. Be aware and avoid any overhead obstructions during the entire dump procedure. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.




If necessary to finish dumping the load, place the truck in gear and creep forward slowly as the load has new space to unload.

⚠ WARNING

Do not stop mid-dump and leave hooklift unattended with suspended load.

⚠ WARNING

Do not take full rated capacity to full dump angle without some unloading of weight. Full rated dump capacity assumes load will decrease as dump angle increases.

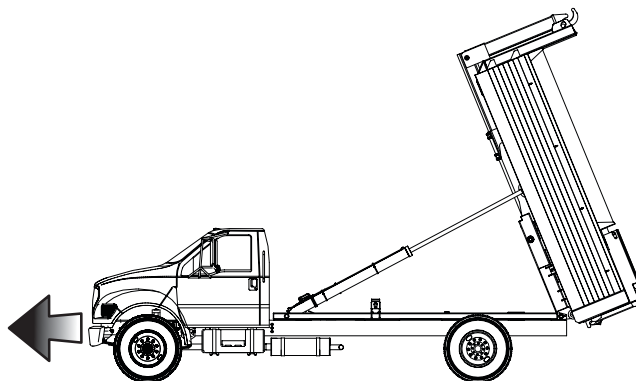


Dumping Body Load (Air Controls) continued...

Step 4: Retract Secondary Section



2 SECTION



3 SECTION



After the load is completely dumped, lift the safety collar and push the **SECONDARY** lever (↙ **RETRACT**) until the secondary section is completely in the retracted position.

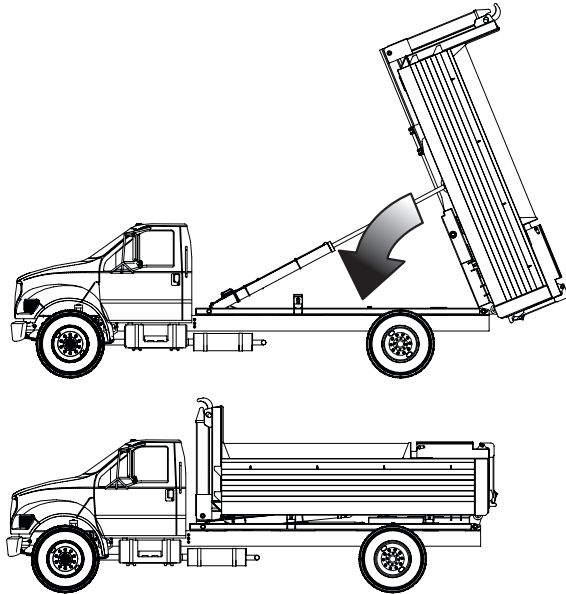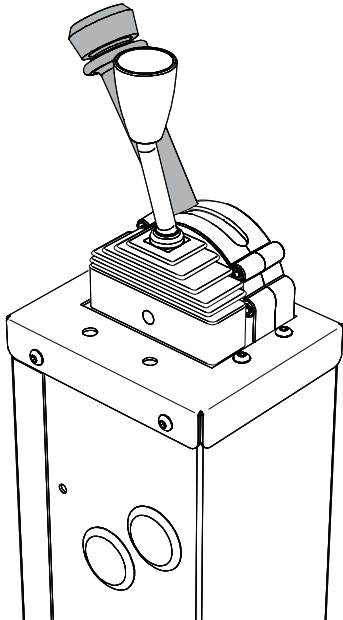

Step 5: Release Lever & Disengage PTO

2 SECTION






3 SECTION



When the secondary section is fully lowered, return all controls to the Neutral position.


Disengage the PTO and return transmission to PARK.

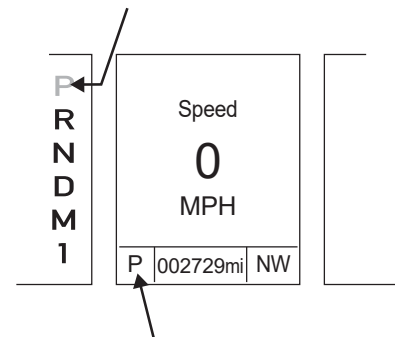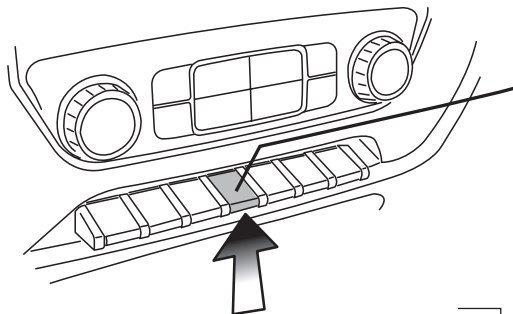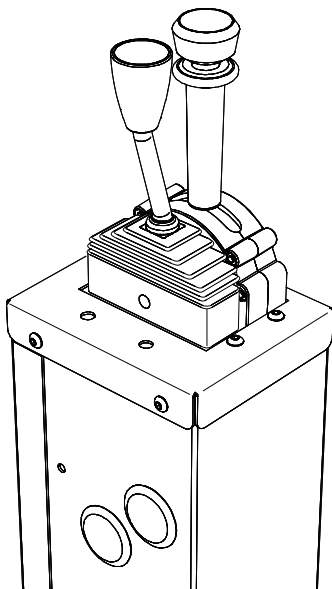


Loading Body (Joystick Control)

Step 1: Align the Truck and Activate Hooklift System

A) Start the truck engine.



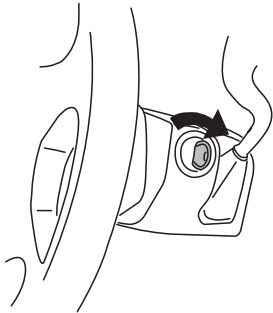


B) Maneuver the truck into a position to load the body.

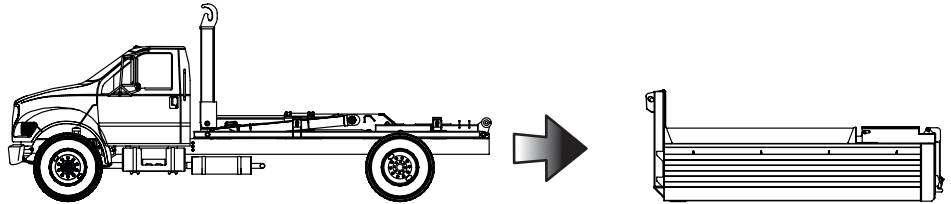


D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)



C) Put the truck in NEUTRAL.

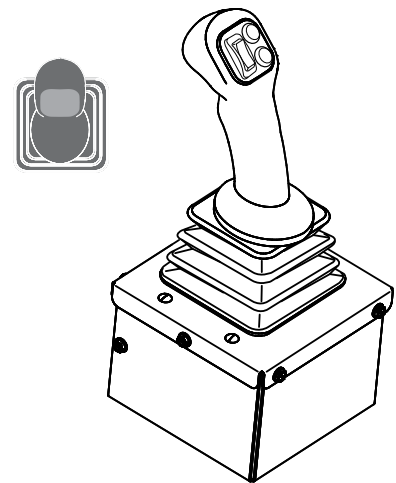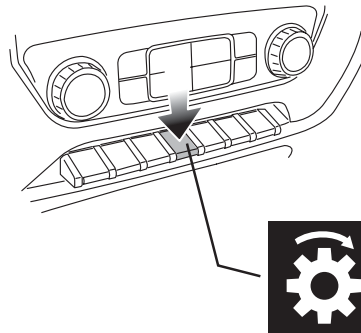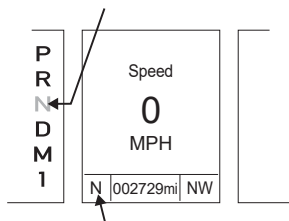

Step 2: Fully Retract Jib and Release Dump Latches

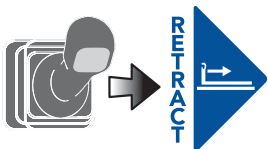



Position the joystick to the right (→ RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.


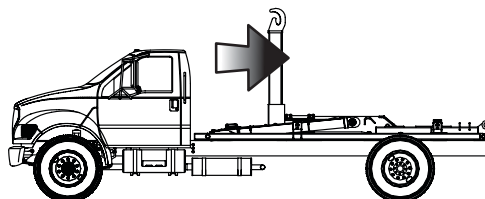
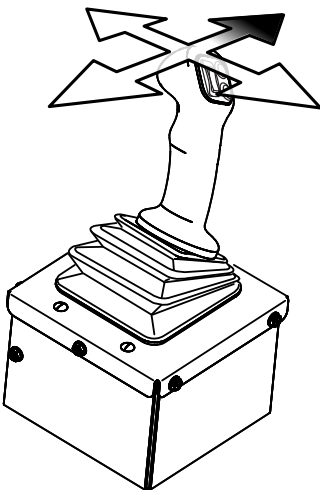


Loading Body (Joystick Control) continued...

Step 3: Extend Secondary

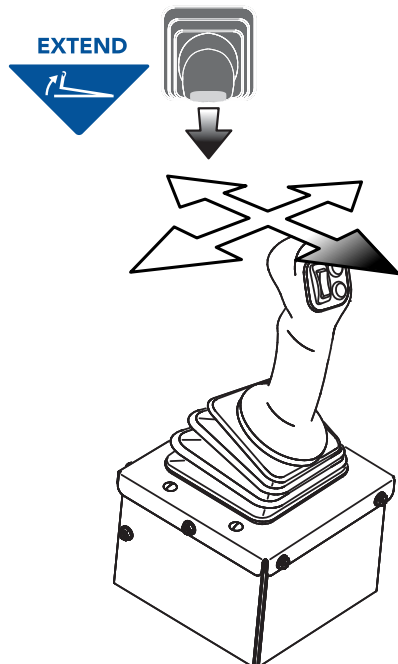


With the jib in the fully rearward position, pull the joystick rearward ( EXTEND) to extend the secondary until the hook is in a position to attach to the body. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

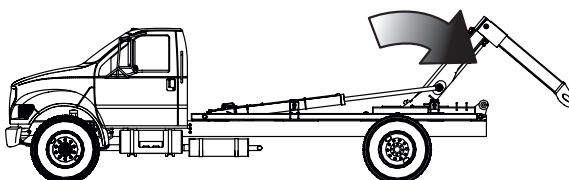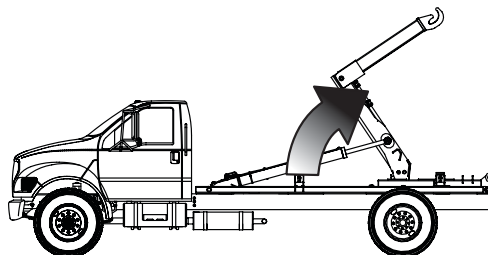



IMPORTANT

The DUMP SECTION UP ALERT indicator will illuminate while the secondary cylinder is extended.


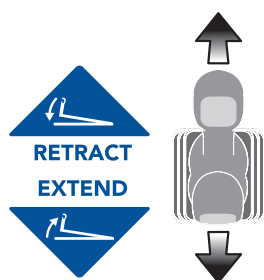
Step 4: Approach the Body and Attach the Hook



Put the truck in REVERSE and slowly back up and attach hook to the hook bar on the body by pushing or pulling the joystick lever as necessary ( RETRACT and  EXTEND).


WARNING

Make certain that the hook is engaged around the hook bar before loading.

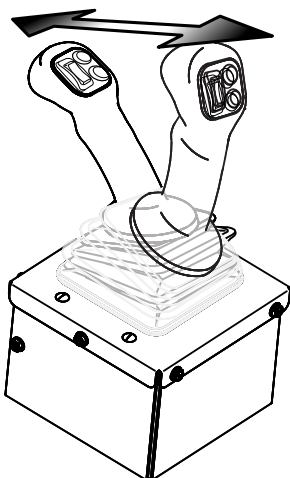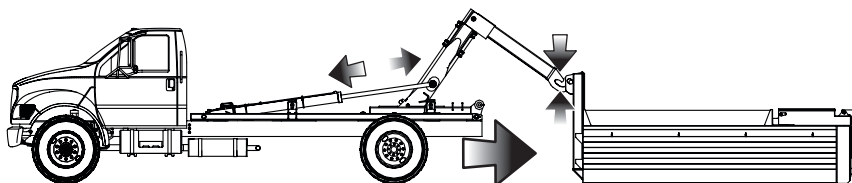


Step 5: Load the Body


Put the truck in NEUTRAL.

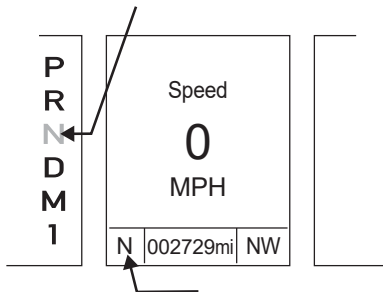

Once the hook is fully attached to the hook bar, put the transmission in NEUTRAL and push the joystick forward (RETRACT) to load the body. With the transmission in neutral the chassis will roll toward the body as it is lifted.


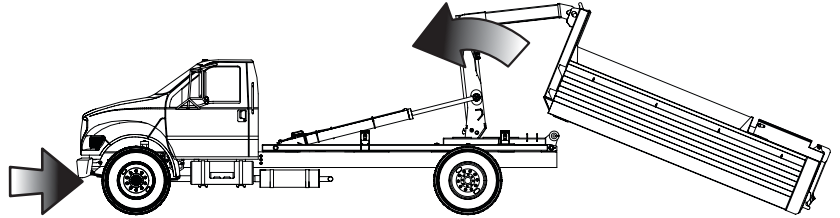


Truck will roll toward the body.

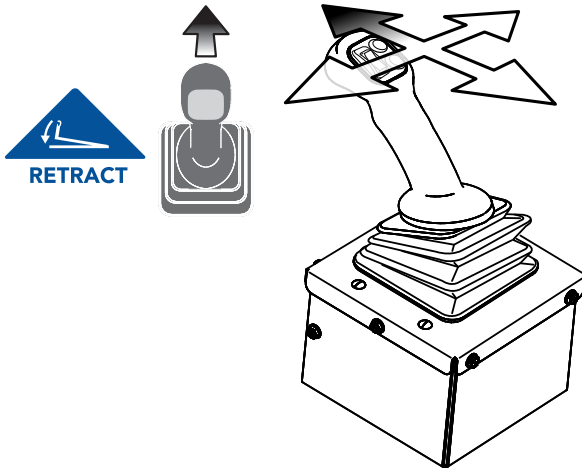


Make sure the body is lining up with the rear rollers while loading. Refrain from using the brake during initial loading of a body. Likewise, do not engage the transmission to use the drivetrain to assist the hydraulics during the loading process.

Once the body comes in contact with the rollers and comes off the ground, you can put the transmission in PARK or apply brake to keep the truck from rolling.

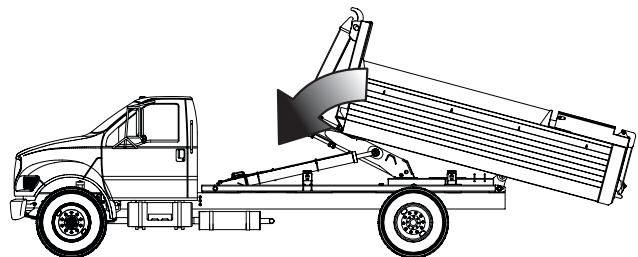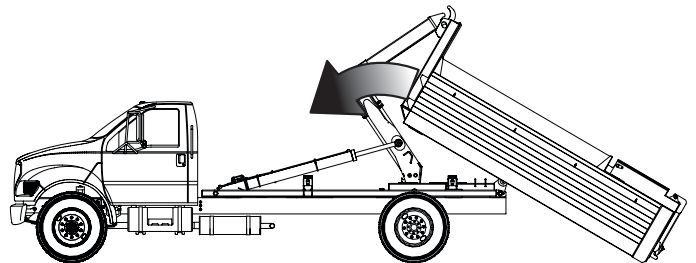


Do not apply brake until body is off the ground.

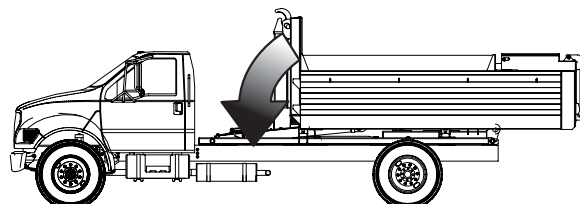




WARNING Do not stop mid-lift and leave hooklift unattended with suspended load.

Loading Body (Joystick Control) continued...


Step 6: Extend Jib and Engage Body Latches

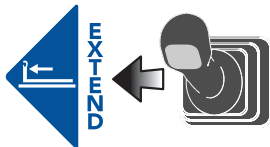

With the secondary in the retracted position, move the joystick to the left (← EXTEND) until the body latches fully engage.

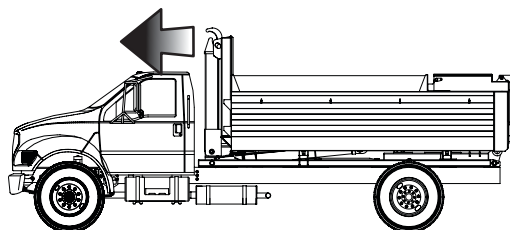
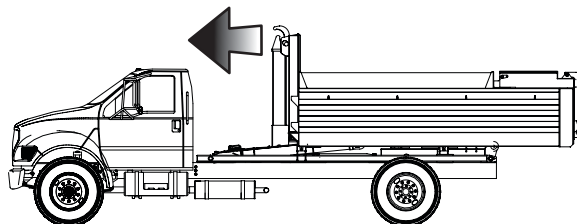
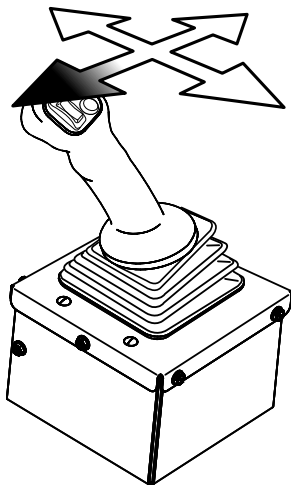


Step 7: Release Joystick & Disengage PTO



When the body is completely loaded, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

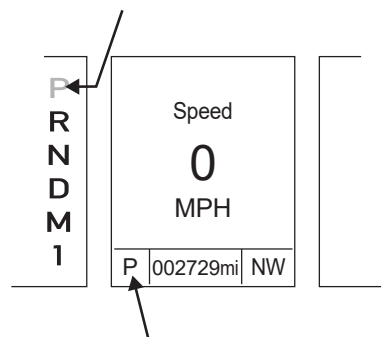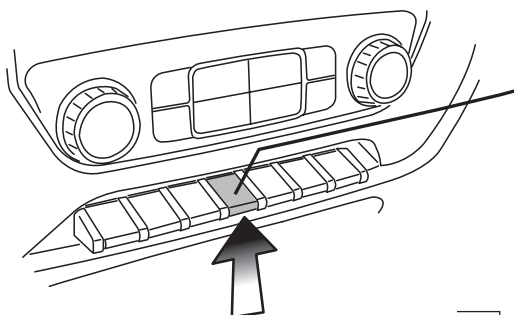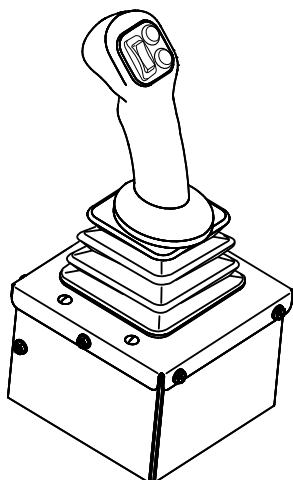


Unloading Body (Joystick Control)

Step 1: Verify Safe Unloading Zone and Activate Hooklift System



A) Start the truck engine.

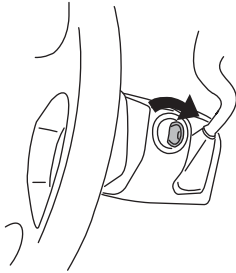


B) Maneuver the truck into unloading zone. Make sure there is adequate room for the body to unload and also for the truck to roll forward.

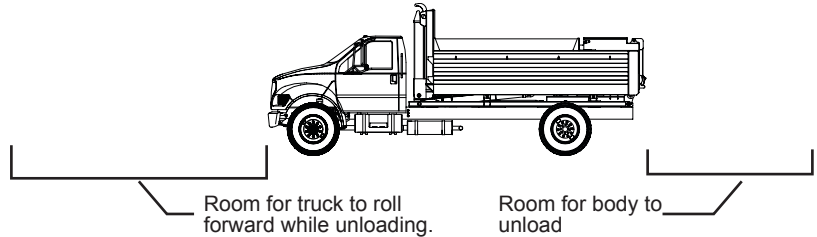



C) Put the truck in NEUTRAL.

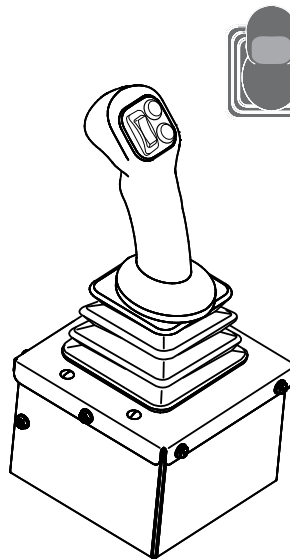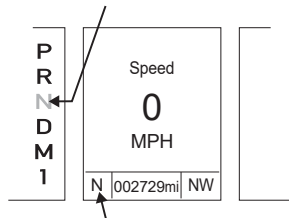


D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

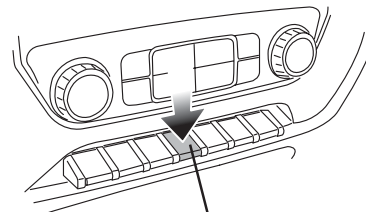

Step 2: Fully Retract Jib and Release Dump Latches

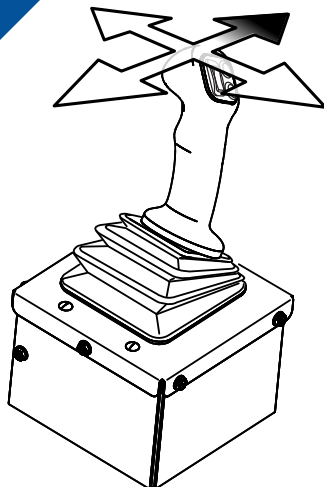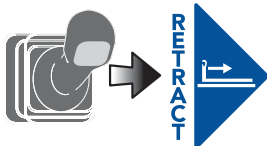


Position the joystick to the right (→ RETRACT) until the jib slides back as far as it will go, releasing the mechanical dump latches.

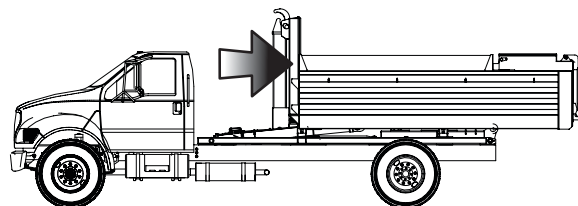

Unloading Body (Joystick Control) continued...


Step 3: Extend Secondary Section

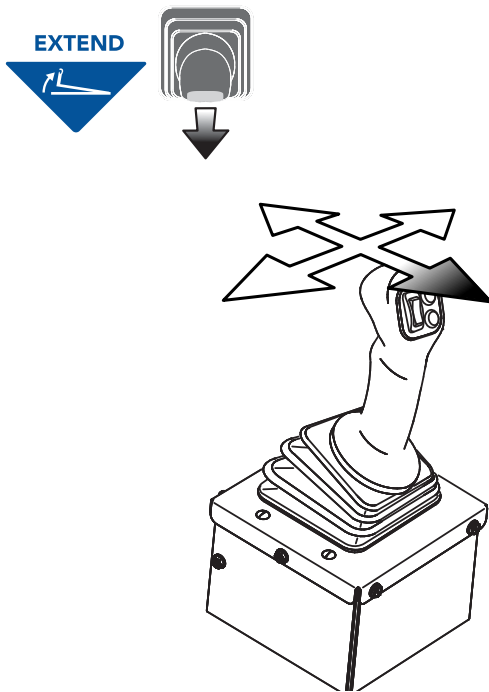




With the jib in the fully rearward position, pull the joystick rearward (↖ EXTEND) as the chassis rolls forward. Continue holding the joystick rearward until the body is completely on the ground. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

NOTICE


The JIB lever (↗ RETRACT and ↖ EXTEND) functions will be disabled during secondary operation.

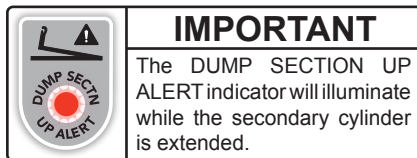


WARNING Do not stop mid-lift and leave hooklift unattended with suspended load.

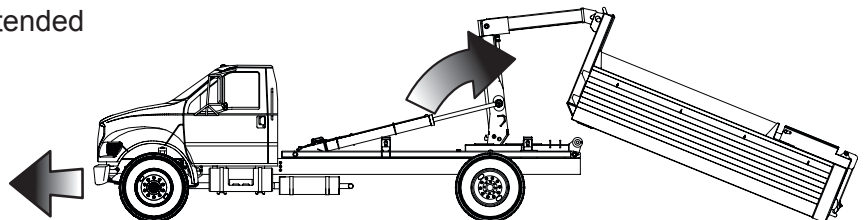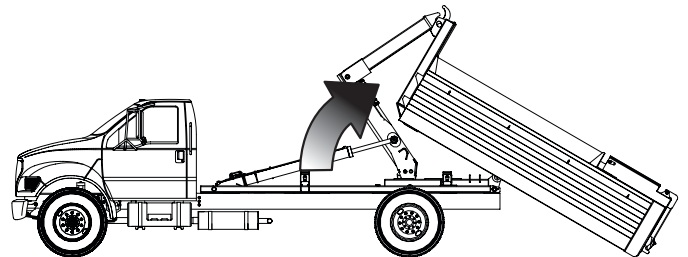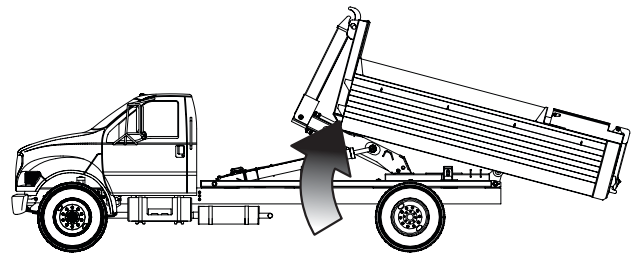

Do not apply brake. Truck will roll away from body.


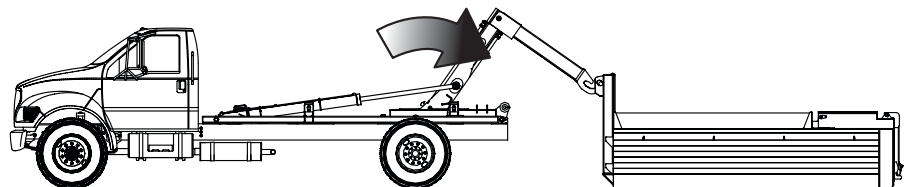


Step 4: Release the Hook from the Hook Bar

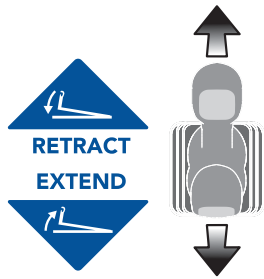


Release the hook from the hook bar on the body by lifting the safety collar and pushing or pulling the SECONDARY lever as necessary (↙ RETRACT and ↗ EXTEND).



Engage transmission and pull truck forward away from body so hook is clear from hook bar on body.

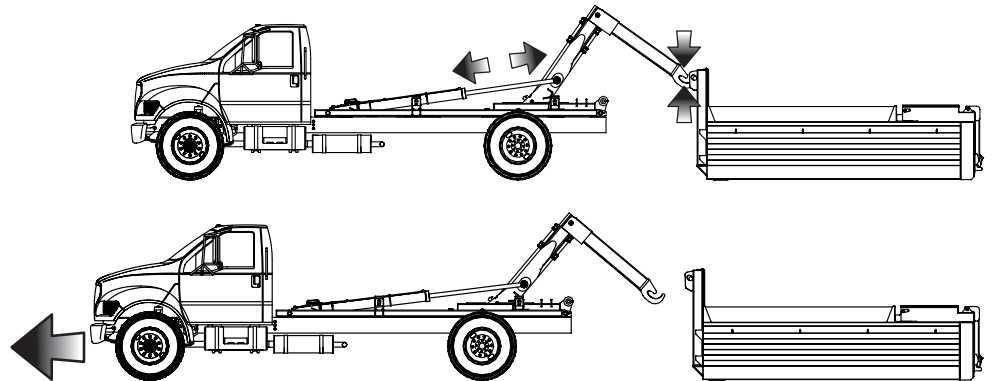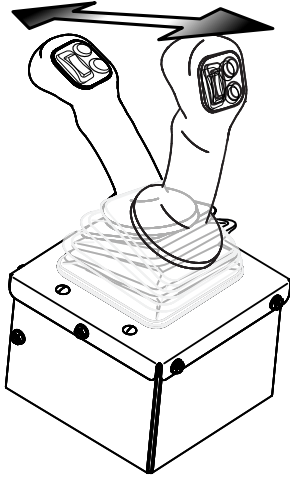

Step 5: Fully Retract Secondary Section

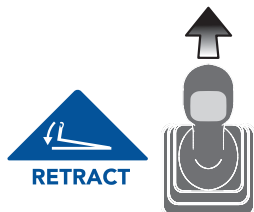


Press the joystick forward forward (↙ RETRACT) until the secondary section is completely in the retracted position.




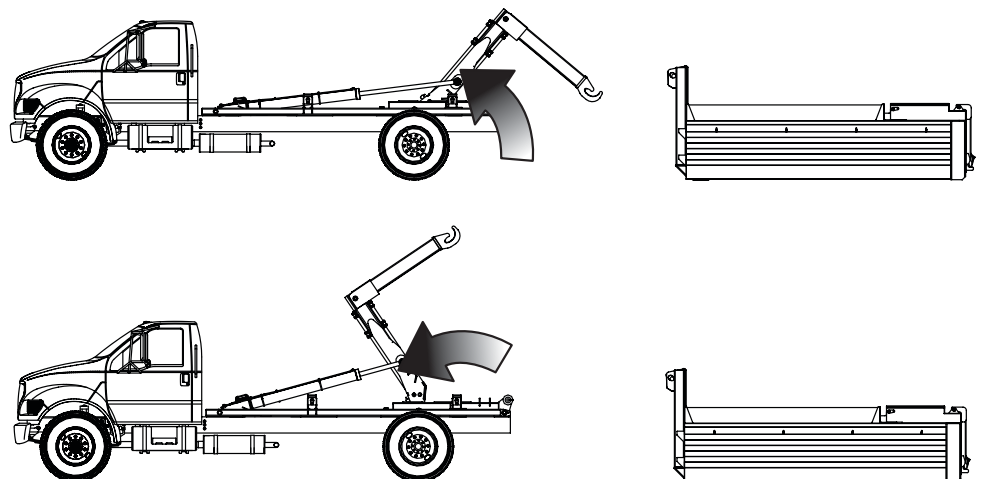
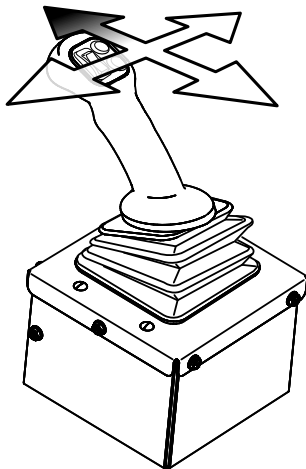


Unloading Body (Joystick Control) continued...


Step 6: Extend Jib into Stowed Position

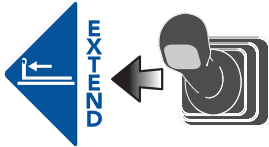

With the secondary in the retracted position, move the joystick to the left (← EXTEND) until the jib slides forward into the stowed position.

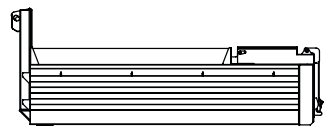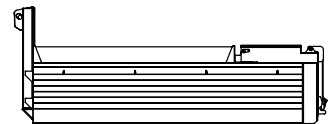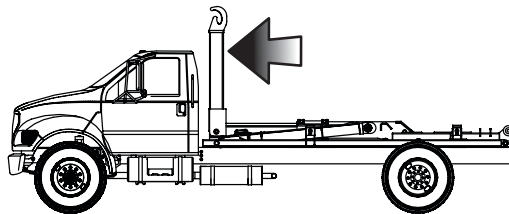
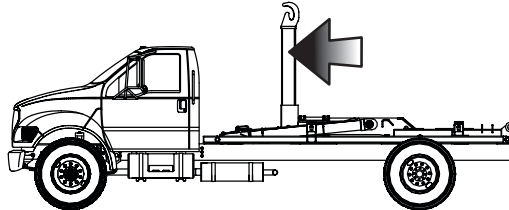
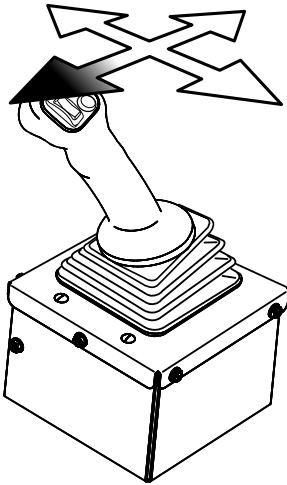


Step 7: Release Joystick & Disengage PTO



When the jib is completely extended forward, return all control to the Neutral position.


Disengage the PTO and return transmission to PARK.

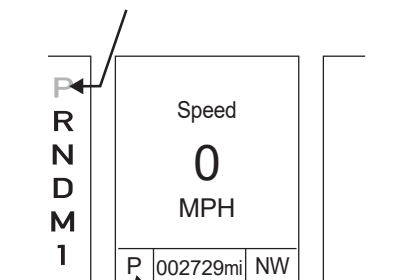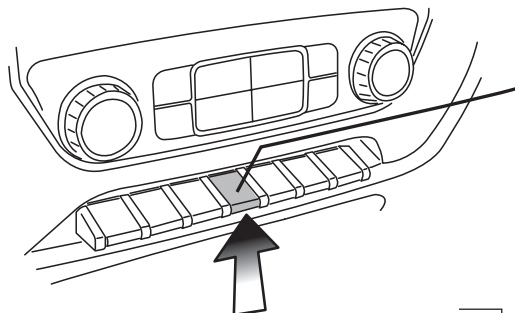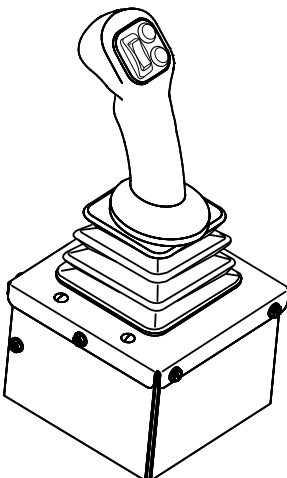


Dumping Body Load (Joystick Control)

Step 1: Verify Safe Dumping Zone and Activate Hooklift System

A) Start the truck engine.


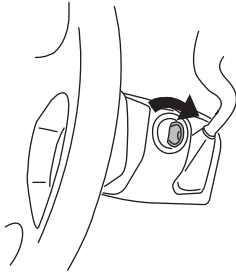


B) Maneuver the truck into dumping zone. Be aware of and avoid any overhead obstructions. Make sure there is adequate room for the load to dump and for the truck to maneuver forward if needed.

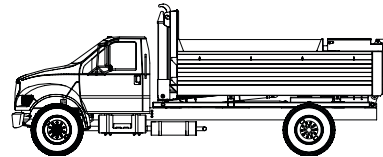


Room for load to dump


C) Put the truck in NEUTRAL.

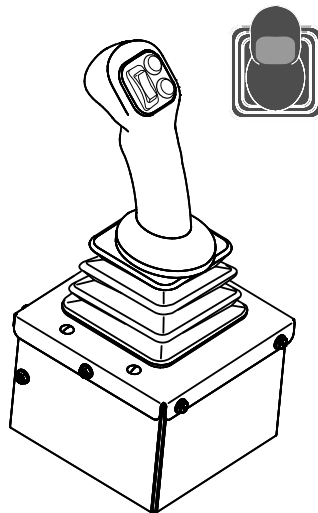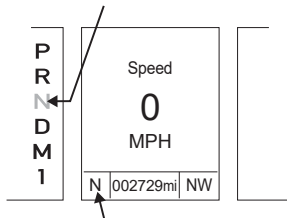



D) With engine running and the hooklift controls in the neutral position, engage the PTO. (Your model may differ.)

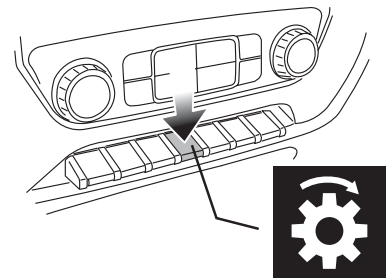

Step 2: Ensure Dump Latches are Engaged


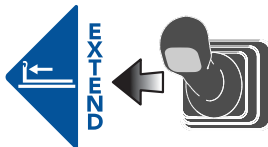


Position the joystick to the left (← EXTEND) until the jib slides forward enough to engage the mechanical dump latches.

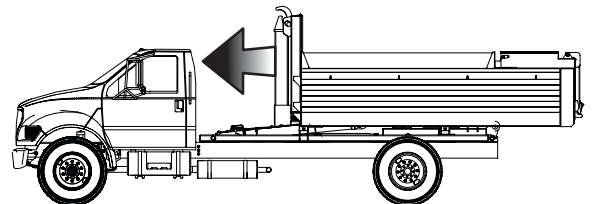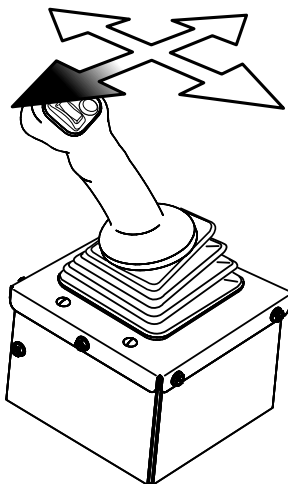


Dumping Body Load (Joystick Control) continued...

Step 3: Extend Secondary and Begin Dumping

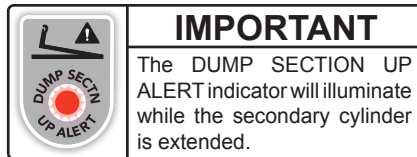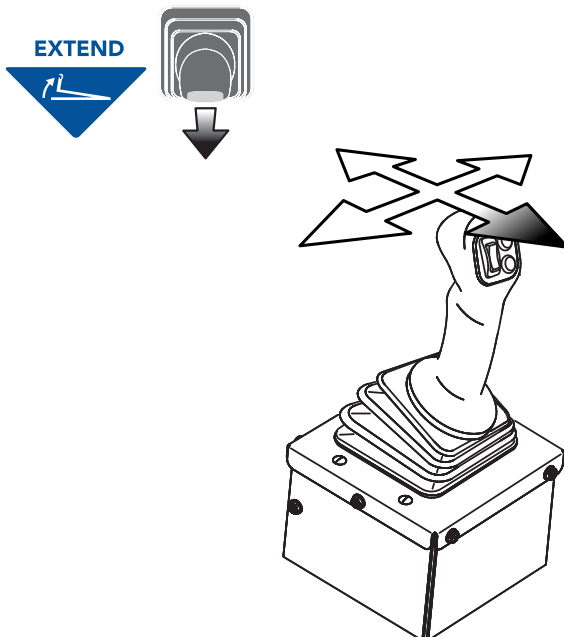


Pull the joystick rearward (EXTEND) to dump the load. Be aware and avoid any overhead obstructions during the entire dump procedure. To make you aware that the dump section has been activated, an LED will light up RED on the control panel. Be aware of overhead surrounding while the dump section is raised.

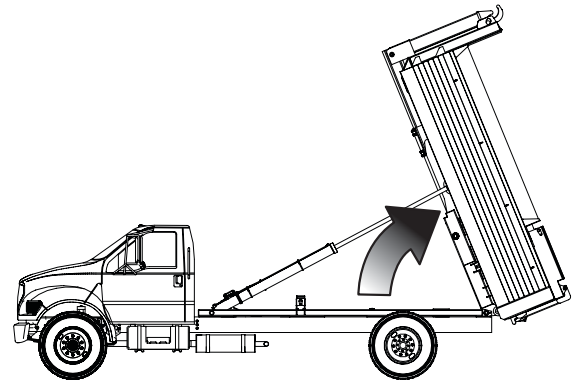


If necessary to finish dumping the load, place the truck in gear and creep forward slowly as the load has new space to unload.

⚠ WARNING Do not stop mid-dump and leave hooklift unattended with suspended load.



⚠ WARNING Do not take full rated capacity to full dump angle without some unloading of weight. Full rated dump capacity assumes load will decrease as dump angle increases.

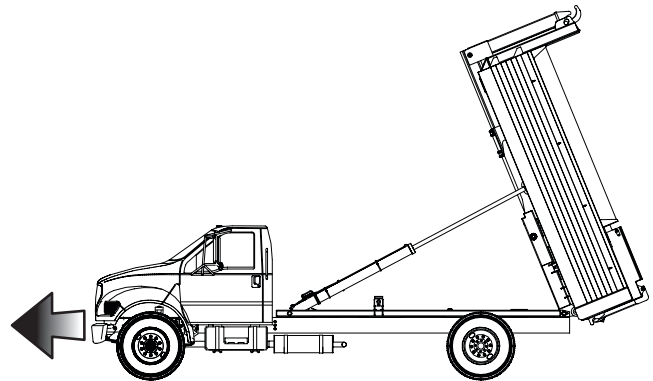


Step 4: Retract Secondary Section

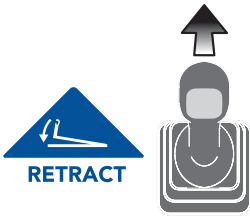

After the load is completely dumped, push the joystick forward (↖ RETRACT) until the secondary section is completely in the retracted position.


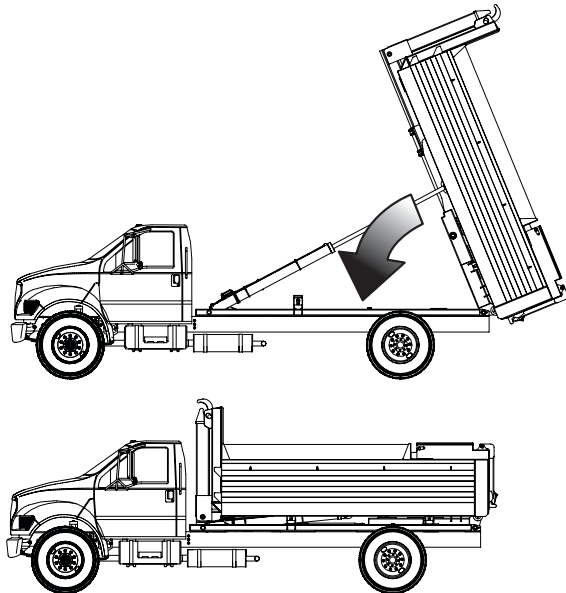
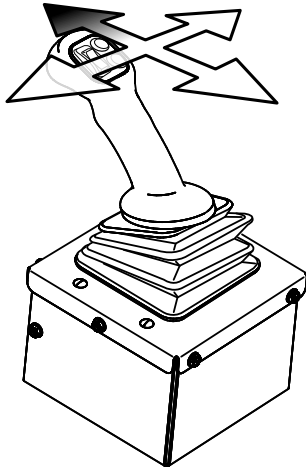


Step 5: Release Joystick & Disengage PTO



When the secondary section is fully lowered, return all controls to the Neutral position.

Disengage the PTO and return transmission to PARK.

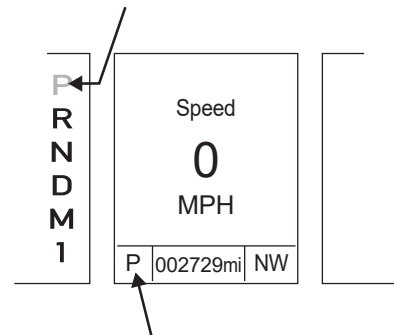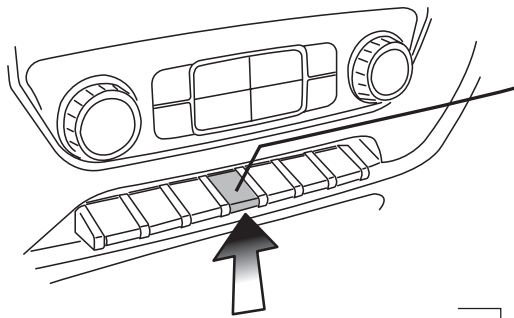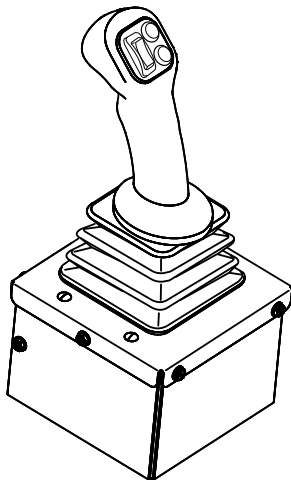

Safety Decals of Note

Safety decals serve to inform the viewer of the hazard type, how to avoid the hazard, and the consequences of not avoiding the hazard.

Decals are considered safety equipment. They must be maintained, as would other safety devices. All safety instruction plates, notices, load charts and any other decal applied to the hooklift or vehicle must be kept legible and in good condition. Replace any decals that are missing, damaged, or illegible.

Detailed below are a number of key safety decals related to this equipment. Use the decal placement drawing in this manual to note the actual location of the safety decals on the equipment.

Front of Jib



Decal Part Number: 45955


Decal Location: Front of jib

Hazard Type: Misuse Hazard

Consequences: Can result in death or serious injury.

Avoidance: Do not attempt to load container unless hook and bail heights match.

Side of Jib

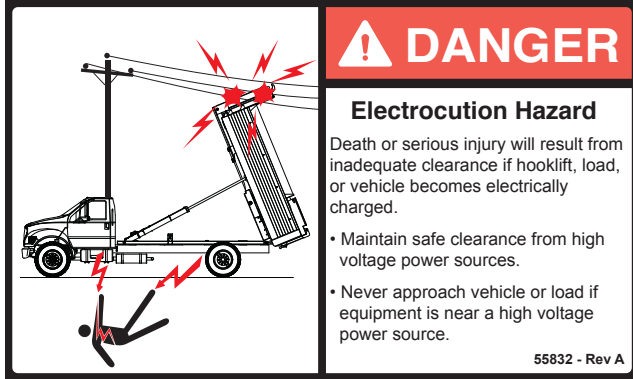


Decal Part Number: 55832

Decal Location: Side of jib

Hazard Type: Electrocution Hazard

Consequences: Will result in death or serious injury.

Avoidance: Maintain safe clearance from high voltage power sources. Never approach vehicle or load if equipment is near a high voltage power source.

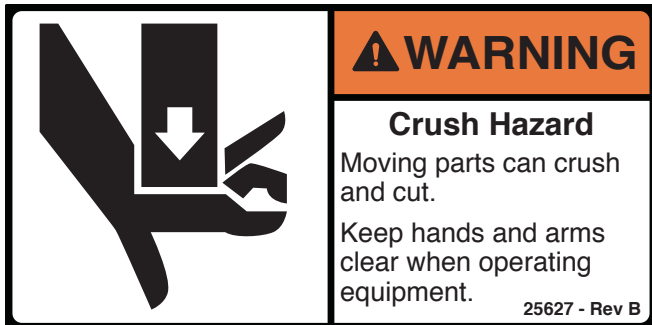


Decal Part Number: 25627

Decal Location: Side of jib

Hazard Type: Crush Hazard

Consequences: Can result in death or serious injury.

Avoidance: Keep hands and arms clear when operating equipment

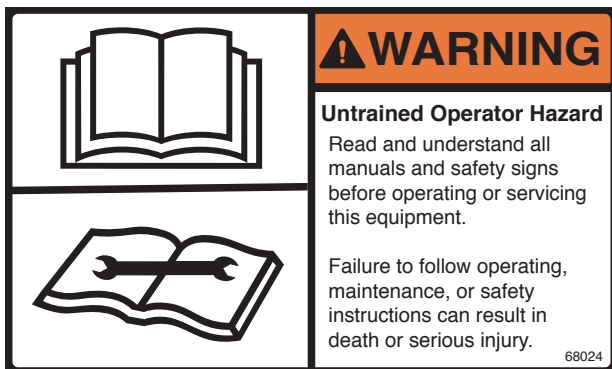

Decal Part Number: 68024

Decal Location: Side of jib

Hazard Type: Untrained Operator Hazard

Consequences: Can result in death or serious injury.

Avoidance: Read and understand all manuals and safety signs before operating or servicing equipment.

This page left intentionally blank.

Chapter 2 - Maintenance

CHAPTER CONTENTS

General Maintenance Guidelines.....	54
Basic Hooklift Inspection Schedule	55
Maintenance Procedures	56

General Maintenance Guidelines

Maintenance is an important part of extending the life of any Stellar® Hooklift. Performing key maintenance items on a scheduled program will prevent unnecessary downtime.

Before performing any maintenance to the hooklift, consider the following:

- **⚠ WARNING** Only qualified service personnel are to perform maintenance on the hooklift. Never modify or alter any of the equipment, whether mechanical, electrical, or hydraulic, without explicit approval from Stellar Industries.
- Position the hooklift where it will be out of the way of other operations or vehicles in the area.
- Make certain that the hooklift is in the fully stowed position to prevent uncontrolled movement.
- Place all controls in the off position and secure operating features from inadvertent motion.
- When checking hydraulic oil level, make certain that all system cylinders are fully retracted.
- Grease zerk locations can be found in the Installation, Assembly Drawings, Parts Manual.
- Before any service or repair is performed, disengage the PTO and shut off the engine.
- Before performing any maintenance on electrical components, disconnect the power source.
- Before performing any maintenance on hydraulic components, relieve hydraulic oil pressure from all hydraulic circuits. Move control levers repeatedly through their operating positions to relieve all pressures.
- **⚠ WARNING** Do not disconnect hydraulic hoses while there is still pressure in those components.
- **⚠ WARNING** Do not touch or grab any hoses that could be under pressure.
- Replace parts with Stellar® approved parts only.
- Keep the hooklift clean and free from grease build-up, oil and dirt to prevent slippery conditions.
- Label or tag parts when disassembling.
- Immediately repair or have repaired any components found to be inadequate.

Basic Hooklift Inspection Schedule

AT THE PROPER INTERVAL, INSPECT THE FOLLOWING ITEMS:	DAILY	MONTHLY
Hydraulic reservoir oil level	X	
Hydraulic hoses and tubing for evidence of damage such as blistering, crushing, or abrasion	X	
All safety covers for proper installation	X	
Equipment for missing, illegible, or defaced operating decals and safety signs	X	
Structural weldments for bends, cracks, or breaks	X	
All pins and keepers for proper installation	X	
Presence of this owner's manual	X	
All pins, bushings, shafts, and gears for wear, cracks, or distortion to include all pivot points, and bushings	X	
Parking brake operation	X	
Cylinder movement due to leakage		X
Controls for malfunction or adjustment		X
Hydraulic systems for proper operating pressure		X
Cylinders for damaged rods, dented barrels, drift from oil leaking internally, leaks at rod seals or holding valve.		X
PTO and pump for leaks		X
Jib assembly for excessive side-to-side play or chattering.		X
Frame bolt tightness - turn barrel nuts and mounting bolts during the first month of operation on new machines and then quarterly thereafter		X
Inspect all electrical wires and connections for worn, cut, or deteriorated insulation and bare wire		X
Lubrication of all moving parts		X

Maintenance Procedures

Hydraulic Oil/Filter Maintenance

Stellar Industries recommends the first filter change to occur after the first 250 hours of service. The second, and every subsequent change, should occur after every 1,000 hours of service. By following these guidelines, the hydraulic oil should last up to 6,500 hours.


Note: *These recommendations are based on normal working parameters. If operating in less than favorable conditions (excessive dust, moisture, etc.), be sure to check the filter gauge often for filter change notice.*

PTO and Pump Maintenance





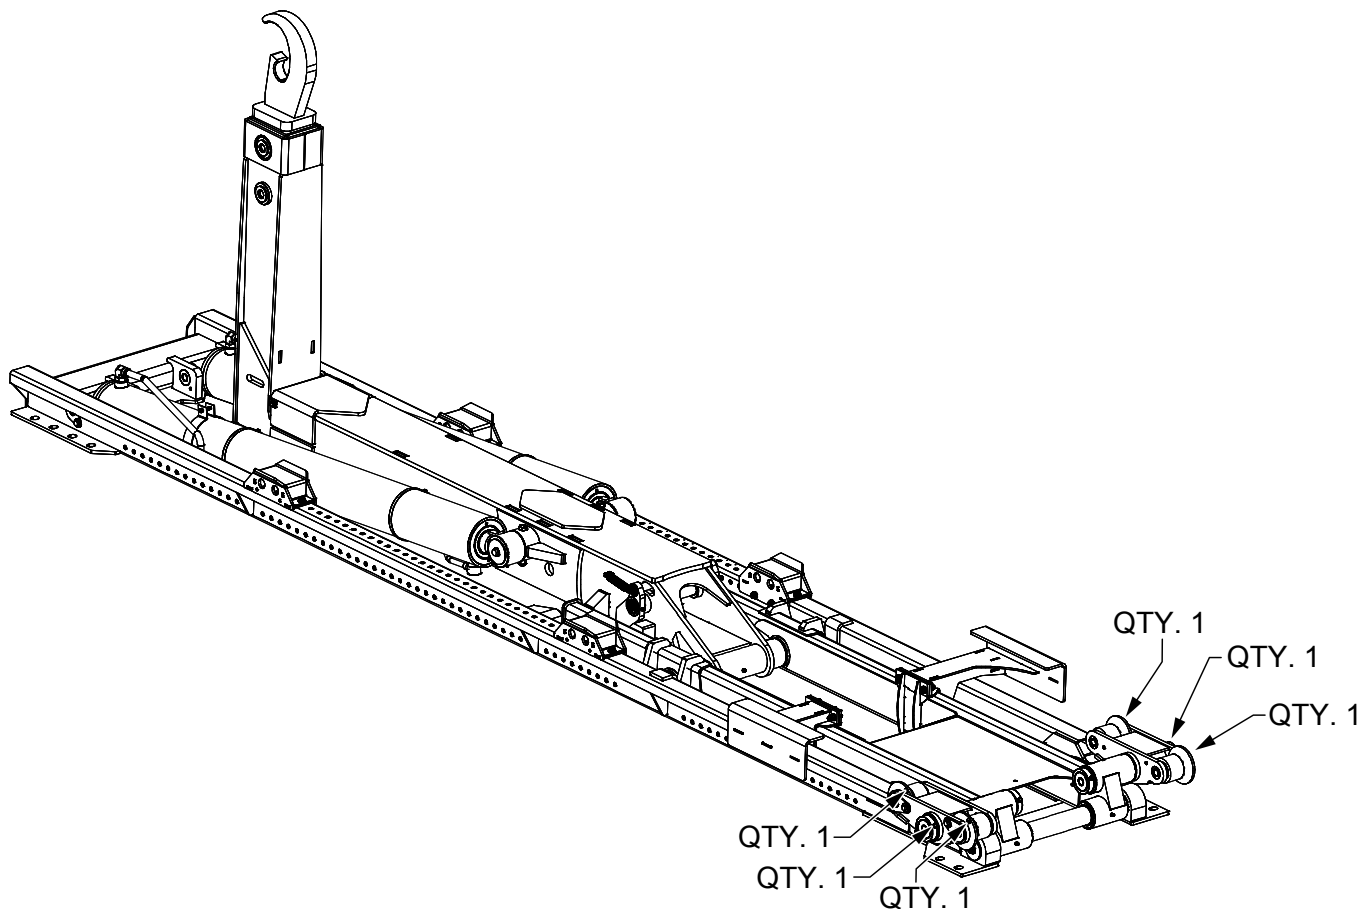







Every six (6) months, remove the hydraulic pump from the PTO and lubricate the splines using Chelsea Lubricant #379831 or Stellar PN 20885 lube. Failure to lubricate shaft splines will eventually cause damage to the PTO and hydraulic pump.

Grease Zerk Locations

The rear rollers (and optional body saddle rollers) on the Stellar® NXT Hooklift will need to be greased monthly to clean out dirt and prevent them from wearing out. Grease more frequently if the hooklift is used 7 days a week. Use an Extreme Pressure Grease (EP2). It should be a Lithium Complex type NLGI 2 grease.



New Paint Care and Cleaning Procedures during Initial Ownership and Beyond

	0 to 30 days past manufacturing date	30 to 60 days past manufacturing date	After 60 days past manufacturing date	Any day paint surface is hot due to exposure to daylight
Water-only Rinse to Clean	<ul style="list-style-type: none"> low pressure no soap 			
Wax				
Handheld Pressure Washer			<ul style="list-style-type: none"> distance > 4 inches pressure < 1700 psi water temp < 120° F neutral pH detergent 	
Automated Wash System			<ul style="list-style-type: none"> pressure < 1700 psi water temp < 120° F neutral pH detergent non-abrasive brushes 	

General Hooklift Washing Instructions

Follow the parameters above while washing the hooklift at least once per week, especially when exposed to a dusty, acidic, or alkaline environment. This will maximize durability of the paint, wiring, and rubber material by removing corrosive substances collected from roads or job sites. When washing the hooklift, avoid direct water spray toward electrical components such as floodlights, radio remote receivers, and areas of the body which may have rock chips. Avoid the use of stiff bristles. Use of a soft cloth or felt brush is recommended.

Although contact with anti-freeze, gasoline, hydraulic fluid, oil, or windshield washer fluid is expected with this type of equipment, washing these products from your paint surface in a timely manner will greatly enhance the life of your paint finish. Some compounds could be especially damaging to the paint finish and should be removed as soon as possible by rinsing with warm water at a minimum.

NOTICE

Exposure time causing potential paint damage by hydraulic fluid and oil is reduced if the paint surface is hot.

This page left intentionally blank.

Chapter 3 - Troubleshooting

CHAPTER CONTENTS

General Troubleshooting.....	60
General Troubleshooting continued.....	61

General Troubleshooting

This chapter will list a number of potential problems that may occur while operating the Hooklift. Most problems are easily solved using the solutions portion of this chapter. If problems persist, please contact Customer Service at Stellar Industries: 1-800-321-3741.

Problem: Hooklift will not operate or operates slow.

Solutions:

- Make sure the PTO is engaged.
- Make sure that there is 12V power going to the radio receiver. If there is no power going to the receiver, trace back to the power source and check for a blown fuse or loose ground connection.
- Make sure that the transmitter batteries have sufficient charge.
- Check the level of hydraulic fluid in the reservoir. Add fluid as needed.
- Check hydraulic fluid temperature.
- Make sure that the hydraulic pump is operating at its rated flow or GPMs under load. Check the flow by using a flow meter to determine the GPMs. To find the proper flow the equipment is to operate at, see your specific hooklift model's *Installation, Assembly Drawings, Parts Manual*.
- Check to see if the valve bank orifice is plugged. If so, replace the orifice. Call Stellar Customer Service for instructions.
- Make sure the relief pressure is properly set per the specifications page of the hooklift owners manual.
- Make sure the spool valves on the valve bank are adjusted and operating smoothly.

Problem: Hydraulic system gets extremely hot.

Solutions:

- Make sure the hydraulic filter has been changed per the maintenance page of the Hooklift Owner's Manual.
- Make sure the filter strainer of the hydraulic reservoir is not plugged.
- Make sure that the hydraulic pump is operating at its rated flow or GPMs.
- Make sure the relief pressure is set properly. See the Table in the installation chapter of your specific hooklift model's *Installation, Assembly Drawings, Parts Manual*.

General Troubleshooting continued...

Problem: Hooklift will not lift or pickup a loaded container.

Solutions:

- Make sure the container contents are evenly distributed.
- Make sure the container and its load does not exceed the rated capacity.
- Make sure the relief pressure is properly set per the Table on in the installation chapter of your specific hooklift model's Installation, Assembly Drawings, Parts Manual.
- Make sure the hydraulic pump is operating at its rated flow or GPMs. See the specifications page in your specific hooklift model's Installation, Assembly Drawings, Parts Manual.
- Make sure that the container is not fixed to the ground or frozen down.

Problem: Cylinders drift upward or downward while hydraulics are disengaged.

Solutions:

- Check to see if there is air in the hydraulic system. Operate all cylinders connected to the hydraulic system. Start with the extension cylinder, then operate the main boom, winch, rotation, and ending with the hydraulic stabilizers, if installed. When operating, extend each cylinder halfway out, retract all the way in, and then extend until the cylinder rod is at the end of its stroke. Operate cylinders slowly so air is pushed through the system to the reservoir. Repeat this cycle 2-3 times.
- Make sure the holding valves are operating properly. Note: Before performing any maintenance on hydraulic components, relieve hydraulic oil pressure from all hydraulic circuits. Remove, clean, and then inspect each holding valve. When removing a holding valve, always relieve the pressure inside the cylinder by loosening jam nut of the holding valve and turning set screw inward/clockwise. Count the number of turns until the set screw is seated. When reinstalling the holding valve, make sure the valve is reset by turning the set screw the number of turns it took to relieve the pressure. Finish by tightening the jam nut.
- Check the cylinder rod for scratches. If a scratch is located on the cylinder rod, hydraulic fluid can pass through and cause a loss of pressure. Replace cylinder rod or cylinder.
- Check to see if the piston seals are damaged. If they show signs of damage, install a new cylinder seal kit.
- Possible internal piston seals rolled or damaged.

Problem: Hooklift binds at pivot points.

Solutions:

- Make sure pivot pins are not seized to the bushing.
- Make sure the weldments or pins are not misaligned or bent.



Subject to Change without Notification.
© 2025 Stellar Industries, Inc.