


MODEL 6000

ARTICULATING CRANE

OWNERS' MANUAL

Installation • Assembly Drawings • Parts

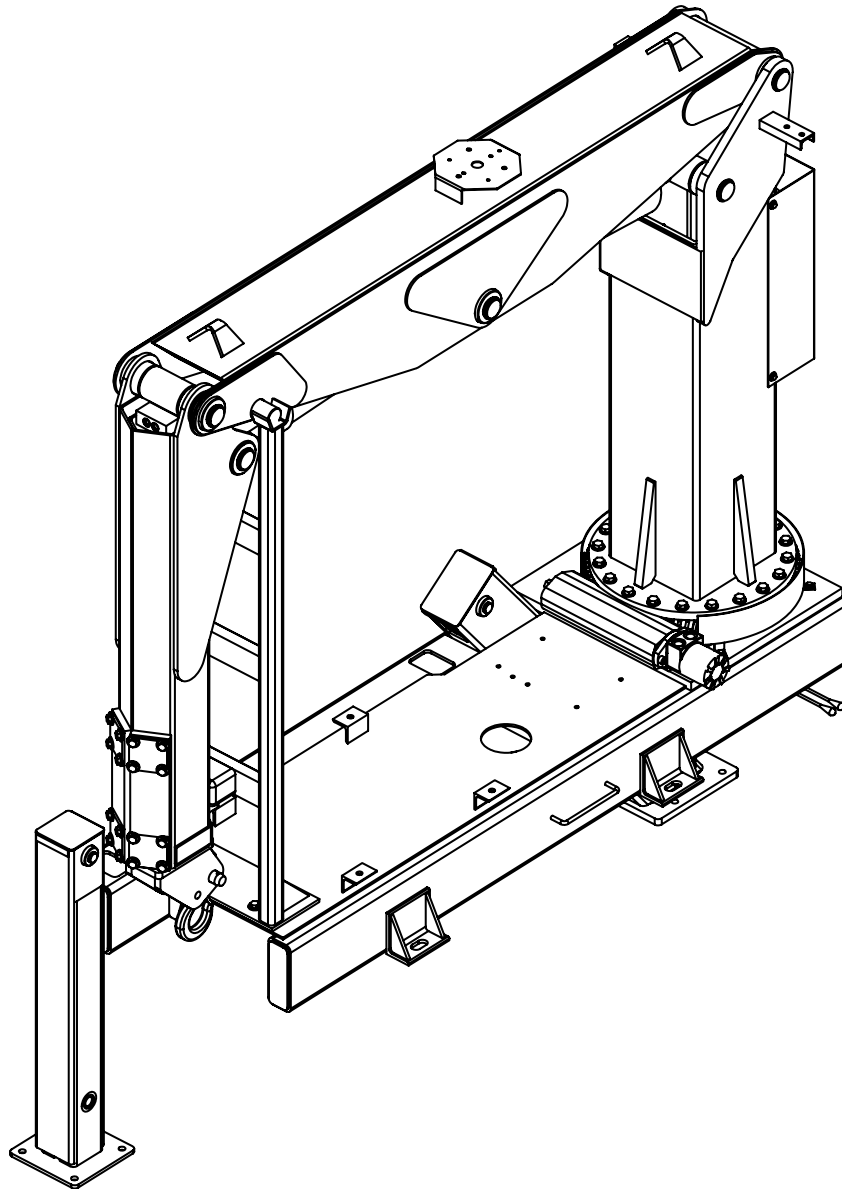

Stellar Industries, Inc.

190 State Street

PO Box 169

Garner, IA 50438

800-321-3741

Fax: 641-923-2811

www.stellarindustries.com


Subject to Change without Notification.
© 2025 Stellar Industries, Inc.

Rev 2.2
PN 37810

Warning / Notice / Serial Tag Location

WARNING

Operating, maintaining, and servicing a Stellar product may expose you to chemicals including, but not limited to, engine exhaust, carbon monoxide, phthalates, and lead. These chemicals are known to the State of California to cause cancer and birth defects (or other reproductive harm). To keep your exposure to a minimum, be sure to avoid breathing exhaust and service your Stellar product in a well-ventilated area while wearing gloves or washing your hands frequently. For more information, go to www.P65Warnings.ca.gov/passenger-vehicle.

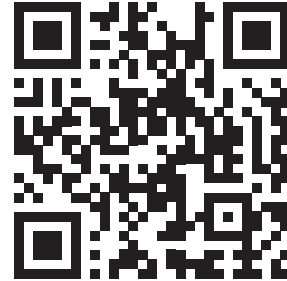

www.p65warnings.ca.gov

NOTICE

Cold Weather Performance

Although clear data on cold weather performance from every steel manufacturer is not available for all types and thicknesses of steel, Stellar Industries is confident that the weldments on our products will operate to 100% of their intended purpose to temperatures down to -40° F / C.

It is recommended if Stellar manufactured equipment needs to be used in temperatures below -40° F / C, the operator should pull the unit into a climate-controlled area and allow the weldments to warm up to and then maintain a temperature above this level.

Serial Tag Location

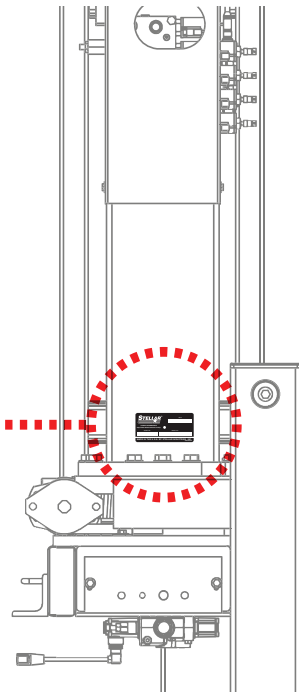
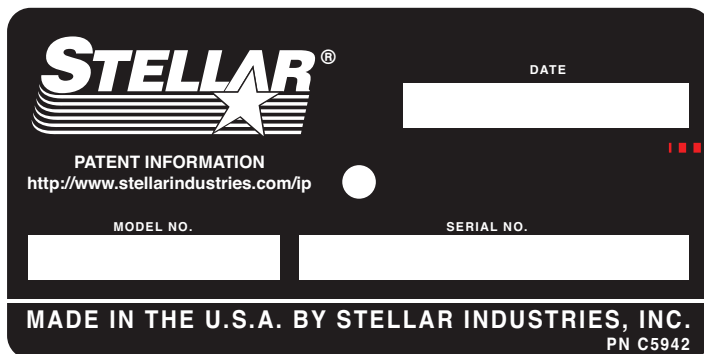


Table of Contents

Introduction	iv
Chapter 1 - Specifications	1
Specifications	2
Capacity Chart - Decal PN 5165	3
Dimensional Drawing.....	4
Chapter 2 - Installation.....	5
General Installation.....	6
Installer Notice.....	6
Installation Overview	6
Torque Data Chart	7
Mounting Kit - PN 32307	8
Mounting Kit - PN 32307 Parts List	9
Hydraulic Installation	10
Face Seal / O-Ring Size Chart	11
Fittings	12
Flat Face O-Ring Seal - FFORX	12
SAE 37° JIC	12
Fittings - Continued	13
O-Ring Boss	13
Face Seal Female Swivel Fittings	13
Hydraulic Kit - PN 13040	14
Hydraulic Kit - PN 13040 Parts List	15
Control Kit - PN 138392.....	16
Control Kit - PN 138392 Parts List.....	17
Decal Placement - PN 13356	18
Chapter 3 - Assembly Drawings.....	19
Base Assembly - PN 22140.....	20
Base Assembly - PN 22140 Parts List.....	21
Gear Bearing - PN 4032.....	22
Stabilizer Valve Bank - PN 61040.....	23
Mast Assembly - PN 147166	24
Mast Assembly - PN 147166 Parts List	25
Valve Bank - PN 44530	26
Valve Bank - PN 44530 Parts List	27
Valve Bank (Alternate)- PN 125254.....	28
Valve Bank (Alternate) - PN 125254 Parts List.....	29
Main Boom Assembly - PN 22142.....	30
Main Boom Assembly - PN 22142.....	31
Extension Boom Assembly - PN 22143.....	32
Extension Boom Assembly - PN 22143 Parts List.....	33
Radio Remote	34
Radio Remote Parts List.....	35

Introduction

A copy of this manual is provided with every crane and can be found in the hard plastic manual case that is installed on the chassis. A copy of this manual shall remain with the crane at all times.

Throughout the manual, three signal words will be used to bring attention to important items:

NOTICE

A *NOTICE* signal word indicates a practice not related to physical injury.

⚠ WARNING

A *WARNING* signal word indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ DANGER

A *DANGER* signal word indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Information contained within this manual does not cover operation, maintenance, or troubleshooting. Please refer to the Small OTR Crane Manual for details on these items.

This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

If more information is required or technical assistance is needed, or if you feel that any part of this manual is unclear or incorrect, please contact the Stellar Customer Service Department by phone at 800-321-3741 or email at service@stellarindustries.com.

**For Technical Questions, Information, Parts, or Warranty, Call Toll-Free at
800-321-3741**

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

Technical Questions, and Information

service@stellarindustries.com

Order Parts

parts@stellarindustries.com

Warranty Information

warranty@stellarindustries.com

Chapter 1 - Specifications

Chapter Contents


Specifications	2
Capacity Chart - Decal PN 5165	3
Dimensional Drawing	4

Specifications

SPECIFICATIONS SHEET- MODEL 6000 CRANE	
CRANE RATING:	60,000 FT-LB (8.30 tm)
STANDARD BOOM LENGTH:	11' (3.35 m) FROM CL OF CRANE
	14' (4.27 m) FROM CL OF TRUCK
BOOM EXTENSION:	HYDRAULIC 32" (81.2 cm)
MAXIMUM HORIZONTAL REACH:	14' (4.27 m) FROM CL OF CRANE
	17' (5.18 m) FROM CL OF TRUCK
MAXIMUM VERTICAL LIFT:	20' (6.10 m) FROM TRUCK FRAME
STOWED HEIGHT:	75" (190.5 cm)
MOUNTING SPACE REQUIRED:	32" (81.3 cm)
APPROXIMATE SHIPPING WEIGHT:	3,150 LB (1,430 kg)
CONTROLS:	PROPORTIONAL RADIO CONTROLS STANDARD FOR ALL FUNCTIONS
CYLINDER SPECIFICATIONS:	
INNER LIFT CYLINDER:	6" (15.24 cm) BORE WITH INTEGRAL PILOT OPERATED COUNTERBALANCE VALVES.
OUTER LEFT CYLINDER:	5" (12.7 cm) BORE WITH INTEGRAL PILOT OPERATED COUNTERBALANCE VALVES.
EXTENSION CYLINDER:	3" (7.62 cm) BORE WITH INTEGRAL PILOT OPERATED COUNTERBALANCE VALVES.
ROTATION:	290 DEGREE POWER (WORM GEAR)
LIFTING CAPACITIES:	10,000 LB @ 9' (4,535 kg @ 2.74 m)
	4,250LBS @ 17' (1,930 kg @ 5.18 m)
POWER SUPPLY REQUIRED:	PTO & PUMP
	(6.0 gpm @ 2,850 PSI)
	(22.7 Lpm @ 193 Bar)

Capacity Chart - Decal PN 5165




CAPACITY CHART

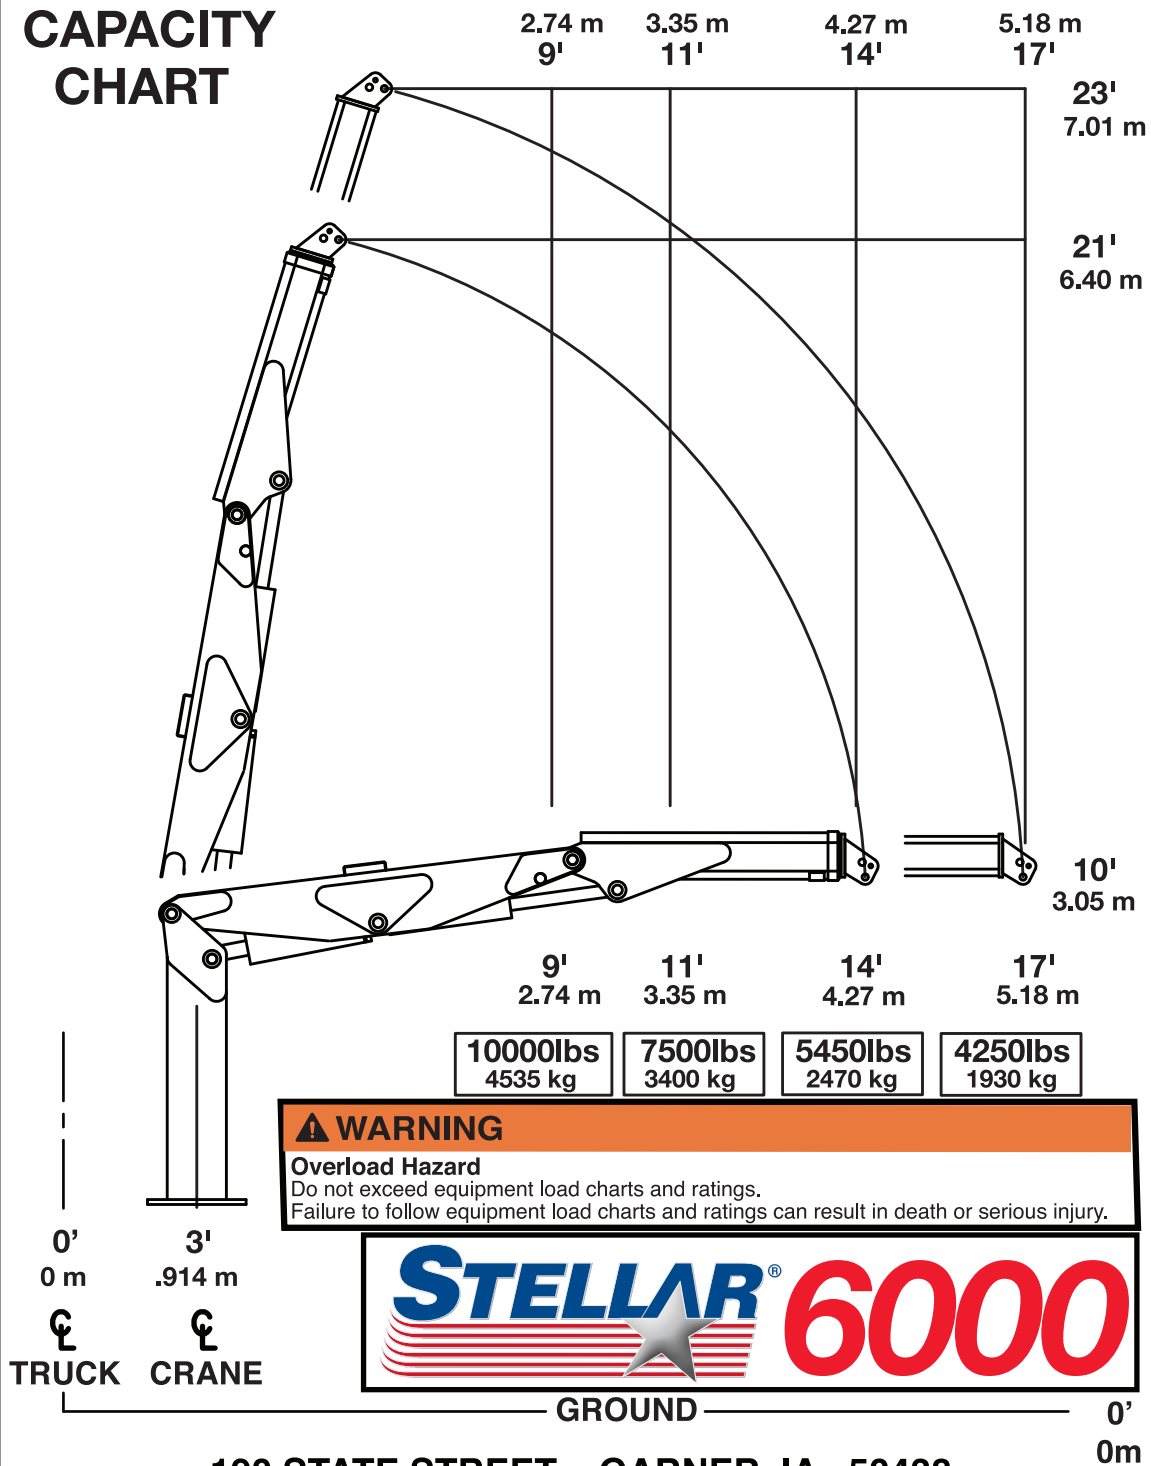

190 STATE STREET GARNER, IA 50438
 PHONE: (800) 321-3741 FAX: (641) 923-2812

5165 - Rev A

Dimensional Drawing

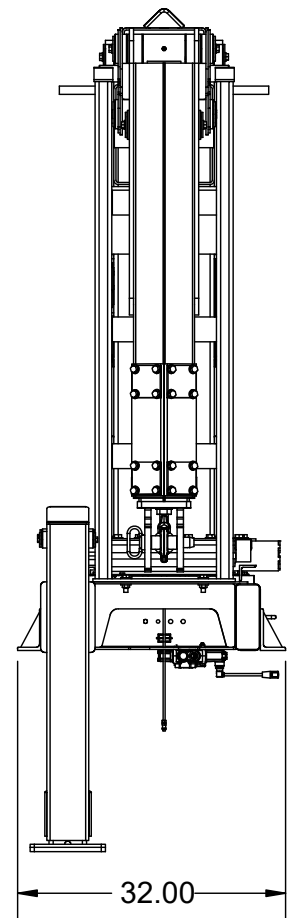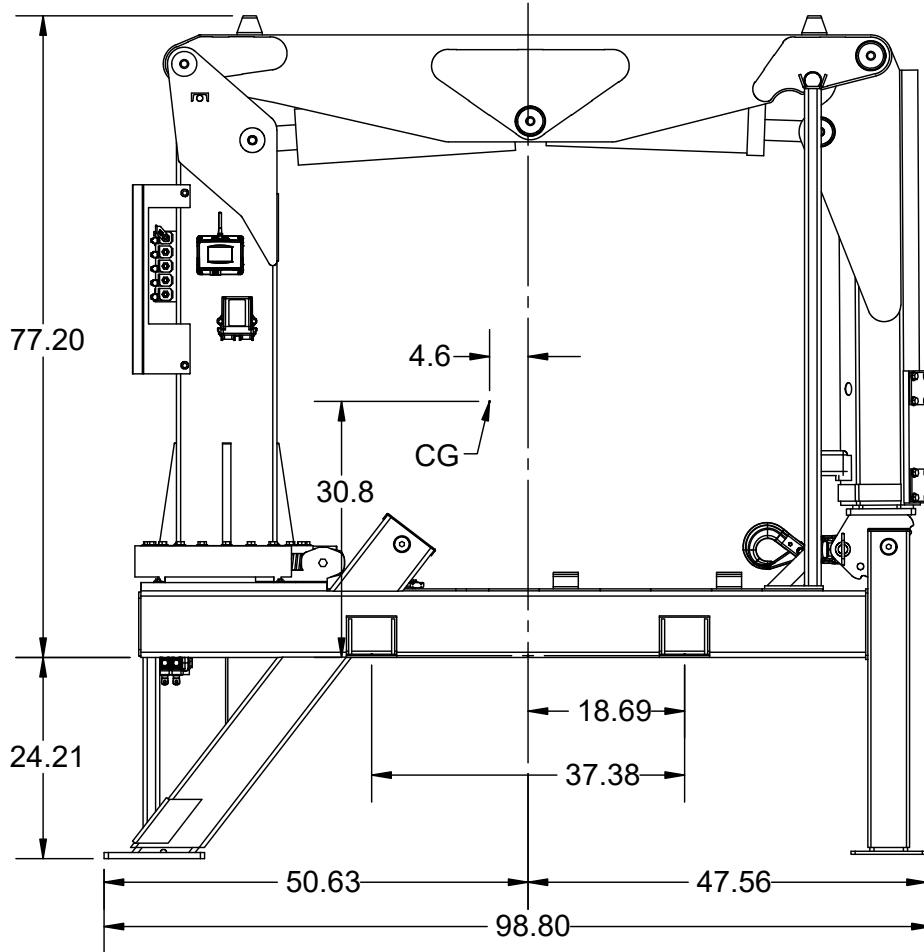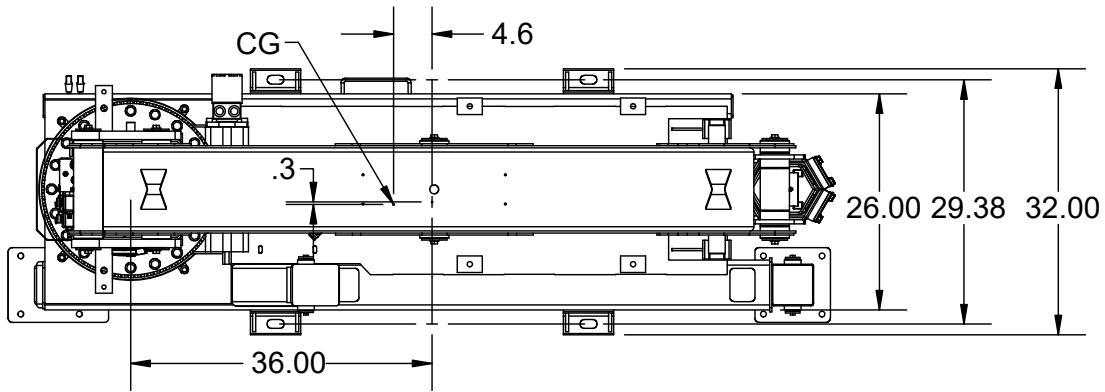

Chapter 2 - Installation

Chapter Contents

General Installation	6
Installer Notice.....	6
Installation Overview	6
Torque Data Chart.....	7
Mounting Kit - PN 32307	8
Mounting Kit - PN 32307 Parts List.....	9
Hydraulic Installation.....	10
Face Seal / O-Ring Size Chart.....	11
Fittings	12
Flat Face O-Ring Seal - FFORX	12
SAE 37° JIC	12
Fittings - Continued.....	13
O-Ring Boss.....	13
Face Seal Female Swivel Fittings	13
Hydraulic Kit - PN 13040.....	14
Hydraulic Kit - PN 13040 Parts List.....	15
Control Kit - PN 138392	16
Control Kit - PN 138392 Parts List	17
Decal Placement - PN 13356.....	18

General Installation

This chapter is designed to serve as a general guide for the installation of a Stellar 6000 Crane on a Stellar Service Body. Each installation is considered unique so certain portions of this chapter may or may not apply to your direct application. If a question should arise during the installation process, please contact Stellar Customer Service at (800) 321 3741.

This crane is designed for use with a Stellar Service Body installed on a vehicle that meets the minimum chassis requirements of the crane. It is the installer's responsibility to assure that the crane is mounted on a platform that will support the maximum crane rating of this crane.

⚠ WARNING Do not install this crane on a body not capable of handling the loads imposed on it. Failure to do so may result in serious injury or death.

NOTICE When installing welder units to the service bodies, it is highly recommended that a surge protector is installed on the chassis batteries to protect the crane radio receiver, wiring and other electronic devices from an unexpected electrical spike or surge. Failure to do so could result in extensive damage to the service body and crane electrical circuit.

Installer Notice

According to Federal Law (49 cfr part 571), each final-stage manufacturer shall complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stages.

Therefore, the installer of Stellar[®] Cranes and Bodies is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations. They are required to certify that the vehicle is in compliance with the Federal Motor Vehicle Safety Standards and other regulations issued under the National Traffic and Motor Vehicle Safety Act.




Please reference the Code of Federal Regulations, title 49 - Transportation, Volume 5 (400-999), for further information, or visit <http://www.gpoaccess.gov/nara/index.html> for the full text of Code of Federal Regulations.

Installation Overview

1. Locate mounting brackets and clamp to chassis. Consider the clearance between the cab/body and crane.
2. Set crane on chassis and check for interferences.
3. Using mounting bracket as a guide, mark holes to be drilled into truck frame.
4. Remove mounting brackets and drill holes.
5. Mount brackets using specified size Grade 8 bolts, flast washers, and nyloc nuts.
6. Lower crane onto mounting brackets.
7. Mount crane using specified size Grade 8 bolts, flat washers, and nyloc nuts.
8. Connect pressure and return lines per hydraulic kit.
9. Connect (+12V) Power and ground wires inside crane box.
10. Check reservoir for oil and fill if necessary.
11. Operate crane several cycles.

SEE APPROPRIATE MOUNTING KIT DRAWINGS.

Torque Data Chart

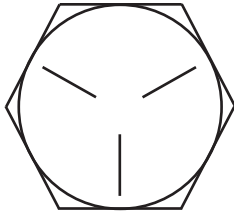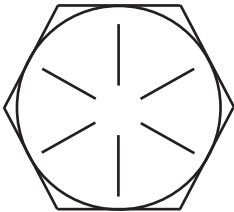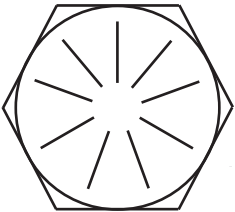
		GRADE 5		GRADE 8		GRADE 9
						
SIZE (DIA-TPI)	BOLT DIA (INCHES)	PLAIN (FT-LB)	PLATED (FT-LB)	PLAIN (FT-LB)	PLATED (FT-LB)	PLATED (FT-LB)
5/16-18	0.3125	17	13	25	18	22
3/8-16	0.3750	31	23	44	33	39
7/16-14	0.4375	49	37	70	52	63
1/2-13	0.5000	75	57	105	80	96
9/16-12	0.5625	110	82	155	115	139
5/8-11	0.6250	150	115	220	160	192
3/4-10	0.7500	265	200	375	280	340
7/8-9	0.8750	395	295	605	455	549
1-8	1.000	590	445	910	680	823
1 1/8-7	1.1250	795	595	1290	965	1167
1 1/4-7	1.2500	1120	840	1815	1360	1646
1 3/8-6	1.3750	1470	1100	2380	1780	2158
1 1/2-6	1.500	1950	1460	3160	2370	2865

NOTE:

When using the torque data in the chart, the following rules should be observed:

- Bolt manufacturer’s particular specifications should be consulted when provided.
- Flat washers of equal strength must be used.
- All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.
- Torque values specified are for bolts with residual oils or no special lubricants applied.
- Torque values for socket-head capscrews are the same as for grade 8 capscrews.
- Do not use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.
- Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.
- Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.
- Tighten plastic insert or crimped steel-type lock nuts to approximately 110 percent of the dry torque values shown in the chart below, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value. *Note: “Lubricated” means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. “Dry” means plain or zinc plated without lubrication. Tighten lubricated bolts to approximately 80% of dry bolts.*

Mounting Kit - PN 32307

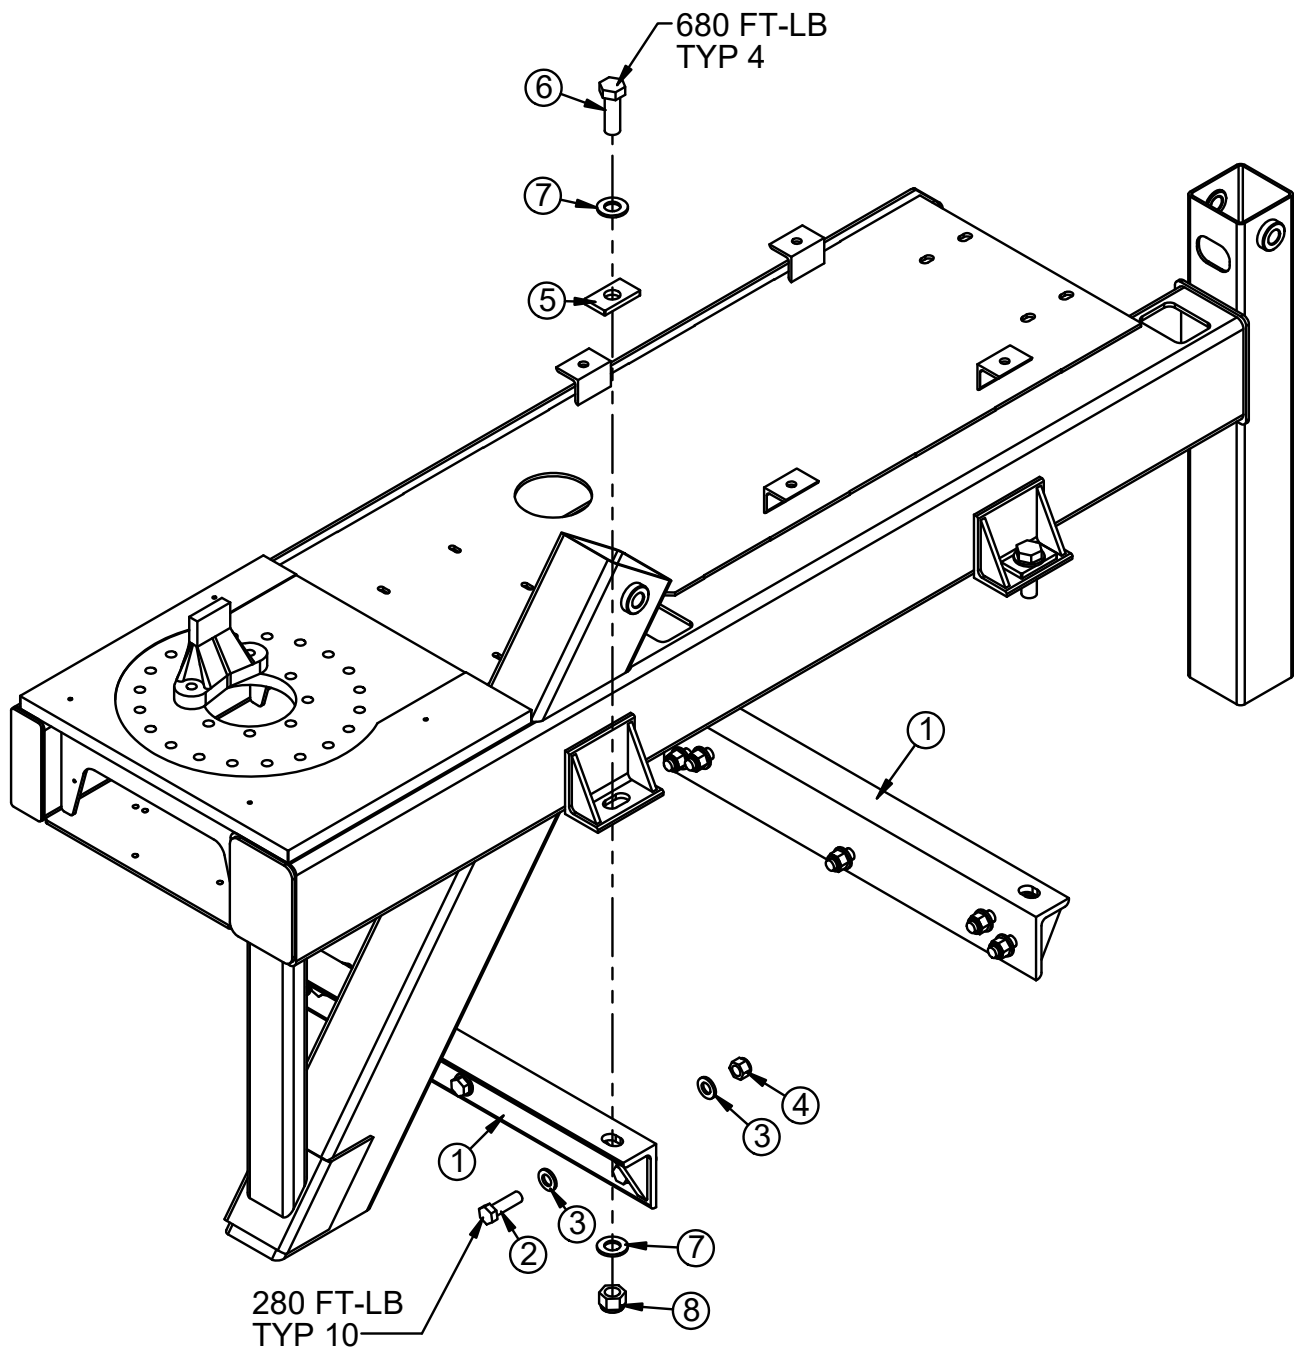

Mounting Kit - PN 32307 Parts List

PN 32307			
ITEM	PART	DESCRIPTION	QTY
1	38670	TIE DOWN 9000 PC BLACK	2
2	58681	CAP SCR 0.75-10X2.50 HHGR8	10
3	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	20
4	C0538	NUT 0.75-10 HHGR8 NYLOC	10
5	56180	TIE DOWN PLATE 4500 PC BLACK	4
6	5199	CAP SCR 1.00-8X3.00 HHGR8	4
7	6538	WASHER 1.00 SAE FLAT YELLOW GR8	8
8	6294	NUT 1.00-8 HHGR8 NYLOC	4
REV. C			

NOTE:
CRANE BASE SHOWN FOR REFERENCE.

Hydraulic Installation

Never modify or alter any of the equipment, whether mechanical, electrical, or hydraulic, without Stellar Industries' approval.

⚠ WARNING Do not touch or grab any hoses that could be under pressure. Release system pressure before attempting to make adjustments or repairs.

Do not attempt service or repair when PTO is engaged.

Disassemble and assemble hydraulic components on a clean surface.

Clean all metal parts in a nonflammable cleaning fluid. Then lubricate all components to aid in assembly.

⚠ WARNING Hydraulic fluid expands when heated. This raises the pressure in an unventilated tank. Release the tank pressure before removing the cap completely. Failure to do so may cause the oil to shoot out of the tank very rapidly and cause severe burns.

⚠ WARNING Do not rely on the hydraulic fluid to support the boom or crane. If hydraulic fluid escapes, the boom or crane can fall immediately. Make sure the ground or blocking is supporting the boom before performing any maintenance or repair.

NOTICE Contaminants in a hydraulic system affect operation and will result in serious damage to the system components. Dirty hydraulic systems are a major cause of component failures.

If evidence of foreign particles is found in the hydraulic system, flush the system.

When installing metal hydraulic tubes, tighten all fittings finger tight. Then, in order, tighten the fittings at the rigid end, the adjustable end, and the mounting brackets. After tubes are mounted, install the hoses. Connect both ends of the hose with all fittings finger tight. Position the hose so it does not rub the machine or another hose and has a minimum of bending and twisting. Tighten fittings in both couplings.

Due to manufacturing methods, there is a natural curvature to a hydraulic hose. The hose should be installed so any bend is with this curvature.

⚠ WARNING



HYDRAULIC FLUID HAZARDS

- High pressure fluid leak will pierce skin.
- Release pressure before working on system.

STAND CLEAR OF POTENTIAL HIGH PRESSURE HYDRAULIC FLUID LEAKS


- Wear sturdy gloves and goggles. Detect leaks with wood or cardboard. NEVER use fingers.
- Fluid injected in skin will injure or kill and must be surgically removed by trained doctor immediately or gangrene will result.

BURN HAZARD

- Oil temperatures may exceed 120°F (35°C).
- Do not touch hydraulic system.
- Hot surface can burn.

CHECK HYDRAULIC HOSES, TUBES, AND PIPES DAILY.

Face Seal / O-Ring Size Chart

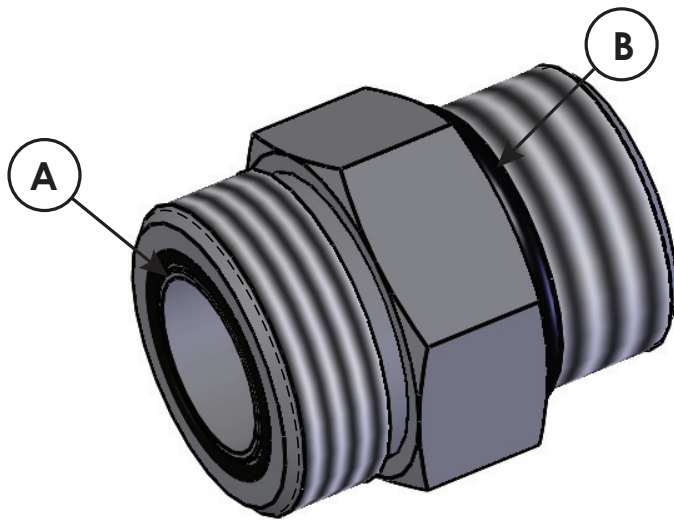

Hose Size	Fitting Size	Face Seal (A) Stellar® PN	O-ring Boss (B) Stellar® PN
1/4"	#4	C2027	D1245
3/8"	#6	C2028	D1246
1/2"	#8	C2029	D1247
5/8"	#10	32223	D1248
3/4"	#12	D1244	D1249
1"	#16		D1250


Fittings

Flat Face O-Ring Seal - FFORX

HOSE FITTING ONLY



FS

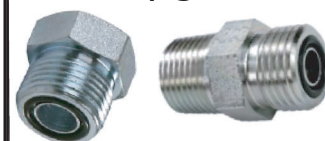


SIZE	THREAD SIZE	LB-FT TORQUE
-4	9/16-18 UNF	21
-5	5/8-18 UNF	25
-6	11/16-16 UN	40
-8	13/16-16 UN	46
-10	1-14 UNS	50
-12	1-3/16-12 UN	75
-16	1-7/16-12 UN	104
-20	1-11/16-12 UN	141
-24	2-12 UN	166
-32	2-1/2-12 UN	423

SAE 37° JIC

HOSE FITTING & FEMALE SWIVEL FITTINGS



JIC

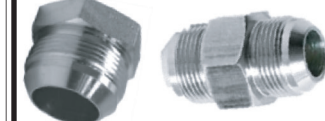

SIZE	THREAD SIZE	LB-FT TORQUE
-2	5/16-24 UNF	7
-3	3/8-24UNF	9
-4	9/16-18 UNF	13
-5	5/8-18 UNF	16
-6	11/16-16 UN	20
-8	13/16-16 UN	41
-10	1-14 UNS	64
-12	1-3/16-12 UN	89
-16	1-7/16-12 UN	122
-20	1-11/16-12 UN	143
-24	2-12 UN	178
-32	2-1/2-12 UN	275

Fittings - Continued

O-Ring Boss

HYDRAULIC FITTING ONLY



-SIZE	THREAD SIZE	ORB	AORB
-4	7/16-20 UNF	15	23
-6	9/16-18 UNF	24	32
-8	3/4-16 UNF	40	55
-10	7/8-14 UNF	61	76
-12	1-1/16-12 UN	101	116
-16	1-5/16-12 UN	120	119
-20	1/5/8-12 UN	125	125
-24	1-7/8-12 UN	140	140
-32	2-1/2-12 UN	157	157


Face Seal Female Swivel Fittings

HYDRAULIC FITTING ONLY



-SIZE	THREAD SIZE	LB-FT TORQUE
-4	9/16-18 UNF	13
-6	11/16-16 UN	23
-8	13/16-16 UN	40
-10	1-14 UNS	61
-12	1-3/16-12 UN	86
-16	1-7/16-12 UN	119
-20	1-11/16-12 UN	125
-24	2-12 UN	140


Hydraulic Kit - PN 13040

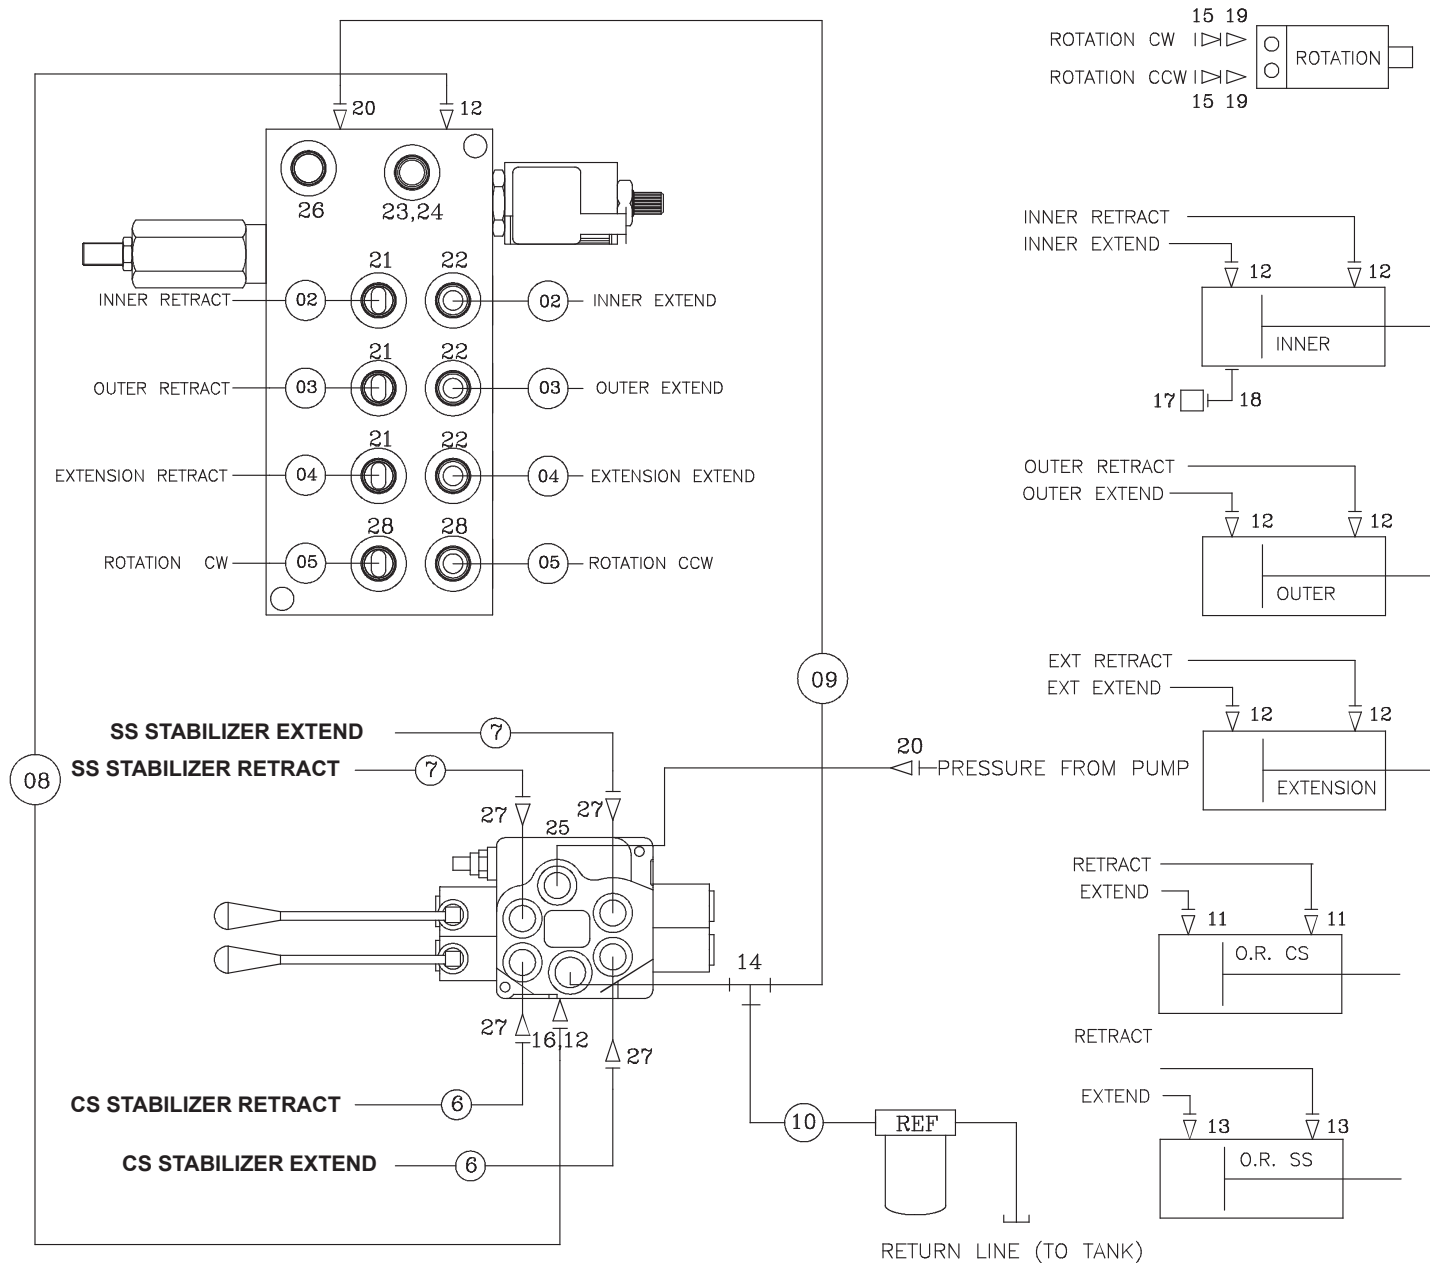

Hydraulic Kit - PN 13040 Parts List

PN 13040			
ITEM	PART	DESCRIPTION	QTY
01	13321	HOSE KIT,6000 CRANE (INCL:2-10)	1
02	12998	HOSE-HYD .38 X 54	2REF
03	12999	HOSE-HYD .38 X 72	2REF
04	26768	HOSE-HYD .38 X 120	2REF
05	5359	HOSE-HYD .25 X 180	2REF
06	7767	HOSE-HYD .25 X 93	2REF
07	13022	HOSE-HYD .25 X 73	2REF
08	13024	HOSE-HYD .38 X 110	1REF
09	13023	HOSE-HYD .50 X 120	1REF
10	13289	HOSE-HYD .50 X 76	1REF
11	C5572	FTG 4-4 MFS-MAORB 45	2
12	0279	FTG 6-6 MFS-MORB STRAIGHT	8
13	D1291	FTG 4-4 MFS-MORB STRAIGHT	2
14	7350	FTG 8-8-8 MFS-MAORB-MFS TEE	1
15	C4922	FTG 4-6 MFS-MORB STRAIGHT	2
16	C0885	FTG 8-6 MORB-FORB STRAIGHT REDUCER	1
17	49315	SWITCH PRES OVERLD CD-11C-2900R/WD	1
18	3861	FTG 6-6 MAORB-FORB 90	1
19	C1111	FTG 10-6 MORB-FORB STRAIGHT REDUCER	2
20	1554	FTG 8-8 MFS-MORB STRAIGHT	2
21	25361	FTG 6-6 MFS-MAORB 90 LONG	3
22	C0338	FTG 6-6 MFS-MAORB 90	3
23	D1430	FTG 6-4 MORB-FP STRAIGHT	1
24	6397	GAUGE OIL LF 2.5 0-5000 CBM	1
25	D1535	FTG 8 MORB PLUG HOLLOW HEX	1
26	C4961	FTG 6 MORB PLUG HOLLOW HEX	1
27	12160	FTG 4-8 MFS-MORB STRAIGHT	4
28	3338	FTG 4-6 MFS-MAORB 90	2
REV. H			


Control Kit - PN 138392

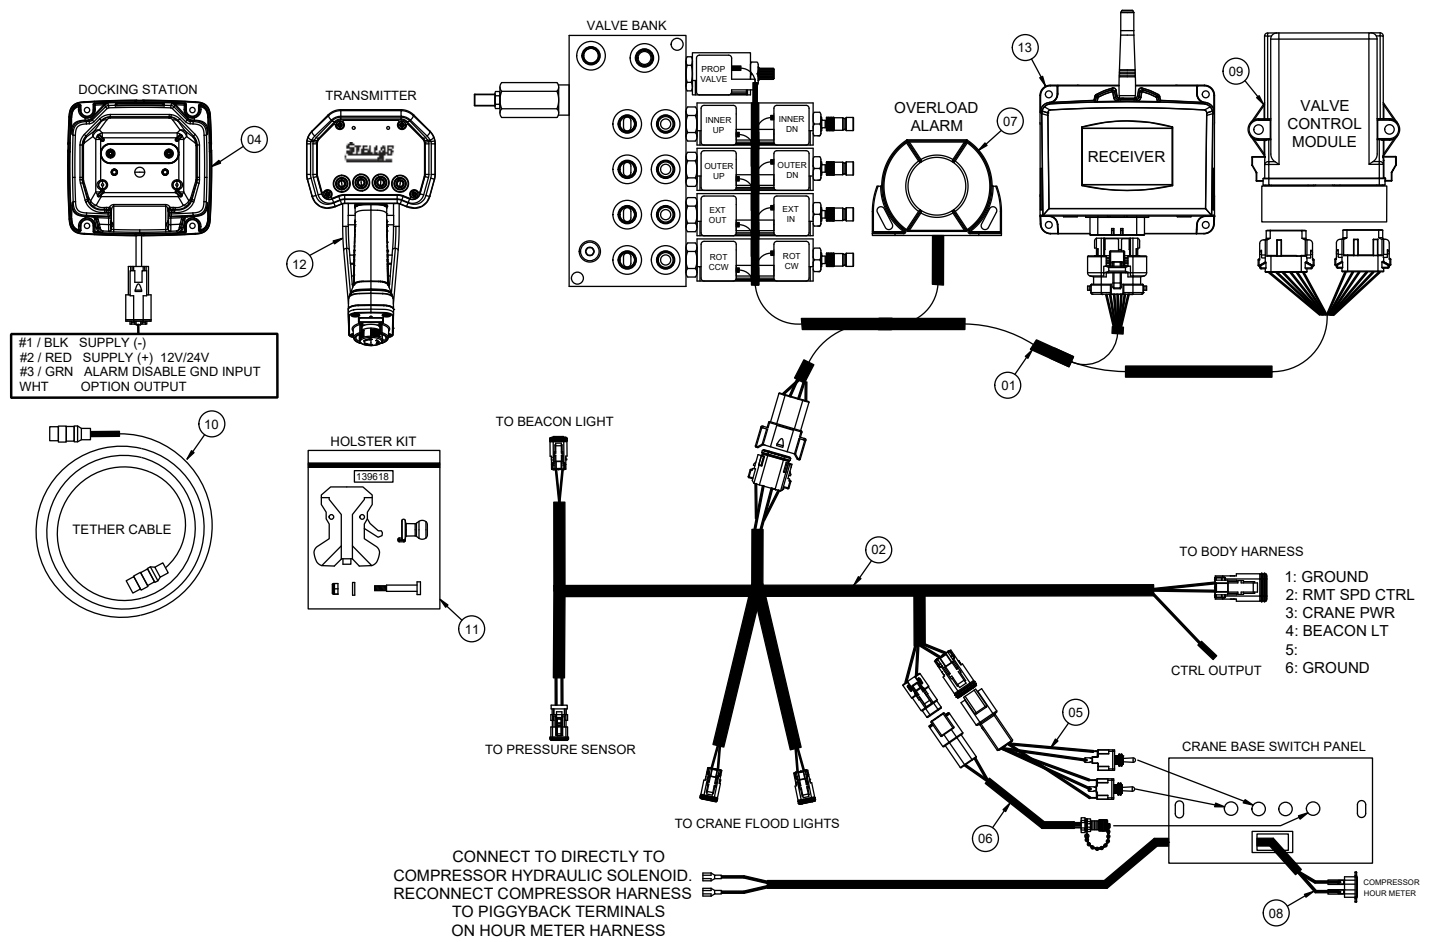

Control Kit - PN 138392 Parts List

PN 138392			
ITEM	PART	DESCRIPTION	QTY
01	137824	WIRE HRNS TS CRANE 32/45/6000 G6/CL451	1
02	137825	WIRE HRNS TS CRANE MAST 32/45/6000 G6/CL451	1
03	113570	RADIO CTRL ASM 4 FCTN G6 PG STC	1
04	113551	DOCKING STATION RADIO TRANS CDTPRO	1
05	135456	SWITCH ASM TS CRANE BASE 32/45/6000	1
06	135457	CONNECTOR ASM TETHER PNL MNT M12	1
07	78246	BACKUP ALARM 87 DECIBEL	1
08	115324	HOUR METER ASM TS CRANE CPRSR	1
09	135455	CTRL MODULE TIRE CRANE G6 CL451	1
10	89152	TETHER CABLE 10M M-F M12 SCANRECO	1
11	139618	HOLSTER KIT TRANSMITTER BELT CLIP SCANRECO CDT PRO / STC	1
12	138896	TRANSMITTER 4 FCTN STC G6 PG	REF
13	138897	RECEIVER STC G6 2.4GHZ 14P	REF
REV. INTITAL RELEASE R872			

Decal Placement - PN 13356

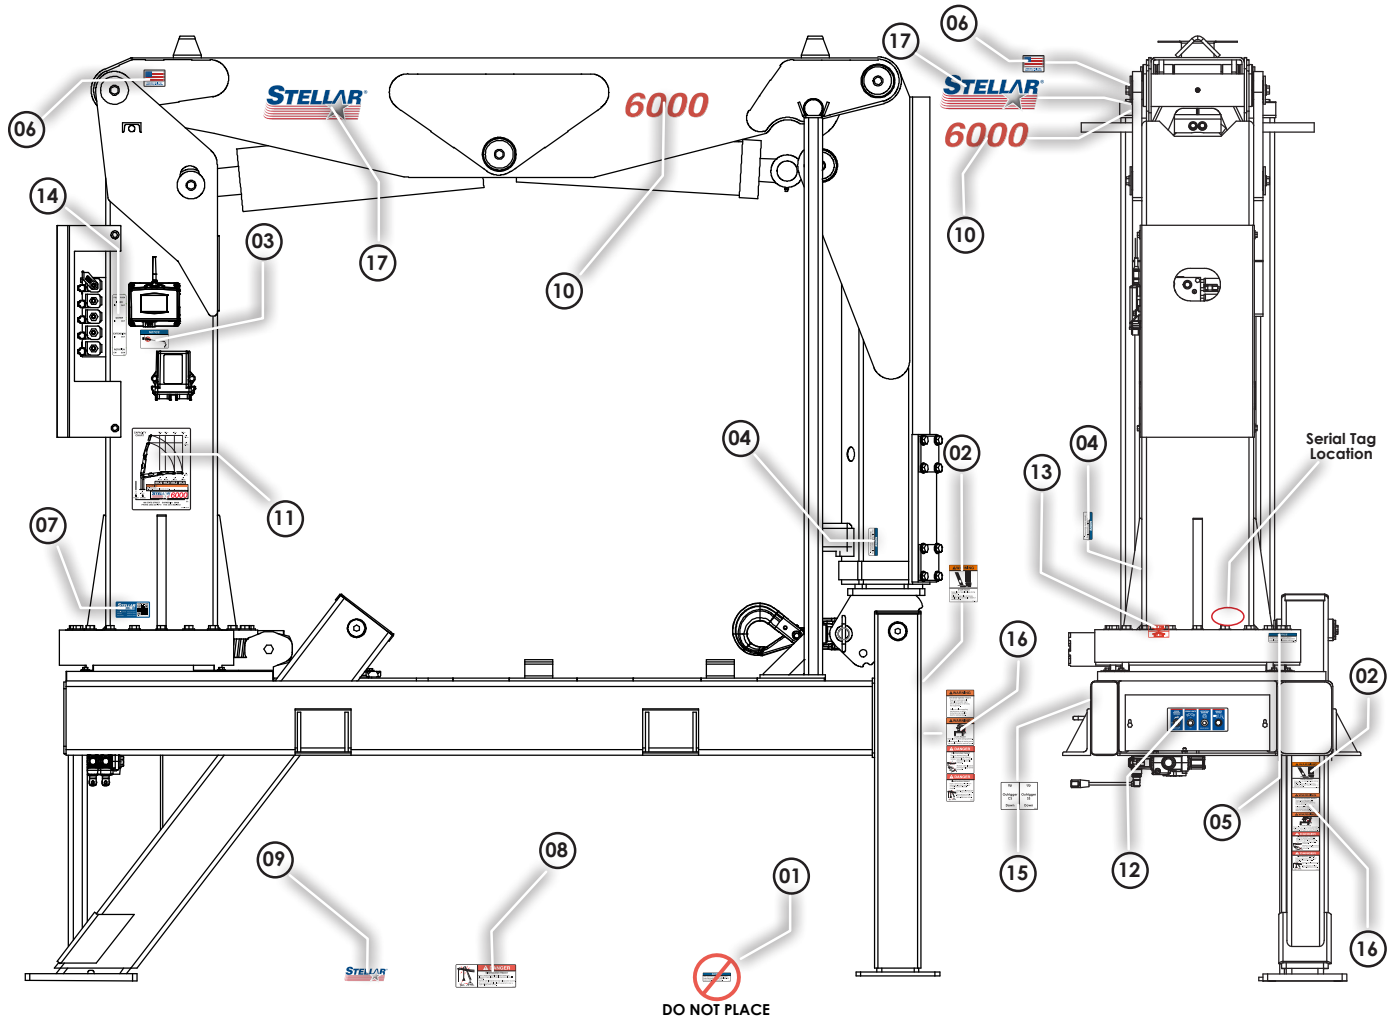

PN 13356 - 6000 DECAL KIT MAIN

PN 85362 - DECAL KIT GENERAL CRANE

ITEM	PN	DESCRIPTION	LOCATION	QTY
01	15172	DECAL ASME/ANSI B30.22/B30.5	NOT USED ON 6000. DISCARD.	1
02	C4795	DECAL DANGER FOOT	Stabilizer Backside (both sides)	2
03	73929	DECAL RADIO PRESSURE WASHER NOTICE	Crane Mast	1
04	16973	DECAL USE STELLAR APPROVED ATTACHMT	Main Boom (both sides)	2
05	9188	DECAL WORM GEAR LUBRICATION	Crane Base	1
06	35234	MADE IN THE USA - STELLAR	Crane Mast (both sides)	2
07	4214	DECAL CONTACT STELLAR	Crane Mast	1

For use with body:

08	C4545	DECAL DANGER ELECTROCUTION	Four corners of the body	4
09	C5910	DECAL STELLAR LOGO 4.00X9.50	Optional	3

PN 85366 - DECAL KIT SPECIFIC 6000


ITEM	PN	DESCRIPTION	LOCATION	QTY
10	54593	DECAL 6000 ID PRE-MASKED	Main Boom - Both Sides	2
11	5165	DECAL CAPACITY 6000	Crane Mast/Reservoir	2
12	139603	DECAL 3200 PANEL	Crane Control Center	1
13	4188	DECAL ROTATIONAL ALIGNMENT	Crane Base	1
14	41331	DECAL VB CONTROL TIRE CRANE	Crane Mast	1
15	13036	DECAL CRANE OUTRIGGER	Crane Base	1
16	85504	DECAL WARNING PLACARD SMALL	Stabilizers CS & SS	2
17	53850	DECAL STELLAR LOGO 4X11.5 PRE-MASKED	Main Boom - Both Sides	2

Chapter 3 - Assembly Drawings

Chapter Content

Base Assembly - PN 22140	20
Base Assembly - PN 22140 Parts List	21
Gear Bearing - PN 4032.....	22
Stabilizer Valve Bank - PN 61040	23
Mast Assembly - PN 22141.....	24
Mast Assembly - PN 22141 Parts List.....	25
Valve Bank - PN 44530	26
Valve Bank - PN 44530 Parts List.....	27
Valve Bank (Alternate)- PN 125254	28
Valve Bank (Alternate) - PN 125254 Parts List	29
Main Boom Assembly - PN 22142	30
Main Boom Assembly - PN 22142	31
Extension Boom Assembly - PN 22143	32
Extension Boom Assembly - PN 22143 Parts List	33
Radio Remote	34
Radio Remote Parts List.....	35

Base Assembly - PN 22140

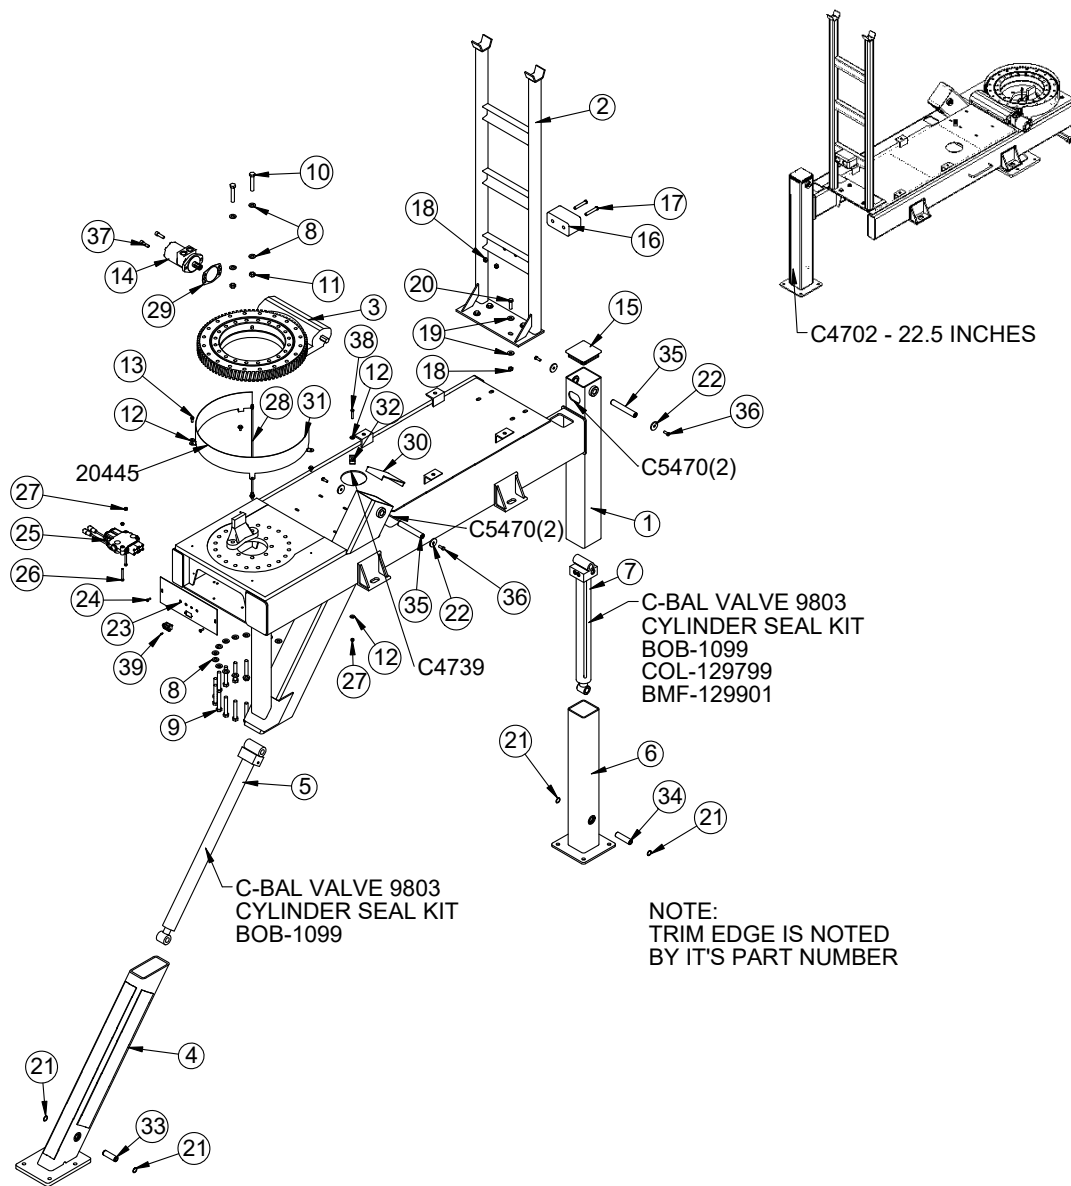


Base Assembly - PN 22140 Parts List

PN 22140			
ITEM	PART	DESCRIPTION	QTY
1	4789	BASE 6000 CRANE	1
2	4792	SADDLE 6000	1
3	4032	BEARING SWING DRIVE 6000	1
4	4817	OUTRIGGER LEG SS 6000	1
5	D0773	CYLINDER 2.00X25.50	1
6	4816	OUTRIGGER LEG CS 6000	1
7	3783	CYLINDER 2.00X18.75 PAINTED BLK	1
8	C5902	WASHER 0.63 SAE FLAT YELLOW GR8	24
9	77555	CAP SCR 0.63-11X4.00 HHGR8 W/RED PATCH	20
10	D1312	CAP SCR 0.63-11X3.50 HHGR8	2
11	24868	NUT 0.63-11 HHGR8 NYLOCK ZY	2
12	0343	WASHER 0.31 USS FLAT	6
13	0420	CAP SCR 0.31-18X0.75 HHGR5	4
14	11458	MOTOR HYD 10 CU IN/ PNT BLK	1
15	53569	PLUG PLASTIC 5.00X5.00 SQ-5	1
16	3945	BUMPER DOCK 3X3.38X6	1
17	0504	CAP SCR 0.50-13X3.00 HHGR5	2
18	C6106	NUT 0.50-13 HHGR5 NYLOC	6
19	0352	WASHER 0.50 USS FLAT ZINC	8
20	0500	CAP SCR 0.50-13X1.75 HHGR5	4
21	3875	SNAP RING 1.00 INTERNAL	4
22	9320	PIN CAP 0.44X1.75X0.19 YZ	4
23	4876	PLATE SWITCH MTG 6000 PC BLACK	1
24	0479	CAP SCR 0.25-20X0.75 HHGR5	2
25	61040	VB 2 SECT W/PB HYDROCONTROL	1
26	0489	CAP SCR 0.31-18X2.50 HHGR5	2
27	0342	NUT 0.31-18 HHGR5 NYLOC	3
28	104018	HARDWARE KIT BASE ASM 30IN GREASE LINE	1
29	21151	GASKET MOTOR 008-10056-1	1
30	30490	CAP ASM OUTRIGGER SLANT	1
31	44605	GUARD TTB 6000 CRANE LZR PC BLACK	1
32	8622	CLAMP HOSE/TUBE AG-2	1
33	4912CR	PIN 1.00X3.25 SR ZC	1
34	D0977CR	PIN 1.00X3.75 ZC	1
35	11688CR	PIN 1.00X6.31D&T ZC	2
36	0351	CAP SCR 0.38-16X1.00 HHGR5	4
37	62484	CAP SCR 12MMX40MM SH	2
38	0487	CAP SCR 0.31-18X1.75 HHGR5	1
39	18611	SCREW #6-32X0.38 HH MACH SELF TAP	2
REV. Q R872			

Gear Bearing - PN 4032

USE EP2 LITHIUM COMPLEX GREASE, STELLAR PN 78090
ON WORM BEARINGS AND BEARING RACE

GREASE MAIN BEARING RACE THROUGH
REMOTELY MOUNTED GREASE ZERK

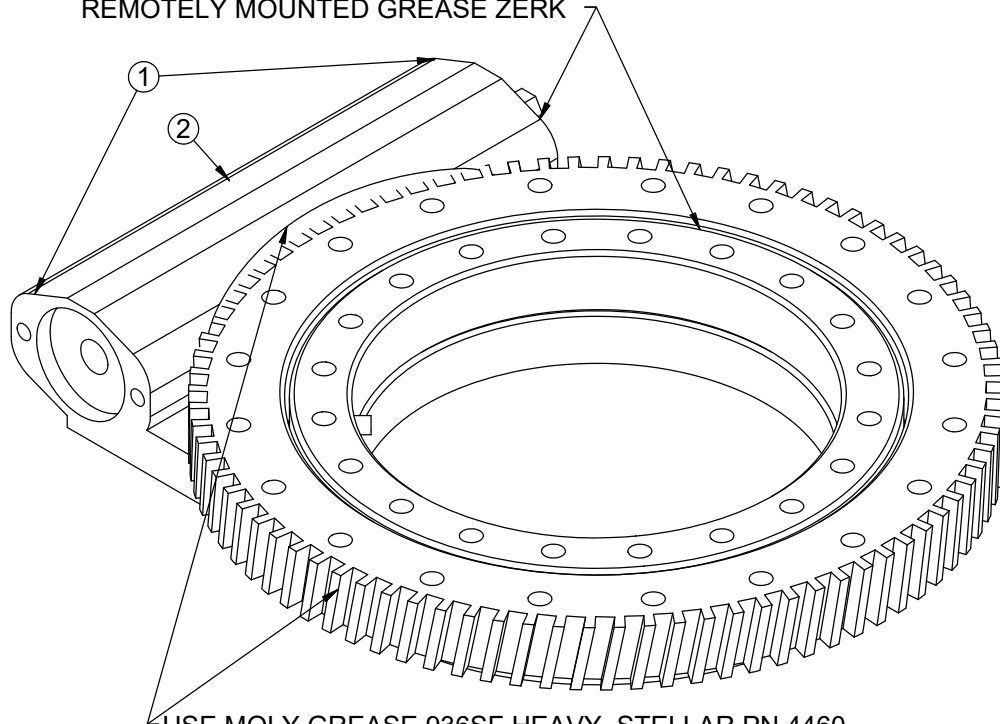

USE MOLY GREASE 936SF HEAVY, STELLAR PN 4460
ON WORM AND BEARING GEAR TEETH


PN 4032

ITEM	PART	DESCRIPTION	QTY
1	27184	BEARING AND SEAL KIT 3200/4500/6000GP	1
2	29458	WORM 6000 GP 170-10063-1	1


ITEM	PART	DESCRIPTION	QTY
1	16931	BEARING AND SEAL KIT 6000 TTB KNMTS BEFORE 2006	1
2	30440	WORM 6000 KINEMATICS W17A02 BEFORE 2006	1

ITEM	PART	DESCRIPTION	QTY
1	67866	BEARING AND SEAL KIT 6000 TTB KNMTS AFTER 2006	1
2	65679	WORM 6000 KINEMATICS W17B02 AFTER 2006	1

Stabilizer Valve Bank - PN 61040

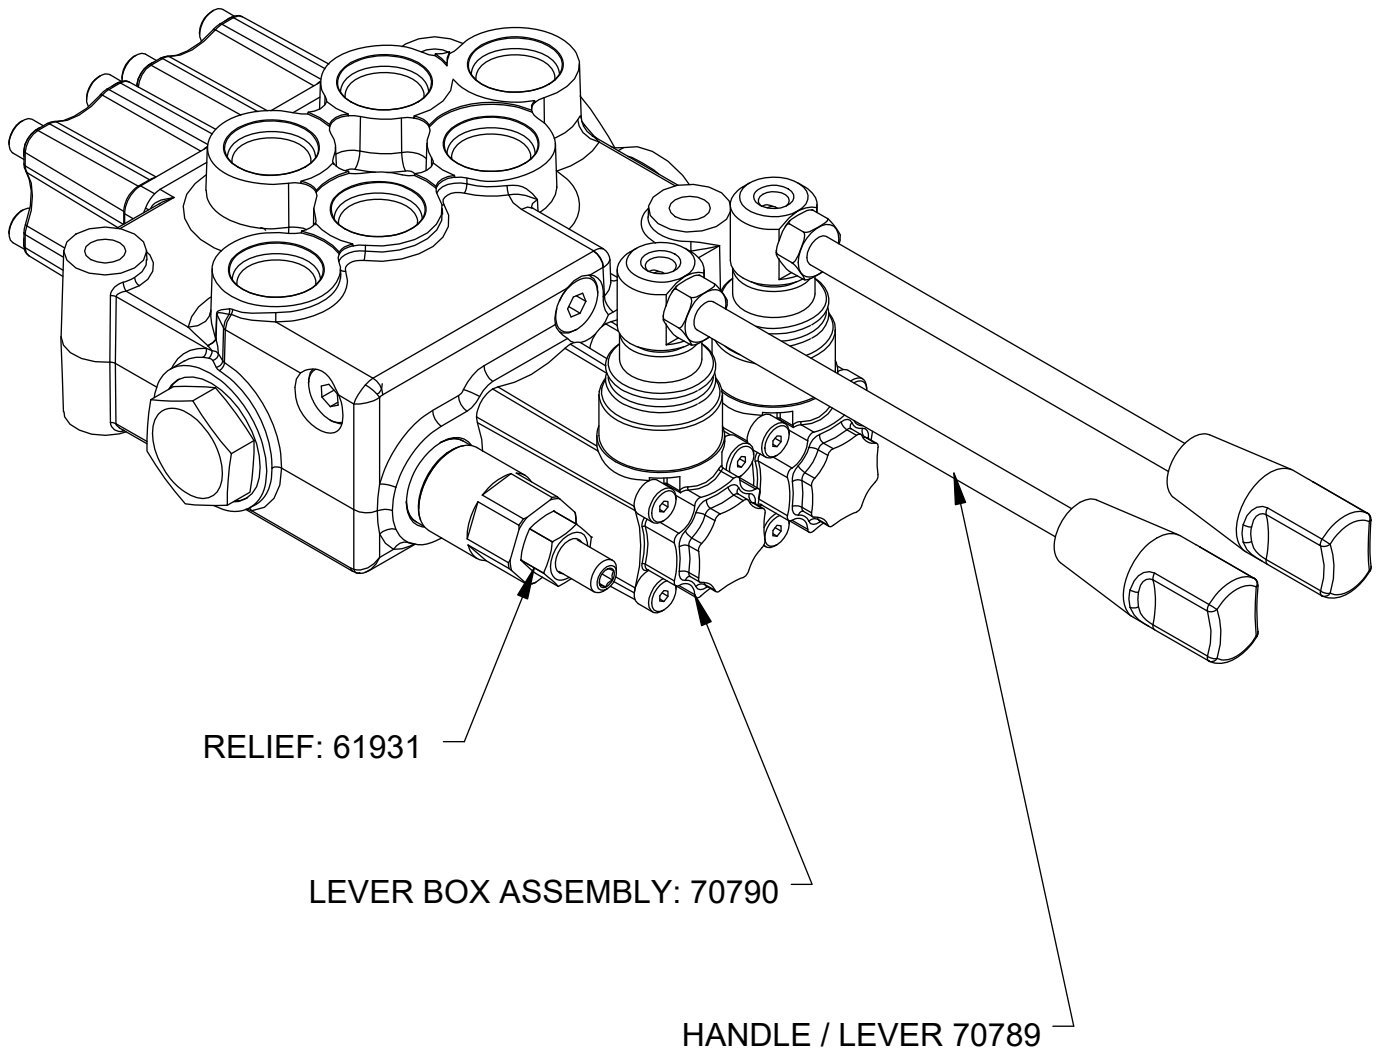

Mast Assembly - PN 147166

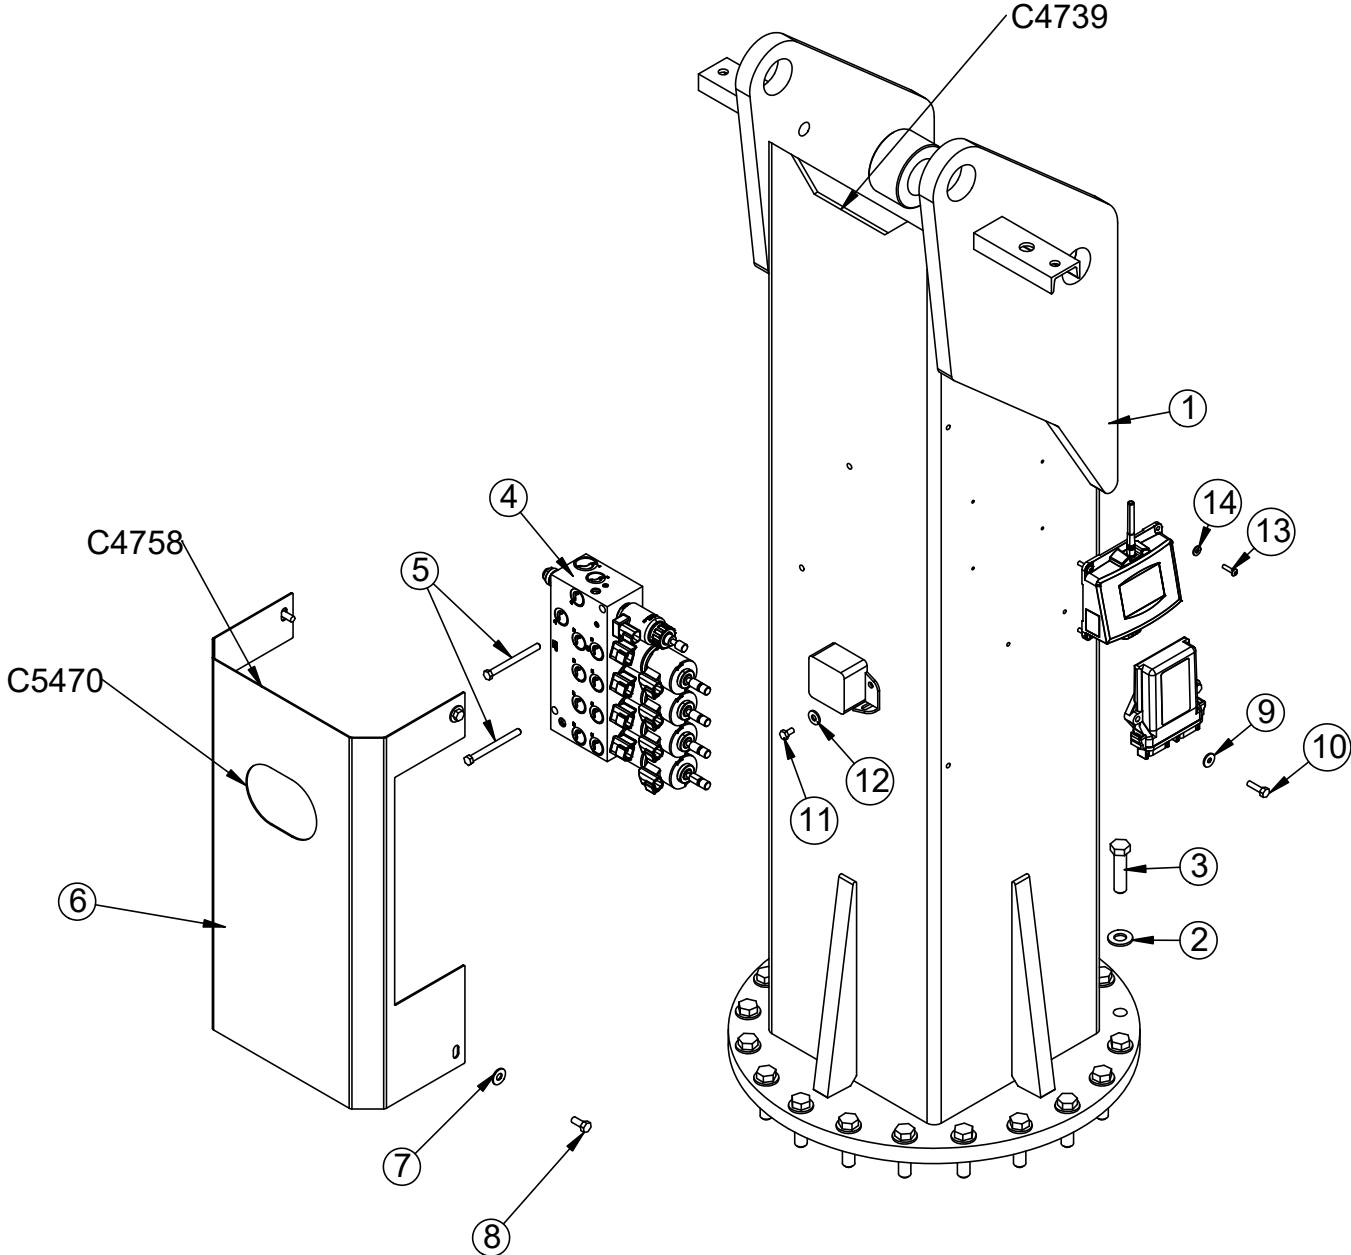

Mast Assembly - PN 147166 Parts List


PN 147166			
ITEM	PART	DESCRIPTION	QTY
1	4486	MAST 6000 SERIES CRANE	1
2	C5902	WASHER 0.63 SAE FLAT YELLOW GR8	20
3	66838	CAP SCR 0.63-11X2.50 HHGR8 W/RED PATCH	20
4	125254	VB 4 SECT W/PROP DELTROL 8GPM V2	1
5	0490	CAP SCR 0.31-18X3.50 HHGR5	2
6	26765	GUARD VB 6000 RADIO STERLING VB	1
7	0343	WASHER 0.31 USS FLAT ZINC	4
8	0420	CAP SCR 0.31-18X0.75 HHGR5	4
9	D0917	WASHER 0.25 FLAT SS	2
10	0480	CAP SCR 0.25-20X1.00 HHGR5	2
11	0478	CAP SCR 0.25-20X0.50 HHGR5	2
12	0340	WASHER 0.25 USS FLAT	2
13	D0894	CAP SCR #10-24X0.75 BTNHD SS	4
14	D0178	WASHER #10 SAE FLAT	4
REV. INITIAL RELEASE ECO-61 - 20260512			

ITEMS NOT SHOWN		
PART	DESCRIPTION	QTY
C5470	LOOM SPLIT 0.38 CORRUGATED POLYETHYLENE	14 IN
C4758	TRIM EDGE 0.06X0.56 AL	12 IN
C4739	TRIM EDGE 0.38X0.63 AL	5 IN



NOTES:

NOTE: RADIO RECEIVER, CONTROLLER, & ALARM SHOWN FOR REFERENCE

Valve Bank - PN 44530

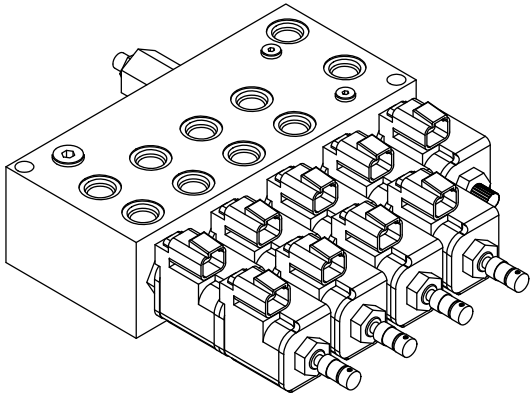

HYDRAULIC SCHEMATIC

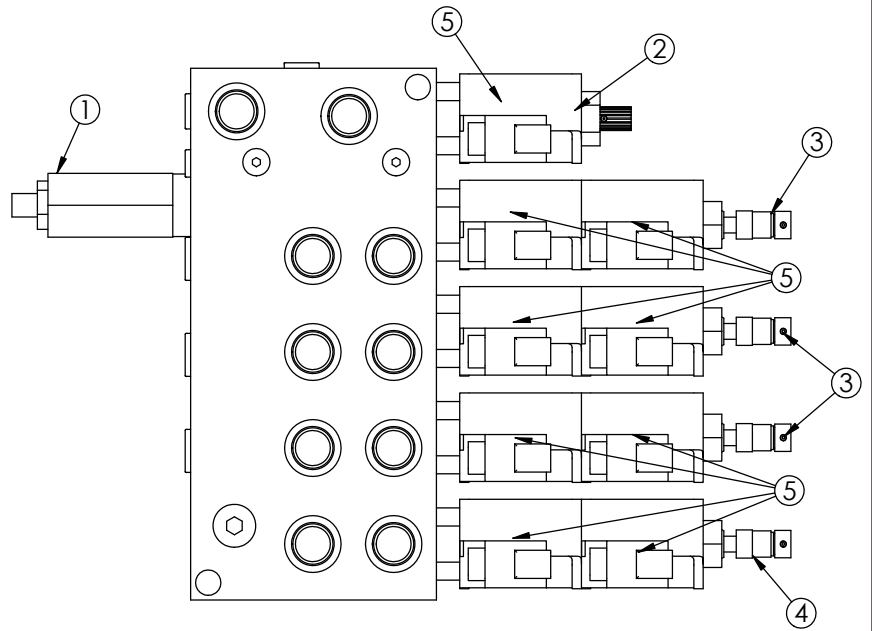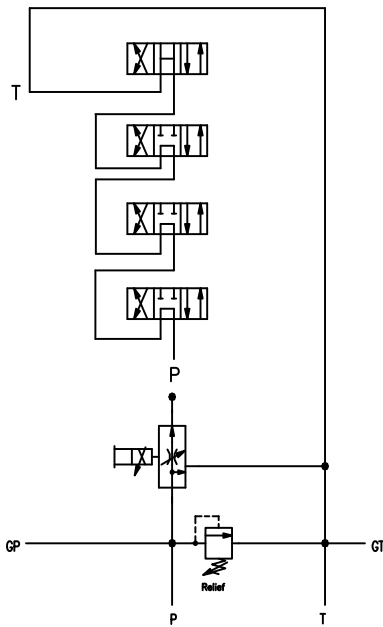


Valve Bank - PN 44530 Parts List

PN 44530				
ITEM	PART	DESCRIPTION	QTY	TORQUE
1	25367	RELIEF VALVE 24685/24690	1	37 FT-LB
	25368	SEAL KIT 25367		
2	24960	VALVE FLW CTRL PRP/JP04C3150N 0-8	1	20-22 FT-LB
	25369	SEAL KIT 24960/25381		
3	25371	VALVE SOLND 3 POS 4 WAY TAND G04571	3	25 FT-LB
4	25372	VALVE SOLND 3 POS 4 WAY OPEN G04591	1	25 FT-LB
	25373	SEAL KIT 25371/25372		
5	44532	COIL 12VDC DUETSCH CAP012H	9	3 FT-LB



NOTE:

PART NUMBERS 24960 & 25371 DO NOT INCLUDE COIL PART NUMBER 44532

Valve Bank (Alternate)- PN 125254

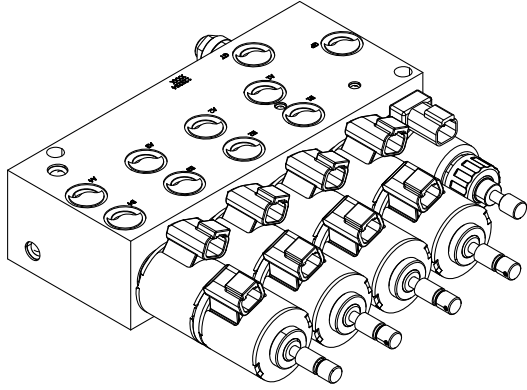

HYDRAULIC SCHEMATIC

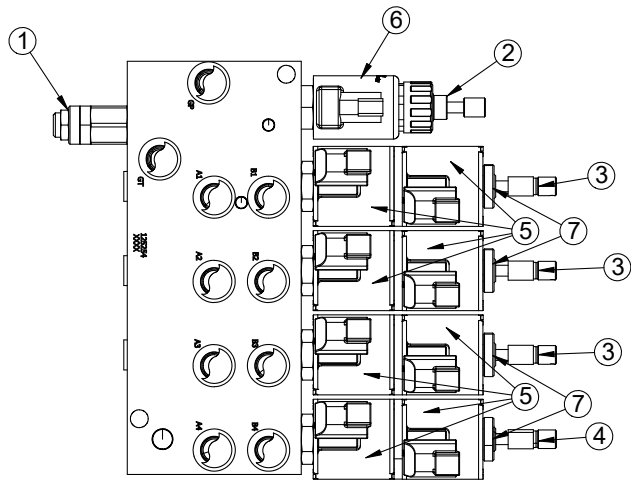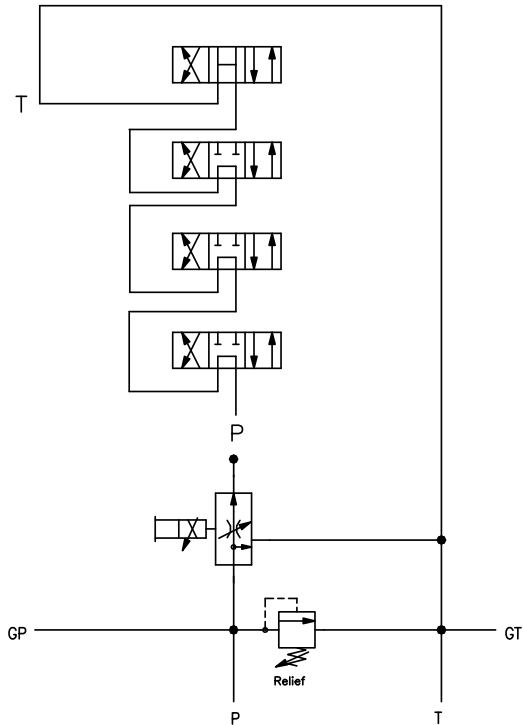


Valve Bank (Alternate) - PN 125254 Parts List

PN 125254				
ITEM	PART	DESCRIPTION	QTY	TORQUE
1	125946	VALVE RELIEF 125254	1	37 FT-LB
	126271	SEAL KIT 125946		
2	125255	VALVE FLW CTRL PRP 0-8 GPM DEL	1	20-22 FT-LB
	126270	SEAL KIT 125255		
3	125256	VALVE SOLND 3 POS 4 WAY 8GPM TANDEM DEL	3	25 FT-LB
4	125257	VALVE SOLND 3 POS 4 WAY 8GPM OPEN DEL	1	25 FT-LB
	126269	SEAL KIT 125256/125257		
5	125947	COIL 12VDC DEUTSCH DEL	8	3 FT-LB
6	125948	COIL 12VDC DEUTSCH PROP DEL	1	3 FT-LB
7	134698	NUT COIL RETAINING DELTROL SIZE 10	4	3 FT-LB

Main Boom Assembly - PN 22142

PN 22142			
ITEM	PART	DESCRIPTION	QTY
1	4626	INNER BOOM 6000 SERIES CRANE	1
2	4656	CYLINDER 60 SERIES INNER	1
3	4657	CYLINDER 60 SERIES OUTER	1
4	60029CR	PIN 2.00X14.13 D&T ZC	2
5	35412CR	PIN 2.00X11.88 SR/D&T ZC	2
6	C1592	ZERK 1/8 NPT STRAIGHT	1
7	5145	PIN CAP 0.56X3.50X.25	8
8	D0790	WASHER 0.50 SAE FLAT YELLOW GR8	8
9	10172	CAP SCR 0.50-13X1.00 HHGR8	8
10	4381	BUSHING 32DXR32 2.00X2.00 GARLOCK	2


Extension Boom Assembly - PN 22143

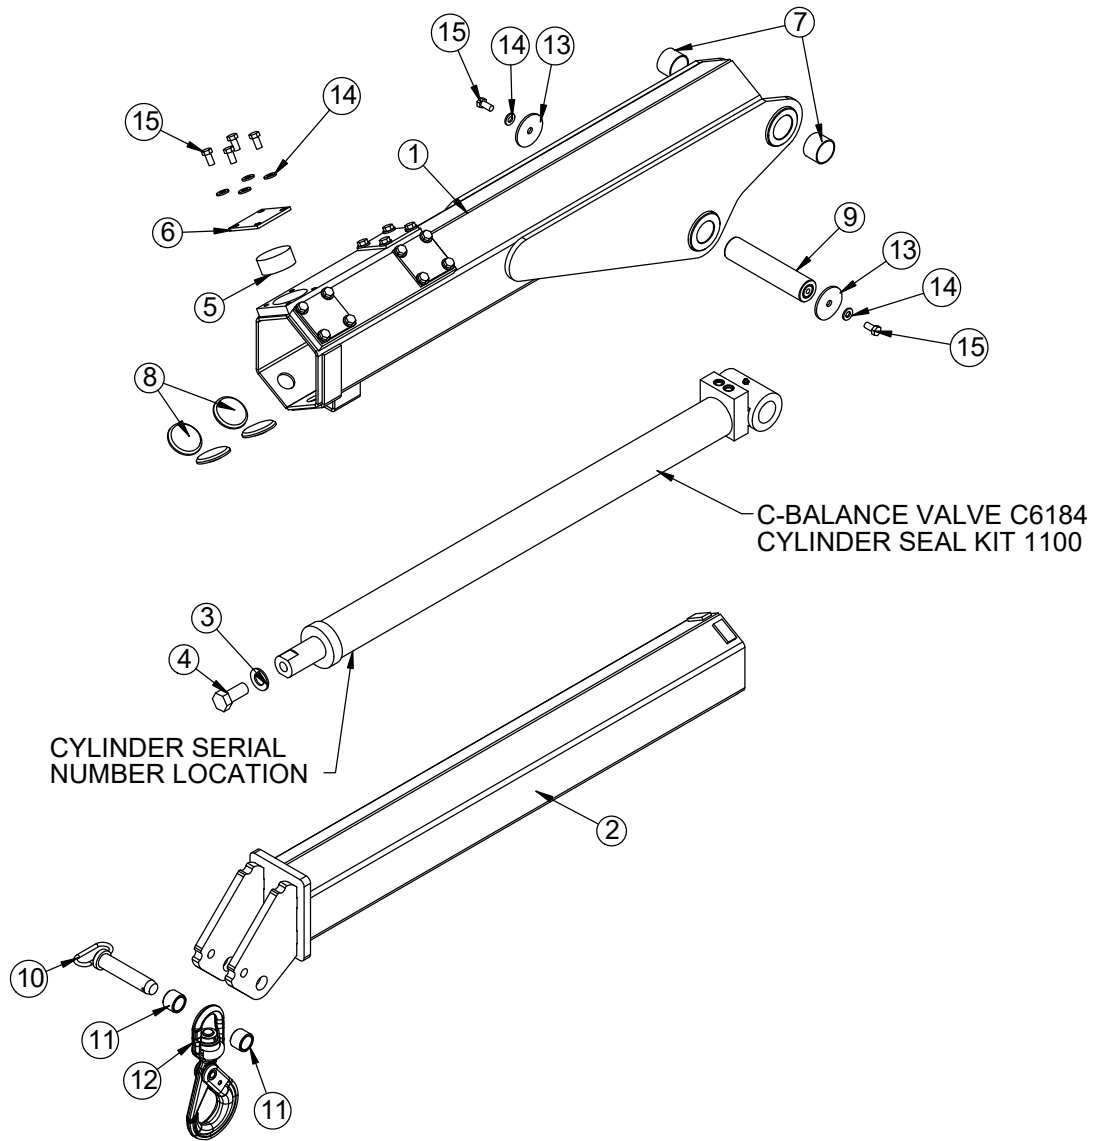

Extension Boom Assembly - PN 22143 Parts List

PN 22143			
ITEM	PART	DESCRIPTION	QTY
1	4607	OUTER BOOM 6000 SERIES CRANE	1
2	4528	EXT BOOM 6000 SERIES CRANE	1
3	6538	WASHER 1.00 SAE FLAT YELLOW GR8	1
4	5191	CAP SCR 1.00-8X2.25 HHGR5	1
5	9435	WEAR PAD 1.34X3.00 RND NYLATRON	4
6	9434PC	PLATE WEAR PAD COVER 6000	4
7	4380	BUSHING 32DXR24 2.00X1.50 GARLOCK	2
8	9364	WEAR PAD 0.34X3.00 RND NYLATRON	4
9	9711CR	PIN 2.00X8.88 D&T ZC	1
10	5192	PIN HITCH 1.25X5.13	1
11	125094	COLLAR 1.26X1.63X1.19 PC BLACK	2
12	133522	HOOK 6.7 TON SWIVEL W/ BEARING SELF LOCKING	1
13	5145	PIN CAP 0.56X3.50X.25	2
14	D0790	WASHER 0.50 SAE FLAT YELLOW GR8	18
15	10172	CAP SCR 0.50-13X1.00 HHGR8	18
16	4658	CYLINDER EXT 60 SERIES	1
REV. E			

Radio Remote

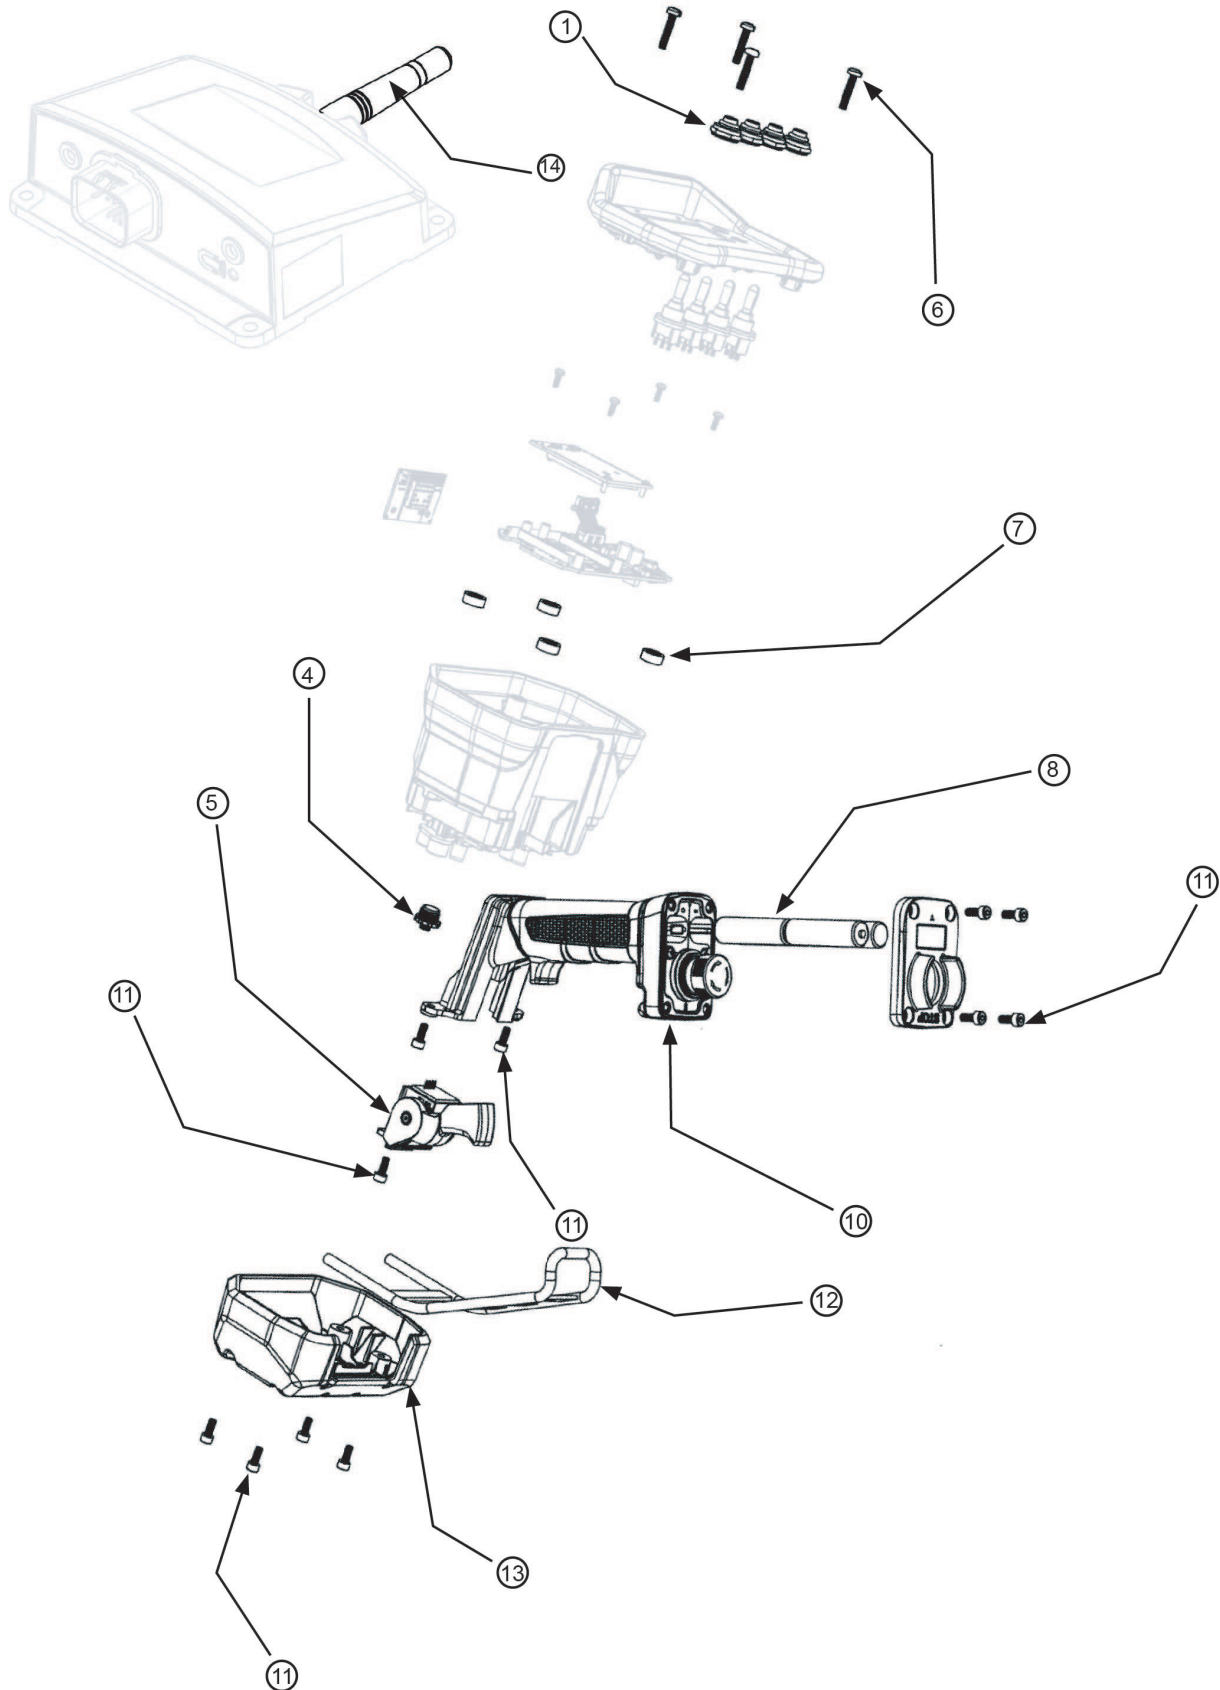

Radio Remote Parts List

WIRELESS REMOTE REPLACEMENT PARTS		
ITEM	PART	DESCRIPTION
1	113574	SEALING BOOT TGL SWITCH HALF HEX M12
4	125676	DUST CAP M12 MALE W/RBR LEASH G6 PG
5	113555	TRIGGER ASM G6 PG
6	125677	SCREW M4 X 20MM PAN HD TORX A4 SS
7	125675	DUST CAP M12 MALE W/RBR LEASH G6 PG
8	113552	BATTERY RECHRG AA NIMH
9	113558	BATTERY COVER G6 PG
10	113557	HANDLE ASM G6 PG
11	125678	SCREW M4 X 10MM SHCS BLK STL
12	113554	GUARD FRAME G6 PG
13	113556	SHROUD ASM G6 PG
14	113579	ANTENNA 2.4GHZ TNC 80MM FLEX BLUE
REQ878		



Subject to Change without Notification.
© 2024 Stellar Industries, Inc.