



**CID**

**ATTACHMENTS**

**FORESTRY**

**DISC MULCHER**

**OWNER'S MANUAL**



FEB  
2026

OPERATING INSTRUCTIONS | SAFETY RULES | MAINTENANCE PROCEDURES

## REGISTER YOUR PRODUCT

# CID

### 336-859-2002

MODEL

WEIGHT

PART

HP RANGE

SERIAL

HYDRAULIC PRESSURE

HYDRAULIC FLOW

[WWW.CIDATTACHMENTS.COM](http://WWW.CIDATTACHMENTS.COM)

Please see the inside of the back cover for instructions of where to find your model and serial number.

## **WARNING**

To prevent personal injury or even death, be sure you read and understand all the instructions in this manual and other related OEM equipment manuals! This attachment, if not used and maintained properly, can be dangerous to users unfamiliar with its operation. Do not allow operating, maintaining, adjusting, or cleaning of this attachment until the user has read this manual and has developed a thorough understanding of the safety precautions and functions of the unit. This attachment is designed for the purpose specified. DO NOT modify or use this attachment for any application other than that for which it was designed. Attachments maintained or operated improperly or by untrained personnel can be dangerous, exposing the user and/or bystanders to possible serious injury or death.

**STORE THIS MANUAL IN THE  
DOCUMENT CANISTER ATTACHED  
TO THIS MACHINE.**



Purchase Date:

Dealer Name:

Address:

Phone Number:

## WELCOME

**T**hank you for choosing CID. This attachment has been designed and manufactured to meet the needs of discerning users. We are committed to providing you with a heavy duty product that will provide years of satisfaction and safe operation.

This manual will provide instructions on how to safely operate and maintain this attachment. All users must read and understand this manual before operating this machine. Upon reading this manual, all users should sign the “Safety Acknowledgment Form” at the end of this manual.

Please record your model and dealer information on the inside front cover. You will be asked to provide this information when ordering parts or requesting service. If you need more information on this product, contact your local dealer or visit [www.cidattachments.com](http://www.cidattachments.com).

*Sincerely,*

*The CID Team*



# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	3
<b>WARRANTY DISCLAIMERS</b> .....	5
<b>SECTION 2 SAFETY INFORMATION</b>	
2.1 Safety Terms.....	6
2.2 Safety Symbols.....	7-8
2.3 Safety Decals.....	9-10
2.4 Skid Steer Loader Requirements.....	11
2.5 Personal Protective Equipment Requirements.....	11
<b>2.6 General Safety Instructions</b> .....	<b>12</b>
<b>2.7 Federal Laws &amp; Regulations</b> .....	<b>13</b>
<b>SECTION 3 OPERATING PROCEDURES</b>	
3.0 Unpacking Your Disc Mulcher.....	14
3.1 Pre-Operating Checklist.....	14
3.2 How to Attach Disc Mulcher.....	15-16
3.3 How to Dismount Disc Mulcher.....	16
3.4 Disc Mulcher Controls.....	16
3.5 Disc Safety.....	17
<b>3.6 First Time Use</b> .....	<b>18-19</b>
3.7 Mulching Operations.....	19
3.8 How to Start Disc Mulcher.....	20
3.9 Mulching Process.....	21
3.10 How To Stop Disc Mulcher.....	22
<b>SECTION 4 MAINTENANCE PROCEDURES</b>	
4.0 Maintenance Overview.....	23-24
4.1 Maintenance Schedule.....	24
4.2 Disc Maintenance Schedule.....	25
4.3 Maintenance Log Instructions.....	26
4.4 Storage Tips.....	26
4.5 Torque Specification Table & Instructions.....	27
4.6 Equipment Requirements.....	27
4.7 Disc Safety.....	28
4.8 Tooth Holder Inspection.....	28
4.9 Tooth Holder Maximum Limit.....	29
4.10 Teeth Inspection.....	30
4.11 Tooth Wear Limit.....	31
4.12 Checking Fastener Tightening Torques & Disc Inspection.....	32
4.13 Replacing Tooth Holders.....	33
4.14 Assembling Mulching Disc.....	33-34
4.15 Partial Disc Inspection.....	35
4.16 Bearing Housing and Drive Bearing Oil Change.....	36-37
4.17 Motor Replacement.....	38
<b>SECTION 5 TROUBLESHOOTING</b>	
5.0 Troubleshooting Chart.....	39-40
<b>SECTION 6 SPECIFICATIONS</b>	
6.0 Specification Chart.....	41
6.1 Disc Nomenclature and Tooth Torque Specifications.....	42
<b>SECTION 7 PARTS INFORMATION</b>	
7.0 Parts Information Form.....	43
7.1 44" Mulcher Disc Parts Diagram.....	44
7.1.1 44" Mulcher Disc Sub-Assembly Parts Diagram.....	45
7.2 60" Mulcher Disc Parts Diagrams.....	46
<b>4</b> 7.2.1 60" Mulcher Disc Sub-Assembly Parts Diagram.....	<b>47</b>

## SECTION 8 WARRANTY INFORMATION

8.0 Warranty Statement.....	48-49
8.1 Warranty Return Authorization Policy.....	49
8.2 Warranty Procedure.....	50

SECTION 9 SAFETY ACKNOWLEDGMENT FORM.....	51
---	----

SECTION 10 MAINTENANCE LOGS.....	52
----------------------------------	----

APPENDIX A FINDING YOUR MODEL AND SERIAL NUMBER.....	53
--	----



### IMPORTANT WARRANTY DISCLAIMERS

**ATTENTION:** If your attachment has control valves, cylinders, Bearing Housings, or motors and they are opened or disassembled, the **WARRANTY** for that item **WILL IMMEDIATELY BE VOIDED!**

**GEAR OIL STATEMENT:** *If applicable in your attachment, check gear oil before each use:*

We recommend using **Shell Omala S2 GX 150 grade gear oil**, for use only with **mulcher** gear boxes, and bearing housings which is separate from the hydraulic fluid used to move your attachment or machine.

(PLEASE NOTE: All our other gear boxes use 85-140 grade gear oil)

**HYDRAULIC FLUID STATEMENT:** Check your machine's hydraulic level and add hydraulic fluid if necessary before each use. Inspect for leaks, and repair if necessary. **Always use your machine's manufacturer recommended hydraulic fluid in your machine!** Fluid must be clean and debris free. If damage occurs from debris in hydraulic fluid flowing from your machine to our attachment it will VOID the warranty on any cylinders, motors, couplers, manifolds &/or valves (relief, lock, selector, check and flow control) downline from that flow.

**NOTE:** If your attachment requires a case drain, the warranty **WILL BE** immediately voided if the attachment is ran without it. Please refer to specifications sheet on page 41 of this manual.



**WARNING:** This product can expose you to chemicals including benzene and mineral oils, which are known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# SECTION 2

## SAFETY INFORMATION

The following terms may be used interchangeably throughout this manual.

Term	Alternate Terms Used
Forestry Disc Mulcher	implement, attachment, mulcher, disc mulcher
Machine	skid steer loader, skid steer tractor, loader, prime mover, host machine, tractor
Operator	user, personnel

The **Disc Mulcher** is designed and manufactured with safety in mind. However, improper use and operator error can result in death or serious injury. It is important that you read and fully understand the safety instructions and operating procedures presented in this manual before operating this attachment. Accident prevention is a combination of good judgment, common sense, awareness and proper training!



### BEFORE YOU OPERATE THIS DISC MULCHER:

KNOW how to safely operate your machine.

READ and UNDERSTAND the safety instructions and operating procedures contained in this manual.

ACKNOWLEDGE your understanding of all safety instructions presented in this manual by signing the “Safety Acknowledgment Form” at the end of this manual.

Although every effort has been made to ensure a safe product, every possible circumstance that could pose a potential hazard cannot be anticipated. The warnings presented in this manual and on this product, are therefore not all-inclusive.

In addition to the safety messages presented in this section, you must also read and understand the safety messages presented in the other sections of this manual.

This manual and the decals on this machine use safety symbols, hazard labels, pictograms and color coded signal words to alert you to potential hazards that may cause severe injury or death if a safety instruction is ignored.



**SAFETY ALERT SYMBOL** - This symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### HAZARD CLASSIFICATIONS

Hazards are identified by the “Safety Alert Symbol” and followed by the signal word “DANGER”, “WARNING”, or “CAUTION”.

#### **DANGER**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.  
This signal word is limited to the most extreme situations.

#### **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

#### **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

#### **NOTICE**


Indicates a situation which may cause damage to equipment or property.  
Messages are not related to personal injury.

#### **Safety Instructions**

Indicates specific safety-related instructions or procedures.


## 2.1 SAFETY SYMBOLS

Pictograms are graphic symbols meant to alert you of a potential hazard. Read and understand the hazard description for each of these symbols.

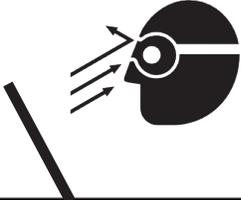Pictogram	Description
	<p><b>PINCH HAZARD:</b> Keep clear of machine and attachment to prevent death or serious injury from pinching of moving parts.</p>
	<p><b>FLYING DEBRIS HAZARD:</b> ONLY operate this attachment using a machine that has a shatter proof cab and door to prevent death or serious injury from objects being thrown.</p>
	<p><b>OPERATING MANUAL:</b> Operators must read and understand the safety instructions in the operating manual to prevent death or serious injury.</p>
	<p><b>EYE PROTECTION &amp; CARDBOARD:</b> Operators and Maintenance personnel must wear proper eye protection and use cardboard or wood to investigate hydraulic leaks to prevent death or serious injury from being injected with high pressure hydraulic fluid.</p>
	<p><b>HIGH PRESSURE FLUID INJECTION HAZARD:</b> Operators and Maintenance personnel must not place fingers or hands directly over a hydraulic leak to prevent death or serious injury from being injected with high pressure hydraulic fluid.</p>
	<p><b>NO BYSTANDERS:</b> DO NOT operate this attachment near bystanders. Bystanders must stay back at least 300 feet from the attachment to prevent death or injury from objects being thrown.</p>
	<p><b>CRUSH HAZARD:</b> DO NOT place any part of the body under the attachment or machine arms to prevent death or serious injury from being crushed .</p>
	<p><b>AMPUTATION HAZARD:</b> Keep hands and feet away from disc and mulching teeth. Do not operate without guards in place. Turn off engine before servicing</p>

## 2.2 SAFETY DECALS

Safety warning decals are located on this attachment near immediate areas of potential hazards. Operators must learn the meaning of each decal and know where to find the decal on the attachment.

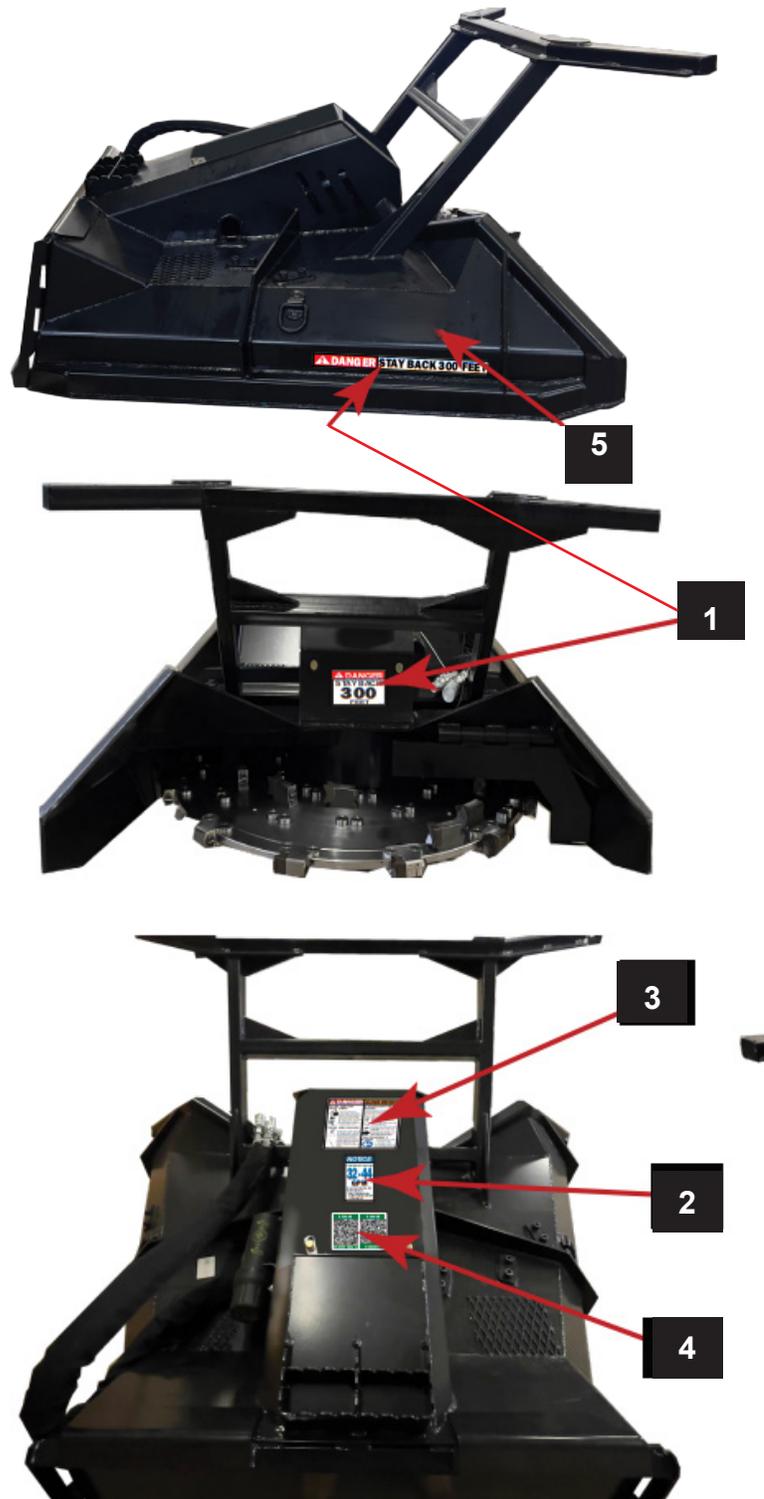

## 2.2 SAFETY DECALS

The safety decals affixed to this attachment are to keep you safe. DO NOT ignore these decals.

Read and understand each decal's safety message. Follow these Safety Decal Instructions:

REF	DESCRIPTION	LABEL	QTY
1	DANGER STAY BACK 300 FEET		3
2	AUXILIARY HYDRAULIC FLOW NOT TO EXCEED NOTICE LABEL		1
3	8X8 DANGER COMBO		1
4	QR Code (If applicable)		1
5	LOGO		2

*\*WHEN ORDERING, CHOOSE THE PROPER DECAL FOR YOUR MODEL*

### CONTACT YOUR LOCAL DEALER TO ORDER REPLACEMENT DECALS

-  Decals must be kept clean and legible at all times.
-  Operators must inspect the attachment for safety decals.
-  Replace missing, worn or damaged decals immediately.
-  When using a hot pressure washer to clean this attachment make sure water jet is not too close to the decal as this may cause the decal to peel.
-  When replacing parts, be sure safety decals are in place prior to using the attachment.
-  Make sure metal surface is dry and free of dirt and grease before affixing decals to this attachment.

## 2.3 SKID STEER LOADER REQUIREMENTS



Tracked

VS.



Wheeled

A Tracked Skid Steer or Compact Track Loader (CTL) will provide superior stability in this application.

Follow the operating instructions in your Skid Steer operator's manual.

It is **REQUIRED** that machines have polycarbonate windshields in the door and side windows.

THE MULCHERS should only be used on machines that meet the following requirements:

MACHINE	44	60
Rated Operating Capacity (ROC)	2000 LBS	3000 LBS
Engine HP	>74	>90

## 2.4 PERSONAL PROTECTIVE EQUIPMENT (PPE)

All operators should wear hearing protection, safety glasses, hand protection and dust mask while operating this attachment.



## 2.5 GENERAL SAFETY INSTRUCTIONS



**MAKE SURE YOU FOLLOW THE GENERAL SAFETY INSTRUCTIONS THAT RELATE TO THE OVERALL OPERATION AND MAINTENANCE OF THIS ATTACHMENT. IT IS IMPORTANT THAT YOU READ AND UNDERSTAND EACH OF THESE MESSAGES TO PREVENT SERIOUS INJURY OR DEATH.**

- ! NEVER** use drugs or alcoholic beverages while operating or servicing this attachment.
- ! ALWAYS** operate this attachment during daylight or well-lit areas.
- ! We recommend** using a high strength clear protective door panel such as Polycarbonate when using with this attachment.
- ! To prevent** the machine and attachment from rolling forward, stop the engine and set the parking brake when exiting the machine.
- ! Inspect** attachment for loose or missing hardware prior to using this machine.
- ! ALWAYS** watch for overhead power lines.
- ! DO NOT** place hands or feet under the deck while the disc is spinning.
- ! NEVER** operate this disc mulcher when bystanders are within 300 feet of your work area. Flying debris could cause serious injury or death.
- ! NEVER** position your body or limbs under an unsupported deck.
- ! DO NOT** allow children to play on or around this attachment at any time. Store this attachment in an area not frequented by children.
- ! ALWAYS** wear the proper personal protection equipment while operating or servicing this attachment. **NEVER** operate or service this attachment with bare feet, sandals, or other light footwear.
- ! ALWAYS** wear work gloves when handling disc mulcher parts as they are often very sharp.
- ! ALWAYS** use eye protection while operating or servicing this attachment.
- ! DO NOT** allow this attachment to contact buildings, utilities or large rocks as you could lose control of the machine.
- ! DO NOT** operate this attachment during lightning or severe weather conditions.
- ! DO NOT** allow riders on the machine or on this attachment.
- ! DO NOT** speed! Keep your driving between 2 and 5 mph.



## 2.6 FEDERAL LAWS & REGULATIONS

### IMPORTANT FEDERAL LAWS AND REGULATIONS CONCERNING EMPLOYERS, EMPLOYEES, AND OPERATORS

This section is intended to explain in broad terms the concept and effect of the following federal laws and regulations. It is not intended as a legal interpretation of the laws and should not be considered as such.

#### U.S. PUBLIC LAW 91-596 (The Williams-Steiger Occupational Safety and Health Act of 1970) OSHA

##### This Act Seeks:

“ ... to assure so far as possible every working man and woman in the nation safe and healthful working conditions and to preserve our human resources...”

##### Sec. 5(a) Each Employer –

##### DUTIES

( 1 ) shall furnish to each of its employees employment and a place of employment which are free from recognized hazards that are causing or are likely to cause death or serious physical harm to its employees.

( 2 ) shall comply with occupational safety and health standards promulgated under this Act.

(b) Each employee shall comply with occupational safety and health standards and all rules, regulations, and orders issued pursuant to this Act which are applicable to his or her own actions and conduct.

##### OSHA Regulations

Current OSHA regulations state in part: “At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in the safe operation and servicing of all equipment with which the employee is, or will be involved.” These will include (but are not limited to) instructions to:

Keep all guards in place when the machine is in operation;

Permit no riders on equipment;

Stop engine, disconnect the power source, and wait for all machine movement to stop before servicing, adjusting, cleaning, or unclogging the equipment, except where the machine must be running to be properly serviced or maintained, in which case the employer shall instruct employees as to all steps and procedures which are necessary to safely service or maintain equipment.

Make sure no one is within 300 feet of machinery before starting the engine, engaging power, or operating the machine.

##### EMPLOYEE MACHINE OPERATING INSTRUCTIONS:

1. Securely fasten your seat belt if the machine has the capability.
2. Where possible, avoid operating the machine near ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going, especially at row ends, on roads, and around trees.
6. Do not permit others to ride.
7. Operate the machine smoothly - no jerky turns, starts, or stops.
8. Hitch only to the drawbar and hitch points recommended by machine manufacturers.
9. When machine is stopped, set brakes securely and use park lock if available.

##### Child Labor Under 16 Years Old

Some regulations specify that no one under the age of 16 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation. (Refer to U.S. Dept. of Labor, Employment Standard Administration, Wage & Home Division, Child Labor Bulletin # 102).

# SECTION 3

## OPERATING PROCEDURES

Your attachment may arrive from the factory strapped to a wood pallet and requires no final assembly. Use a steel band cutting tool to remove the steel straps.

### CAUTION

Shipping straps are under great tension, and could lash out uncontrollably when cut causing injuries to your body or bystanders. Wear safety glasses and gloves while removing the steel straps.

### 3.1 PRE-OPERATING CHECKLIST

Pre-Operating Checklist	
<input type="checkbox"/>	Disc Mulcher is securely attached to the machine.
<input type="checkbox"/>	Hydraulic hoses are connected and locked to the machine hydraulic couplers with no signs of hydraulic fluid leaks present.
<input type="checkbox"/>	Disc is in working condition and securely attached to the mulcher with all bolts and nuts tight.
<input type="checkbox"/>	Safety labels are present and legible.
<input type="checkbox"/>	No material, ropes, wire, etc. is obstructing the disc.
<input type="checkbox"/>	The area of operation is clear of bystanders and any obstacles that could damage the equipment or injury to the operator.
<input type="checkbox"/>	The operator is of good health and not under the influence of any mind altering substances or alcohol.

## 3.2 HOW TO ATTACH DISC MULCHER

### GENERAL ATTACHMENT METHOD

Refer to your machine's manual for specific instructions on how to mount and dismount your attachment.

This attachment method refers specifically to Compact Track Loaders (CTL) and skid steers. For all other attachment instructions, refer to the Original Equipment Manufacturer (OEM) for instructions.

1. Enter operator's cab and start skid steer loader.
2. Tilt the skid steer loader Quick Attach Coupler slightly down and drive forward to the rear of the mulcher until the top edge of the Quick Attach Coupler connects into the attachment mounting bracket. See figure 3.2a below.
3. Slightly tilt the skid steer Quick Attach Coupler up until the coupler and mounting bracket fully engage. See figure 3.2b below.
4. Activate the coupler pin mechanism to lock the pins into the attachment bracket. If your skid steer does not have this mechanism, shut skid steer engine off and exit the cab.
5. Push the skid steer Quick Attach locking pins down until you can see the locking pins extend into the slots on the attachment bracket.
6. Connect hydraulic hoses and the case drain hose to the auxiliary supply couplers located on your skid steer loader lift arm



**FIGURE 3.2A - DISC MULCHER ATTACHING**



**FIGURE 3.2B - COUPLER TO BRACKET**

### **! WARNING**

To avoid serious injury or death, ensure locking pins fully extend through the slots on the attachment bracket and that levers are down in the locked position to prevent attachment from detaching from host machine.

### 3.2 HOW TO ATTACH DISC MULCHER CONT.

#### NOTICE

To keep contaminants from entering the hydraulic system, use a clean cloth to wipe away dirt and grease from the hydraulic couplers.

#### NOTICE

Check that hydraulic hoses are locked into the machine's couplers with the preferred output auxiliary port corresponding to the correct input line on the attachment before use.

Check the hose routing through the full range of intended motion before operating attachment. It is the responsibility of the owner/operator to make sure the hoses are routed correctly and are not pinched.

### 3.3 HOW TO DISMOUNT DISC MULCHER

1. Park machine on a flat and level surface then lower disc mulcher to the ground.
2. Turn off auxiliary hydraulic circuit; relieve hydraulic pressure by moving the control levers back and forth or using hydraulic relief valve (if applicable).
3. Set parking brake and disengage lock pins using the lock lever switch (if installed skip step 6).
4. Turn off machine engine.
5. Disconnect hydraulic hoses and connect together or install dust caps to prevent contaminants from entering the hydraulic system.
6. Pull latch handles to disengage lock pins.
7. Re-enter cab and start machine engine.
8. Tilt mounting coupler forward until Quick Attach Coupler is free from mounting bracket.
9. Drive machine backward to clear attachment.

### 3.4 DISC MULCHER CONTROLS

#### DISC MULCHER CONTROLS

Your disc mulcher is designed to run off the machine's auxiliary hydraulic system, and is activated and deactivated by a control in the operator's cab. The height and tilt functions of your disc mulcher are operated with the control handles or pedals in the cab. Consult your machine operator's manual for instructions regarding these functions.

#### HYDRAULIC FLOW REQUIREMENTS

When operating this attachment, set the machine engine RPM to a speed that will produce the required auxiliary flow. Your machine dealer can measure the flow available on your machine and recommend a throttle or auxiliary flow setting that is compatible with this attachment. **DO NOT EXCEED** the designated flow rate (GPM) as damage to hydraulic components can occur.

**! DANGER** OBSERVE ALL SAFETY PRECAUTIONS OUTLINED IN THIS MANUAL.

**! WARNING** NEVER operate a Disc Mulcher with the disc trajectory in the plane of the carrier or other persons.



**NEVER WELD ON A DISC.**

Replace the disc if cracks / excessive damage are detected.



**! DANGER**  
Before attempting to begin mulching operation, ensure that all personnel or bystanders are standing behind the machine and are **at least 300 feet away**.

**! WARNING**

1. **ALWAYS** inspect disc assembly every shift **BEFORE** start-up.
2. The disc should be inspected throughout the day, and immediately after contact with rocks or other foreign material to minimize the risk of parts injuring someone.
3. **NEVER** operate the mulching disc system partially assembled, in an unbalanced condition, or with any parts missing.
4. **SERIOUS** bodily injury may result from spinning an improperly, or incompletely assembled disc. All teeth **MUST** be properly fastened in place.
5. Mulcher disc rotates up to 1200 RPM. Never exceed 1475 RPM as serious damage, bodily injury or death may occur.
6. **NEVER WORK ON THE DISC MULCHER WHILE THE DISC IS RUNNING!**

**! WARNING**

The disc weight is up to 1000 lbs. **ALWAYS** use suitable lifting equipment when handling a mulcher disc.

**! DANGER**

**ALWAYS** keep in mind that the mulching disc at operational speed carries a tremendous amount of stored energy.

Tooth top speed can be up to 200 mph. Flying chips, debris, rocks, gravel, chunks of wood, etc., any tools or parts left on the disc during inspection or maintenance, can cause serious injury or death.

**! WARNING**

The operator should always remain in the cab while the disc is operating and should **ALWAYS STOP THE DISC BEFORE APPROACHING.**

## 3.6 FIRST TIME USE



Please refer to our “Hydraulic Fluid and Oil Statement” on Page 5 for gear oil or hydraulic fluid instructions.



### NOTICE

Before operating disc mulcher, check the hydraulic fluid level in the host machine and add fluid if necessary.

### WARNING

Make sure the case drain hose is properly attached to the host machine’s case drain connection.

**Warranty WILL BE void if attachment is ran without the case drain hose connected.** Excessive hydraulic pressure can blow out seals and damage the motor.

Verify that hydraulic hoses are securely locked to the machine hydraulic couplers before starting the mulcher.


1. Before starting the mulcher, visually inspect the disc mulcher and make sure all mulcher disc mounting bolts are property torqued and none are missing.
2. Verify the disc mulcher is properly attached to the host machine and all locks are in place.
3. Verify the hydraulic hoses and connectors are properly attached with no hoses pinched.
4. The operator should enter the operator’s cab, shut the door, and make sure there are no bystanders before starting the engine.
5. After starting machine, lift the attachment 12 inches off the ground.
6. Set machine engine RPM to just above idle.
7. Switch on the auxiliary hydraulic circuit.
8. Allow the disc mulcher to run for 30 seconds to purge air from the system, then switch off the auxiliary hydraulic circuit and allow disc to come to a complete stop
9. Lower the disc mulcher to the ground, set the parking brake, shut off machine engine and exit the cab.
10. Check the hydraulic fluid level in the machine, add manufacturer recommended fluid if necessary.
11. Inspect the disc mulcher hydraulic lines for noticeable leaks. Fix before continuing.

## 3.6 FIRST TIME USE CONT.

12. The operator should re-enter the operator's cab and shut the door.
13. Restart machine, set engine RPM to slightly above idle.
14. Raise disc mulcher off the ground and switch on the auxiliary hydraulic circuit.
15. Once the disc mulcher ramps up to speed, increase machine engine to full throttle for use.

### **! WARNING**

To avoid serious injury by hydraulic fluid injection into your skin, never use your hand or other body parts to locate a hydraulic leak. Detect leaks with a piece of wood or cardboard. Flesh injected with Hydraulic fluid may develop gangrene or other permanent disabilities.

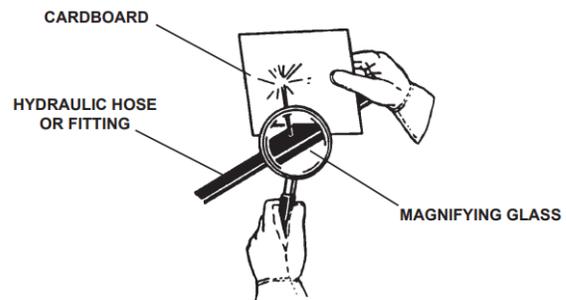

## 3.7 MULCHING OPERATIONS

### GENERAL OPERATING TIPS

1. LEARN what the disc mulcher looks like in a level position when you are seated in the machine. Knowing what a level mulcher looks like will prevent you from damaging the disc if you cut too close to the ground.
2. SLOW down the machine if the engine “bogs” down or if the disc speed is too slow because of too much load.
3. If you feel a strong vibration or shaking while mulching, IMMEDIATELY shut the attachment and machine down, Wait until the disc stops rotating completely and investigate the cause. An unbalanced condition suggests serious problems such as loose bolts, missing parts, etc., and should not be taken lightly. Refer to the “Troubleshooting Chart” on page 39-40.
4. Keep mulcher away from excavator tracks, skid steers, wheels, or other machinery. Used improperly, this disc can and will cut or damage any object in its path.
5. ALWAYS be aware of your surroundings and pay attention to obstacles and terrain around you.
6. Keep windows and polycarbonate doors securely closed while operating attachment.
7. Keep all guards and shields in place.
8. NEVER try to cut or mulch any material other than wood and plants.

### **! DANGER**

**DO NOT use on or near electrical power lines, telephone poles, or fences. Electrocutation can occur even without actual contact with an electric power source.**

### 3.8 HOW TO START DISC MULCHER

## STARTING THE MULCHER

### WARNING

To avoid serious injury or death from thrown objects and flying debris, ensure no bystanders are within **300 feet** of the work area before starting this disc mulcher.

### DANGER

To avoid unexpected starting of the machine engine which could cause injury or death to the maintenance personnel working on the disc, proceed to lockout and de-energization of the machine. Attach a warning tag such as “DO NOT START THE ENGINE” to the controls indicating the nature of the current maintenance.

<b>WALK AROUND INSPECTION</b>	<b>Daily / Every 10 Hrs</b>
<b>BEFORE STARTING MULCHER:</b>	<b>X</b>
All mulcher disc mounting bolts are properly torqued and none missing.	<b>X</b>
Disc is in good condition. No cracks, gouges, or heat discoloration.	<b>X</b>
All tooth holders are sitting flat with disc.	<b>X</b>
All teeth are still sharp and are not worn round at corners.	<b>X</b>
<b>START UP:</b>	<b>X</b>
All protective devices are in place and secure.	<b>X</b>
Warning sign “Stay out of Reach” in place & visible.	<b>X</b>
No unusual noises or vibrations.	<b>X</b>

1. Before starting the mulcher, visually inspect the disc mulcher and make sure all mulcher disc mounting bolts are property torqued and none are missing.
2. Verify the disc mulcher is properly attached to the host machine and all locks are in place.
3. Verify the hydraulic hoses and connectors are properly attached with no hoses pinched.
4. The operator should enter the operator’s cab, shut the door, and make sure there are no bystanders before starting the engine.
5. After starting machine, lift the attachment 12 inches off the ground.
6. Proceed to the work area.
7. Switch on the Auxiliary hydraulic system and increase the machine’s RPM to the appropriate level for mulching.

### 3.9 MULCHING PROCESS

Drive Forward To Tree or Brush...



Use the push bar to push the tree while cutting to prevent it falling back on the host machine..

- 1) Keep push bar against the tree while cutting.
- 2) As the tree falls, tilt the front of the mulcher up which will pull in the trees and branches as they fall.
- 3) Continue to slowly lower the disc mulcher onto the stump to mulch. Keep the operator's door tightly closed to prevent injuries or death caused from flying debris.
- 4) Lower the disc mulcher to cut the tree or brush pile and drive forward. Continue to mulch as you reverse.

Repeat Until Satisfied With Mulch Size...



#### CAUTION

Use Caution as the tree may kick back towards the host machine while falling!

## 3.10 HOW TO STOP DISC MULCHER


### STOPPING THE DISC MULCHER

#### **! WARNING**

After switching off the auxiliary hydraulic circuit, keep hands and feet clear of the disc mulcher until disc rotation has come to a complete stop.

If disc mulcher vibrates while increasing RPM's, switch off the auxiliary hydraulic circuit, wait until the disc stops rotating, turn off the machine engine, set parking brake and investigate the cause. Refer to the Troubleshooting Chart on page 39-40.

1. Raise the mulcher slightly and set machine engine RPM to idle.
2. Switch off the auxiliary hydraulic circuit.
3. Allow the disc mulcher to slow down and come to a complete stop.
4. Lower attachment to the ground, set parking brake, turn off the machine engine.

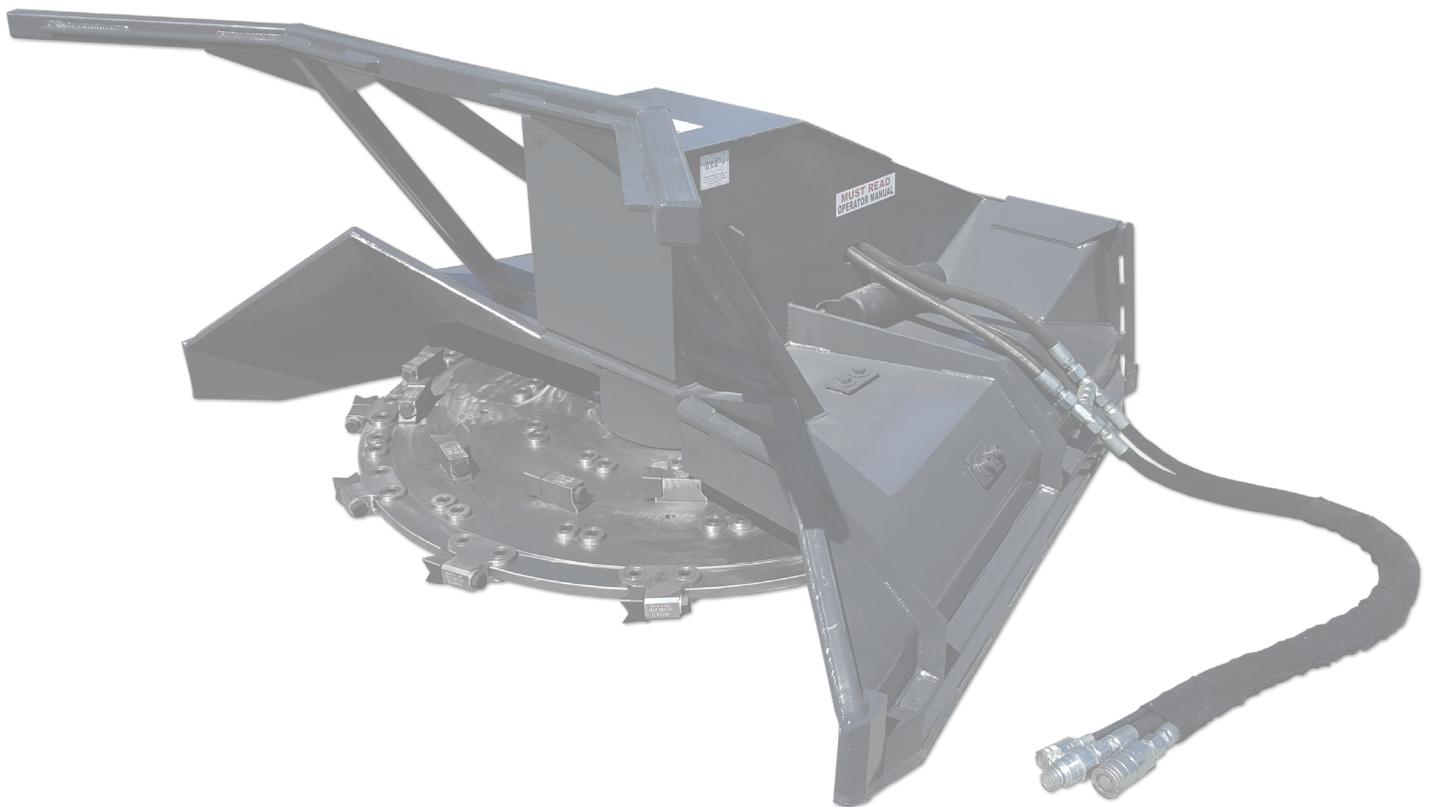

# SECTION 4

## MAINTENANCE PROCEDURES

The maintenance procedures described in this manual should only be carried out by qualified mechanics who have been trained to repair this attachment.

Some procedures require special tools and skills to complete. DO NOT attempt to repair or perform service work on this attachment unless you have the skills and tools to do so. Contact your local dealer for maintenance and repair services.

### WELDING REPAIRS-NEVER WELD ON A DISC

**Welding on attachments must be performed by certified welders who have requested and obtained written approval from an authorized representative of the manufacturer before welding begins.**

All authorized welding repairs must be performed by qualified welders in accordance to the American Welding Society (AWS) standards. Welding procedures performed by unqualified welders may deem this mulcher unsafe to operate and **VOID THE WARRANTY!**

**⚠ WARNING** Only use genuine Original Equipment Manufacturer (OEM) replacement parts on this attachment. We will not be liable for any damages or injuries caused by the use of after market parts on this attachment.

### NOTICE

Improper maintenance or modifications to the design or performance of this attachment will void the warranty. ONLY use genuine OEM replacement parts on this attachment.

### Safety Instructions

Obey the following safety instructions when servicing or repairing this attachment

- ⚠** Wear proper Personal Protective Equipment (PPE) while working on this attachment, which may include safety glasses, hard hats, steel toe boots, gloves, etc.
- ⚠** Wear a welding helmet when welding to protect your eyes, face and neck from flash burn, ultra-violet radiation and heat.
- ⚠** Ensure all jack stands, lifts and hoists are in good working condition and have the rated load capacity to support the load.

## 4.0 MAINTENANCE OVERVIEW CONT.

 Only perform service work in a well-lit area.

 Allow the attachment to cool down before servicing this attachment.

 NEVER work under an unsupported disc mulcher.




## 4.1 MAINTENANCE SCHEDULE

This **Disc Mulcher** attachment will provide years of dependable service if routine maintenance procedures are performed. The maintenance tasks listed below are based on normal operating conditions. More frequent maintenance may be necessary with intense use or when operating in adverse environmental conditions.

MAINTENANCE TASK	BEFORE EACH USE	WEEKLY	YEARLY
<p>Check host machine's hydraulic fluid level. Add manufacturer recommended fluid as necessary.</p> <p><i>Please refer to our "Hydraulic Fluid and Oil Statement" on Page 5 for gear oil or hydraulic fluid instructions.</i></p>	<b>X</b>		
<p>Check that all fasteners (nuts, bolts, washers, pins, keepers) are in place. Tighten as necessary.</p>	<b>X</b>		
<p>Inspect and replace any worn, torn, or missing safety decals.</p>	<b>X</b>		
<p>Inspect hydraulic hoses and connectors for damage or leakage. Repair or replace hydraulic items as necessary.</p>	<b>X</b>		
<p>Wash Disc Mulcher</p>		<b>X</b>	
<p>Change Shell Omala S2 GX 150 oil in bearing house.</p> <p>*Change oil after 50 hours of first time use, then every 1000 hours or yearly.</p>			<b>X</b> 1,000 HRS
<p>Check disc mulcher for major scratches &amp; dings. Sand and repaint these areas to prevent rust damage. *Contact the manufacturer for approved OEM paint for your attachment.</p>			<b>X</b>


## 4.2 DISC MAINTENANCE SCHEDULE

<b>DISC MAINTENANCE TASK</b>	Daily /	WEEKLY	YEARLY
	Every 10 Hrs	EVERY 50 HRS	EVERY 2,000 HRS
<b>BEFORE STARTING MULCHER:</b>			
All mulcher disc mounting bolts are properly torqued <b>and none missing.</b>	<b>X</b>		
Disc is in good condition. No cracks, gouges, or heat discoloration.	<b>X</b>		
All tooth holders are sitting flat with disc.	<b>X</b>		
All teeth are still sharp and are not worn round at corners.	<b>X</b>		
<b>START UP:</b>	<b>X</b>		
All protective devices are in place and secure.	<b>X</b>		
Disc is clear of all material or debris.	<b>X</b>		
No material is binding or jamming disc.	<b>X</b>		
Make sure no bystanders are within 300 feet.	<b>X</b>		
No unusual noises or vibrations.	<b>X</b>		
Check Fastener Tightening Torques. <i>Instructions on Pg 31</i>		<b>X</b>	
Disc Complete Inspection			<b>X</b>

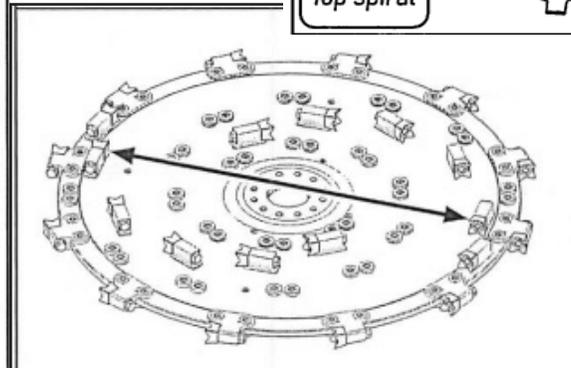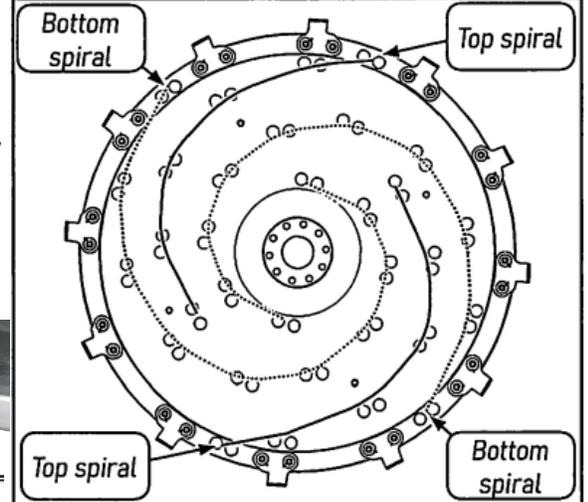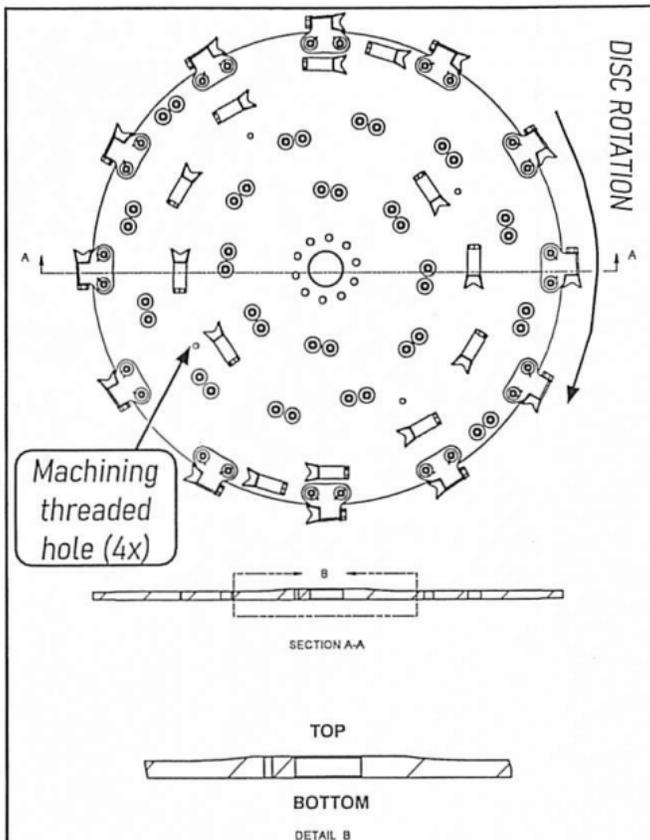

## 4.3 MAINTENANCE LOG INSTRUCTIONS

Document all maintenance and service activities performed on this attachment using the maintenance log sheets included at the end of this manual.

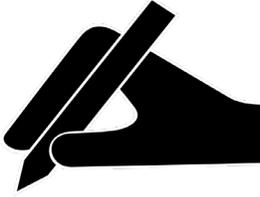

## MAINTENANCE LOG



### 10. MAINTENANCE

#### MAINTENANCE LOG

DESCRIPTION OF MAINTENANCE/REPAIR	SERVICED BY:	DATE:
<i>Replace Cutter Blades</i>	<i>Joe Smith</i>	01/24/24
<i>Suspect Hydraulic Plumbing</i>	<i>Joe Smith</i>	02/25/24
<i>Change Oil in Bearing Housing</i>	<i>Joe Smith</i>	04/24/24

## 4.4 STORAGE TIPS

To get years of quality use out of your attachment, follow these tips when storing your attachment for the season:

	<p>Ensure mulcher is free of water, debris, dirt and grease.</p>
	<p>Store your mulcher in a dry shed or garage.</p>
	<p>When storing your mulcher for the season, cover with a weather proof tarp to protect it from the elements.</p>

## 4.5 TORQUE SPECIFICATION TABLE AND INSTRUCTIONS

### BOLT TORQUE INSTRUCTIONS

1. Apply and maintain proper torque on all bolts.
2. Use lubricated torque values when applying Loctite. **Do not grease or oil bolts.**
3. Wipe bolts clean and use Loctite 635 or equivalent before tightening bolts. May need curing activator.
4. Use a torque wrench to assure the proper amount of torque is being applied to the bolt.
5. **MUST CURE 72 HOURS BEFORE USE TO PREVENT LOOSENING OF BOLTS.**

### TORQUE VALUES

#### SAE GRADE 8

	DRY	LUBRICATED
	lb.-ft.	lb.-ft.
1/4"	12	9
5/16"	24	18
3/8"	45	35
1/2"	110	80
3/4"	380	280
7/8"	600	450
1"	910	680
1 1/4"	1820	1360
1 1/2"	3162	2688

## 4.6 TORQUE EQUIPMENT REQUIREMENTS

### TOOLS & EQUIPMENT REQUIREMENTS

To complete the maintenance procedures described in this section, you may need the following tools:

- 1/2 inch drive breaker bar
- 3/4 inch impact socket
- 1/2 inch impact socket
- Tapping Hammer
- 1/2 inch drive torque wrench
- Nylon pry bar set
- Safety stands
- **Loctite 635 or Equivalent-MUST CURE 72 HRS**
- Lifting device (overhead crane hoist, forklift)



#### NOTE:



When removing bolts with Loctite, it will be necessary to apply localized heat of at least 250 degrees Celsius or to 482 degrees Fahrenheit to loosen bolts.

**LOCTITE 635 TECHNICAL SPECIFICATIONS FOR BONDING, CURING, REMOVAL AND INSTALLATION CAN BE FOUND HERE:**  
<https://next.henkel-adhesives.com/>

## 4.7 DISC SAFETY

### **! WARNING**


1. NEVER weld on a disc.
2. REPLACE the disc if cracks and/or excessive damage are present.
3. The disc MUST be disassembled at every 2,000 service hours (hour meter only) allowing for complete inspection which is impossible on an assembled unit.
4. For repairing and rebalancing of the disc, it is strongly recommended to utilize the assistance of a local authorized service center.

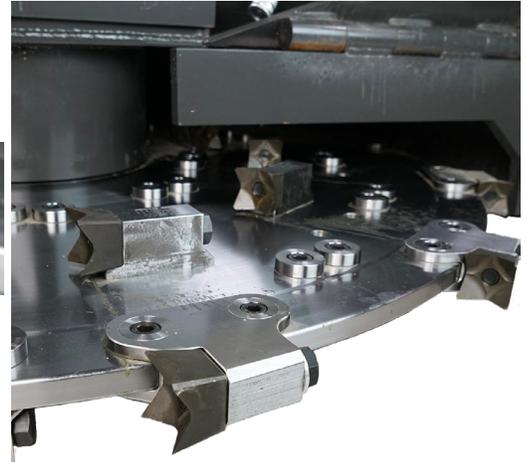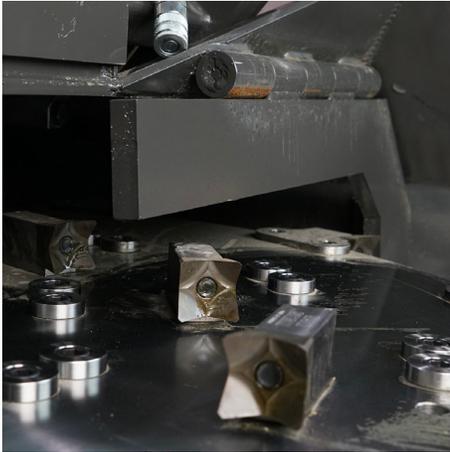

## 4.8 TOOTH HOLDER INSPECTION

### TOOTH HOLDER INSPECTION


1. Disc mulcher is firmly on the ground with the disc angled up. Proceed to the lockout procedure of the carrier.
2. While slowly rotating the disc by hand, thoroughly clean the visible part of DISC, all TOOTH HOLDERS, and TOOTH.
3. Carefully inspect each TOOTH HOLDER for cracks, damage, or excessive wear, looseness, missing or damaged SLEEVE, and SLEEVE BOLT.
4. All damaged or loose parts MUST BE REPLACED.
5. Replace ALL damaged and/or excessively worn TOOTH HOLDERS. Refer to "Tooth holder maximum wear limit" on page 29.
6. Refer to the Disc part nomenclature on page 42 & torque specification chart on page 42 for tightening torque values and conditions.

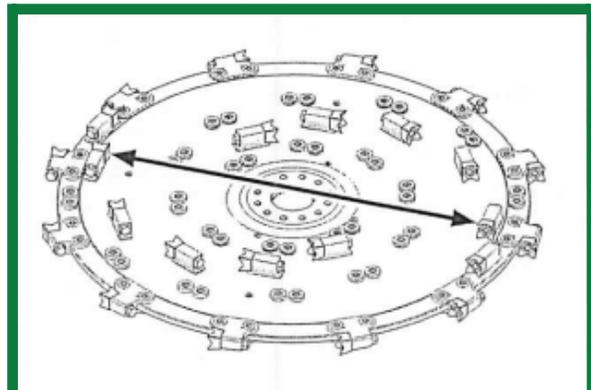

Always replace two tooth holders of equal weight and install them 180° opposite to each other on the disc to prevent an unbalancing situation of the disc. Always use new cap screws and sleeves when replacing them.


## 4.9 TOOTH HOLDER MAXIMUM LIMIT

### TOOTH HOLDER MAXIMUM WEAR LIMIT

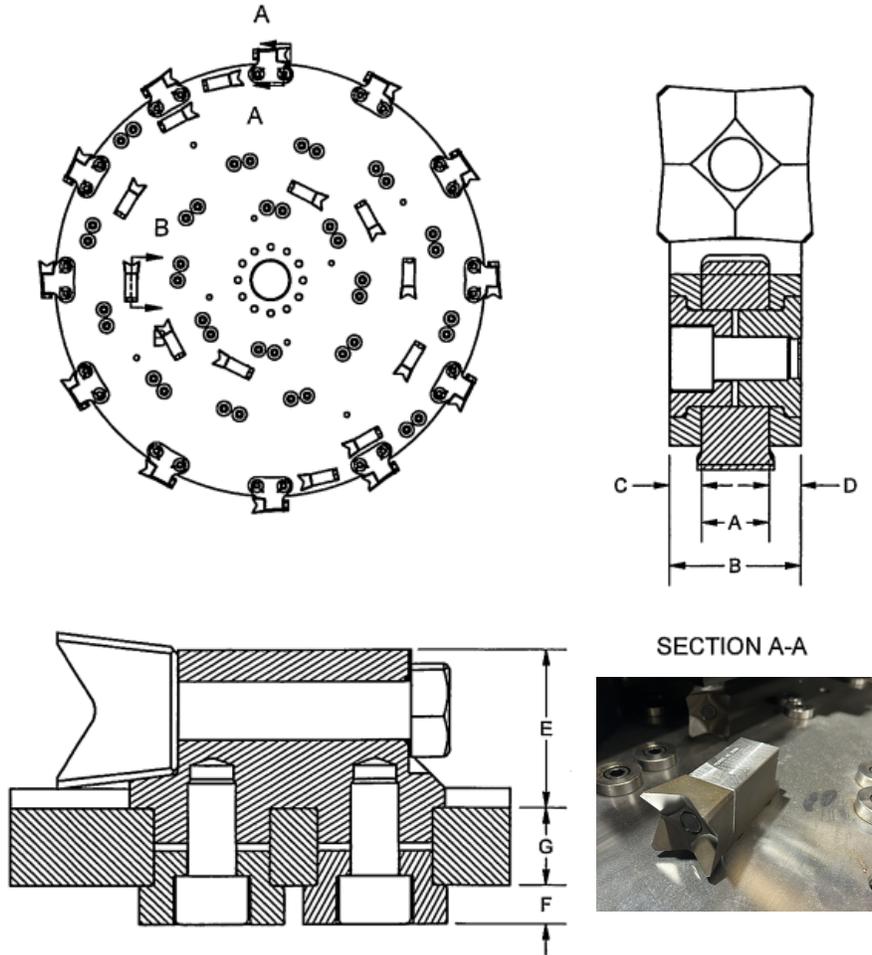

DESCRIPTION	ORIGINAL	WEAR LIMIT
A-Disc tip thickness	22.2 mm (0.88")	See inspection procedure
B-Peripheral holder thickness	43.4 mm (1.71")	40.4 mm (1.59")
C & D- Holder leg thickness	10.6 mm (0.42")	9.2 mm (0.36")
E- Surface holder height	51.6 mm (2.03")	48.5 mm (1.91")
F- Surface holder sleeve thickness	12.7 mm (0.50")	9.7 mm (0.380")
G- Disc general thickness	25.4 mm (1.00")	See inspection procedure

Pay attention to the disc rotation. Tooth holder spiral direction can easily be mounted in the wrong direction. To assure good rotation direction, locate the top of the disc by locating the hump on the top side.

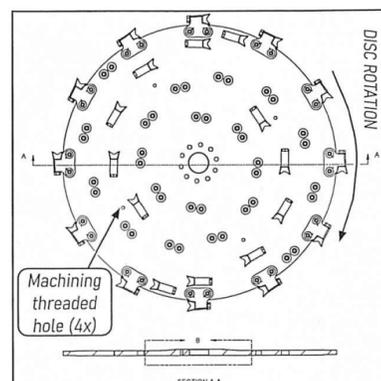

## 4.10 TEETH INSPECTION

### TEETH INSPECTION

1. Disc mulcher is firmly on the ground with the disc angled up and safety block under the disc appropriately. Proceed to the lockout procedure of the carrier.
2. With gloves, slowly rotate the disc by hand, Thoroughly clean the visible part of DISC, all TOOTH HOLDERS, and TOOTH.
3. Carefully inspect each TOOTH, TOOTH BOLT, and FLAT WASHER for looseness, cracks, damage, or excessive wear.
4. All damaged or loose parts must be replaced. Refer to “Disc part nomenclature & torque specification” on page 42 for tightening torque value and tightening condition.
5. Carefully inspect ALL teeth. Teeth should have sharp cutting edges for maximum productivity. Refer to Tooth maximum wear limit”.
6. Loosen TOOTH BOLT and tap on the head of the bolt until TOOTH pops loose. Heat may be needed. Refer to page 27 for instructions.
7. Remove TOOTH BOLT, FLAT WASHER, and TOOTH. *Note: Use FLAT WASHER on peripheral tooth only.*
8. Ensure that the mating surfaces of the TOOTH and TOOTH HOLDER are clean and free of burrs.
9. While holding TOOTH snugly against TOOTH HOLDER, install FLAT WASHER (on PERIPHERAL TOOTH HOLDER only), then screw in and torque TOOTH BOLT to specific tightening torque values and tightening condition as specified in “Disc part nomenclature & torque specification” on page 42.
10. Repeat this procedure for the opposite tooth and for all other teeth that have to be replaced.
11. ALWAYS replace two teeth of equal weight and install them 180° opposite each other to prevent the disc unbalancing. Always use new bolts and washers when replacing them.

#### NOTICE

**Check for tooth assembly clearance. The shoulder of the tooth must fit snugly against the shoulder of the tooth holder.**

#### NOTICE

**Damaged or worn teeth will reduce disc life and decrease operating efficiency.  
ALWAYS use sharp teeth.**

#### REPLACE TEETH UNDER THE FOLLOWING CONDITIONS:

- Unbalanced disc
- Missing tooth
- Damaged Teeth (fragmented)
- Worn cutting edges.

#### NOTICE


**Worn teeth can be rotated to extend life. It is also good usage to make a rotation of surface and peripheral teeth as they don't wear the same way. When making rotation from surface to peripheral teeth, try to match tooth weight to prevent disc becoming unbalanced.**

#### SIGNS OF TOOTH WEAR THAT AFFECT QUALITY & PERFORMANCE:

- Cutting and mulching speed abnormally slowing down.
- Cloud of fine sawdust.
- Excessive smoke.
- Excessive temperature of teeth.

# 4.11 TOOTH WEAR LIMIT

## TOOTH MAXIMUM WEAR LIMIT

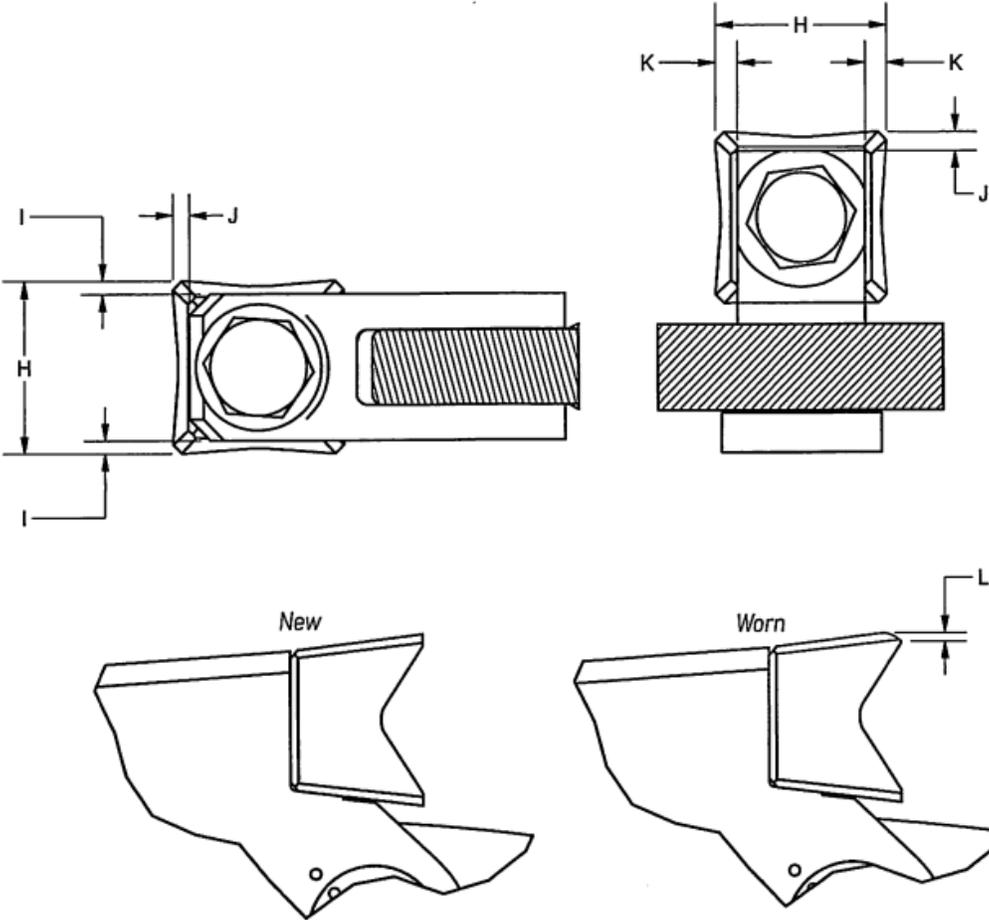

DESCRIPTION	ORIGINAL	WEAR LIMIT
H- Tooth tip to tip	51.0 mm (2.00")	50.8 mm (2.000")
I-Tooth tip to holder face (PERIPHERAL TOOTH HOLDER (4A))	3.8 mm (1.71")	2.5 mm (0.10")
J- Tooth tip to holder top face TOOTH HOLDER (4)	5.6 mm (0.42")	2.5 mm (0.10")
K- Tooth tip to holder face (SURFACE TOOTH HOLDER (4B))	6.5 mm (2.03")	2.5 mm (0.10")
L- Tip wear offset		1.5 mm (0.06")

**! DANGER**  
 During the first 50 hours of operation of a new disc, the tightening torque of all fasteners must be checked & re-tightened if necessary, every day. Afterward, check according to the recommended intervals.



**TOOTH MANUFACTURER RECOMMENDED TIGHTENING TORQUES:**  
 TOOTH BOLT: DRY- 200 LB.-FT.  
 SLEEVE BOLT: LOCTITE 262- 125 LB.-FT.



## 4.12 CHECKING FASTENER TIGHTENING TORQUES & DISC INSPECTION

### HOW TO CHECK FASTENER TIGHTENING TORQUES-COMplete WEEKLY

1. With mulching head firmly on the ground, proceed to lockout procedure of the carrier.
2. Set the torque wrench 10% lower than the recommended torque value of the fastener to be checked.
3. Place the torque wrench on the head of the nut or bolt and pull the torque wrench arm steady until you hear the “click” of the torque wrench setting point.
4. If the nut or bolt does not turn, the torque is still good.
5. If the nut or bolt turns, replace it if necessary and tighten to the recommended torque value specified on “Disc part nomenclature & torque specification” on page 42.
6. Check torque of every accessible fastener, then using the machine, angle the disc up so that the bottom of the disc is accessible and safety block under the disc appropriately.
7. Apply the lockout procedure.
8. Check the remaining fastener tightening torque.

**NOTICE** Tooth Manufacturer Recommends: If more than 3 broken bolts are found on a specific assembly, replace them all. A fastener should not be torqued more than twice. If so, the fastener should be replaced.

1. **The disc MUST BE disassembled every 2,000 service hours (hour meter only) or earlier if the disc comes in contact with rocks or other objects.**
2. Whenever a disc is disassembled for inspection, thoroughly check each part for irregularities as work progresses , allowing complete inspection of the disc which is impossible on an assembled unit.  
**A damaged disc is unsafe and dangerous!**

### HOW TO PERFORM DISC COMPLETE INSPECTION-EVERY 2,000 HOURS

1. Make sure the mulching disc is securely on the ground in an optimal position.
2. Proceed to the lockout & de-energization procedure of the carrier and apply warning tag.
3. Remove all teeth from the disc.
4. Using adequate lifting equipment, remove the disc from the mulcher head and install it on a free rotating arbor mounted on bearings.
5. Thoroughly clean the disc and all its components.
6. Remove all holders as described in “Tooth Holder Replacement” on page 33.
7. Inspect the assembly, especially the center of the disc and outer perimeter, for cracks, damage, and excessive wear, looseness, and for missing or damaged SLEEVE & SLEEVE BOLT.
8. Inspect each holder hole in the disc for roundness and cracks.
9. Inspect the interior of the TOOTH HOLDER for roundness and cracks.
10. Once the disc has been completely inspected and approved, it can be reassembled according to “Disc Assembly” on page 33.
11. **Damaged discs MUST BE REPLACED and should NEVER be returned to service.**

#### **WARNING**

When the disc is attached to the mulcher, proceed to lockout and de-energization of the carrier to prevent unexpected starting of the carrier engine and attach a warning tag to the controls such as “DO NOT START THIS ENGINE”.

## 4.13 REPLACING TOOTH HOLDERS

### HOW TO REPLACE TOOTH HOLDERS

**All teeth should be removed from disc before removing disc from mulcher.**

1. Using adequate lifting equipment, remove the disc from the mulcher head and install it on a free rotating arbor mounted on bearings.
2. With the TOOTH HOLDER to be replaced at 3 o'clock, lock the disc in place with a straight rod.
3. Heat the SLEEVE BOLT from the holder to be replaced to 480° F.
4. Using a breaker bar, loosen both SLEEVE BOLTS.
5. With a hammer, tap on the SLEEVE BOLT until the SURFACE TOOTH HOLDER or PERIPHERAL LOWER SLEEVE break free.
6. Always replace tooth holders in pairs to prevent an unbalance of the disc.


### NOTICE

**Overheating the disc and its components will cause irreversible damage to material and will greatly reduce disc assembly working life.**

## 4.14 ASSEMBLING MULCHING DISC


### HOW TO ASSEMBLE THE MULCHING DISC

1. Using adequate lifting equipment, remove the disc from the mulcher head and install it on a free rotating arbor mounted on bearings.
2. When replacing a TOOTH HOLDER or when re-assembling a used DISC, each tooth holder hole must be cleaned and any residual retaining compound removed. A wire brush can be used to remove the dry compound.
3. Using fast drying parts cleaner (ex:Loctite 30548) wipe out any residual dust and oil from every empty tooth holder hole. Also, thoroughly clean all TOOTH HOLDER, SLEEVE, and SLEEVE BOLT.

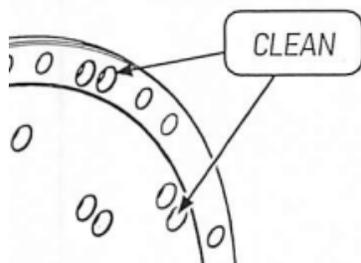

4. Starting with PERIPHERAL TOOTH HOLDER mounting holes, apply a retaining compound such as Permabond A134, Loctite 635, or equivalent into each PERIPHERAL TOOTH HOLDER corresponding disc hole. Spread the

compound inside the hole with a small brush.

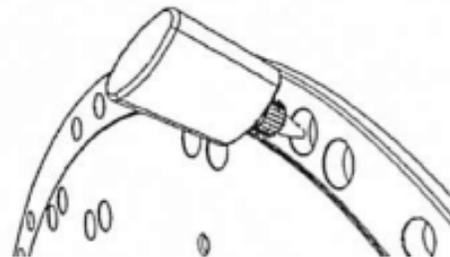

5. Then equally spread the bond all around the internal area of the hole with your finger.
6. Lock the disc in place using a straight rod going through one of the 4 matching threaded holes.
7. Install the PERIPHERAL TOOTH HOLDER on the circumference of the disc. Make sure to install the holder with teeth surface in respect to the disc rotation.
8. Install both PERIPHERAL UPPER SLEEVE matching the positional holes on the sleeve and on the holder.
9. Repeat this procedure for each PERIPHERAL TOOTH HOLDER, then, unlock the DISC.

### **! DANGER**

On lock rod removal of a partial assembled disc, the weight will carry the disc back and forth.

**DO NOT TRY TO STOP THE DISC.** Wait for it to stop on its own.

## 4.14 ASSEMBLING MULCHING DISC CONT.

### How To ASSEMBLE THE MULCHING DISC CONT.

Place the empty half on top, then complete the second half.

10. Once all holders are in place, from the bottom of the DISC, matching positional holes as per previous step, install each PERIPHERAL LOWER SLEEVE.

11. Apply a high-strength thread locker such as Loctite 635 on the threads of each PERIPHERAL LOWER SLEEVE.

12. From the top of the DISC, initially tighten all the SOC. HEAD BOLT 9/16-18 X 1". Hand tighten for first few threads, then use an air impact gun set lower than the cap screws recommended tightening torque.


13. Finally, torque all the SOC. HEAD BOLT 9/16-18 X 1" according to "Disc part nomenclature & torque specification" on page 42.

14. Once all PERIPHERAL TOOTH HOLDERS are properly assembled in place and torqued, ensure that all sleeves do not protrude above either surface of the PERIPHERAL TOOTH HOLDER.

15. Lock the DISC again using the straight rod.

16. Before beginning of installing SURFACE TOOTH HOLDER, it is important to identify the tooth spirals. The bottom tooth spirals start closer to the center. Trace the spirals with a marker to identify the top & bottom spiral.

17. Apply a retaining compound such as

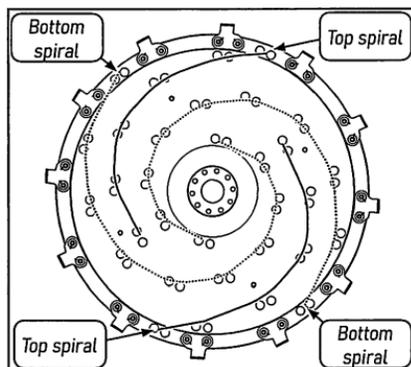


PermaBond A134, Loctite 635 or equivalent in each SURFACE TOOTH HOLDER corre-

sponding holes of the top spiral.

18. Install the 12 top SURFACE TOOTH HOLDER on the disc, with tooth mating surface toward disc rotation direction.(4B)


19. From the bottom of the DISC, install all SURFACE SHORT SLEEVE and SURFACE LONG SLEEVE of the top spirals. NOTE: Use SURFACE SHORT SLEEVE on the two SURFACE TOOTH HOLDER located on the edge of the DISC.

20. From the bottom of the DISC, initially tighten all the SOC. HEAD BOLT 5/8-18 X 1 1/4" (8A) hand-tight for few first threads, then use an air impact gun set lower than the cap screws recommended tightening torque.

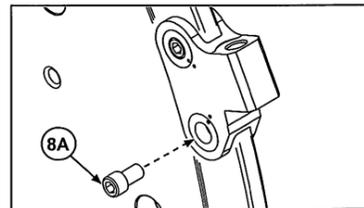

21. Finally torque all the SOC. HEAD BOLT 5/8-18 x 1 1/4" according to "Disc part nomenclature & torque specification" on page 42.

22. Repeat steps 16-22 from the bottom of the disc, for bottom spiral SURFACE TOOTH HOLDER installation.

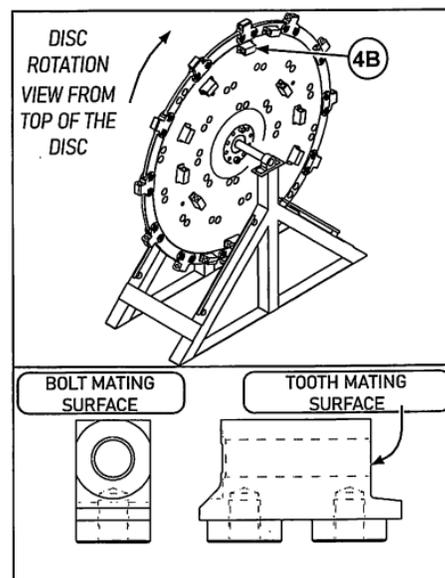

## 4.15 DISC PARTIAL INSPECTION

### HOW TO DO A PARTIAL DISC INSPECTION

1. Mulching head is firmly on the ground in the vertical position. Proceed to the lockout procedure of the carrier.
2. Thoroughly clean the visible segment of the disc and surroundings.
3. Slowly rotate the disc by hand to check for mechanical interference with the housing, such as rubbing, pinching, or jamming. Perform necessary repairs.
4. Also, while rotating the disc, perform a meticulous inspection of the disc conditions for cracks, gouges, heat discoloration, damage and excessive wear that can be seen from the top of the disc.
5. Now, with the disc function disabled, park the mulcher firmly on the ground at 90° to gain access to the bottom of the disc.
6. Stop the engine, turn off the master switch, and proceed to lockout of the carrier.
7. Thoroughly clean the bottom of the mulcher disc.
8. Check the BOLTING FLANGE (2) for loose, broken, or missing mounting cap screws.
9. Replace all loose, missing or defective mounting cap screws.
10. Thoroughly clean threads of a disc flange mounting holes. Torque as specified per mulcher.
11. If a bolt has been replaced, check the tightening torques of the remaining screws according to “How to Check Fastener Tightening Torques” on page 32.
12. From the bottom of the mulcher, perform a complete visual inspection of the disc conditions, for cracks, gouges, heat discoloration, damage, and excessive wear.
13. If cracks and/or excessive damage are present, replace the disc.
14. **Damaged discs MUST BE REPLACED and should NEVER be returned to service.**

### NOTICE

It is strongly recommended that repairing or re-balancing of the disc is completed with a local authorized service center.



## 4.16 BEARING HOUSING AND DRIVE BEARING OIL CHANGE

R  
E  
P  
L  
A  
C  
E  
B  
E  
A  
R  
I  
N  
G  
H  
O  
U  
S  
E



Please refer to our "Hydraulic Fluid and Oil Statement" on Page 5  
for gear oil or hydraulic fluid instructions.



### NOTICE

Your Disc Mulcher comes filled with oil from the manufacturer and  
**DOES NOT NEED CHECKED UNTIL 50 HOURS.**


Replacement motor/bearing housing, **DOES NOT COME WITH THE OIL IN IT** and **MUST BE FILLED PRIOR TO USE!**

### WARNING

The disc weight is up to 1000 lbs. **ALWAYS** use suitable lifting equipment when handling a mulcher disc.

### BEARING HOUSING REPLACEMENT OR OIL CHANGE WITH HOUSING REMOVED

1. Unbolt the Disc from the Bearing Housing, Support the disc with lifting equipment rated for the weight to prevent death from crushing. Move disc aside.
2. Take the Motor Cover off the mulcher.
3. Hydraulic Hoses may need removed.
4. Unbolt Bearing Housing from the deck of the mulcher.
5. Attach a lift chain or strap to the Motor/Bearing Housing for easier removal. See Example 1
6. Remove Motor/Bearing Housing and set on a solid clean surface. See Example 2
7. Clean the outside of the Bearing Housing to prevent any contaminants from entering the oil ports and damaging the Bearing Housing.
8. Use a wrench to loosen the air valve on top of the bearing housing. See Example 3

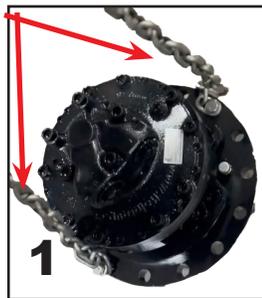

9. Lay the Bearing Housing on its side with the oil ports facing up. See Example 4




## 4.16 BEARING HOUSING AND DRIVE BEARING OIL CHANGE CONT.


10. Remove both oil port bolts with an Allen wrench. Please note you may need a hammer or heat to loosen. **See Example 5**



11. Remove the bolt and washer. Set aside. **See Examples 6a & 6b**

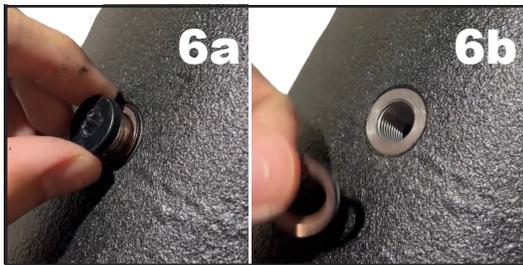

12. Stand the Bearing Housing up and allow the oil to drain from the port holes. (You may need to tilt the Bearing Housing to fully empty.)
13. Use a cloth to clean the oil from the outside of the Bearing Housing.
14. To Fill, use **Shell Omala S2 GX 150 grade gear oil**. Place your oil dispenser into the TOP PORT and fill until oil begins to run out the bottom port. **See Example 7**

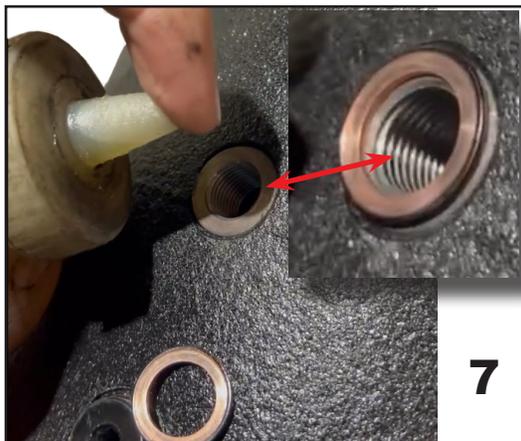

15. Place the washer and oil port bolt on the BOTTOM PORT and tighten tightly with an Allen wrench. **See Example 8a & 8b**



16. Continue to fill the oil port with **Shell Omala S2 GX 150 grade gear oil**, until the oil begins to run out of the TOP PORT.
17. Place the washer and oil port bolt on the TOP PORT as in **Example 8**.
18. Tighten oil port bolt tightly with an Allen wrench. **See Example 9**



19. Tighten the air port on top of the motor. **See Example 10**



20. Place Motor/Bearing Housing back in position on the deck and bolt into place.
21. Reattach the hydraulic hoses.
22. Reattach the Motor Cover on the mulcher.


### NOTICE

The initial oil should be changed after 50 hours of operation under load. Subsequent oil changes should take place after every 1000 hours of operation. More frequent oil changes may be necessary if operating this attachment in extreme hot conditions.

## 4.17 MOTOR REPLACEMENT

### MOTOR REPLACEMENT

1. Position the mulcher deck in a level position on the ground to prevent the attachment from moving or falling and causing serious injury or death.
2. Remove the Motor Cover from the Deck.
3. Clean the motor and Bearing Housing to prevent contaminants from entering the Bearing Housing during the oil change.

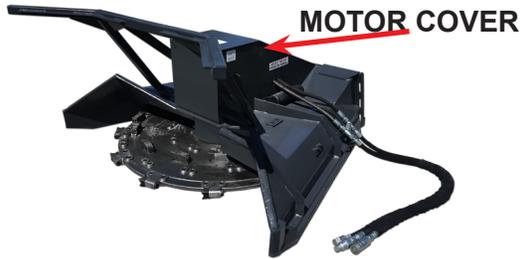


4. NOTE: The Bearing Housing is bolted to the deck and the motor is bolted to the Bearing Housing.

5. Unbolt only the Motor from the Bearing Housing and remove motor. *See Example 1*


6. Install new O-Ring or apply silicone to seal motor and bearing housing. Attach the new motor to the Bearing Housing.

7. NOTE: Make sure the O-Ring is seated and not damaged. The O-Ring may need re-oiled to seal properly.

8. Reattach the Motor Cover to the Deck.

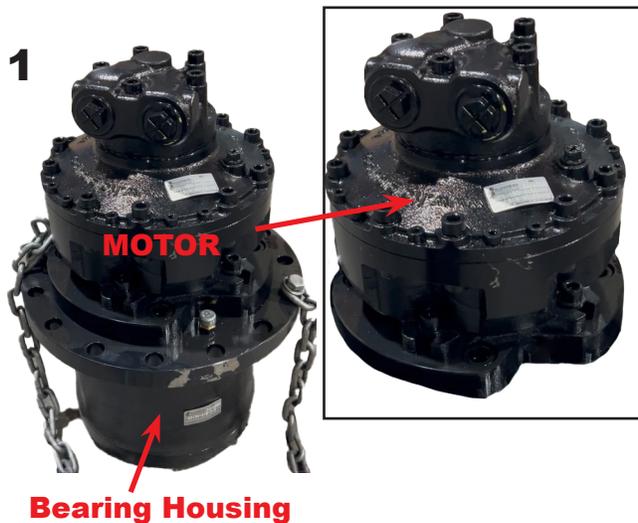

NOTE the appearance of the oil. If it is very dark or has excessive metal shavings, a full oil change is recommended.

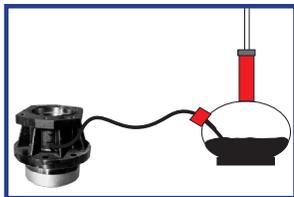

#### NOTICE

Properly dispose of used oil. Visit [www.Earth911.com](http://www.Earth911.com) to search for the nearest used oil recycling center near you.



# SECTION 5

## TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	SOLUTION
Mulcher bogs down or loses power while mulching.	Foreign debris is accumulating in the deck.	Remove debris from underneath the mulcher deck.
	Bearing failure-(To diagnose, shut off hydraulic flow to mulcher then slowly rotate the blade holder assembly & listen for bearing noise.)	Replace bearing housing.
	Mulcher disc RPM too slow or travel speed to fast.	Before mulching material, allow disc to increase to full RPM and reduce travel speed to keep disc RPM high.
	Auxiliary hydraulic flow too slow or bypassing through check valve.	Check for hydraulic leaks, loose, or damaged hydraulic lines or stuck check valve. Ensure couplers are locked properly and flow is in the correct input line.
	Teeth or tooth holders are excessively worn or damaged.	Replace worn or damaged teeth or tooth holders.
	Motor is damaged or worn.	Repair or replace motor.
Excessive Vibration	Missing, loose or damaged teeth or tooth holders.	Replace missing or damaged teeth or tooth holders. Tighten and retorque loose teeth or tooth holders.
	Disc damaged.	Repair or replace disc.
	Bearing failure.	Repair or replace bearing housing.
	Debris is lodged between teeth on disc creating an imbalance.	Remove stuck debris.

### DANGER

**ONLY service the mulcher on stable, even terrain. NEVER park on sloped terrain to avoid being struck and killed or seriously injured by the unexpected rolling or movement of the machine.**

## 5.0 TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	SOLUTION
Teeth dull too quickly or are breaking too easily.	Teeth are receiving excessive shock loads from contacting solid objects (rocks, steel pipes, etc.) and / or are contacting the ground too frequently.	Clear the cutting area of solid objects or raise mulcher height to clear exposed rock surfaces. Avoid excessive ground contact.
Hydraulic fluid level goes down during operation.	Hydraulic motor or hose leak, or leak in prime mover's hydraulic system.	Investigate and repair leaks.
Disc does not rotate when flow is activated.	Hydraulic motor or bearing house failure. Hydraulic lines disconnected, couplers disconnected or not fully seated. Problem with machine hydraulic controls. Auxiliary flow input line to mulcher is incorrect or check valve is stuck open Large pieces of tree or brush has jammed in between the disc and the body.	Replace motor or bearing house. Connect hydraulic lines to machine couplers. Ensure hoses are locked in place. Contact machine dealer for diagnosis and repair. Check for stuck check valve. If necessary, swap couplers to ensure input flow is correct. Push disc against a tree or stump and using the machine, rotate disc counterclockwise to reverse disc and dislodge jammed material.

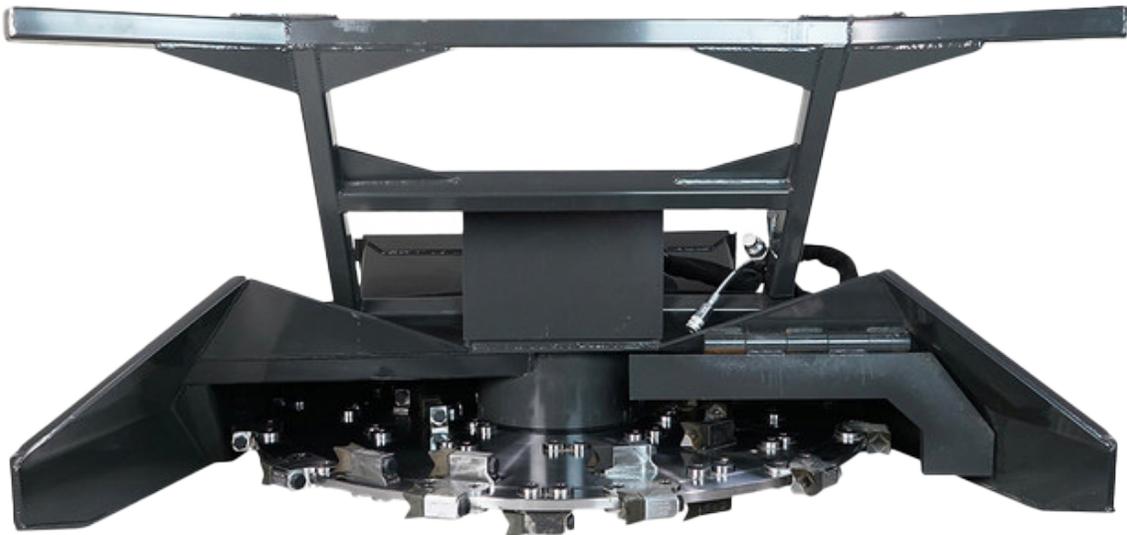


# SECTION 6

## SPECIFICATIONS

**Forestry Disc Mulcher 44" Specs**

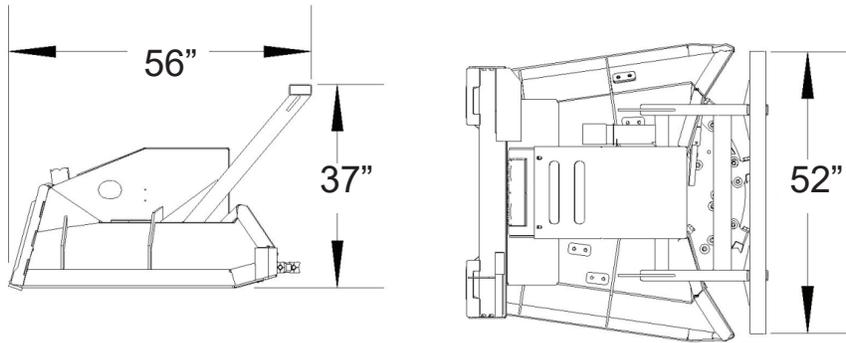

**60" Forestry Disc Mulcher Specs**

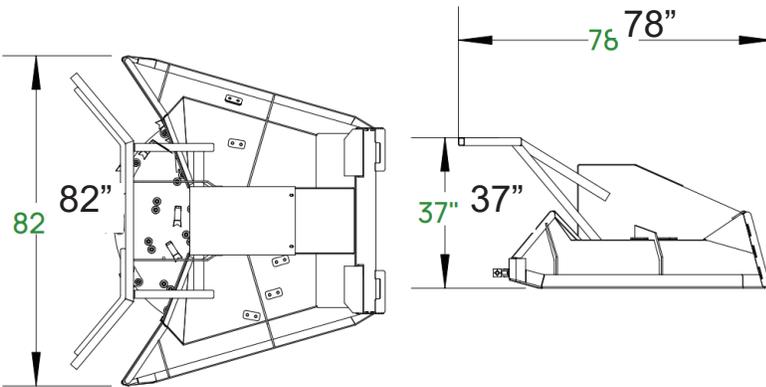


### SPECIFICATIONS

### 44" DISC MULCHER

### 60" DISC MULCHER

<b>MOTOR REQUIREMENTS</b>	100 CC Motor Requires 20-30 GPM 150 CC Motor Requires 30-44 GPM	150 CC Motor Requires 32-44 GPM 200 CC Motor Requires 45-60 GPM
<b>DISC SIZE</b>	44"	60"
<b>CUTTING CAPACITY</b>	Up to 8" Trees	Up to 14" Trees
<b>MULCHING TEETH</b>	30 Teeth on Disc 4 on Deck	44 Teeth on Disc 5 Teeth on Deck
<b>DEFLECTOR PLATE</b>	1" Thick Hinged	1" Thick Hinged
<b>CASE DRAIN</b>	REQUIRED	REQUIRED

## 6.1 DISC NOMENCLATURE AND TOOTH TORQUE SPECIFICATIONS

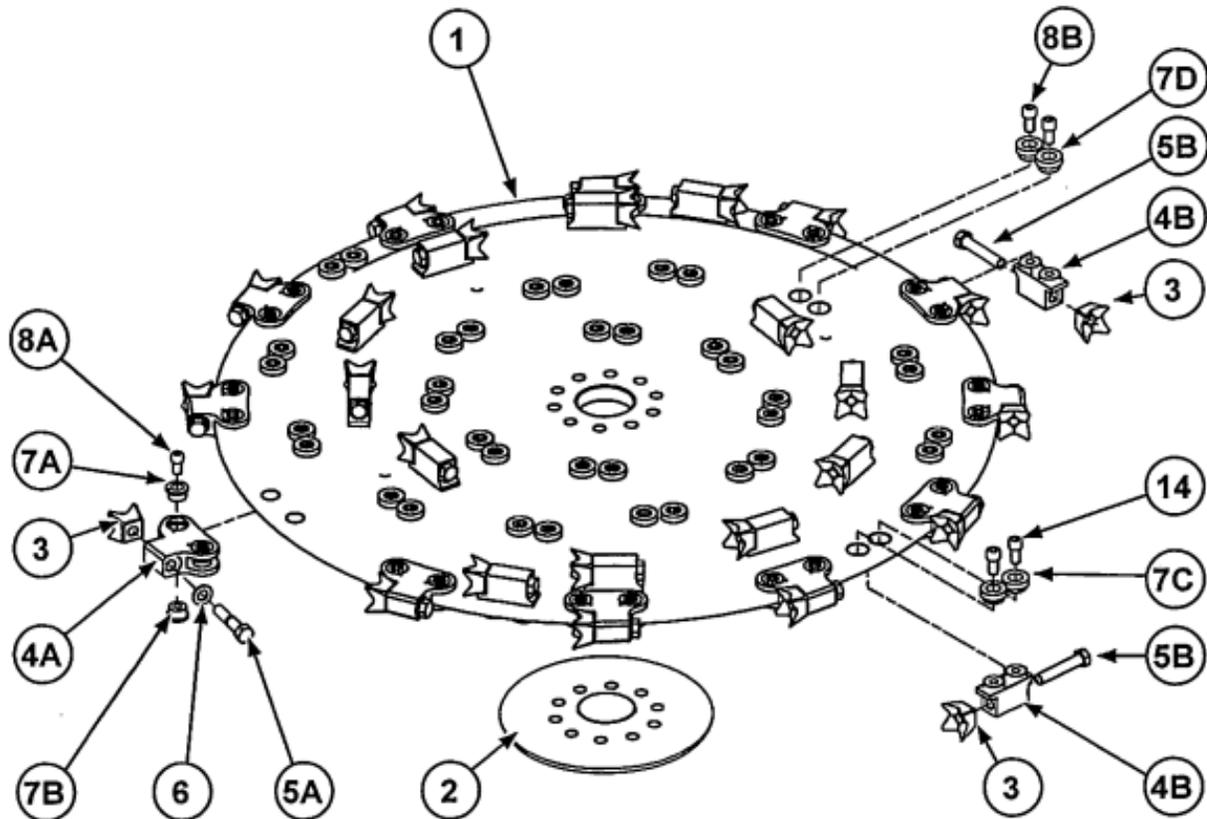

- |  |  |
|--|--|
| (1) Disc                                 | (6) Flat washer                              |
| (2) Bolting flange                       | (7) Sleeve                                   |
| (3) Tooth                                | (7A) Peripheral upper sleeve                 |
| (4) Tooth holder                         | (7B) Peripheral lower sleeve                 |
| (4A) Peripheral tooth holder             | (7C) Surface short sleeve                    |
| (4B) Surface tooth holder                | (7D) Surface long sleeve                     |
| (5) Tooth bolt                           | (8) Sleeve bolt                              |
| (5A) Peripheral tooth bolt 3/4-16 x 3,5" | (8A) Soc. Head bolt 9/16-18 x 1"             |
| • Dry, torque to 270 N.m (200 ft-lb)     | • Loctite 262, torque to 150 N.m (110 ft-lb) |
| (5B) Surface tooth bolt 3/4-16 x 4"      | (8B) Soc. Head Bolt 5/8-18 x 1 1/4"          |
| • Dry, torque to 270 N.m (200 ft-lb)     | • Loctite 262, torque to 170 N.m (125 ft-lb) |

# SECTION 7

## PARTS INFORMATION


Factory OEM parts specifically designed for your implement are readily available.

For hassle free service and to ensure you receive the correct parts for your implement, please provide your dealer with the following information:

<b>Model Number</b>	
<b>Serial Number</b>	
<b>GPM Requirements</b>	
<b>Date of Owners Manual (Bottom Left Corner of Cover Page)</b>	
<b>Parts Diagram Page Number</b>	
<b>Part Description</b>	
<b>Reference #</b>	
<b>Quantity Desired</b>	
<b>Ship To Information</b>	
<b>Bill To / Payment Information</b>	


# 7.1 44" MULCHER DISC PARTS DIAGRAM

ITEM	Part #	DESCRIPTION	QTY.
1	81600076	Deck Weldment	1
2	60200016	Deck Teeth Bolt On Plate	4
3	11700016	Tooth Holder	4
4	10500036	Mulcher Tooth	4
5	11200536	3/4"-16 X 4" Hex Bolt GR 8	4
6	71700036	Disc Assembly (Yellow)	1
7	11200526	5/8"-18 X 1 1/4" Socket Bolt	8
8	41100016	Manual Holder	1
9	11200106	5/16"-18 Lock Nut GR C	3
10	11200256	5/16" USS Flat Washer GR 8	3
11	40100096	Motor/Bearing Housing Combo	1
12	60100016	Motor Cover	1
13	11200356	1/2"-13 X 1 3/8" Hex Bolt GR 8	4
14	11200186	1/2" USS Flat Washer	4
15	11200176	1/2" Split Lock Washer GR 8	4
16	11200496	M18-2.5 X 90 mm Socket Bolt 12.9 DIN 912	15
17	11200506	M18 Flat Washer DIN 125A	15
18	11200516	M18-2.5 Hex FIN Nut DIN 934 CL 8	15
19	11200486	3/4"-16 X 2 1/2" Socket Bolt	10
20	41000026	3/4" X 1" Motor Fitting	2
21	40600046	Check Valve	1
22	41000086	3/4" Tee Fitting	2
23	52100066	3/4" D X 54" L Hose	2
24	53200036	3/4" D X 7' L Machine Hose Kit	1
25	41000116	1/2" Flat Coupler FE - Changeable	1
26	41000126	3/8" Flat Coupler FE - Changeable	1
27	41000106	1/2" Flat Coupler M - Changeable	1
28	41000096	3/4" - 1/2" Straight Fitting	2
29	41000076	1/4" Case Drain Fitting	1

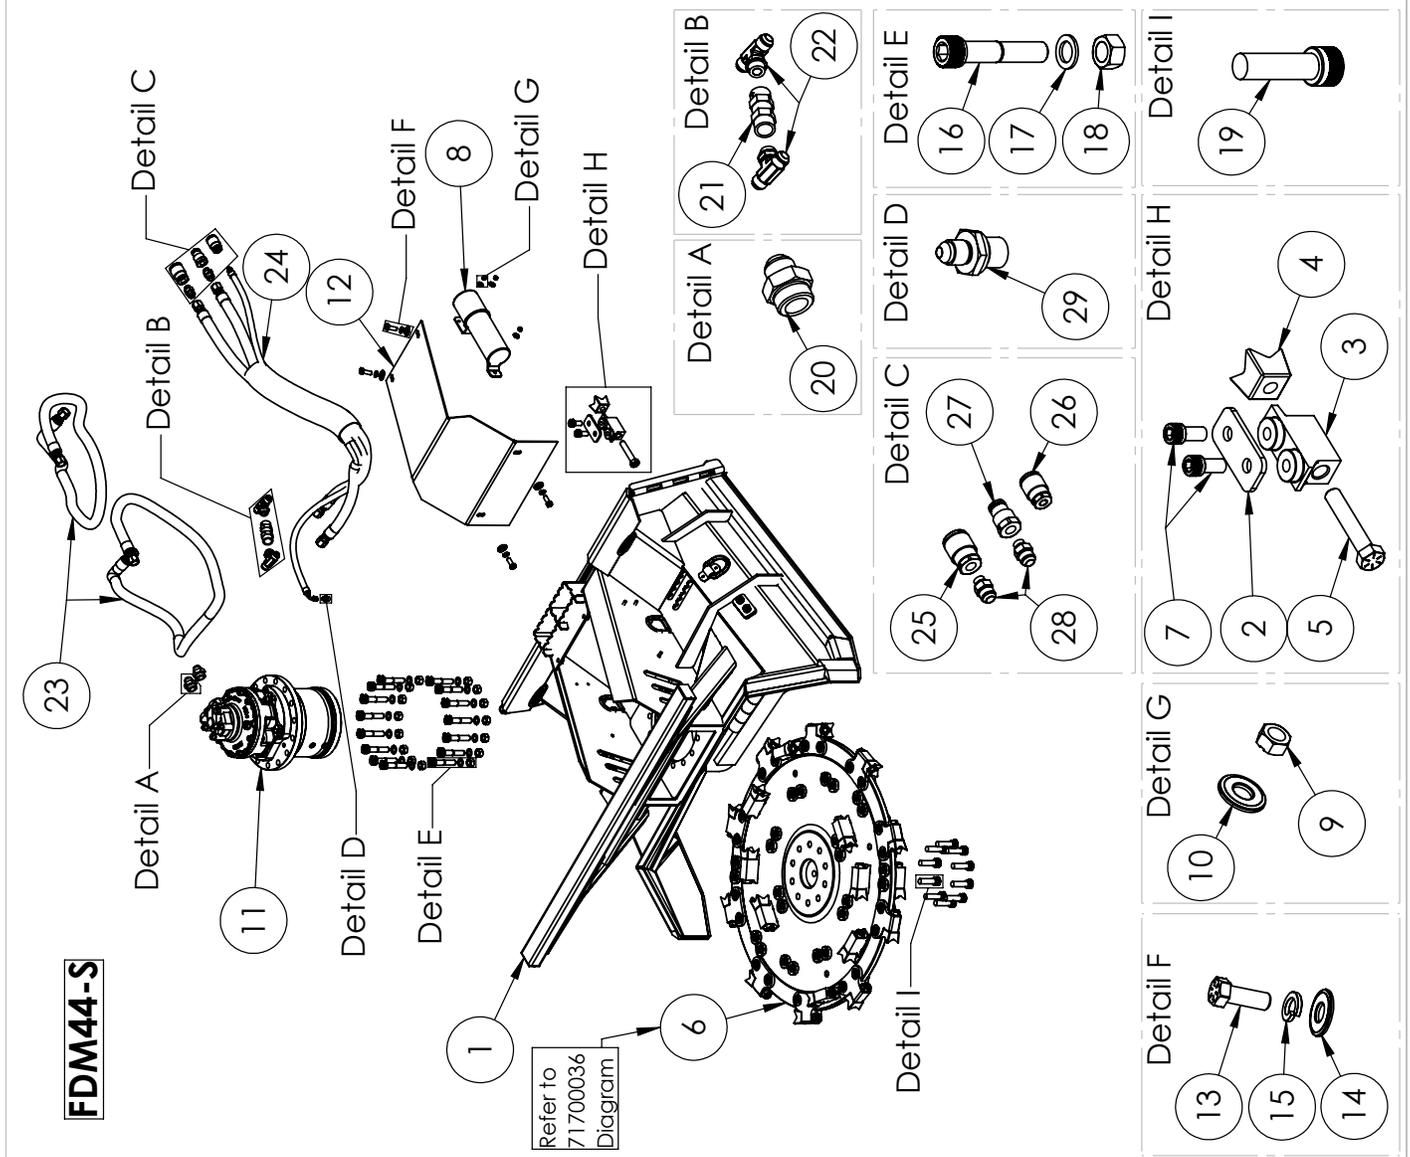


## 7.1.1 44" MULCHER DISC SUB-ASSEMBLY PARTS DIAGRAM

ITEM	Part #	DESCRIPTION	QTY.
1	71700046	Disc with Holders (No Teeth)	1
2	41200116	Taller Sleeve	40
3	11700016	Tooth Holder	20
4	11200526	5/8"-18 X 1 1/4" Socket Bolt	40
5	41200036	Sleeve Threaded	20
6	41200046	Perimeter Holder	10
7	41200056	Sleeve Eccentric	20
8	41200066	9/16"-18 X 1" Socket Bolt	20
9	41100046	Disc Flange	1
10	10500036	Mulcher Tooth	30
11	11200536	3/4"-16 X 4" Hex Bolt GR 8	20
12	11200236	3/4" SAE Flat Washer GR 8	10
13	11200546	3/4"-16 X 3 1/2" Hex Bolt GR 8	10

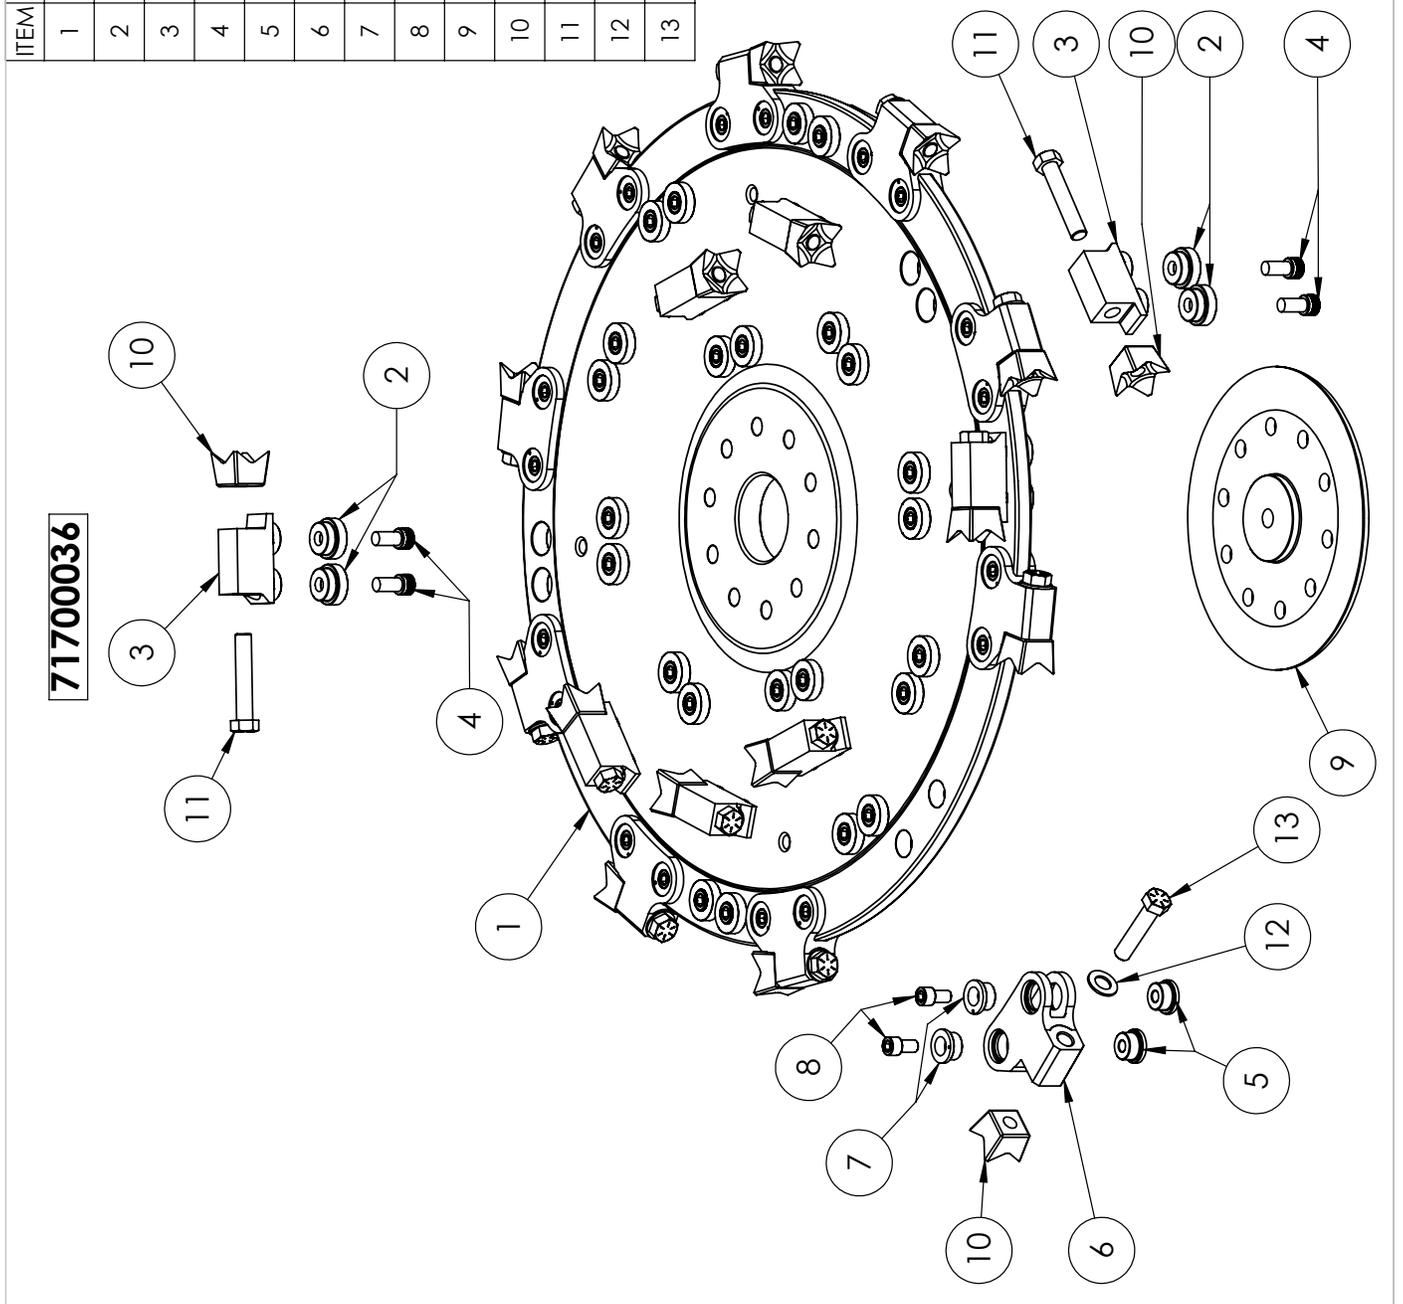

# 7.2 60" MULCHER DISC PARTS DIAGRAM

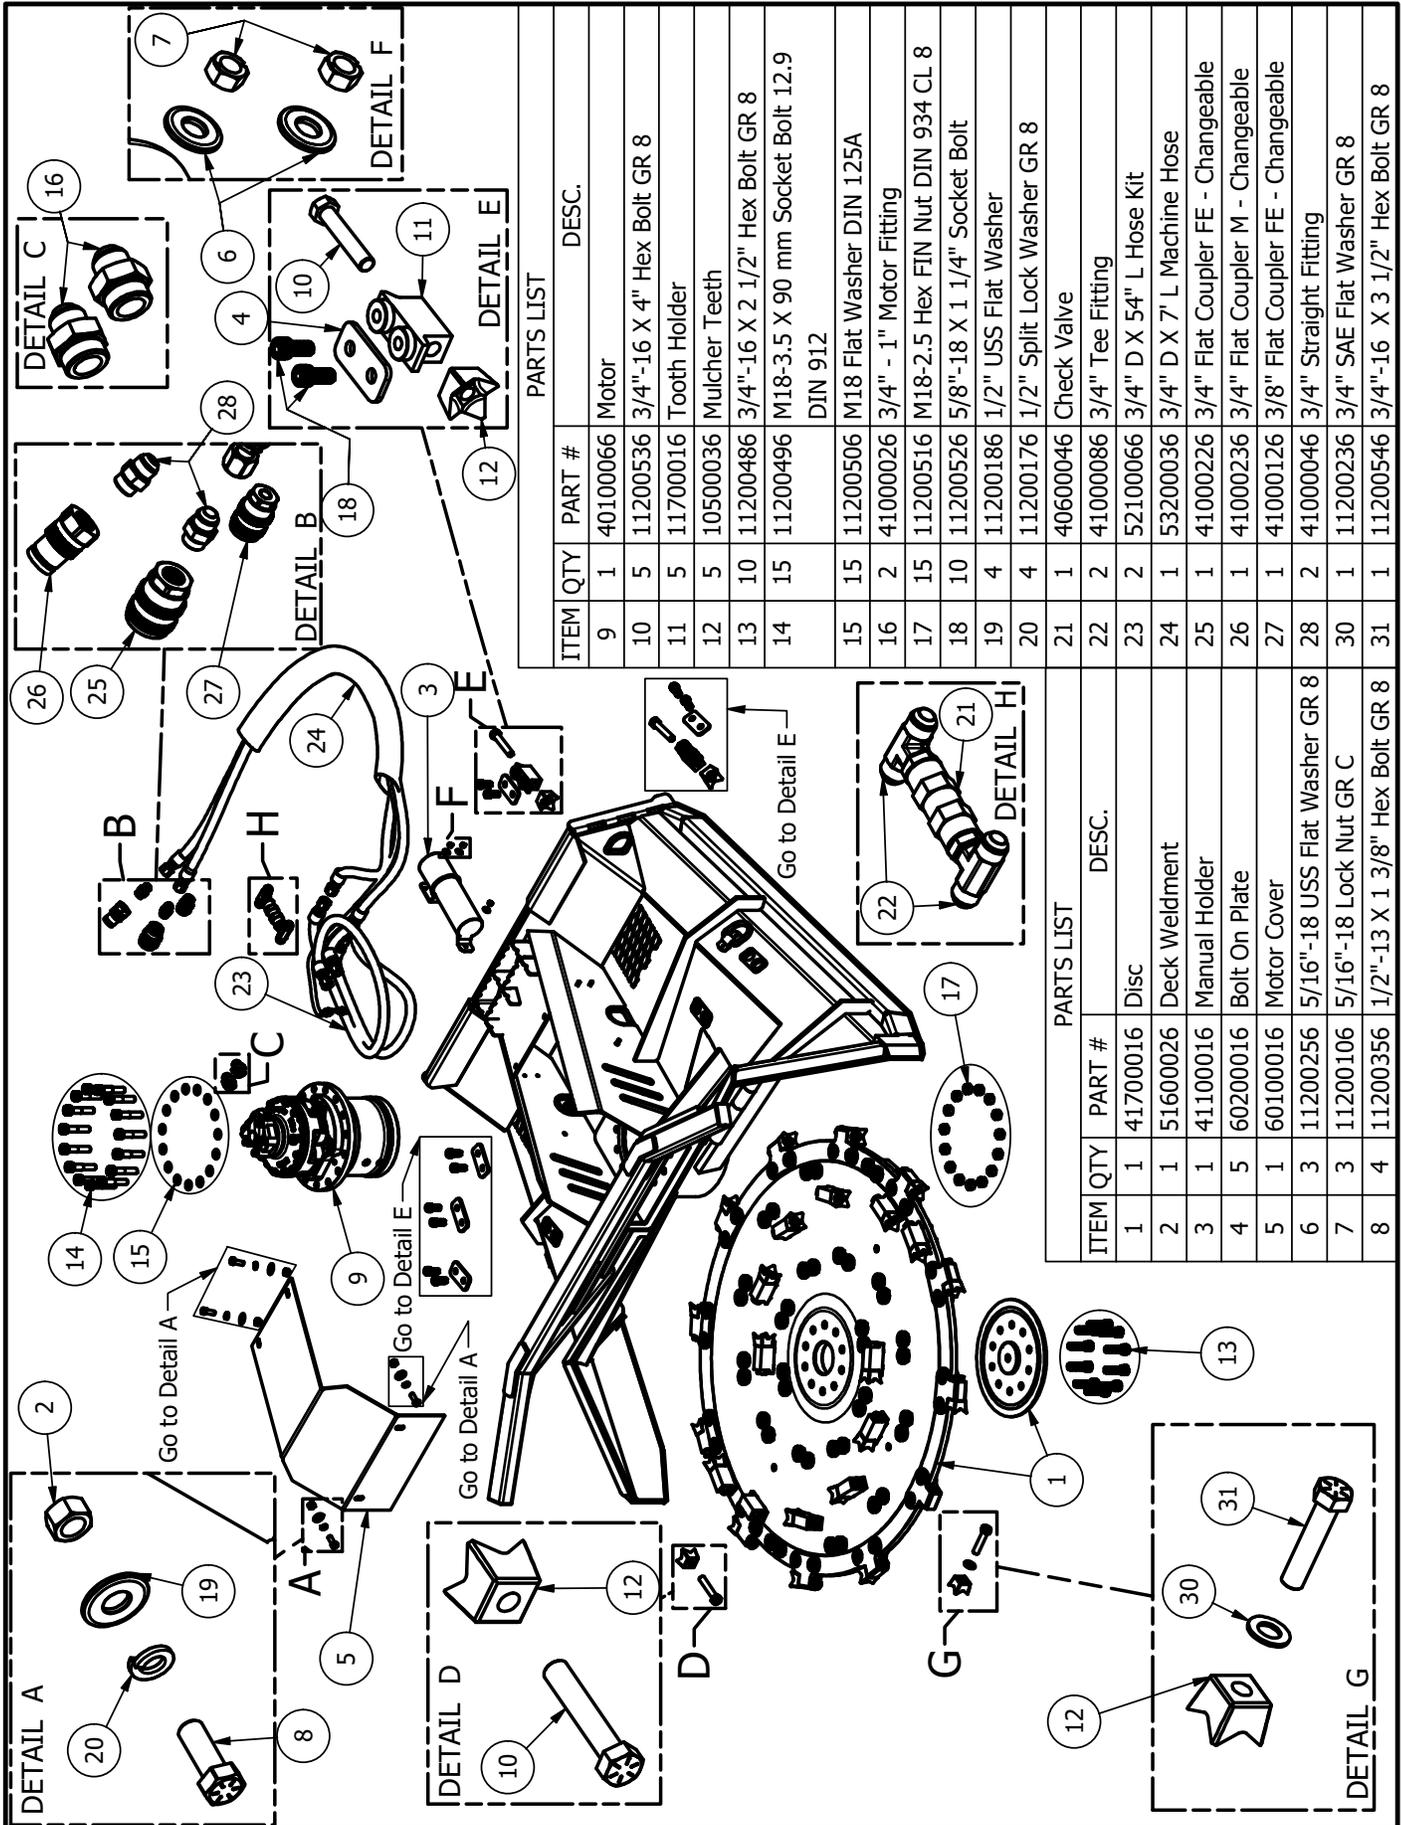


ITEM	QTY	PART #	DESC.
9	1	40100066	Motor
10	5	11200536	3/4"-16 X 4" Hex Bolt GR 8
11	5	11700016	Tooth Holder
12	5	10500036	Mulcher Teeth
13	10	11200486	3/4"-16 X 2 1/2" Hex Bolt GR 8
14	15	11200496	M18-3.5 X 90 mm Socket Bolt 12.9
15	15	11200506	M18 Flat Washer DIN 125A
16	2	41000026	3/4" - 1" Motor Fitting
17	15	11200516	M18-2.5 Hex FIN Nut DIN 934 CL 8
18	10	11200526	5/8"-18 X 1 1/4" Socket Bolt
19	4	11200186	1/2" USS Flat Washer
20	4	11200176	1/2" Split Lock Washer GR 8
21	1	40600046	Check Valve
22	2	41000086	3/4" Tee Fitting
23	2	52100066	3/4" D X 54" L Hose Kit
24	1	53200036	3/4" D X 7' L Machine Hose
25	1	41000226	3/4" Flat Coupler FE - Changeable
26	1	41000236	3/4" Flat Coupler M - Changeable
27	1	41000126	3/8" Flat Coupler FE - Changeable
28	2	41000046	3/4" Straight Fitting
30	1	11200236	3/4" SAE Flat Washer GR 8
31	1	11200546	3/4"-16 X 3 1/2" Hex Bolt GR 8

ITEM	QTY	PART #	DESC.
1	1	41700016	Disc
2	1	51600026	Deck Weldment
3	1	41100016	Manual Holder
4	5	60200016	Bolt On Plate
5	1	60100016	Motor Cover
6	3	11200256	5/16"-18 USS Flat Washer GR 8
7	3	11200106	5/16"-18 Lock Nut GR C
8	4	11200356	1/2"-13 X 1 3/8" Hex Bolt GR 8

## 7.2.1 60" MULCHER DISC SUB-ASSEMBLY PARTS DIAGRAM

ITEM	Part #	DESCRIPTION	QTY.
1	71700026	Disc with Holders (No Teeth)	1
2	41200036	Sleeve Threaded	24
3	41200046	Perimeter Holder	12
4	41200056	Sleeve Eccentric	24
5	11200526	5/8"-18 X 1 1/4" Socket Bolt	64
6	41200026	Shorter Sleeve	8
7	11700016	Tooth Holder	32
8	41200066	9/16"-18 X 1" Socket Bolt	24
9	41200116	Taller Sleeve	56
10	10500036	Mulcher Tooth	44
11	11200236	3/4" SAE Flat Washer GR 8	12
12	11200546	3/4"-16 X 3 1/2" Hex Bolt GR 8	12
13	11200536	3/4"-16 X 4" Hex Bolt GR 8	32
14	41100046	Disc Flange	1

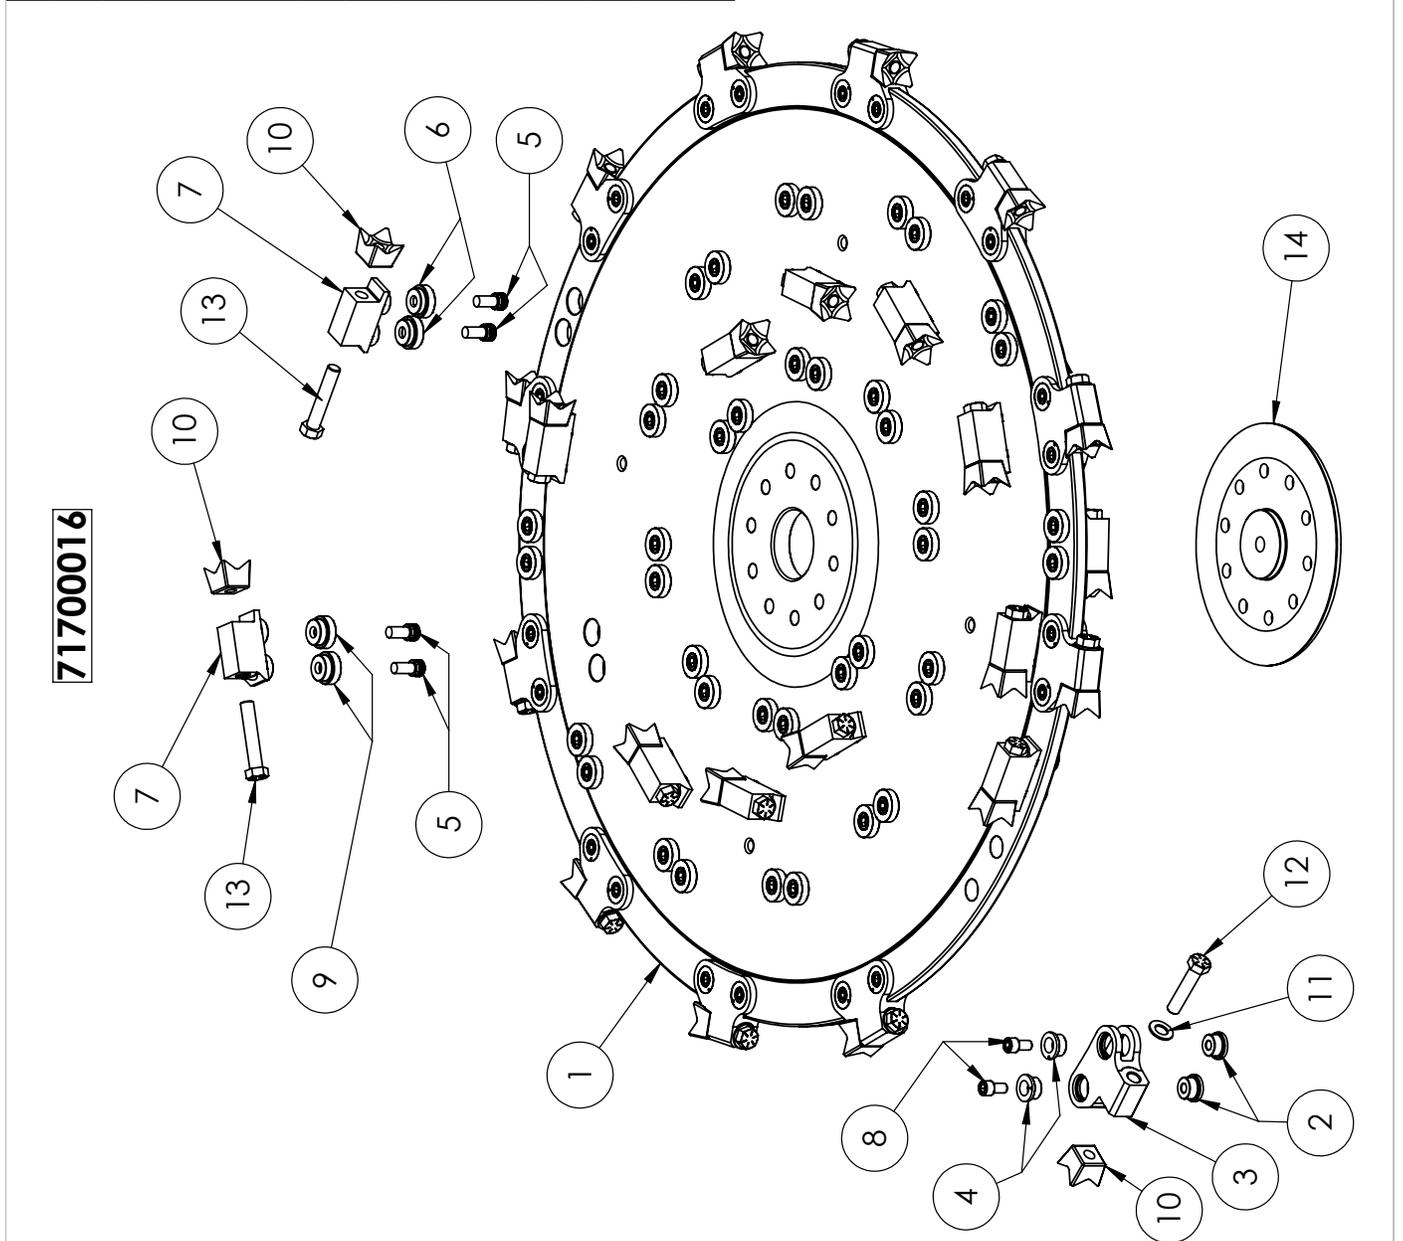

# SECTION 8

## WARRANTY INFORMATION

### LIMITED WARRANTY

Construction Implements Depot, Inc. (CID) products are warranted to be free from defects in workmanship or materials for a period of 12 months from the initial sale.

#### WARRANTY EXCLUSIONS

This warranty does not cover normal wear items, including but not limited to: bearings, hoses, blade holders, ground engaging parts such as teeth, blades, cutting edges, pilot bits, auger teeth and broom bristles. This warranty does not cover maintenance, service or adjustments. This warranty does not cover damage due to improper application or installation, misuse, negligence, accidents or improper maintenance. Please note: Any modification or customization made to your attachment may void its warranty. This warranty is void if any components have been disassembled, i.e., pumps, gear boxes or motors or the attachment has been used without the case drain attached (if applicable). Be sure to follow all recommended Horsepower and GPM requirements as outlined in product specifications, in order to prevent the warranty from being void. This warranty is contingent upon the use of approved BRAND parts exclusively. Any use of non-approved parts may result in voiding the warranty. Please be advised that the warranty does not cover refurbished attachments. Specially modified attachments built by the manufacturer to meet your needs shall not be warranted by CID, Inc.

#### REPAIRS UNDER WARRANTY

**Any repairs, including welding, on attachments must be performed by certified repair technicians who have requested and obtained written approval from an authorized representative of CID before repairs begin.** If you are completing the repair, you must also have prior written approval to prevent the warranty from being voided.

#### WARRANTY STATEMENT

Our obligation under this Limited Warranty shall be solely limited to repairing or replacing any part (see non-covered items above) that, according to our judgment, show evidence of a defect in quality of workmanship or materials for the stated 12 month warranty period. All defective parts must be routed directly to CID, Inc. with freight or delivery charges to be prepaid. This limited warranty shall not be interpreted to render CID, Inc. liable for any injury or damage to persons, businesses or property of any kind nor expenses or losses incurred for labor, supplies,

## **8.0 WARRANTY INFORMATION CONT.**

substitute machinery rental or for any other reason. Repair or replacement parts are subject to the supply conditions at the time of repair or replacements, which may directly affect our ability to obtain material and/or replacement parts. CID, Inc. reserves the right to make improvements in design or changes in specifications at any time without incurring any obligations to owners of previously purchased products. No one but CID, Inc. is allowed to alter, modify or enlarge this warranty nor the exclusions, limitations and reservation at any time. CID, Inc. products are warranted to be free from defects in workmanship or materials for a period of 12 months from the initial sale.

*Purchaser and Manufacturer hereby (a) submit to the non-exclusive jurisdiction of the courts of competent jurisdiction in North Carolina and Davidson County in which this company resides for resolution of any dispute concerning this Limited Warranty or the rights or obligations of Purchaser and/or Manufacturer; (b) agree that any litigation in connection with this Limited Warranty shall be venued in North Carolina and Davidson County in which the company resides and (c) waive any objection they may have as to any such action or proceeding brought in such court that such court is an inconvenient forum. Nothing herein shall limit the right of Purchaser or Manufacturer (or the right of any permitted successor or assign of either) to bring proceedings against the other in the courts of any other jurisdiction wherein any assets of such other party may be located.*

---

## **8.1 WARRANTY RETURN AUTHORIZATION POLICY**

### **WARRANTY RETURN AUTHORIZATION POLICY:**

If repairs are required, a Return Material Authorization (RMA) number must be obtained for the defective part as well as proof of purchase. RMA and services are rendered by CID only. Any responsibility of shipping costs on any item returned for repair is at the discretion of CID, Inc.

All returned parts must have the following:

1. A legible RMA number written on the outside of the package.
2. Warranty Claim Form (online)
3. The defective part.

RMA numbers are only valid for 30 days from the date of issue. All shipped replacement parts will require a Parts Order (PO) number from the original CID, Inc dealer. Repairs not covered by the warranty, will be charged for parts and labor at the current pricing rate. Should you have any problems with your attachment, please follow the instructions listed on the following page.

## **8.2 WARRANTY PROCEDURE**

### **WARRANTY RETURN AUTHORIZATION PROCEDURE:**

1. Call the Warranty Department at (336) 859-2002 EXT 215. You will need to provide the model and serial number of the defective item(s) (see Appendix for where to find this information), a description of the problem, and have photographs available.
2. Upon a warranted issue, visit [www.cidattachments.com](http://www.cidattachments.com), click on the warranty tab, and fill in the warranty information on the Warranty Claim Form. CID, Inc will retain a Return Material Authorization (RMA) number of the defective part. If all the information above is completed CID, Inc will issue a RMA number via email.
3. Once you have an approved RMA number, a shipping label will be provided with CID's address and instructions for returning the defective part. **Appropriate RMA's/PO's will be invoiced and payment received while the evaluation process is being completed to prevent delays in your normal business operations. In the event the defective part(s) is un-warranted and repairs are not covered by the warranty, the customer will be invoiced for any additional parts and labor at the current pricing rate. If the part is deemed under warranty, a credit of the invoice will be issued.**
4. CID will ship a replacement part to the provided location or customer with a RMA identifier of some kind. **The customer is responsible for initial shipping charges until evaluation of the part has been completed.** If the part failure is covered by the warranty, the customer will be reimbursed for any paid shipping charges. In the event, the part is not covered by the warranty, the customer is responsible for return shipping.
5. Once the defective part is warranted by CID, the customer will be issued a credit and the PO number will no longer be active.
6. In the event CID decides that the attachment needs to be returned to them for repair, CID will make arrangements for pickup and return. Repairs will be performed by CID qualified technicians. Non-warranted issues will be discussed, and repairs will be performed upon the owner's agreement and receipt of payment for parts and labor.






## APPENDIX B FINDING YOUR MODEL AND SERIAL NUMBER

The Model and Serial numbers will be in one of (4) places and will either be etched into the attachment or on a Data Plate.

Instructions: Stand at the back of the attachment facing the attachment mounting bracket and look in the following locations:

2) Top- left or right

3) Back-left or right

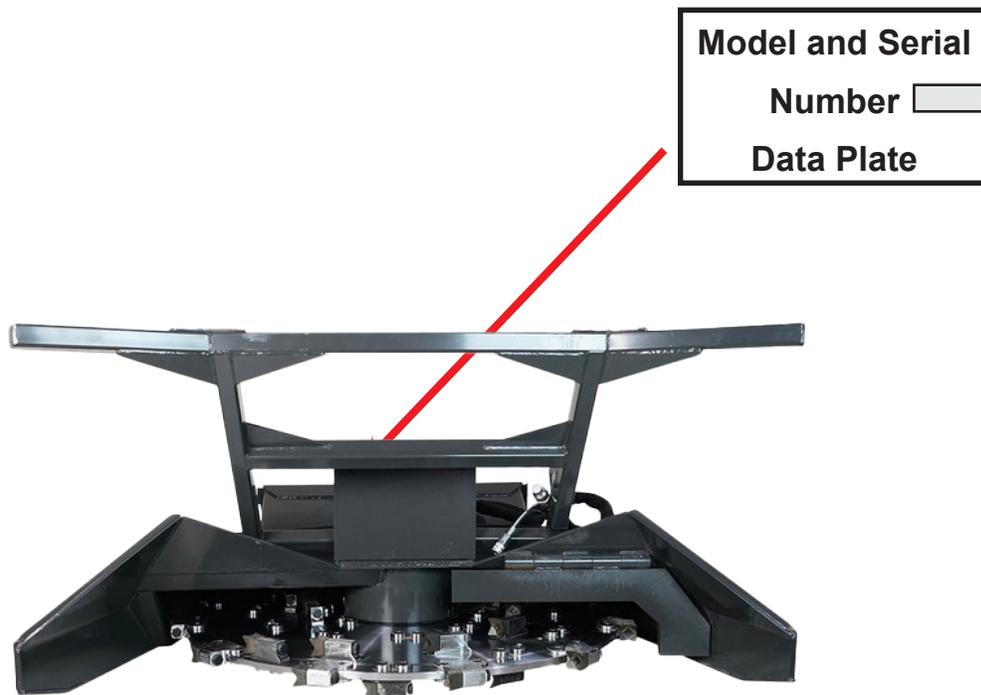

PLEASE NOTE: The Model and Serial number may be etched or on a Data Plate.

Disclaimer: Any critical changes made to this manual by individuals outside the manufacturer's authorized personnel are doing so at their own risk. The manufacturer cannot be held legally responsible for any consequences, damages, or liabilities resulting from such modifications. It is advised to adhere strictly to the original manual provided by the manufacturer for optimal performance, safety, and reliability.



**CONSTRUCTION IMPLEMENT DEPOT  
DENTON-USA, LLC  
1248 N. MAIN ST  
DENTON, NC 27239**

**[WWW.CIDATTACHMENTS.COM](http://WWW.CIDATTACHMENTS.COM)**

**CIDFDM-MANU-V3M0226**

